


BN 2708

Self-cutting threaded inserts

Stainless steel A1

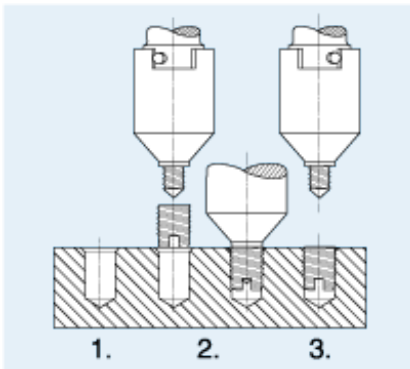

1. Drill the hole
2. Drive the insert into the workpiece (insert is cutting its own thread)
3. Disengage assembly tool

| Article# | d ₁ | P | d ₂ | L |
|----------|----------------|------|----------------|----|
| 1472259 | M3 | 0,5 | 5 | 6 |
| 1472267 | M4 | 0,75 | 6,5 | 8 |
| 1472275 | M5 | 1 | 8 | 10 |
| 1472283 | M6a | 1 | 9 | 12 |
| 1472291 | M6 | 1,5 | 10 | 14 |
| 1472305 | M8 | 1,5 | 12 | 15 |
| 1472313 | M10 | 1,5 | 14 | 18 |
| 1472321 | M12 | 1,5 | 16 | 22 |

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Standoffs & Spacers](#) category:

Click to view products by [Bossard](#) manufacturer:

Other Similar products are found below :

[588-6208-02](#) [M0513-25-N](#) [M0609-5-SS](#) [M0655-5-AL](#) [M0655-5-N](#) [M0659-4-AL](#) [M0660-4-N](#) [M0671-5-N](#) [M0671-5-SS](#) [M0725-6-N](#)
[M0731-4-N](#) [M1273-3005-AL](#) [60273](#) [60335-SP](#) [60348-SP](#) [60489-SP](#) [60762-SP](#) [60763-SP](#) [M1313-3005-N](#) [M1314-3005-AL](#) [M1314-3005-SS](#)
[M1314-3506-N](#) [M1315-4007-N](#) [M1316-3005-N](#) [M1317-3506-SS](#) [M1318-3005-SS](#) [M1320-3005-AL](#) [M1321-3005-SS](#) [M1322-4007-N](#)
[M1326-3005-AL](#) [M1577-B-4007-B](#) [M2122-2545-SS](#) [M2140-3005-N](#) [M2143-4007-N](#) [M2145-4007-N](#) [M2148-3005-N](#) [M2157-4007-N](#)
[M2162-3506-SS](#) [M2162-4007-N](#) [M2162-4007-SS](#) [632A-9206-17](#) [634A-5005-19](#) [634A-7204-17](#) [636A-7108-17](#) [642A-9416-17](#) [647A-5013-17](#) [660A-2606-17](#) [660A-2606-19](#) [699A-9823-17](#) [699A-9858-17](#)