# ANT-916-MHW-xxx-x Data Sheet

# AntennaFactor

#### **Product Description**

MHW Series dipole antennas feature a durable, unobtrusive housing that sticks permanently with integral adhesive to flat, non-conductive surfaces such as windows, drywall, ceiling tiles, plastic, etc. The antennas are well suited to low-power devices, but are capable of operation at levels to 10 watts. The MHW is supplied with either 79" [2m] or 180" [4.6m] of RG-174 cable and attaches via a standard SMA or Part 15 compliant RP-SMA connector. Custom cable lengths and connectors are available for volume OEM customers.

#### **Features**


- Compact & unobtrusive
- Adhesive for flat surfaces
- Excellent performance
- Omni-directional pattern
- Very low VSWR
- Two flexible radiating elements
- Rugged & damage-resistant
- Standard SMA or Part 15 compliant RP-SMA connector

#### **Electrical Specifications**


Center frequency:	916MHz
Recommended Oper. Freq:	816–1016MHz
Wavelength:	1/2-wave
VSWR:	$\leq$ 1.9 typical at center
Peak Gain:	5.4dBi
Impedance:	50-ohms
Connection:	SMA or RP-SMA
Cable:	79" or 180" RG-174 coax

#### **Ordering Information**

ANT-916-MHW-RPS-L (RP-SMA connector, 180" [4.6m] coax) ANT-916-MHW-RPS-S (RP-SMA connector, 79" [2m] coax) ANT-916-MHW-SMA-L (SMA connector, 180" [4.6m] coax) ANT-916-MHW-SMA-S (SMA connector, 79" [2m] coax)

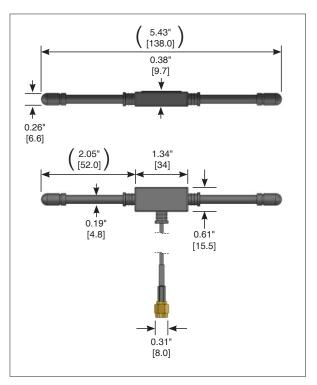

#### **VSWR Graph**

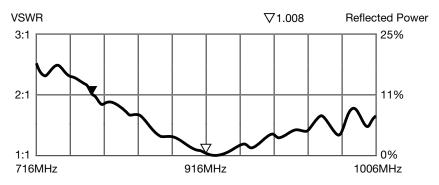


#### What is VSWR?

The Voltage Standing Wave Ratio (VSWR) is a measurement of how well an antenna is matched to a source impedance, typically 50-ohms. It is calculated by measuring the voltage wave that is headed toward the load versus the voltage wave that is reflected back from the load. A perfect match will have a VSWR of 1:1. The higher the first number, the worse the match, and the more inefficient the system. Since a perfect match cannot ever be obtained, some benchmark for performance needs to be set. In the case of antenna VSWR, this is usually 2:1. At this point, 88.9% of the energy sent to the antenna by the transmitter is radiated into free space and 11.1% is either reflected back into the source or lost as heat on the structure of the antenna. In the other direction, 88.9% of the energy recovered by the antenna is transferred into the receiver. As a side note, since the ":1" is always implied, many data sheets will remove it and just display the first number.

#### How to Read a VSWR Graph

VSWR is usually displayed graphically versus frequency. The lowest point on the graph is the antenna's operational center frequency. In most cases, this will be different than the designed center frequency due to fabrication tolerances. The VSWR at that point denotes how close to 50-ohms the antenna gets. Linx specifies the recommended bandwidth as the range where the typical antenna VSWR is less than 2:1.

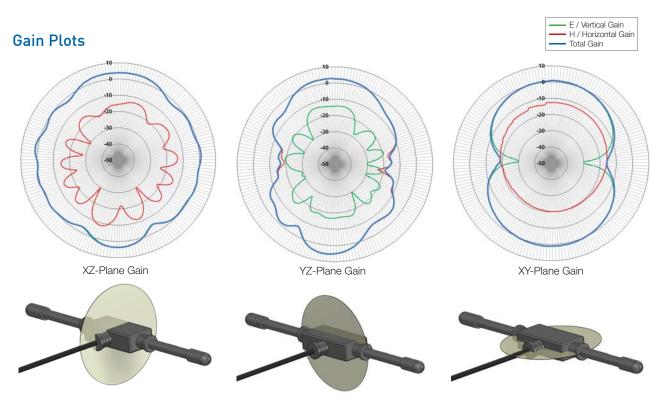

### About Gain Plots

The true measure of the effectiveness of an antenna in any given application is determined by the gain and radiation pattern measurement. For antennas gain is typically measured relative to a perfect (isotropic) radiator having the same source power as the antenna under test, the units of gain in this case will be decibels isotropic (dBi). The radiation pattern is a graphical representation of signal strength measured at fixed distance from the antenna.

Gain when applied to antennas is a measure of how the antenna radiates and focuses the energy received into free space. Much like a flashlight focuses light from a bulb into a specific direction, antennas can focus RF energy into specific directions. Gain in this sense refers to an increase in energy in one direction over others.

It should also be understood that gain is not "free", gain above 0dBi in one direction means that there must be less gain in another direction. Pictorially this can be pictured as shown in the figures to the right. The orange pattern represents the radiation pattern for a perfect dipole antenna, which is shaped like a donut. The pattern for an omnidirectional antenna with gain is shown in blue. The gain antenna is able to work with a device located further from the center along the axis of the pattern, but not with devices closer to the center when they are off the axis – the donut has been squished.

Gain is also related to the overall physical size of the antenna, as well as surrounding materials. As the geometry of the antenna is reduced below the effective wavelength (considered an electrically small antenna) the gain will decrease. As well, the relative distance between an electrically small antenna and its associated ground will impact antenna gain.





159 Ort Lane, Merlin, OR, US 97532 Phone: +1 541 471 6256 Fax: +1 541 471 6251 www.linxtechnologies.com

-3- Data Sheet ANT-916-MHW-xxx-x AntennaFactor

## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Antennas category:

Click to view products by Linx Technologies manufacturer:

Other Similar products are found below :

 GAN30084EU
 930-033-R
 GW17.07.0250E
 1513563-1
 EXE902SM
 APAMPG-117
 MAF94383
 W3908B0100
 W6102B0100
 YE572113 

 30RSMM
 108-00014-50
 66089-2406
 SPDA17RP918
 A09-F8NF-M
 A09-F5NF-M
 RGFRA1903041A1T
 W3525BW100
 W3593B0100

 W3921B0100
 SIMNA-868
 SIMNA-915
 SIMNA-433
 W1044
 W1049B090
 A75-001
 WTL2449CQ1-FRSMM
 CPL9C
 EXB148BN
 0600 

 00060
 TRA9020S3PBN-001
 GD5W-28P-NF
 MA9-7N
 GD53-25
 GD5W-21P-NF
 EXB144SM
 C37
 MAF94051
 GD35-17P-NF
 P1744

 MA9-5N
 EXD420PL
 B1322NR
 QWFTB120
 MAF94271
 MAF94300
 GPSMB301
 FG4403
 AO-AGSM-OM54
 5200232
 MIKROE-2349