


# TALON<sup>®</sup> CLIP


## ASSEMBLY GUIDE




### Installation

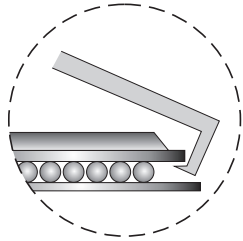


1. Hook Talon clip under one side of the BGA chip set.

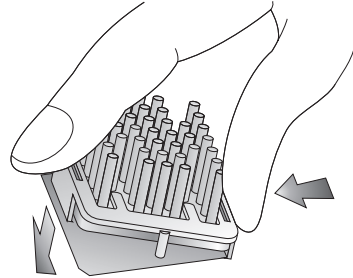

2. Rotate assembly down until opposite side clip engages edge of BGA chip set.

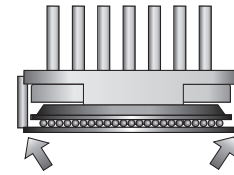


3. Make sure the Talon stand-offs are clearing either edge of the BGA chip set.

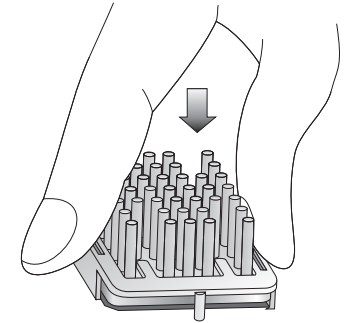


4. Press firmly down to make sure Talon clips fully engage edges of chip set. Installed heat sink assembly should not move around easily...

### Removing


1. Use a regular flat tip screwdriver to engage one of the clip slots.

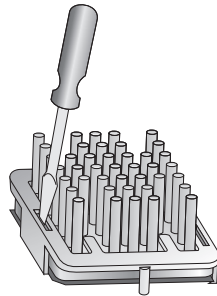

2. Using moderate pressure, use the screwdriver to leverage the clip off the BGA chip set.

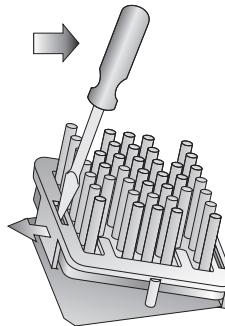

3. Carefully disengage opposite side clip and remove the heat sink assembly from the chip set.

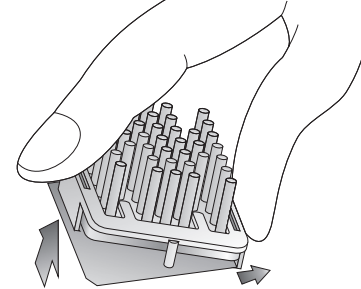

## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [malico](#) manufacturer:*

Other Similar products are found below :

[MBH30001-13L/2.0](#) [CMBA024949](#) [MBH375002-12P/2.6](#) [CEBF0145451601-00](#) [CL-Y-35X35](#) [MBH42.5002-12P/2.6](#)