


Gyro click™

1. Introduction






Gyro Click[™] is an accessory board in **mikroBUS**[™] form factor. It's a compact and easy solution for adding gyroscope to your design. It features **L3GD20** three-axis digital gyroscope module. Gyro Click[™] communicates with the target board microcontroller via **mikroBUS**[™] SPI (MOSI, MISO, SCK, CS), I²C (SDA, SCL), INT and RST lines. The board is designed to use 3.3V power supply only. LED diode (GREEN) indicates the presence of power supply.

2. Soldering the headers

Before using your click boardTM, make sure to solder 1x8 male headers to both left and right side of the board. Two 1x8 male headers are included with the board in the package.




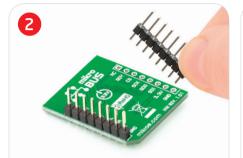

Turn the board upside down so that bottom side is facing you upwards. Place shorter parts of the header pins in both soldering pad locations.




Turn the board upward again. Make sure to align the headers so that they are perpendicular to the board, then solder the pins carefully.

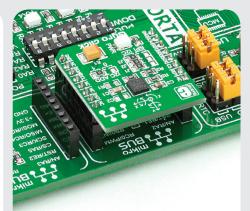

4. Essential features

Gyro Click[™] with it's **L3GD20** IC is capable of providing the measured angular rate to the external world through a digital interface (I²C, SPI). The **L3GD20** has a full scale of ±250/ ±500 / ±2000 dps and is capable of measuring rates with a user-selectable bandwidth. All these features make this board ideal for gaming and virtual reality input devices, motion control, GPS navigation systems and more.

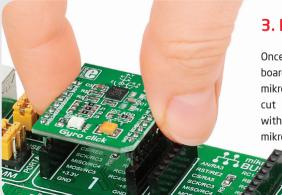


3. Plugging the board in

Once you have soldered the headers your board is ready to be placed into desired mikroBUSTM socket. Make sure to align the cut in the lower-right part of the board with the markings on the silkscreen at the mikroBUSTM socket. If all of the pins are aligned correctly, push the board all the way into the socket.



5. Gyro Click™ Board Schematic

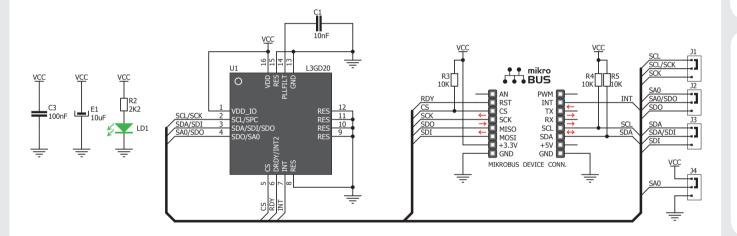

6. SMD Jumpers



The Gyro ClickTM board communicates with the main board microcontroller via I²C or SPI interface depending on the position

of the **J1**, **J2** and **J3** SMD jumpers. These jumpers are soldered in I²C interface position by default. There is an option to select the alternate address with jumper **J4** in the case of I²C interface (default position is logic 1).

7. Code Examples

Once you have done all the necessary preparations, it's time to get your click board up and running. We have provided the examples for mikroC, mikroBasic and mikroPascal compilers on our **Libstock** website. Just download them and you are ready to start.



8. Support

MikroElektronika offers Free Tech Support (www.mikroe.com/esupport) until the end of product lifetime, so if something goes wrong, we are ready and willing to help!



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Position Sensor Development Tools category:

Click to view products by MikroElektronika manufacturer:

Other Similar products are found below:

AS5115 PB SCA830-D07-PCB STEVAL-MKI043V1 EVB90340-LDC-200-Rev1.0 STEVAL-STWINMAV1 1032 178 DPP401Z000 EVAL-ADXRS453Z-W 1007214-3 STEVAL-MKI045V1 STEVAL-MKI042V1 STEVAL-MKI037V1 IMX-070 164 3595 AS5161-EK-AB AS5200L-MF_EK_AB AS5215 DB AS5600L-SO_EK_AB AS5600L-WL_EK_AB AS5715-TS_EK_AB AS5X47D-TO_EK_ST TRK-1T02-E ADIS16265/PCBZ ADIS16260/PCBZ EVAL-ADIS2Z EVAL-ADXRS453Z EVAL-ADXRS453Z-S EVAL-ADXRS646Z EVAL-ADXRS800Z-EY EVAL-ADXRS800Z-M EVAL-ADXRS800Z-RG EVAL-CN0341-SDPZ ATBNO055-XPRO DFR0027 DFR0053 DPP401A000 EVB90365-Rev1.0 EVB90371-GDC-100-Rev1.0 EVB90371-GDC-200-Rev1.0 EVB90371-GDC-300-Rev1.0 EVB90371-GGO-100-Rev1.0 EVB90371-GGO-300-Rev1.0 EVB90371-DDC-200-Rev1.0 EVB90371-DDC-300-DDC-2