


**INSTRUCTIONS
FOR REPLACING
THE ELASTIC IN
TYPE RER
ELASTIC
RETAINERS**

NOTE:



The following replacement sequence shows the base removed from the harness board; however, the elastic can also be replaced without removing the base from the board.

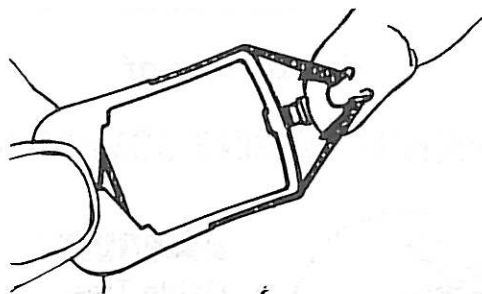

4 Loop free end of elastic around wire form.




5 Slip wire form around button on the white retainer arms.

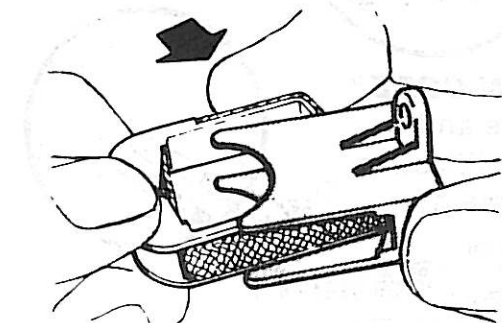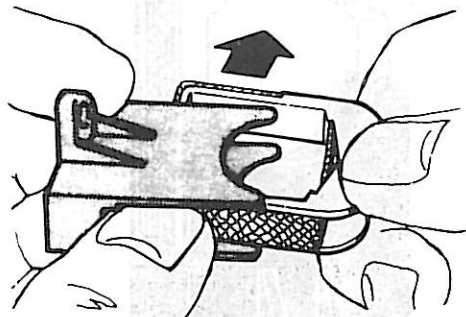

6 The bottom on the white retainer arms should be inserted into the black base and snapped into place.

- 1**
- With one hand hold black base between your middle and index fingers, while using your thumb to push white retainer arms.
 - With your other hand, pull white retainer arms in opposite direction that your thumb is pushing; white piece will then snap out.

2 Unhook worn elastic or wire form from button at bottom of white retainer arms and discard.

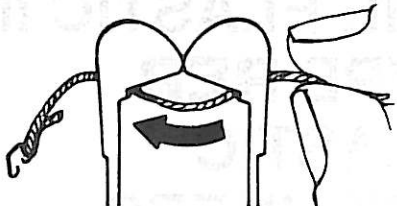

3 Thread new elastic through white retainer arms and wrap around bottom edge.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Cable Tie Mounts](#) category:

Click to view products by [Panduit](#) manufacturer:

Other Similar products are found below :

[3-350087-0](#) [CTB75X75BKA-C](#) [561-EZAB580T](#) [561-EZS375B40](#) [561-TA250125](#) [08443-0](#) [10035-0](#) [561-TA00600](#) [1689174-1](#) [08445-0](#)
[10351-0](#) [561-TA250125B](#) [20015-0](#) [10350-0](#) [10029-0](#) [08484-0](#) [08446-0](#) [08318-0](#) [PAM075NY-A-C](#) [MTH1-3](#) [10044](#) [151-01802](#) [151-11319](#)
[151-11819](#) [PLWP1SB-D](#) [PLWP1M-C](#) [PLWP2SA-D](#) [PLWP2SB-D](#) [PLWP2S-C](#) [PLWP1S-D](#) [PLWP1M-D](#) [TA1S8-C](#) [ABM3H-A-L](#) [ABM3H-](#)
[AT-T0](#) [EMS-A-C0](#) [EMSK3-1-3-0](#) [10079](#) [151-10930](#) [151-10920](#) [3590](#) [151-28320](#) [151-28349](#) [151-28530](#) [151-10914](#) [151-10904](#) [151-10915](#)
[151-10916](#) [151-10906](#) [115-06960](#) [06297](#)