

Pomona®

Model 6384 & Assembly Instructions Banana Jack, User Installed (18-22 AWG)

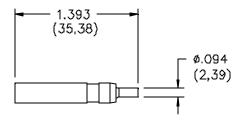

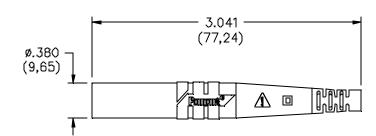

FEATURES:

- Attaches to your wire with commonly available crimp tools or by soldering.
- Can be used on stranded wire from 18 to 22 AWG with an insulation diameter from 0.060" to 0.150".
- Provides safe and secure connections to 4mm shrouded banana plugs.
- Fits Pomona shrouded banana plugs and most other shrouded banana plugs, will also fit most banana plugs without shrouds.
- Will comply with IEC1010 CAT II, 300V when properly assembled.

MATERIALS:

Banana Jack: Nickel Plated Brass.

Insulation: Santoprene® (Thermoplastic Elastomer).

RATINGS:

Operaging Voltage: 300V Max. (Hand Held); 1,500V Max. (Non-Hand Held)

Current: 5 Amperes 20-22 AWG, 15 Amperes 18 AWG Operating Temperature: -20°F to 275°F (-29°C to 135°C) Storage: -40°F to 302°F (-40°C to 150°C)

ORDERING INFORMATION: Model 6384-(*).

* = Color, (-0) Black, (-2) Red, (10 per package). (-02) 1 of each color.

All dimensions are in inches. Tolerances (except noted): $.xx = \pm .02$ " (,51 mm), $.xxx = \pm .005$ " (,127 mm). All specifications are to the latest revisions. Specifications are subject to change without notice. Registered trademarks are the property of their respective companies. Made in USA

6/9/99 Sales

Sales: 909-469-2900 Fax: 909-629-3317 Technical Assistance: 800-241-2060

Pomona®

Model 6384 & Assembly Instructions Banana Jack, User Installed (18-22 AWG)

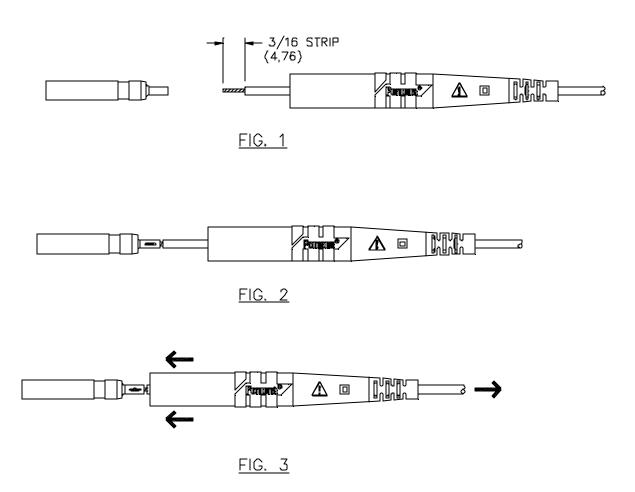


FIGURE #1

- A. Slide plastic housing over wire.
- B. Place stripped wire (18, 20, or 22 AWG) end into terminal hole.

FIGURE #2

C. Crimp terminal using a bare-terminal style crimper. Retention force of joint should exceed 12 pounds to assure no damage occurs to joint when housing is snapped into place.

All dimensions are in inches. Tolerances (except noted): $.xx = \pm .02$ " (,51 mm), $.xxx = \pm .005$ " (,127 mm). All specifications are to the latest revisions. Specifications are subject to change without notice. Registered trademarks are the property of their respective companies. Made in USA

Sales: 909-469-2900 Fax: 909-629-3317
SY/EH/LS Technical Assistance: 800-241-2060

Pomona®

Model 6384 & Assembly Instructions Banana Jack, User Installed (18-22 AWG)

FIGURE #3

D. Slide housing over jack and pull on wire until snap engages.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Test Plugs & Test Jacks category:

Click to view products by Pomona manufacturer:

Other Similar products are found below:

01-2601-4-0210 01-2601-4-0212 01-2604-4-0212 01-2604-5-0210 01-2150-1-0312 01-2350-1-02 01-2352-1-02 01-2368-1-02 01-2604-4-0210 01-2604-5-0212 01-2606-5-0212 M39024/10-01G M39024/10-17G M39024/11-09G M39024/11-42 M39024/11-43 M39024/12-08 707-5311 707-5402-01-19 707-5410 923739-40-I R644543000 R948161000 R999351000 1408-4 1499-101 1533-1 1659559 1659567 1663921 1663939 1696-102 174-R825B-EX NYS508-BU NYS508-O 211-101 RS100GBL RS250GBL 251-102 25-2251-2-03 25-2259-2-03 923743-16-I 923743-24-I 923743-28-I 2854-BLU 2970-BLK 30-443G 1680