


**STRAIGHT PLUG SOLDER TYPE  
CABLE .141**

**R124.054.003**  
**SERIES SMA-COM**

Hex .315/flats  
(hex. 8/Plats)

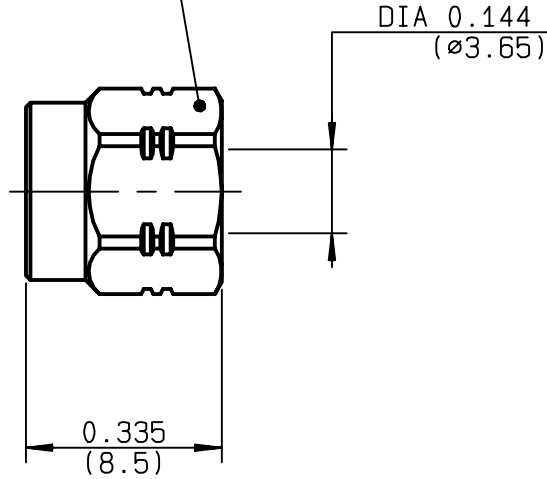

NOMINAL IMPEDANCE	<b>50</b> Ω	CABLES : <b>KS 2</b>
FREQUENCY RANGE	<b>0-18</b> GHz	<b>RG 402</b>
TEMPERATURE RATING	<b>-65/+105</b> °C	
V.S.W.R	<b>1.05</b> + <b>.01</b> x F(GHz)Maxi	
RF INSERTION LOSS	<b>0.05</b> √F(GHz) dB Maxi	
VOLTAGE RATING	<b>500</b> Veff Maxi	
DIELECTRIC WITHSTANDING VOLTAGE	<b>1000</b> Veff Mini	
INSULATION RESISTANCE	<b>5000</b> MΩMini	OTHERS CHARACTERISTICS
HERMETIC SEAL	<b>NA</b> Atm.cm <sup>3</sup> /s	CABLE RETENTION <b>270</b> N Mini
LEAKAGE (pressurized only)	<b>NA</b>	CENTER CONTACT RETENTION
MECHANICAL DURABILITY	<b>100</b> Cycles	Axial force - mating end <b>NA</b> N Mini
WEIGHT	<b>2.1</b> gr	Axial force - opposite end <b>NA</b> N Mini
SPECIFICATION		Torque <b>NA</b> cm.N Mini
		RECOMMENDED TORQUES
		Mating <b>60</b> cm.N
		Panel nut <b>NA</b> cm.N
		Clamp nut <b>NA</b> cm.N

CONNECTOR PARTS	MATERIALS	FINISH
BODY	BRASS	GOLD 0.2 OVER NICKEL 2
OUTER CONTACT		
CENTER CONTACT		
INSULATOR		-
GASKET	SILICONE RUBBER	-
OTHERS PIECES	BRASS	GOLD 0.2 OVER NICKEL 2

(all values are given )  
in micrometers

TRIQUES

ISSUE	CREATION DATE	FILE PART-NUMBER
<b>9847A01</b>	<b>17/07/1996</b>	<b>96-1200-066</b>



**RADIALL**®


The information given here is subject to change without notice.  
Design changes may be in order to improve the product .

*Connect to the future*



**R124.054.003**


ISSUE 9847A01 SERIES SMA-COM

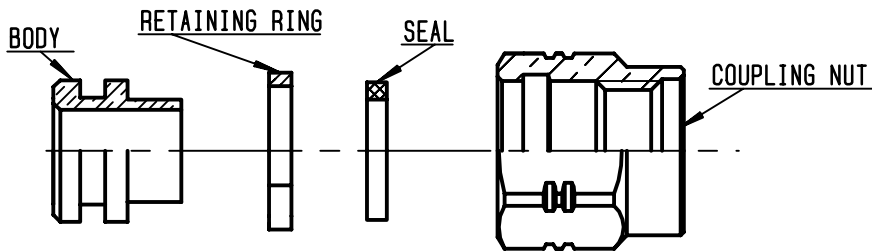

we recommend a cable thermal preconditioning before assembling


①

- Place the cable into the assembly jig (R282.740.000)
- Place the connector body and positioner (R282.744.100) onto the cable and clamp cable.
- Put 3 rings of solder around the cable.
- Solder the body onto the cable.
- 
- 

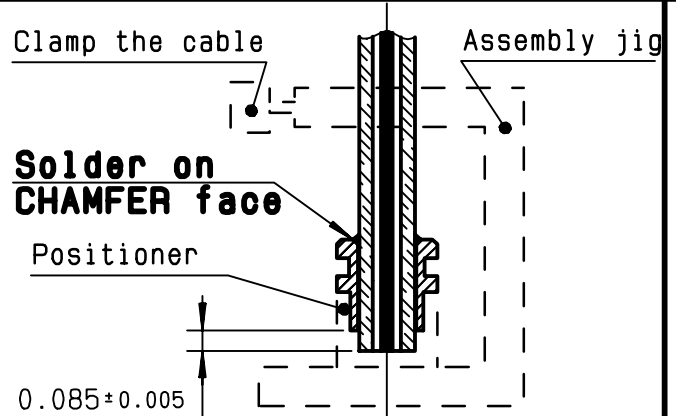

②

- Immobilize the cable using the thumb crew on the cable holder (R282.059.100).
- Get the positioner into the connector groove, using knurled push-button.
- Push button until it stops.
- Tighten cable.
- Present the stripping tool (R282.053.100) opposite the cable holder.
- Push and turn both elements with respect to each other.
- When the tool stop cutting : pull off without turning it.
- Present the trimmer (R282.066.100) opposite the cable holder, push and turn both elements with respect to each other until fully home.
- Place retaining ring onto its insert tool (R282.760.000).
- Push sub-assembly into the tool until the retaining ring snaps into place.
- Place the interface seal O ring onto body.
- Compress retaining ring using retaining ring pliers. Push coupling nut onto sub-assembly and over retaining ring.

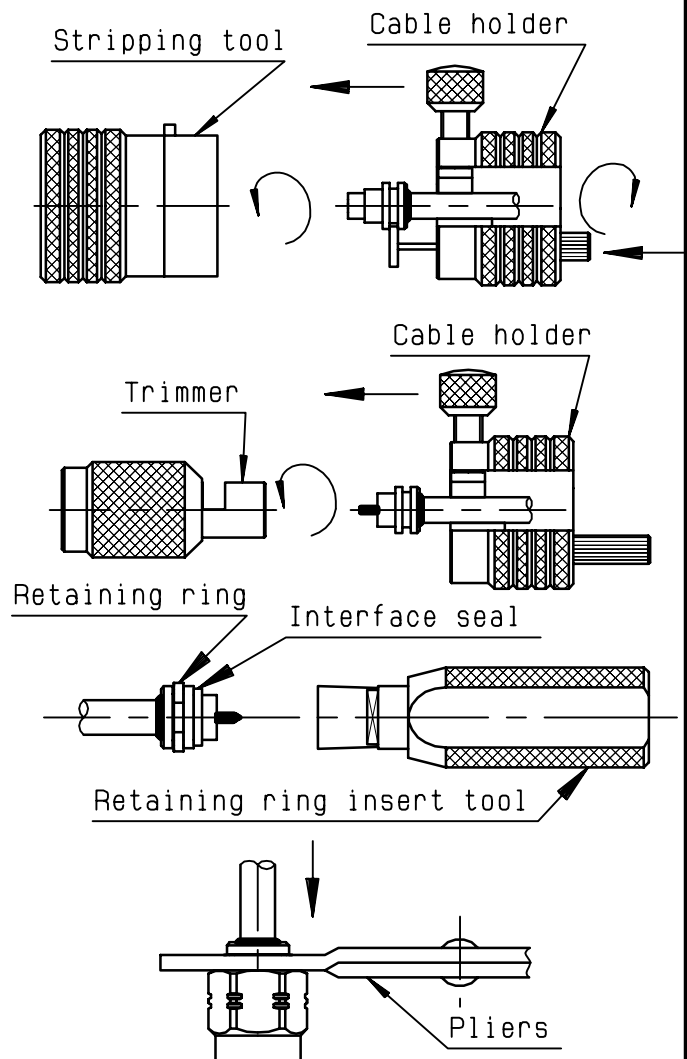

TRIQUES

## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [RF Connectors / Coaxial Connectors](#) category:*

*Click to view products by [Radiall](#) manufacturer:*

Other Similar products are found below :

[8915-1511-000](#) [89674-0827](#) [6001-7071-019](#) [6002-7051-003](#) [6002-7551-202](#) [6059674-1](#) [619550-1](#) [630059-000](#) [M39030/3-01N](#) [6500-7071-046](#) [6769](#) [CX050L2AQ](#) [7002-1541-010](#) [7002-1542-011](#) [7004-1512-000](#) [7009-1511-004](#) [7010-1511-000](#) [7029-1511-060](#) [7101-1541-010](#) [7101-1571-002](#) [7145-1521-002](#) [7203-1571-003](#) [7209-1511-011](#) [7210-1511-015](#) [7210-1511-019](#) [73137-5015](#) [73216-2241](#) [73404-2300](#) [7405-1521-005](#) [7405-1521-802](#) [8527](#) [8547](#) [FS11V](#) [877931](#) [8808-1511-001](#) [9074-9513-000](#) [9101-9573-002](#) [910A205F](#) [9130-9573-002](#) [PL11SC-026](#) [PL375-33](#) [PL40-5](#) [PL74C-221](#) [PL75MC-217](#) [PL803-7](#) [1200690078](#) [1-201144-1](#) [R107003010W](#) [R110A172100](#) [R112186000](#)