



203-0002-01

4 Pack of SchmartPatch for 1008, 1206, CASE-A and SOD80

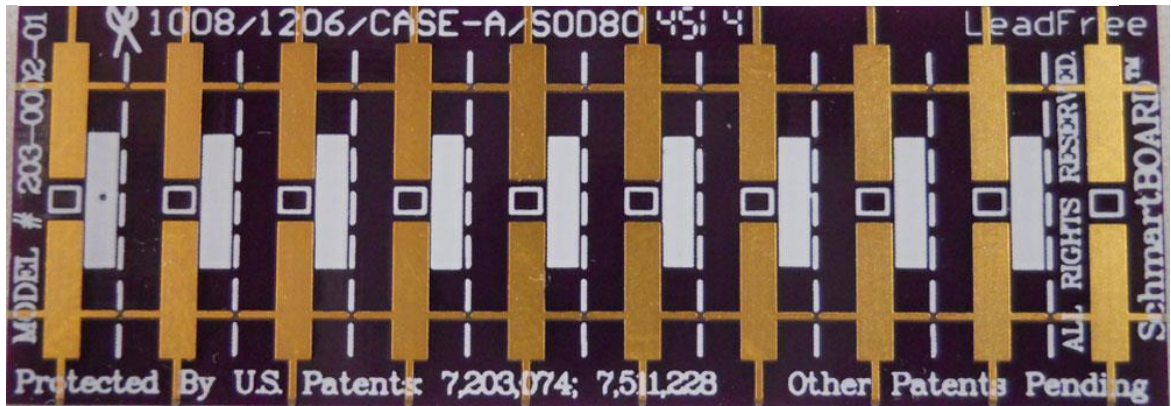

Model# 203-0002-01

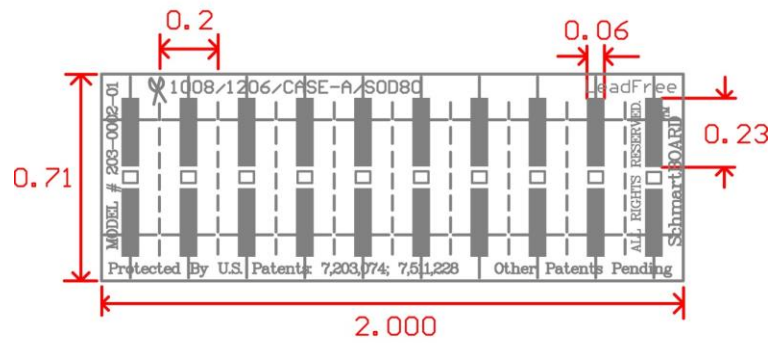

UNIT: Inch

203-0002-01  
A and SOD80

4 Pack of SchmartPatch for 1008, 1206, CASE-

SchmartPatch allows you to add components to or replace components on any substrate such as a PCB(Printed Circuit Board). This SchmartPatch board allows you to cut off a pad, stick it on to the surface (with the adhesive already on the back of the SchmartPatch) and then solder a component onto the SchmartPatch. There are also pads to solder jumper wires to make the electrical connection. This board has 10 pads that can be cut off as needed. Each of these pads support all components in any of the following package footprints: 1008, 1206, CASE-A, SOD80. 4 SchmartPatches are included.

# SchmartPatch Surface Mount Family



Schmartboard, Inc.  
37423 Fremont Blvd.  
Fremont, CA 94536

510-744-9900(P)  
510-744-9909(F)  
<http://www.schmartboard.com>  
<http://www.facebook.com/Schmartboard>  
<http://www.twitter.com/Schmartboard>

## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for PCBs & Breadboards category:*

*Click to view products by SchmartBoard manufacturer:*

Other Similar products are found below :

[8004](#) [8007](#) [8016](#) [8017](#) [8028](#) [8029](#) [1268-12](#) [1268-10](#) [1320833-1](#) [923252-R](#) [3410](#) [3396](#) [15107](#) [15101](#) [8006](#) [8015](#) [8018](#) [8019](#) [8020](#) [1268-19](#)  
[1268-20](#) [8026](#) [1239-19](#) [SBBTH1520-1](#) [SBBTH1506-1](#) [SBBTH4080-1](#) [SBBTH3030-1](#) [SBBTH1512-1](#) [SBBTH1508-1](#) [SBBSM2120-1](#)  
[SBB2808-1](#) [SBB2805-1](#) [SBB1605-1](#) [SBB1602-1](#) [SBB1005-1](#) [SBB1002-1](#) [3426](#) [32P15WE](#) [ZAS1X206203XRPU160](#) [SBBTH3040-1](#)  
[SBB0004-1](#) [SBB830-QTY10](#) [7115](#) [923749-I](#) [RE013-LF](#) [RE014-LF](#) [RE015-LF](#) [RE1210-LF](#) [RE200-C3](#) [RE210-S1](#)