



testo 885 / testo 890 Thermal Imager

Brief instructions



Overview

Operating concept

The imager can be operated in two different ways.

Operation via **touchscreen** offers quick access to functions. **Joystick** operation enables the imager to be operated with one hand.




Capacitive touchscreen. Operation is only possible with a bare fingertip (no gloves) or a conductive stylus pen.

This document mentions functions/buttons that have to be activated:

- Touchscreen operation: touch with a fingertip.
- Joystick operation: select first (move joystick up/down/right/left to move the orange selection box), then activate (press joystick).

Display interface

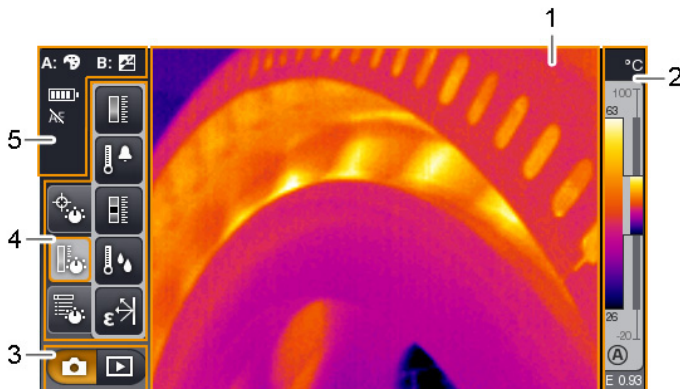

- 1 Image display: shows IR image or real image.
- 2 Scale display.
- 3 Imager mode selection bar (capture/image gallery).
- 4 Menu bar/tabbed windows (see below).
- 5 Status displays.

Menu bar / tabbed windows, menu




Functions are called up via the menu bar. The menu bar comprises 3 tabs. Different functions are available depending on which tab is selected.

Via the menu, most functions from the 3 tabs and many additional functions can be called up. Open menu:



Initial operation

Inserting the memory card

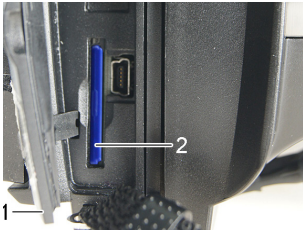

1. Open the cover of the bottom interface terminal (1).
2. Push the memory card (SD or SDHC card) into the card slot (2).

> To remove the memory card: press the memory card to release the lock.



Inserting the rechargeable battery



1. Open the battery compartment cover (3) on the bottom of the imager.
2. Slide rechargeable battery (4) fully into the battery compartment until it clicks into place.
 - The imager starts automatically.
3. Close the battery compartment cover.

Performing basic settings


- > Flip open the display and remove the protective film.
- The start screen appears on the display.
- When you first switch on the imager: the **Country settings** and **Set time/date** dialogue boxes are opened one after the other to set the instrument language, temperature unit (°C/°F) and time/date.

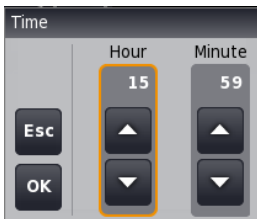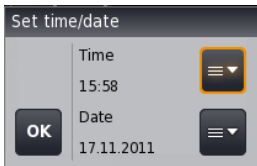

- ✓ The **Country settings** dialog box is opened.
- 1. Touch the required language. If necessary, scroll with / to display other languages.
 - The activated language is indicated with a tick.
- 2. Touch to change the unit.
 - The activated unit is shown on the top right of the display.
- 3. Touch to confirm the entry.
 - The **Set time/date** dialog box is opened.
- 4. Touch the top button to open the **Time** input screen.
- 5. Set values for **Hour** and **Minute** with / .
- 6. Touch to confirm the entry.
- 7. Touch the bottom button to open the **Date** input screen.
- 8. Set values for **Day**, **Month** and **Year** with / .
- 9. Touch to confirm the entry.
- 10. Touch to close the input screen.

Initial charging of the rechargeable battery

The imager is delivered with a partially charged battery. Fully charge the battery before use.

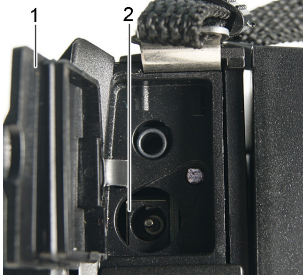

- > Connect the country-specific adapter required for the existing mains to the mains unit.
- 1. Open the cover of the top interface terminal (1).
- 2. Connect the mains unit to the mains socket (2).
- 3. Connect the mains plug to a power socket.
- The imager starts automatically.




The rechargeable battery can be recharged with the imager switched on or off. This has no effect on the time required to charge the battery.

- > Hold down  to close the imager.

- Charging of the battery is started (LED flashes).
- 4. When the battery is fully charged (steady LED light), disconnect the imager from the mains unit.

Basic operating steps

Adjusting the hand strap/attaching the lens cover

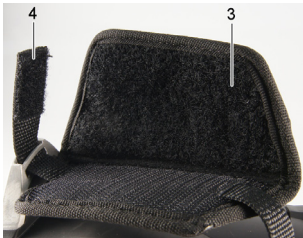

- > Lay the imager on its left side.
- 1. Open out the top of the hand strap padding (3).
- 2. Pull the fastening end of the strap up (4).
- 3. Put your right hand through the hand strap from the right-hand side.
- 4. Adjust the hand strap by loosening/tightening it to fit your hand and secure the fastening end again.
- 5. Fold down the top of the hand strap padding.
- > Guide the clip on the lens cover (5) through the loop on the handle (6).



Rotating the display/handle

CAUTION

Display may be damaged!

- > Do not hold the imager by the fold-out display.
- > Only fold out and rotate display up to the noticeable stop.

Rotating the display

- > Fold out the display (max. 90°) and rotate (max. -180°/+90°).


Rotating the handle




1. Put your right hand through the hand strap.
2. Grip the imager with your left hand. To do this, hold the casing at the front of the imager (1).
3. Turn your right hand to move the handle to the required position (2). Press down with your middle and ring finger. To rotate in the opposite direction, press up with the heel of your hand.

Switching the imager on/off



- > Press  (3).
- The start screen appears on the display. Instrument information is displayed (e.g. serial number, type designation, firmware version).
- The measurement view is opened. Measurement values on the cursor and scale are only displayed when the stabilisation phase is complete (indicated by a rotating phase symbol in the top right of the display).


The thermal imager performs automatic adjustment approx. every 60 sec. This can be recognized by means of a "click". The image is frozen briefly when this occurs.

- > To switch off: hold down  (3) until the confirmation prompt is no longer displayed.



Manually focusing the image

CAUTION

Auto mechanism may be damaged!



- > Only turn **focusing ring** when auto-focus is deactivated (status display top left: )



- > Deactivate auto-focus:  | **AF**.
- Status  is displayed (top left).
- > Turn the lens **focusing ring** (1) until the image is in sharp focus.



Automatically focusing the image



- > Activate auto-focus:  | **AF**.
- Status  (top left) is displayed.
- > Touch **[Shutter button]** (2).
- An orange box is displayed. The image is focused automatically in this area.

Recording (freezing/saving) an image



1. Press **[Shutter button]** (2).
 - The image is frozen (still).
- > Select where to save image: touch .
2. Save image: press **[Shutter button]** again or touch .
- The IR image is saved and the real image is automatically attached to the IR image.
- > Do not save image: press **[Esc]** (3).



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Testo manufacturer:](#)

Other Similar products are found below :

[206 PH1](#) [TESTO 316-1 0632 0316](#) [TESTO 470 0563 0470](#) [TESTO 770-1 0590 7701](#) [TESTO 905-T1 0560 9055](#) [0572 0500](#) [0590 0016](#) [0602 4592](#) [0590 0008](#) [0590 0018](#) [0602 0645](#) [0635 1025](#) [0628 0020](#) [TESTO 435-2 0563 4352](#) [TESTO 605I 0560 1605](#) [TESTO 755-2 0590 7552](#) [TESTO 770-2 0590 7702](#) [TESTO 869 + TESTO 745](#) [TESTO 869 + TESTO 750-3 465 410-2 460 0572 6172 0590 0001 0614 2272](#) [TESTO 417 0560 4170](#) [0609 7072](#) [TESTO 174-H SET](#) [TESTO 176-T4](#) [TESTO 176-P1](#) [TESTO 830-T2](#) [TESTO 103](#) [TESTO 905-T1](#) [TESTO 108-2](#) [TESTO 905I](#) [TESTO 108 0563 4403](#) [0590 7703](#) [TESTO 435-3 0560 4353](#) [TESTO 735-1 0560 7351](#) [TESTO 760-3 0590 7603](#) [TESTO 770-3 0590 7703](#) [0590 0013](#) [0602 4892](#) [TESTO 635-2 0563 6352](#) [TESTO 750-3 0590 7503](#) [TESTO 760-1 0590 7601](#) [816-1](#) [TESTO 174-T SET](#) [TESTO 605-H1](#)