

# **AS5162**

# **12-Bit Magnetic Angle Position Sensor**

# **General Description**


The AS5162 is a contactless magnetic angle position sensor for accurate angular measurement over a full turn of 360°. A sub range can be programmed to achieve the best resolution for the application. It is a system-on-chip, combining integrated Hall elements, analog front end, digital signal processing and best in class automotive protection features in a single device.

To measure the angle, only a simple two-pole magnet, rotating over the center of the chip, is required. The magnet may be placed above or below the IC.

The absolute angle measurement provides instant indication of the magnet's angular position with a resolution of 0.022° = 16384 positions per revolution. According to this resolution the adjustment of the application specific mechanical positions are possible. The angular output data is available over a 12 bit ratiometric analog output.

The AS5162 operates at a supply voltage of 5V and the supply and output pins are protected against overvoltage up to +20V. In addition the supply pins are protected against reverse polarity up to -20V.

Figure 1: Typical Arrangement of AS5162 and Magnet

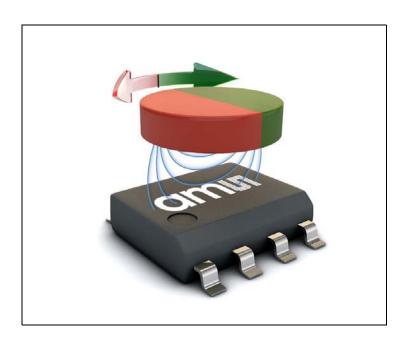

Ordering Information and Content Guide appear at end of datasheet.



# **Key Benefits & Features**

The benefits and features of AS5162, 12-Bit Magnetic Angle Position Sensor are listed below:

Figure 2: Added Value of Using AS5162

Benefits	Features
Great flexibility on angular excursion	360° contactless high resolution angular position sensing
Simple programming	<ul> <li>User programmable start and end point of the application region</li> <li>Saw tooth mode 1-4 slopes per revolution</li> <li>Clamping levels</li> <li>Transition point</li> </ul>
Failure diagnostics	Broken GND and VDD detection for all external load cases
High-Resolution output signal	Analog output ratiometric to VDD
Ideal for applications in harsh environments due to contactless position sensing	Wide temperature range: - 40°C to 150°C

### **Applications**

The AS5162 is ideal for automotive applications like:

- Throttle and valve position sensing
- Gearbox position sensor
- Tumble flap
- Chassis height level
- Pedal position sensing
- Contactless potentiometers


Page 2 ams Datasheet
Document Feedback [v1-06] 2015-Dec-07



### **Block Diagram**

The functional blocks of this device are shown below:

Figure 3: AS5162 Block Diagram

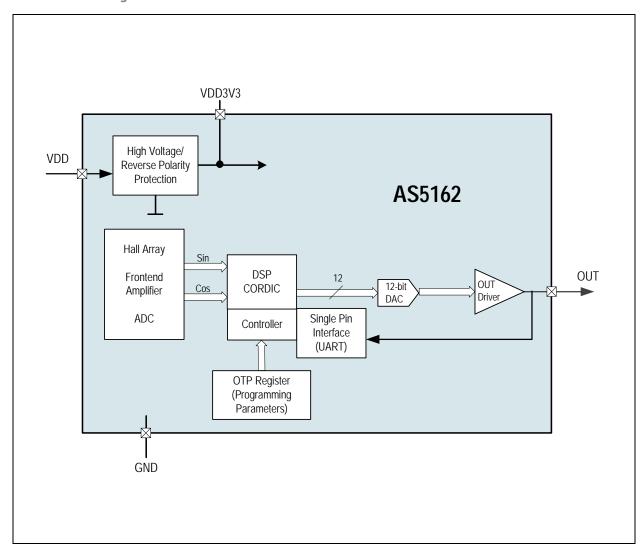

ams Datasheet Page 3
[v1-06] 2015-Dec-07
Document Feedback



# **Pin Assignment**

Figure 4: SOIC-8 Pin Configuration

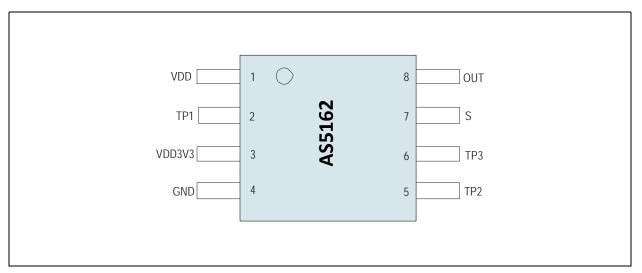


Figure 5: SOIC-8 Pin Description

Pin Number	Pin Name	Pin Type	Description
1	VDD	Supply pin	Positive supply pin. This pin is over voltage protected.
2	TP1	DIO/AIO multi purpose pin	<b>Test pin for fabrication.</b> Connected to ground in the application board.
3	VDD3V3	AIO	Output of the internal voltage regulator
4	GND	Supply pin	<b>Ground pin.</b> Connected to ground in the application.
5	TP2	DIO/AIO multi purpose pin	<b>Test pin for fabrication.</b> Connected to ground in the application board.
6	TP3	DIO/AIO multi purpose pin	<b>Test pin for fabrication.</b> Open in the application.
7	S	AIO	<b>Test pin for fabrication.</b> Connected to OUT in the application board.
8	OUT	DIO/AIO multi purpose pin	<b>Output pin analog output.</b> Over this pin the programming is possible.

Page 4
Document Feedback
[v1-06] 2015-Dec-07



### **Absolute Maximum Ratings**

Stresses beyond those listed in Absolute Maximum Ratings may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in Electrical Characteristics is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Figure 6: Absolute Maximum Ratings

Symbol	Parameter	Min	Max	Units	Comments
	E	lectrical	Paramet	ers	
V <sub>DD</sub>	DC supply voltage at pin VDD Overvoltage	-20	20	V	No operation
V <sub>OUT</sub>	Output voltage OUT	-0.3	20	V	Permanent
V <sub>diff</sub>	Voltage difference at pin VDD and OUT	-20	20	V	
V <sub>DD3V3</sub>	DC supply voltage at pin V <sub>DD3V3</sub>	-0.3	5	V	
I <sub>scr</sub>	Input current (latchup immunity)	-100	100	mA	Norm: AEC-Q100-004
	El	ectrosta	tic Discha	rge	
ESD	Electrostatic discharge	<u>+</u>	2	kV	Norm: AEC-Q100-002
	Temperature	Ranges	and Stora	age Conditi	ons
T <sub>strg</sub>	Storage temperature	-55	150	°C	Min -67°F; Max 302°F
T <sub>Body</sub>	Body temperature		260	°C	The reflow peak soldering temperature (body temperature) specified is in accordance with IPC/JEDEC J-STD-020 "Moisture/Reflow Sensitivity Classification for Non-Hermetic Solid State Surface Mount Devices". The lead finish for Pb-free leaded packages is matte tin (100% Sn).
RH <sub>NC</sub>	Relative humidity (non-condensing)	5	85	%	
MSL	Moisture Sensitivity Level	3			Represents a maximum floor life time of 168h

ams Datasheet Page 5
[v1-06] 2015-Dec-07
Document Feedback



#### **Electrical Characteristics**

#### **Operating Conditions**

In this specification, all the defined tolerances for external components need to be assured over the whole operation conditions range and also over lifetime.

Figure 7: Operating Conditions

Symbol	Parameter	Conditions	Min	Тур	Max	Units
T <sub>AMB</sub>	Ambient temperature		-40		150	°C
I <sub>supp</sub>	Supply current				12	mA
$V_{DD}$	Supply voltage at pin VDD		4.5	5.0	5.5	V

### **Magnetic Input Specification**

 $T_{AMB}$  = -40°C to 150°C,  $V_{DD}$  = 4.5V to 5.5V (5V operation), unless otherwise noted.

Two-Pole Cylindrical Diametrically Magnetized Source

Figure 8: Magnetic Input Specification

Symbol	Parameter	Conditions	Min	Тур	Max	Units
B <sub>pk</sub>	Magnetic input field amplitude	Required vertical component of the magnetic field strength on the die's surface, measured along a concentric circle with a radius of 1.25 mm	30		70	mT
B <sub>pkext</sub>	Magnetic input field amplitude (extended) default setting	Required vertical component of the magnetic field strength on the die's surface, measured along a concentric circle with a radius of 1.25 mm. Increased sensor output noise.	10		90	mT
B <sub>off</sub>	Magnetic offset	Constant magnetic stray field			± 5	mT
	Field non-linearity	Including offset gradient			5	%
D <sub>isp</sub>	Displacement radius	Offset between defined device center and magnet axis. Dependent on the selected magnet. Including Eccentricity.		1		mm

Page 6ams DatasheetDocument Feedback[v1-06] 2015-Dec-07




### **Electrical System Specifications**

 $T_{AMB}$  = -40°C to 150°C,  $V_{DD}$  = 4.5V to 5.5V (5V operation), Magnetic Input Specification, unless otherwise noted.

Figure 9: Electrical System Specifications

Symbol	Parameter	Conditions	Min	Тур	Max	Units
RES	Resolution Analog Output	Range > 90° 1LSB=1.221mV typ			12	bit
INL <sub>opt</sub>	Integral non-linearity (optimum)	Best aligned reference magnet at 25°C over full turn 360°.			0.5	deg
INL <sub>temp</sub>	Integral non-linearity (optimum)	Best aligned reference magnet over temperature -40° to 150° over full turn 360°.			0.9	deg
INL	Integral non-linearity	Best aligned reference magnet over temperature -40° to 150° over full turn 360° and displacement			1.4	deg
DNL	Differential non-linearity	Monolitic		0.05		deg
ON	Output noise (360° segment)	1 LSB after filter peak/peak rms value		0.2		%/VDD
t <sub>PwrUp</sub>	Power-up time 0-5V	See Figure 10			10	ms
t <sub>delay</sub>	System propagation delay absolute output: delay of ADC, DSP and absolute interface	10kOhm, 100 μF RC filter			300	μs

Figure 10: Power-Up Timing Diagram

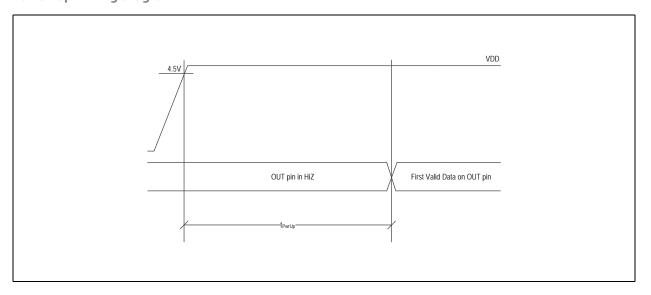

ams Datasheet Page 7
[v1-06] 2015-Dec-07
Document Feedback



# **Timing Characteristics**

Figure 11: **Timing Conditions** 

Symbol	Parameter	Conditions	Min	Тур	Max	Units
T <sub>DETWD</sub>	WachDog error detection time				12	ms

### **Power Management - Supply Monitor**

Figure 12: **Power Management - Supply Monitor Conditions** 

Symbol	Parameter	Conditions	Min	Тур	Max	Units
VDD <sub>UVTH</sub>	VDD undervoltage upper threshold		3.5	4.0	4.5	V
VDD <sub>UVTL</sub>	VDD undervoltage lower threshold		3.0	3.5	4.0	V
VDD <sub>UVHYS</sub>	VDD undervoltage hysteresis		300	500	900	mV
VDD <sub>UVDET</sub>	VDD undervoltage detection time		10	50	250	μs
VDD <sub>UVREC</sub>	VDD undervoltage recovery time		10	50	250	μs
VDD <sub>OVTH</sub>	VDD overvoltage upper threshold		6.0	6.5	7.0	V
VDD <sub>OVTL</sub>	VDD overvoltage lower threshold		5.5	6	6.5	V
VDD <sub>OVHYS</sub>	VDD overvoltage hysteresis		300	500	900	mV
ANA <sub>TOVDET</sub>	VDD overvoltage detection time (analog path)		10	50	250	μs
ANA <sub>TOVREC</sub>	VDD overvoltage recovery time (analog path)		10	50	250	μs

Page 8 ams Datasheet **Document Feedback** [v1-06] 2015-Dec-07



#### **Detailed Description**

The AS5162 is manufactured in a CMOS process and uses a spinning current Hall technology for sensing the magnetic field distribution across the surface of the chip.

The integrated Hall elements are placed around the center of the device and deliver a voltage representation of the magnetic field at the surface of the IC.

Through Sigma-Delta Analog / Digital Conversion and Digital Signal-Processing (DSP) algorithms, the AS5162 provides accurate high-resolution absolute angular position information. For this purpose a Coordinate Rotation Digital Computer (CORDIC) calculates the angle and the magnitude of the Hall array signals.

The DSP is also used to provide digital information at the outputs that indicate movements of the used magnet towards or away from the device's surface.

A small low cost diametrically magnetized (two-pole) standard magnet provides the angular position information.

The AS5162 senses the orientation of the magnetic field and calculates a 14-bit binary code. This code is mapped to a programmable output characteristic in analog voltage format. This signal is available at the pin (OUT).

The application angular region can be programmed in a user friendly way. The start angle position T1 and the end point T2 can be set and programmed according the mechanical range of the application with a resolution of 14 bits. In addition the **T1Y** and **T2Y** parameter can be set and programmed according the application. The transition point 0 to 360 degree can be shifted using the break point parameter **BP**. The voltage for clamping level low **CLL** and clamping level high **CLH** can be programmed with a resolution of 9 bits. Both levels are individually adjustable.

The output parameters can be programmed in an OTP register. No additional voltage is required to program the AS5162. The setting may be overwritten at any time and will be reset to default when power is cycled. To make the setting permanent, the OTP register must be programmed by using a lock bit the content could be frozen for ever.

The AS5162 is tolerant to magnet misalignment and unwanted external magnetic fields due to differential measurement technique and Hall sensor conditioning circuitry.

ams Datasheet Page 9 Document Feedback



#### Operation

#### **VDD Voltage Monitor**

**VDD** Over Voltage Management. If the supply voltage at pin **VDD** exceeds the over-voltage upper threshold for longer than the detection time the output is turned off. When the over voltage event has passed and the voltage applied to pin **VDD** falls below the over-voltage lower threshold for longer than the recovery time the device enters the normal mode and the output is enabled.

**VDD Under Voltage Management.** When the voltage applied to the **VDD** pin falls below the under-voltage lower threshold for longer than the detection time the output is turned off. When the voltage applied to the **VDD** pin exceeds the under-voltage upper threshold for longer than the detection time the device enters the normal mode and the output is enabled.

#### **Analog Output**

By default (after programmed **CUST\_LOCK** OTP bit) the analog output mode is selected. The pin **OUT** provides an analog voltage that is proportional to the angle of the rotating magnet and ratiometric to the supply voltage **VDD**. It can source or sink currents up in normal operation. A short circuit protection is in place and will switch the output driver in high Z in case of an overload event. Due to an intelligent approach a permanent short circuit will not damage the device. This is also feasible in a high voltage condition up to 20 V and at the highest specified ambient temperature.

After the digital signal processing (DSP) a 12-bit Digital-to-Analog converter and output stage provides the output signal.

The DSP maps the application range to the output characteristic. An inversion of the slope is also programmable to allow inversion of the rotation direction.

The reference voltage for the Digital-to-Analog converter (DAC) is taken from **VDD**. In this mode, the output voltage is ratiometric to the supply voltage.

An on-chip diagnostic feature handles the error state at the output. Depending on the failure the output is in HiZ condition or is driven in the failure band (see Figure 21).

Page 10
Document Feedback
[v1-06] 2015-Dec-07



#### **Programming Parameters**

The analog output characteristic is programmable by OTP. Depending on the application, the analog output can be adjusted. The user can program the following application specific parameters.

Figure 13: Programming Parameters

Parameter	Description
T1	Mechanical angle start point
T2	Mechanical angle end point
T1Y	Voltage level at the T1 position
T2Y	Voltage level at the T2 position
CLL	Clamping Level Low
CLH	Clamping Level High
ВР	Break point (transition point 0 to 360°)

These parameters are input parameters. Using the available programming software and programmer these parameters are converted and finally written into the AS5162 128 bit OTP memory.

ams Datasheet Page 11 [v1-06] 2015-Dec-07 Document Feedback



#### **Application Specific Angular Range Programming**

The application range can be selected by programming **T1** with a related **T1Y** and **T2** with a related **T2Y** into the AS5162. The clamping levels **CLL** and **CLH** can be programmed independent from the **T1** and **T2** position and both levels can be separately adjusted.

Figure 14:
Programming of an Individual Application Range

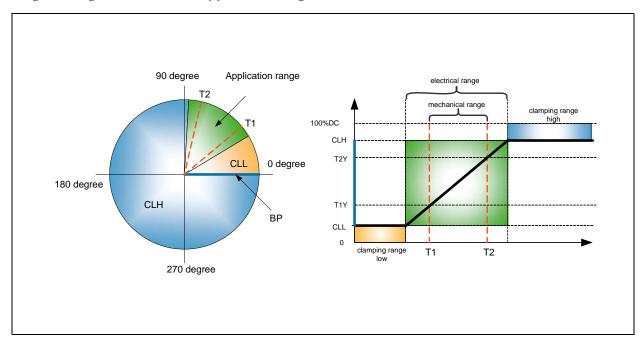


Figure 14 shows a simple example of the selection of the range. The mechanical starting point T1 and the mechanical end point T2 are defining the mechanical range. A sub range of the internal CORDIC output range is used and mapped to the needed output characteristic. The analog output signal has 12 bit, hence the level T1Y and T2Y can be adjusted with this resolution. As a result of this level and the calculated slope the clamping region low is defined. The break point BP defines the transition between CLL and CLH. In this example the BP is set to 0 degree. The BP is also the end point of the clamping level high CLH. This range is defined by the level CLH and the calculated slope. Both clamping levels can be set independently form each other.

Page 12

Document Feedback


[v1-06] 2015-Dec-07



#### **Application Specific Programming of the Break Point**


The break point **BP** can be programmed as well with 14 bits. This is important when the default transition point is inside the application range. In such a case the default transition point must be shifted out of the application range. The parameter **BP** defines the new position.

Figure 15: Individual Programming of the Break Point BP

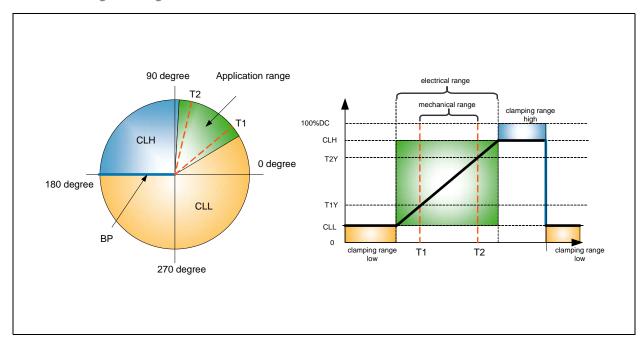

#### **Full Scale Mode**

Figure 16: Full Scale Mode

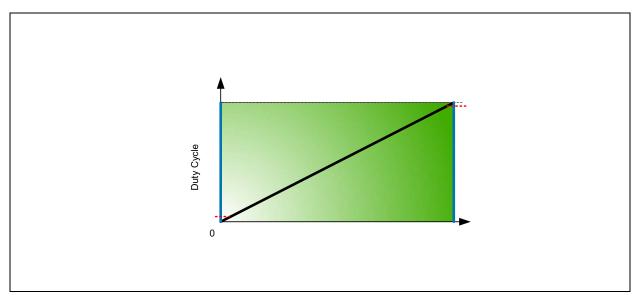

ams Datasheet Page 13
[v1-06] 2015-Dec-07 Document Feedback



For simplification, Figure 16 describes a linear output voltage from rail to rail (0V to VDD) over the complete rotation range. In practice, this is not feasible due to saturation effects of the output stage transistors. The actual curve will be rounded towards the supply rails (as indicated Figure 16).

#### **Multiple Slope Output**

The AS5162 can be programmed to multiple slopes. Where one programmed reference slope characteristic is copied to multiple slopes. Two, three and four slopes are selectable by the user OTP bits QUADEN (1:0). In addition to the steepness of the slope the clamping levels can be programmed as well.

Figure 17: Two Slope Mode


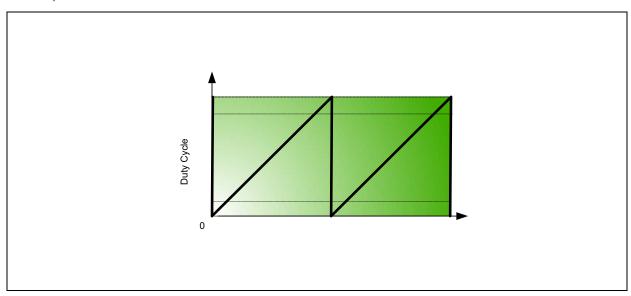


Figure 18: Four Slope Mode



Page 14

Document Feedback [v1-06] 2015-Dec-07

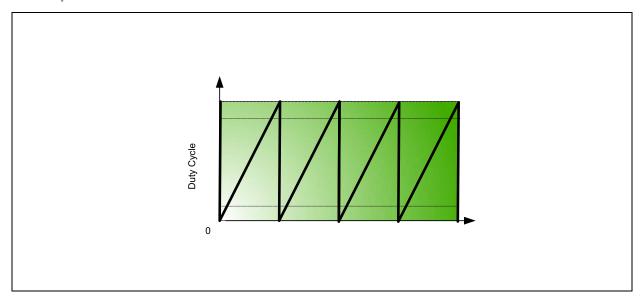


#### **Resolution of Parameters**

The programming parameters have a wide resolution of up to 14 bits.

Figure 19: Resolution of the Programming Parameters

Symbol	Parameter	Resolution	Note
T1	Mechanical angle start point	14 bits	
T2	Mechanical angle stop point	14 bits	
T1Y	Mechanical start voltage level	12 bits	
T2Y	Mechanical stop voltage level	12 bits	
CLL	Clamping level low	9 bits	
CLH	Clamping level high	9 bits	
ВР	Break point	14 bits	

Figure 20:
Overview of the Angular Output Voltage

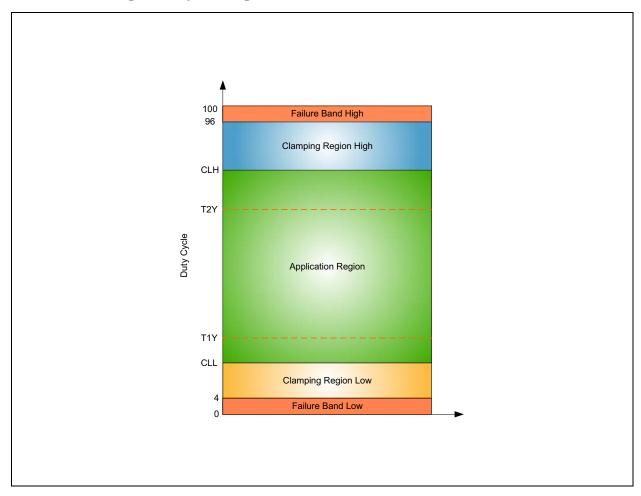

ams Datasheet Page 15
[v1-06] 2015-Dec-07 Document Feedback



Figure 20 gives an overview of the different ranges. The failure bands are used to indicate a wrong operation of the AS5162. This can be caused due to a broken supply line. By using the specified load resistors, the output level will remain in these bands during a fail. It is recommended to set the clamping level **CLL** above the lower failure band and the clamping level **CLH** below the higher failure band.

#### **Analog Output Diagnostic Mode**

Due to the low pin count in the application a wrong operation must be indicated by the output pin **OUT**. This could be realized using the failure bands. The failure band is defined with a fixed level. The failure band low is specified from 0 to 4% of the supply range over the total operation range. The failure band high is defined always from 96 to 100%. Several failures can happen during operation. The output signal remains in these bands over the specified operating and load conditions. All different failures can be grouped into the internal alarms (failures) and the application related failures.

 $C_{LOAD} \le 33$  nF,  $R_{PU} = 4k\Omega$  to  $10k\Omega$ 

 $R_{PD}\text{=}4k\Omega$  to  $10k\Omega$  load pull-up

Figure 21: Different Failure Cases of AS5162

Туре	Failure Mode	Symbol	Failure Band	Note
	Out of magnetic range (too less or too high magnetic input)	MAGRng	High/Low	Programmable by OTP bit DIAG_HIGH
	CORDIC overflow	COF	High/Low	Programmable by OTP bit DIAG_HIGH
Internal alarms (failures)	Offset compensation finished	OCF	High/Low	Programmable by OTP bit DIAG_HIGH
	Watchdog fail	WDF	High/Low	Programmable by OTP bit DIAG_HIGH
	Oscillator fail	OF	High/Low	Programmable by OTP bit DIAG_HIGH
	Overvoltage condition	OV		Dependant on the load
Application	Broken VDD	BVDD	High/Low	resistor Pull up → failure band high
related failures	Broken VSS	BVSS		Pull down → failure band low
	Short circuit output	SCO	High/Low	Switch off → short circuit dependent

Page 16ams DatasheetDocument Feedback[v1-06] 2015-Dec-07



For efficient use of diagnostics, it is recommended to program to clamping levels CLL and CLH.

#### **Analog Output Driver Parameters**

The output stage is configured in a push-pull output. Therefore it is possible to sink and source currents.

 $C_{LOAD} \le 33nF$ ,  $R_{PU} = 4k\Omega$  to  $10k\Omega$ ;  $R_{PD}$ =  $4k\Omega$  to  $10k\Omega$  load pull-up

Figure 22: **General Parameters for the Output Driver** 

Symbol	Parameter	Min	Тур	Max	Unit	Note
IOUTSCL	Short circuit output current (low side driver)	5	10	20	mA	V <sub>OUT</sub> =20V
IOUTSCH	Short circuit output current (high side driver)	-20	-10	-5	mA	V <sub>OUT</sub> =0V
TSCDET	Short circuit detection time	20		600	μs	output stage turned off
TSCREC	Short circuit recovery time	2		20	ms	output stage turned on
ILEAKOUT	Output Leakage current	-20		20	μΑ	V <sub>OUT</sub> =VDD=5V
BGNDPU	Output voltage broken GND with pull-up	96		100	%VDD	
BGNDPD	Output voltage broken GND with pull-down	0		4	%VDD	
BVDDPU	Output voltage broken VDD with pull-up	96		100	%VDD	
BVDDPD	Output voltage broken VDD with pull-down	0		4	%VDD	
OUTRATIO	Output ratiometric error	-0.5		0.5	%VDD	
OUTDNL	Output DNL			10 <sup>(1)</sup>	LSB	Between 4% and 96% of VDD
OUTINL	Output INL	-10 <sup>(2)</sup>		10 <sup>(2)</sup>	LSB	Between 4% and 96% of VDD

#### Note(s) and/or Footnote(s):

- 1. This parameter will be finally defined after temperature characterisation.
- 2. Design target for this value is reduced.

#### **Hysteresis Function**

AS5162 device includes a hysteresis function to avoid sudden jumps from CLH to CLL and vice versa caused by noise in the full turn configuration. The hysteresis amplitude can be selected via the OTP bits HYSTSEL<1:0>.

ams Datasheet Page 17 [v1-06] 2015-Dec-07 **Document Feedback** 




### **Application Information**

### **Recommended Application Schematic**

Figure 23 and Figure 24 show the recommended schematic in the application. All components marked with (\*) are optional and can be used to further increase the EMC.

Figure 23: Recommended Schematic of Pull-Down Configuration

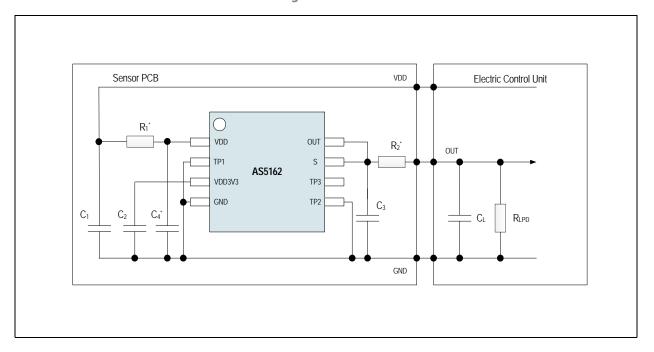

Page 18ams DatasheetDocument Feedback[v1-06] 2015-Dec-07



Figure 24: Recommended Schematic of Pull-Up Configuration

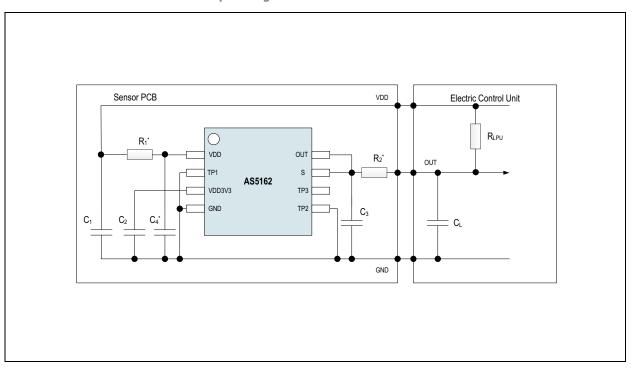


Figure 25: External Components

Symbol	Parameter	Min	Тур	Max	Unit	Note
C <sub>1</sub>	VDD buffer capacitor	0.8	1	1.2	μF	Low ESR 0.3 $\Omega$
C <sub>2</sub>	VDD3V3 regulator capacitor	0.8	1	1.2	μF	Low ESR 0.3 Ω
C <sub>3</sub>	OUT load capacitor (sensor PCB)	0		4.7	nF	
C <sub>4</sub> *	VDD capacitor (optional)		4.7		nF	Do not increase due to programming over output
R <sub>1</sub> *	VDD serial resistor (optional)		10		Ω	
C <sub>L</sub>	OUT load capacitor (ECU)	0		33	nF	
R <sub>2</sub> *	OUT serial resistor (optional)		50		Ω	
R <sub>LPU</sub>	OUT pull-up resistance	4		10	kΩ	
R <sub>LPD</sub>	OUT pull-down resistance	4		10	kΩ	

ams Datasheet Page 19
[v1-06] 2015-Dec-07 Document Feedback



#### Programming the AS5162

The AS5162 programming is a one-time-programming (OTP) method, based on polysilicon fuses. The advantage of this method is that no additional programming voltage is needed. The internal LDO provides the current for programming.

The OTP consists of 128 bits; several bits are available for user programming. In addition factory settings are stored in the OTP memory. Both regions are independently lockable by build in lock bits.

A single OTP cell can be programmed only once. Per default, the cell is "0"; a programmed cell will contain a "1". While it is not possible to reset a programmed bit from "1" to "0", multiple OTP writes are possible, as long as only unprogrammed "0"-bits are programmed to "1".

Independent of the OTP programming, it is possible to overwrite the OTP register temporarily with an OTP write command. This is possible only if the user lock bit is not programmed.

Due to the programming over the output pin the device will initially start in the communication mode. In this mode the digital angle value can be read with a specific protocol format. It is a bidirectional communication possible. Parameters can be written into the device. A programming of the device is triggered by a specific command. With another command (pass2func) the device can be switched into operation mode. In case of a programmed user lock bit the AS5162 automatically starts up in the functional operation mode. No communication of the specific protocol is possible after this.

A standard half duplex UART protocol is used to exchange data with the device in the communication mode.

#### **UART Interface for Programming**

The AS5162 uses a standard UART interface with an address byte and two data bytes. The read or write mode is selected with bit R/Wn in the first byte. The timing (baudrate) is selected by the AS5162 over a synchronization frame. The baud rate register can be read and overwritten (optional). Every start bit is used for synchronization.

A time out function detects not complete commands and resets the AS5162 UART after the timeout period.

Page 20
Document Feedback [v1-06] 2015-Dec-07



#### Frame Organization

Each frame is composed by 24 bits. The first byte of the frame specifies the read/write operation with the register address. 16 data bits contains the communication data. There will be no operation in case of the usage of a not specified CMD. The UART programming interface block of the AS5162 can operate in slave communication or master communication mode. In the slave communication mode the AS5162 receives the data. The programming tool is the driver of the single communication line. In case of the master communication mode the AS5162 transmits data in the frame format. The single communication line can be pulled down by the AS5162.

The UART frame consists of 1 start bit (low level), 8 data bit, 1 even-parity bit and 1 stop bit (high level). Data are transferred from LSB to MSB.

Figure 26: General UART Frame

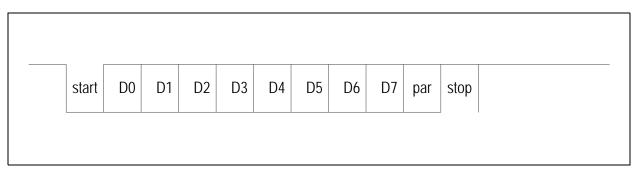


Figure 27: Bit Timing

Symbol	Parameter	Min	Тур	Max	Unit	Note
START	Start bit		1		TBIT	
Dx	Data bit		1		TBIT	
PAR	Parity bit		1		TBIT	
STOP	Stop bit	1			TBIT	
TSW	Slave/Master Switch Time		7		TBIT	


Each communication starts with the reception of a request from the external controller. The request consists of two frames: one synchronization frame and the command frame.

ams Datasheet Page 21
[v1-06] 2015-Dec-07 Document Feedback




The synchronization frame contains the data 0x55 and allows the UART to measure the external controller baud rate.

Figure 28: Synchronization Frame

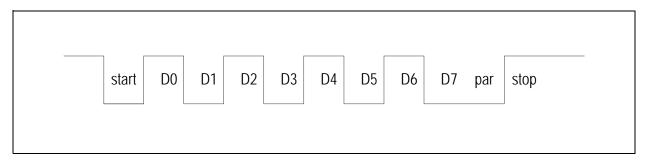

The second frame contains the command Read/ Write (1 bit) and the address (7 bits).

Figure 29: Address and Command Frame

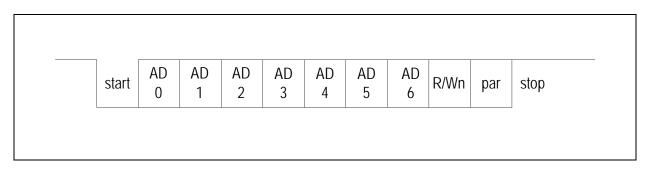

Only two commands are possible. In case of read command the idle phase between the command and the answer is the time TSW. In case of parity error command is not executed.

Figure 30: Possible Commands

Possible Interface Commands	Description	AS5X63 Communication Mode	Command CMD
WRITE	Write data to the OTP memory or Registers	SLAVE	0
READ	Read data to the OTP memory or Registers	SLAVE & MASTER	1

#### Note(s) and/or Footnote(s):

- 1. In case of Write command the request is followed by the frames containing the data to write.
- 2. In case of Read command the communication direction will change and the AS5162 will answer with the frames containing the requested data.


Page 22

Document Feedback [v1-06] 2015-Dec-07



#### **WRITE** (Command Description)

Figure 31: **Full Write Command** 

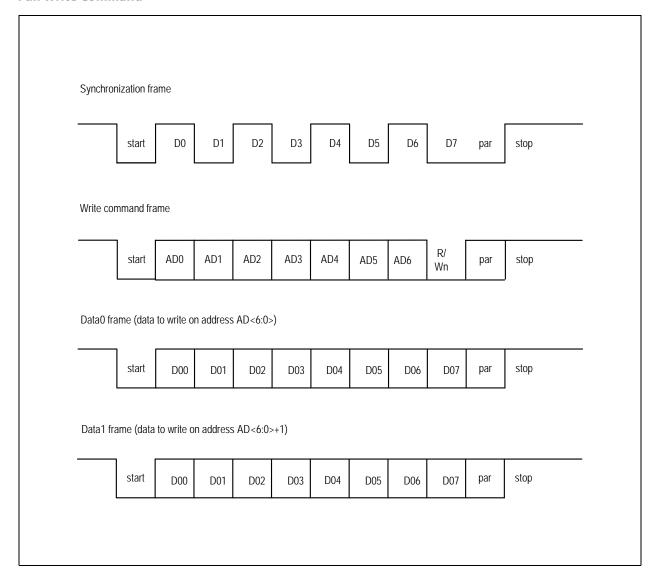

- Writing the AS5162 KEY in the fuse register (address 0x41) triggers the transfer of the data from the OTP RAM into the Poly Fuse cell.
- Writing the AS5162 KEY in the Pass2Func Register (address 0x60) forces the device into normal mode.

ams Datasheet Page 23 **Document Feedback** 



#### **READ (Command Description)**

Figure 32: Full Read Command

		ne:									
	start	D0	D1	D2	D3	D4	D5	D6	D7	par	stop
Read cor	nmand fram	e:									
	start	AD0	AD1	AD2	AD3	AD4	AD5	AD6	R/Wn	par	stop
Data0 fr	ame (data re	ead from ac	ldress AD<	<6:0>) (MA	STER):						
	start	D00	D01	D02	D03	D04	D05	D06	D07	par	stop
											_
)ata1 fran	me (data rea	d from add	rass AD-A	∵0>±1) (M	/CTED/-						
)ata1 frar	me (data rea	d from add	ress AD<6	o:0>+1) (M/	ASTER):				ı		

#### **Baud-Rate Automatic Detection**

The UART includes a built-in baud-rate monitor that uses the synchronization frame to detect the external controller baud-rate. This baud-rate is used after the synchronization byte to decode the following frame and to transmit the answer and it is stored in the BAUDREG register.

Page 24ams DatasheetDocument Feedback[v1-06] 2015-Dec-07



#### **Baud-Rate Manual Setting (Optional)**

The BAUDREG register can be read and over-written for a possible manual setting of the baud-rate: in case the register is overwritten with a value different from 0, this value will be used for the following UART communications and the synchronization frame must be removed from the request.

Figure 33: Manual Baud-Rate Setting


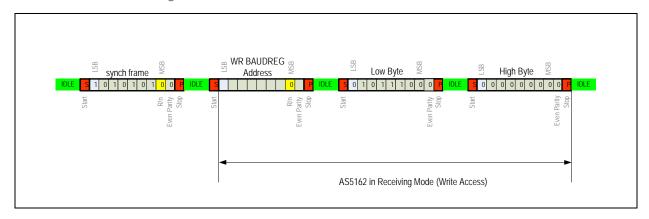


Figure 34: Simple Read and Write



ams Datasheet Page 25
[v1-06] 2015-Dec-07
Document Feedback

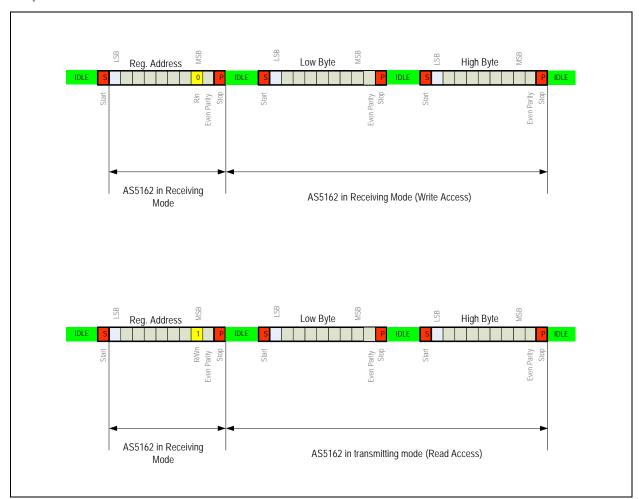

# **OTP Programming Data**

Figure 35: **OTP Memory Map** 

Data Byte	Bit Number	Symbol	Default	Description	
	0	_	0		
	1		0		
	2		0		
DATA15 (0x0F)	3		0		
DAIA13 (0X01)	4		0		
	5		0		
	6	Factory	0	ams (reserved)	
	7		0		Fac
	0		0		Factory Settings
	1	Settings	0		Setti
	2		0		ngs
DATA14 (0x0E)	3		0		
DATA 14 (OXOE)	4		0		
	5		0		
	6		0		
	7		0		
DATA13 (0x0D)	0		0		
DAIATS (0X0D)	1		0		

Page 26  $ams\, Datasheet$ **Document Feedback** [v1-06] 2015-Dec-07



Data Byte	Bit Number	Symbol	Default	Description	
	2	CUSTID<0>	0		
	3	CUSTID<1>	0		
DATA13 (0x0D)	4	CUSTID<2>	0		
DATATS (0x0D)	5	CUSTID<3>	0	Customer Identifier	
	6	CUSTID<4>	0		
	7	CUSTID<5>	0		
DATA12 (0x0C)	0	CUSTID<6>	0		Cust
DATA11 (0x0B)	7	CLH<0>	0		Customer Settings
	0	CLH<1>	0		r Seti
	1	CLH<2>	0		tings
	2	CLH<3>	0		
DATA10 (0x0A)	3	CLH<4>	0	Clamping Level High	
DAIATO (OXOA)	4	CLH<5>	0		
	5	CLH<6>	0		
	6	CLH<7>	0		
	7	CLH<8>	0		

ams Datasheet Page 27
[v1-06] 2015-Dec-07 Document Feedback



Data Byte	Bit Number	Symbol	Default	Description	
	0	CLL<0>	0		
	1	CLL<1>	0		
	2	CLL<2>	0		
DATA9 (0x09)	3	CLL<3>	0		
DAIA9 (0x09)	4	CLL<4>	0	Clamping Level Low	
	5	CLL<5>	0		
	6	CLL<6>	0		Cust
	7	CLL<7>	0		ome
	0	CLL<8>	0		Customer Settings
	1	OFFSET<0>	0		ings
	2	OFFSET<1>	0		
DATA8 (0x08)	3	OFFSET<2>	0		
DAIAO (0x00)	4	OFFSET<3>	0	Offset	
	5	OFFSET<4>	0		
	6	OFFSET<5>	0		
	7	OFFSET<6>	0		

Page 28ams DatasheetDocument Feedback[v1-06] 2015-Dec-07



Data Byte	Bit Number	Symbol	Default	Description	
	0	OFFSET<7>	0		
	1	OFFSET<8>	0		
	2	OFFSET<9>	0		
DATA7 (0x07)	3	OFFSET<10>	0		
DAIA7 (0x07)	4	OFFSET<11>	0		
	5	OFFSET<12>	0		
	6	OFFSET<13>	0	Offset	
	7	OFFSET<14>	0		
	0	OFFSET<15>	0		
	1	OFFSET<16>	0		
	2	OFFSET<17>	0		Cust
DATA6 (0x06)	3	OFFSET<18>	0		Customer Settings
DATAG (0x00)	4	OFFSET<19>	0		r Seti
	5	GAIN<0>	0		tings
	6	GAIN<1>	0		
	7	GAIN<2>	0		
	0	GAIN<3>	0		
	1	GAIN<4>	0		
	2	GAIN<5>	0	Scale Factor	
DATA5 (0x05)	3	GAIN<6>	0		
DAIAJ (0x03)	4	GAIN<7>	0		
	5	GAIN<8>	0		
	6	GAIN<9>	0		
	7	GAIN<10>	0		

ams DatasheetPage 29[v1-06] 2015-Dec-07Document Feedback



Data Byte	Bit Number	Symbol	Default	Description	
	0	GAIN<11>	0		
	1	GAIN<12>	0		
	2	GAIN<13>	0	Scale Factor	
DATA4 (0x04)	3	GAIN<14>	0	- Scale Factor	
DATA4 (0x04)	4	GAIN<15>	0		
	5	GAIN<16>	0		
	6	BP<0>	0		
	7	BP<1>	0		
	0	BP<2>	0		
	1	BP<3>	0		
	2	BP<4>	0	- Break Point	
DATA 2 (0v002)	3	BP<5>	0		Custo
DATA3 (0x003)	4	BP<6>	0		Customer Settings
	5	BP<7>	0		
	6	BP<8>	0		
	7	BP<9>	0		
	0	BP<10>	0		
	1	BP<11>	0		
	2	BP<12>	0		
	3	BP<13>	0		
DATA2 (0x02)	4	ANGLERNG	0	Sector selection 0=Angular Sector≥22.5 degrees; 1=Angular Sector<22.5 degrees	
	5	DIAG_HIGH	0	Failure Band Selection 0=Failure Band Low 1=Failure Band High	

Page 30ams DatasheetDocument Feedback[v1-06] 2015-Dec-07



Data Byte	Bit Number	Symbol	Default	Description	
	6	QUADEN<0>	0	Quadrant Mode Enable 00=1quadrant;	
DATA2 (0x02)	7	QUADEN<1>	0	01=2quadrants; 10=3 quadrants; 11=4 quadrants	
	0	AIRGAPSEL	0	Magnetic input range extension 0:extended range; 1=normal range	
	1	HYSTSEL<0>	0	Hysteresis selection 00=no hysteresis;	
DATA1 (0x01)	2	HYSTSEL<1>	0	01: 56LSB; 10=91LSB; 11=137LSB	
	3	Not used	0		Cus
	4	Not used	0		Customer Settings
	5	Not used	0		er Set
	6	Not used	0		tings
	7	Not used	0		
	0	RED_ADD<0>	0		
	1	RED_ADD<1>	0	Redundancy Address Identify the address of the	
	2	RED_ADD<2>	0	byte containing the bit to be changed	
DATA((0)(0))	3	RED_ADD<3>	0	_	
DATA0 (0x00)	4	RED_BIT<0>	0	Redundancy Bit Identify the position of the	
	5	RED_BIT<1>	0	bit to be changed in the byte	
	6	RED_BIT<2>	0	at the address RED_ADD<3:0>	
	7	CUST_LOCK	0	Lock bit for Customer Area	

ams Datasheet Page 31
[v1-06] 2015-Dec-07
Document Feedback



# **READ / WRITE Register Map**

Figure 36: Read/Write Registers

Data Byte	Bit Number	Symbol	Default	Description	
	0	BAUDREG<0>	0		
	1	BAUDREG<1>	0		
	2	BAUDREG<2>	0		
DATA0 (0x20)	3	BAUDREG<3>	0		
DATAO (0X20)	4	BAUDREG<4>	0	UART Baud Rate Register	
	5	BAUDREG<5>	0		
	6	BAUDREG<6>	0		Rea
	7	BAUDREG<7>	0		M/pr
	0	BAUDREG<8>	0		Read/Write Area
	1	Not used	0		rea
	2	Not used	0		
DATA1 (0x21)	3	Not used	0		
DAIAT (0X21)	4	Not used	0	A read command returns all data bits at 0	
	5	Not used	0		
	6	Not used	0		
	7	Not used	0		

Page 32

Document Feedback

[v1-06] 2015-Dec-07



Data Byte	Bit Number	Symbol	Default	Description	
	0	DAC12IN<8>	0		
	1	DAC12IN<9>	0	DAC12 buffer value	
	2	DAC12IN<10>	0	DAC12 buffer value	
	3	DAC12IN<11>	0		
DATA2 (0x22)	4	DAC12INSEL	0	DAC12 buffer selection	
	5	R1K10K<0>	0	Selection of the reference resistance used for OTP	
	6	R1K10K<1>	0	download	Σ.
	7	DSPRN	0	Resetn of the Digital Signal Processing circuit	Read/Write Area
	0	DAC12IN<0>	0		te Ar
	1	DAC12IN<1>	0		a
	2	DAC12IN<2>	0		
DATA3 (0x23)	3	DAC12IN<3>	0	DAC12 buffer value	
טאואס (טאבס)	4	DAC12IN<4>	0	DACIZ Bullet value	
	5	DAC12IN<5>	0		
	6	DAC12IN<6>	0		
	7	DAC12IN<7>	0		

ams Datasheet Page 33
[v1-06] 2015-Dec-07 Document Feedback



# **READ Only Register Map**

Figure 37: Read Only Registers

Data Byte	Bit Number	Symbol	Default	Description	
DATA0 (0x28)	0	Not used	0	A read command returns 0	Read Area
	1	OFFSETFINISHED	0	Offset compensation finished	
	2	AGCFINISHED	0	AGC loop compensation finished	
	3	CORDICOVF	0	Overflow of the CORDIC	
	4	AGCALARML	0	AGC loop saturation because of B field too strong	
	5	AGCALARMH	0	AGC loop saturation because of B field too weak	
	6	OTP_RES	0	0=1K resistance selected for OTP download; 1=10K resistance selected for OTP download	
	7	PARITY_ERR	0	UART parity error flag	

Page 34ams DatasheetDocument Feedback[v1-06] 2015-Dec-07



Page 35

Data Byte	Bit Number	Symbol	Default	Description	
	0	CORDICOUT<0>	0	CORDIC Output	Read Area
	1	CORDICOUT<1>	0		
	2	CORDICOUT<2>	0		
DATA1 (0x29)	3	CORDICOUT<3>	0		
DAIAT (0X29)	4	CORDICOUT<4>	0		
	5	CORDICOUT<5>	0		
	6	CORDICOUT<6>	0		
	7	CORDICOUT<7>	0		
	0	CORDICOUT<8>	0		
DATA2 (0x2A)	1	CORDICOUT<9>	0		
	2	CORDICOUT<10>	0		
	3	CORDICOUT<11>	0		
	4	CORDICOUT<12>	0		
	5	CORDICOUT<13>	0		
	6	Not used	0	A read command returns all data bits at 0	
	7	Not used	0		
	0	DSPOUT<0>	0	- DSP Output	
DATA3 (0x2B)	1	DSPOUT<1>	0		
	2	DSPOUT<2>	0		
	3	DSPOUT<3>	0		
	4	DSPOUT<4>	0		
	5	DSPOUT<5>	0		
	6	DSPOUT<6>	0		
	7	DSPOUT<7>	0		



Data Byte	Bit Number	Symbol	Default	Description	
	0	DSPOUT<8>	0	DSP Output	Read Area
	1	DSPOUT<9>	0		
	2	DSPOUT<10>	0		
DATA4 (0x2C)	3	DSPOUT<11>	0		
DATA4 (UXZC)	4	Not used	0	A read command returns all data bits at 0	
	5	Not used	0		
	6	Not used	0		
	7	Not used	0		
	0	AGCVALUE<0>	0	- AGC Value	
	1	AGCVALUE<1>	0		
DATA5 (0x2D)	2	AGCVALUE<2>	0		
	3	AGCVALUE<3>	0		
	4	AGCVALUE<4>	0		
	5	AGCVALUE<5>	0		
	6	AGCVALUE<6>	0		
	7	AGCVALUE<7>	0		
DATA6 (0x2E)	0	MAG<0>	0	- Magnitude of magnetic field	
	1	MAG<1>	0		
	2	MAG<2>	0		
	3	MAG<3>	0		
	4	MAG<4>	0		
	5	MAG<5>	0		
	6	MAG<6>	0		
	7	MAG<7>	0		

Page 36ams DatasheetDocument Feedback[v1-06] 2015-Dec-07



Data Byte	Bit Number	Symbol	Default	Description	
	0	Not used	0		
	1	Not used	0	A read command returns all data bits at 0	Read Area
DATA7 (0x2F)	2	Not used	0		
	3	Not used	0		
	4	Not used	0		
	5	Not used	0		
	6	Not used	0		
	7	Not used	0		

## **Special Registers**

Figure 38: Special Registers

Data Byte	Bit Number	Symbol	Default	Description	
	0	AS5162KEY<0>	0		
	1	AS5162KEY<1>	0		
	2	AS5162KEY<2>	0		
DATA0 (0x41)	3	AS5162KEY<3>	0		
DATAU (0X41)	4	AS5162KEY<4>	0		
	5	AS5162KEY<5>	0	AS5162 KEY<15:0>=0101	Fuse Register
	6	AS5162KEY<6>	0		
	7	AS5162KEY<7>	0	A write command with data different from AS5162 KEY is	
	0	AS5162KEY<8>	0	not executed	
	1	AS5162KEY<9>	0	A read command returns all data bits at 0	
	2	AS5162KEY<10>	0		
DATA1 (0x42)	3	AS5162KEY<11>	0		
	4	AS5162KEY<12>	0		
	5	AS5162KEY<13>	0		
	6	AS5162KEY<14>	0		
	7	AS5162KEY<15>	0		



Data Byte	Bit Number	Symbol	Default	Description	
	0	AS5162KEY<0>	0		
	1	AS5162KEY<1>	0		
	2	AS5162KEY<2>	0		
DATA0 (0x60)	3	AS5162KEY<3>	0		
DATAU (0x00)	4	AS5162KEY<4>	0		
	5	AS5162KEY<5>	0	AS5162 KEY<15:0>=0101 0001 0110 0010 A write command with data different from AS5162 KEY is not executed A read command returns all data bits at 0	
	6	AS5162KEY<6>	0		Pass
	7	AS5162KEY<7>	0		Pass2Func Register
	0	AS5162KEY<8>	0		
	1	AS5162KEY<9>	0		jister
	2	AS5162KEY<10>	0		
DATA1 (0x61)	3	AS5162KEY<11>	0		
	4	AS5162KEY<12>	0		
	5	AS5162KEY<13>	0		
	6	AS5162KEY<14>	0		
	7	AS5162KEY<15>	0		

Page 38ams DatasheetDocument Feedback[v1-06] 2015-Dec-07



#### **Programming Procedure**

- Pull-Up on out pin
- VDD=5V
- Wait 10ms (after the startup time device enters communication mode)
- Write command: Trimming bits are written in the OTP RAM
- Read command: All the trimming bits are read back to check the correctness of the writing procedure.
- Write AS5162KEY in the Fuse register: The OTP RAM content is permanently transferred into the Poly Fuse cells.
- Wait 10 ms (fuse time)
- Write command, R1K\_10K<1:0>=(11)b: Poly Fuse cells are downloaded into the RAM memory using a 10K resistance as reference.
- Wait 5 ms (download time)
- Read R1K\_10K register, the expected value is 00b
- Write command, R1K\_10K<1:0>=(11)b
- Read R1K\_10K register, the expected value is (11)b. NB: Step11 and Step12 have to be consecutive.
- Read command: all the fused bits downloaded with 10K resistance are read back.
- Write command, R1K\_10K=<1:0>=(10)b: Poly Fuse cells are downloaded into the RAM memory using a 1K resistance as reference.
- Wait 5 ms (download time)
- Read R1K\_10K register, the expected value is (00)b
- Write command register, R1K\_10K<1:0>=(10)b
- Read R1K\_10K register, the expected value is (10)b NB: Step18 and Step19 have to be consecutive.
- Read command: All the fused bits downloaded with 1K resistance are read back.
- Check that read commands at Steps 5, 13 and 19 are matching
- Write AS5162KEY in the Pass2Func register: Device enters normal mode.


ams Datasheet Page 39
[v1-06] 2015-Dec-07 Document Feedback



#### **Mechanical Data**

The internal Hall elements are placed in the center of the package on a circle with a radius of 1.25mm.

Figure 39: Hall Element Positions

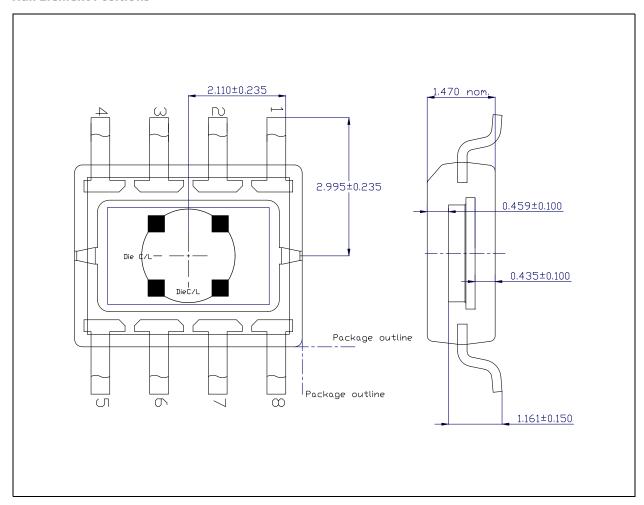

#### Note(s) and/or Footnote(s):

- 1. All dimensions in mm.
- 2. Die thickness 356µm nom.
- 3. Adhesive thickness 2 0  $\pm$  10  $\mu m$
- 4. Lead frame downest 200  $\pm$  25  $\mu m.$
- 5. Lead frame thickness 200  $\pm$  8 $\mu m.$


Page 40ams DatasheetDocument Feedback[v1-06] 2015-Dec-07



### **Package Drawings & Markings**

The device is available in a SOIC 8 - Lead 150 MIL Package.

Figure 40: Package Drawings and Dimensions

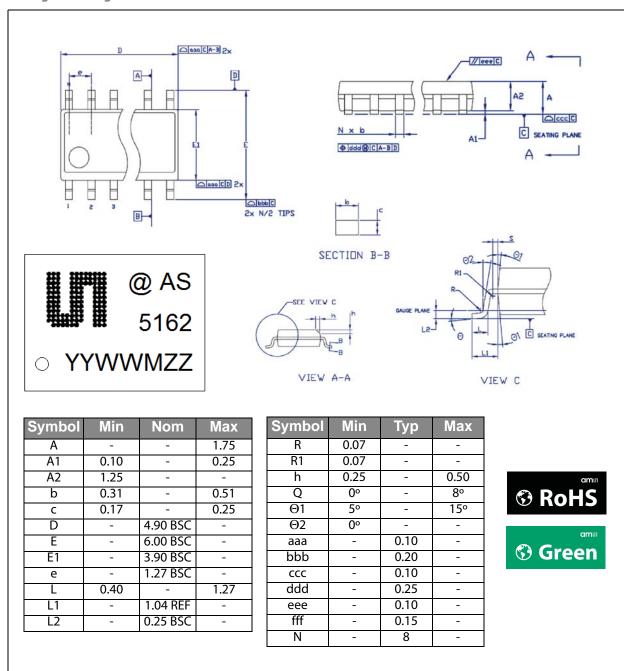

#### Note(s) and/or Footnote(s):

- 1. Dimensions and tolerancing confirm to ASME Y14.5M-1994.
- 2. All dimensions are in millimeters. Angles are in degrees.

Figure 41:

Package Marking: @YYWWMZZ

@	YY	ww	M	ZZ
Sublot identifier	Year	Week	Assembly plant identifier	Assembly traceability code

ams Datasheet Page 41
[v1-06] 2015-Dec-07 Document Feedback



### **Ordering & Contact Information**

The devices are available as the standard products shown in Figure 42.

Figure 42: Ordering Information

Ordering Code	Description	Package	Delivery Form	Delivery Quantity
AS5162-HSOP	12-Bit Programmable Angle Position Sensor	SOIC - 8	Tape & Reel	2500 pcs/reel
AS5162-HSOM	with analog output		rape & neer	500 pcs/reel

Buy our products or get free samples online at:

www.ams.com/ICdirect

Technical Support is available at: www.ams.com/Technical-Support

Provide feedback about this document at:

www.ams.com/Document-Feedback

For further information and requests, e-mail us at:

ams\_sales@ams.com

For sales offices, distributors and representatives, please visit: www.ams.com/contact

#### Headquarters

ams AG Tobelbaderstrasse 30 8141 Unterpremstaetten Austria, Europe

Tel: +43 (0) 3136 500 0 Website: www.ams.com

Page 42

Document Feedback

[v1-06] 2015-Dec-07



### **RoHS Compliant & ams Green Statement**

**RoHS:** The term RoHS compliant means that ams AG products fully comply with current RoHS directives. Our semiconductor products do not contain any chemicals for all 6 substance categories, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, RoHS compliant products are suitable for use in specified lead-free processes.

ams Green (RoHS compliant and no Sb/Br): ams Green defines that in addition to RoHS compliance, our products are free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material).

Important Information: The information provided in this statement represents ams AG knowledge and belief as of the date that it is provided. ams AG bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. ams AG has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. ams AG and ams AG suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

ams Datasheet Page 43 Document Feedback



#### **Copyrights & Disclaimer**

Copyright ams AG, Tobelbader Strasse 30, 8141 Unterpremstaetten, Austria-Europe. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Devices sold by ams AG are covered by the warranty and patent indemnification provisions appearing in its General Terms of Trade. ams AG makes no warranty, express, statutory, implied, or by description regarding the information set forth herein. ams AG reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with ams AG for current information. This product is intended for use in commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by ams AG for each application. This product is provided by ams AG "AS IS" and any express or implied warranties, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose are disclaimed.

ams AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of ams AG rendering of technical or other services.

Page 44
Document Feedback [v1-06] 2015-Dec-07



## **Document Status**

Document Status	Product Status	Definition
Product Preview	Pre-Development	Information in this datasheet is based on product ideas in the planning phase of development. All specifications are design goals without any warranty and are subject to change without notice
Preliminary Datasheet	Pre-Production	Information in this datasheet is based on products in the design, validation or qualification phase of development. The performance and parameters shown in this document are preliminary without any warranty and are subject to change without notice
Datasheet	Production	Information in this datasheet is based on products in ramp-up to full production or full production which conform to specifications in accordance with the terms of ams AG standard warranty as given in the General Terms of Trade
Datasheet (discontinued)	Discontinued	Information in this datasheet is based on products which conform to specifications in accordance with the terms of ams AG standard warranty as given in the General Terms of Trade, but these products have been superseded and should not be used for new designs

ams Datasheet Page 45
[v1-06] 2015-Dec-07 Document Feedback



## **Revision Information**

Changes from 1.3 (2013-Oct-31) to current revision 1-06 (2015-Dec-07)	Page			
1.3 (2013-Oct-31) to 1-04 (2015-Aug-07)				
Content was updated to the latest <b>ams</b> design				
Noise Suppressor section was removed				
Updated Key Benefits & Features	2			
Updated Figure 36	26			
Added Mechanical Data section	40			
Updated Package Drawings & Markings section	41			
Updated Figure 44	42			
1-04 (2015-Aug-07) to 1-05 (2015-Nov-19)				
Removed Linearization of the Output section				
Updated text under Detailed Description	9			
Updated Figure 13	11			
Updated Figure 19	15			
1-05 (2015-Nov-19) to 1-06 (2015-Dec-07)				
Updated Figure 2	2			
Updated Figure 35 [DATA11 (0x0B), DATA12 (0x0C)]	26			
Updated Mechanical Data section	40			

#### Note(s) and/or Footnote(s):

- 1. Page and figure numbers for the previous version may differ from page and figure numbers in the current revision.
- 2. Correction of typographical errors is not explicitly mentioned.

ams Datasheet Page 46 [v1-06] 2015-Dec-07



#### **Content Guide**

- 1 General Description
- 2 Key Benefits & Features
- 2 Applications
- 3 Block Diagram
- 4 Pin Assignment
- 5 Absolute Maximum Ratings
- **6 Electrical Characteristics**
- 6 Operating Conditions
- 6 Magnetic Input Specification
- 7 Electrical System Specifications
- 8 Timing Characteristics
- 8 Power Management Supply Monitor

### 9 Detailed Description

- 10 Operation
- 10 VDD Voltage Monitor
- 10 Analog Output
- 11 Programming Parameters
- 12 Application Specific Angular Range Programming
- 13 Application Specific Programming of the Break Point
- 13 Full Scale Mode
- 14 Multiple Slope Output
- 15 Resolution of Parameters
- 16 Analog Output Diagnostic Mode
- 17 Analog Output Driver Parameters
- 17 Hysteresis Function

### 18 Application Information

- 18 Recommended Application Schematic
- 20 Programming the AS5162
- 20 UART Interface for Programming
- 21 Frame Organization
- 23 WRITE (Command Description)
- 24 READ (Command Description)
- 24 Baud-Rate Automatic Detection
- 25 Baud-Rate Manual Setting (Optional)
- 26 OTP Programming Data
- 32 READ / WRITE Register Map
- 34 READ Only Register Map
- 37 Special Registers
- 39 Programming Procedure
- 40 Mechanical Data
- 41 Package Drawings & Markings
- 42 Ordering & Contact Information
- 43 RoHS Compliant & ams Green Statement
- 44 Copyrights & Disclaimer
- **45 Document Status**
- 46 Revision Information

ams Datasheet Page 47
[v1-06] 2015-Dec-07 Document Feedback

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for ams manufacturer:

Other Similar products are found below:

AS5045B-ASST PS081-EVA-HR MODULE AS1119-DB AS1331 EB AS1359-25-EB AS1363-30-EB AS3415 EK-ST AS3606-DB AS3630-ZWLM AS5055A-DK-ST AS5115 PB AS5XXX-UCB-1.0 AS6200-WL\_DK\_ST PC404A-202R AS1119-WL\_DK\_ST AS3932 DEMOBOARD AS5132-PB TMG3993EVM TSL2591EVM TSL2672EVM TMD2725-DB TMD2771EVM TMD3782EVM TRK-1T02-E TSL2772EVM USB-BOX AS3400 EK-ST AS3661-EB AS3668-EB AS5145B-SS\_EK\_MB AS5245-QF\_EK\_PB AS526X-MF\_EK\_SB AS5510-WL\_EK\_DB AS5X6X-EK-ST AS5XXX-EK-PB AS5XXX-EK-USB-PB AS1119-WK\_DK\_ST AS1121-QF\_EK\_ST AS1312-TD-50\_EK\_ST AS1340A-TD-10\_EK\_ST AS3606 EVAL BOARD AS3701B-WL-ES\_EK\_ST AS3980-QF\_DK\_ST AS5030-TS\_EK\_AB AS5045-SS\_EK\_DB AS5132-SS\_EK\_DB AS8506-DK-ACTIVE AS8510 DEMOBOARD ENS210-QF\_EK\_ST TSL261R-LF