## QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 968A-B ISOLATED DC/DC POWER CONVERTER

LT1952

# DESCRIPTION

Demonstration circuit 968A-B is isolated input to high current output 1/8th Brick footprint converter featuring the LT®1952 switching controller. The DC968 converts isolated 18V to 36V input to 5V output and provides over 20A of output current. The converter operates at 300kHz with efficiency greater than 93%. The DC968 can be easily modified to generate output voltages in the range from 0.6V to 28V. The output currents are limited by total output power of up to 200W. The other available versions of DC968A are:

DC968A-A 36-75Vin to 3.3V@30A

DC968A-C 36-75Vin to 12V@12A

DC968A-D 36-75Vin to 28V@4A

Also, the DC968 can be modified for other input voltages like 8V-36V, 18V-75V, 44V-52V, and so on. The wider input voltage range will decrease the converter

efficiency. Therefore, narrow input voltage range will be more desirable.

The DC968 circuit features soft-start which prevents output voltage overshoot on startup or when recovering from overload condition.

The DC968 has precise over-current protection circuit that allows for continuous operation under short circuit conditions. The low power dissipation under short circuit conditions insures high reliability even during short circuits.

The LT1952 can be synchronized to an external clock of up to 400kHz. Please refer to LT1952 data sheet for design details and applications information.

# Design files for this circuit board are available. Call the LTC factory.

LT is a trademark of Linear Technology Corporation

PARAMETER	CONDITION	VALUE
Minimum Input Voltage	I <sub>OUT</sub> = 0A to 20A	18V
Maximum Input Voltage	IOUT = 0A to 20A	36V
VOUT	VIN = 18V to 36V, IOUT = 0A to 20A	5V ±3%
Typical Output Ripple VOUT	V <sub>IN</sub> = 18V to 36V, I <sub>OUT</sub> = 0A to 20A	50mV <sub>P-P</sub>
Nominal Switching Frequency		300kHz

#### Table 1. Performance Summary

# **QUICK START PROCEDURE**

Demonstration circuit 968 is easy to set up to evaluate the performance of LT1952 circuit. **Refer to Figure 1 for proper measurement equipment setup** and follow the procedure below:

**NOTE:** When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. Measure the input or output voltage ripple by touching the probe tip directly

across the Vin or Vout and GND terminals. See Figure 2. for proper scope probe technique.

- With power off, connect the input power supply to Vin and GND. Make sure that the input power supply has sufficient current rating at minimum input voltage for the required output load.
- 2. Turn on the power at the input.

**NOTE:** Make sure that the input voltage does not exceed 40V.

**3.** Check for the proper output voltage. Vout = 5V.

If there is no output, temporarily disconnect the load to make sure that the load is not set too high.

4. Once the proper output voltage is established, adjust the load within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameters.

 The DC968 is equipped with an output capacitor CSYS (470uF) that approximates typical system rail capacitance. If system board already has capacitance of similar value CSYS can be removed.

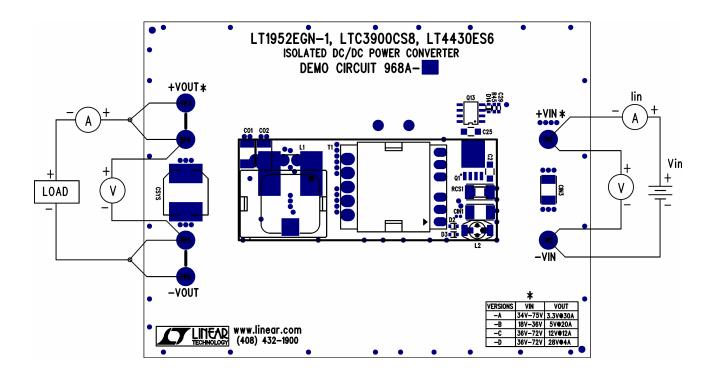


Figure 1. Proper Measurement Equipment Setup




Figure 2. Scope Probe Placement for Measuring Input or Output Ripple

#### CHANGING THE OUTPUT VOLTAGE

To set the output voltage lower than 5V, change the bottom voltage divider resistor connected to LT4430 FB pin (see the simplified schematic on page 5). For example, to get 2.5V output, change R38 resistor value to 43.2k. However, keep in mind that changing the transformer as well may increase the efficiency.

To get higher than 5V output voltages transformer with higher turns ratio may be required. Also, output MOSFETs with higher voltage ratings may be required. Please contact LTC factory for details.

#### **PRIMARY MOSFET DRIVER LTC4440**

The DC968 has an LTC4440 MOSFET driver U2. The LTC4440 can be disabled if the efficiency is not important. If U2 is disabled, the DELAY pin of LT1952 should be readjusted to optimize the efficiency. Please contact LT factory for assistance.

#### **OPTIONAL RESET CIRCUIT**

The DC968 is equipped with an optional active reset circuit that is disabled on DC968A-B. In most applications the circuit is not required because there is no benefit from active reset. However, if the active reset is required, adding few resistors can enable the circuit. Please consult LT factory for assistance.

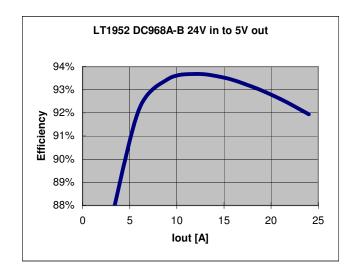


Figure 3. High efficiency of DC968A-B allows the board to be used in thermally critical applications

#### **OUTPUT LOAD STEP RESPONSE**

The load step response of DC968A-B is very fast even though relatively small amount of output capacitance is present (200uF ceramic and 470uF electrolytic). This is thanks to fast error amplifier of LT4430, optimal amount of current slope compensation of LT1952, fast opto coupler and fast error amplifier of LT1952. If higher load steps need to be handled more output capacitance can be added in order to keep the voltage transients at the desired level. The load step transients are shown in Figure 4.

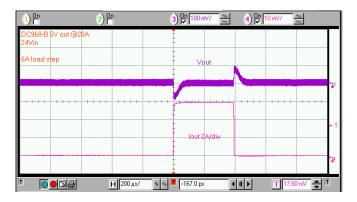


Figure 4. Fast transient response of DC968 is superior to many competing power modules without the additional output capacitors.

#### **SOFT START FUNCTION**

The DC968 features LT4430 opto coupler driver that has soft start function which produces monotonic startup ramp shown if Figure 5. The rise time of output voltage is controlled by capacitor C19 that is connected to OC (overshoot control) pin of LT4430.

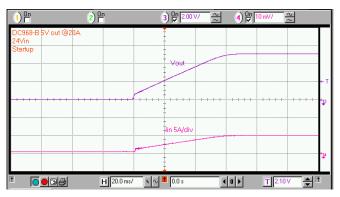


Figure 5. The LT4430 opto coupler driver produces monotonic output voltage rise at startup without output voltage overshoot.

#### **DEBUGGING AND TESTING**


The DC968 can easily be tested and debugged by powering the bias circuit separately from the main power circuit. To place DC968 into debug mode remove the resistor R1 and connect 48V, 100mA power source to +Vb node (right side of R1). By doing this, the primary PWM controller LT1952 can be activated without the main primary power being applied to +Vin.

To activate the secondary side MOSFET driver (LTC3900) diode OR a 10V, 100mA power source into collector of Q9.

Once the primary and secondary controllers are running the MOSFET gate timing can be checked.


If the MOSFET gate timing is correct the main power input can be applied to +Vin. The delay from turn on of FG and gate of Q1 should be in the range from -100ns to +100ns. By slowly increasing the +Vin from 0V to 48V output voltage and input current can be monitored. The input current should not exceed 100mA without the output load. If one of the MOSFETs is damaged, the input current will exceed 100mA.

# QUICK START GUIDE FOR DEMONSTRATION CIR ISOLATED DC/DC POV

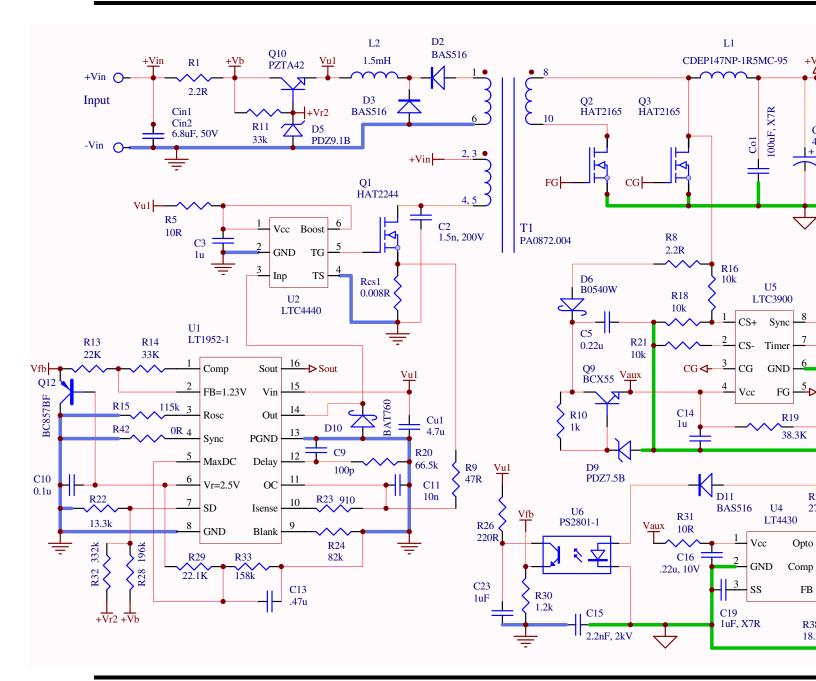

**LINEAD** TECHNOLOGY 5

### QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 968A-B ISOLATED DC/DC POWER CONVERTER

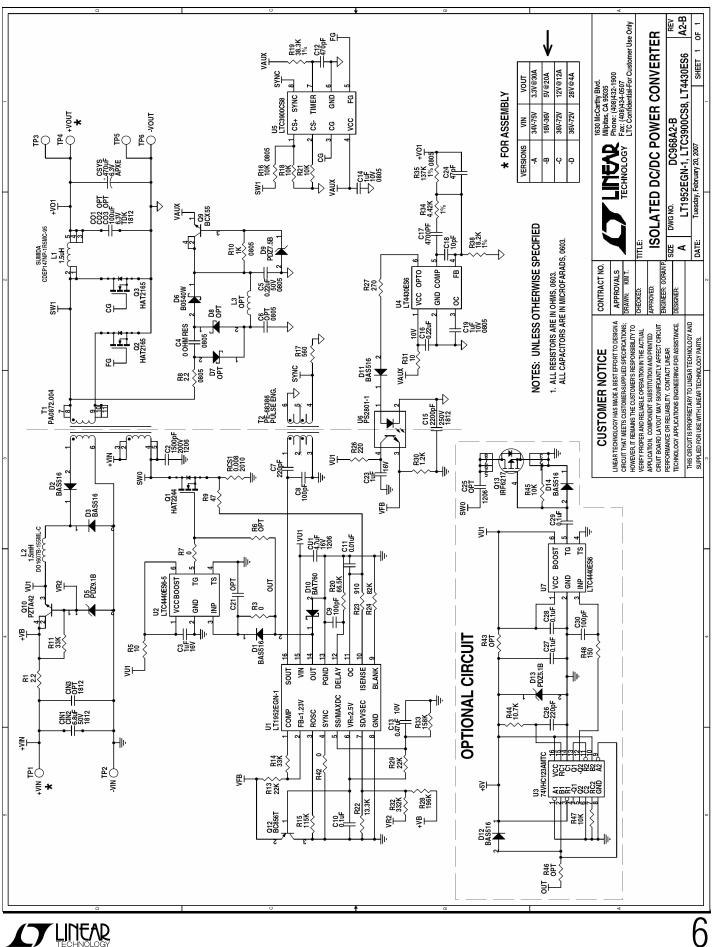

6

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Power Management IC Development Tools category:

Click to view products by Analog Devices manufacturer:

Other Similar products are found below :

EVAL-ADM1168LQEBZ EVB-EP5348UI MIC23451-AAAYFLEV MIC5281YMMEEV DA9063-EVAL ADP122-3.3-EVALZ ADP130-0.8-EVALZ ADP130-1.2-EVALZ ADP130-1.5-EVALZ ADP130-1.8-EVALZ ADP1714-3.3-EVALZ ADP1716-2.5-EVALZ ADP1740-1.5-EVALZ ADP1752-1.5-EVALZ ADP1828LC-EVALZ ADP1870-0.3-EVALZ ADP1871-0.6-EVALZ ADP1873-0.6-EVALZ ADP1874-0.3-EVALZ ADP1882-1.0-EVALZ ADP199CB-EVALZ ADP2102-1.25-EVALZ ADP2102-1.875EVALZ ADP2102-1.8-EVALZ ADP2102-2-EVALZ ADP1882-1.0-EVALZ ADP199CB-EVALZ ADP2106-1.8-EVALZ ADP2102-1.875EVALZ ADP2102-1.8-EVALZ ADP2102-2-EVALZ ADP2102-3-EVALZ ADP2102-4-EVALZ ADP2106-1.8-EVALZ ADP2147CB-110EVALZ AS3606-DB BQ24010EVM BQ24075TEVM BQ24155EVM BQ24157EVM-697 BQ24160EVM-742 BQ24296MEVM-655 BQ25010EVM BQ3055EVM NCV891330PD50GEVB ISLUSBI2CKIT1Z LM2744EVAL LM2854EVAL LM3658SD-AEV/NOPB LM3658SDEV/NOPB LM3691TL-1.8EV/NOPB LM4510SDEV/NOPB LM5033SD-EVAL LP38512TS-1.8EV EVAL-ADM1186-1MBZ EVAL-ADM1186-2MBZ