Description

The Arduino Portenta Breakout board is designed to assist developers with their prototypes by exposing the high-density connectors of the Portenta family on both sides of the breakout carrier, providing total flexibility for measuring and controlling signals - developing your own hardware, testing the design and measuring the input and output signals out of the high-density connectors.
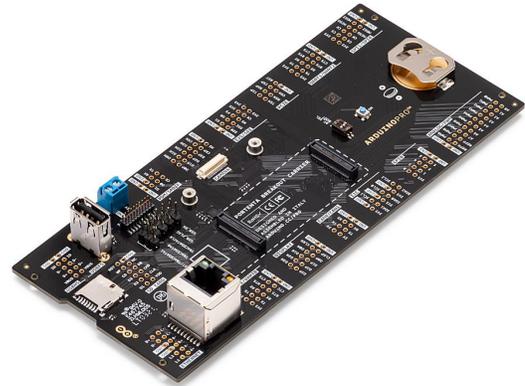
Target areas:

Prototyping

Features

- **Power ON Button**

- **Boot mode DIP switch**

- **Connectors**
  - USBA
  - RJ45 GBit Ethernet
  - Micro SD card
  - OpenMV shutter module
  - MIPI 20T JTAG with trace capability

- **Power**
  - CR2032 RTC Lithium Battery backup
  - External power terminal block

- **I/O**
  - Break out all Portenta High Density connector signals (see pinout table below)
  - Male/female HD connectors allow interposing breakout between Portenta and shield to debug signals

- **Compatibility**
  Standard Portenta High Density connector pinout

- **Safety information**
  Class A

Contents

1. The board

1.1 Application examples

This product is designed to work alongside the Portenta family. Please check the Getting Started guide of your Portenta board.

Product Development: The Portenta Breakout board reduces development time for industrial grade solution automation based on the Portenta line.

OpenMV: Connectivity to the OpenMV Global Shutter Camera Module is provided on the Portenta Breakout board allowing for rapid development of machine vision applications alongside the Portenta family.

Technical Education: The Portenta Breakout board can act as a first point of entry for technician education in industrial grade control and embedded systems.

1.2 Accessories
- 8-, 10-, 12- and 22-pin headers/connectors with 2.54 mm pitch
- 20 pin JTAG programmer
- OpenMV Global Shutter Camera Module

1.3 Related products

- Arduino Portenta H7 (SKU: ABX00042)
- OpenMV Global Shutter Camera Module

1.4 Solution overview
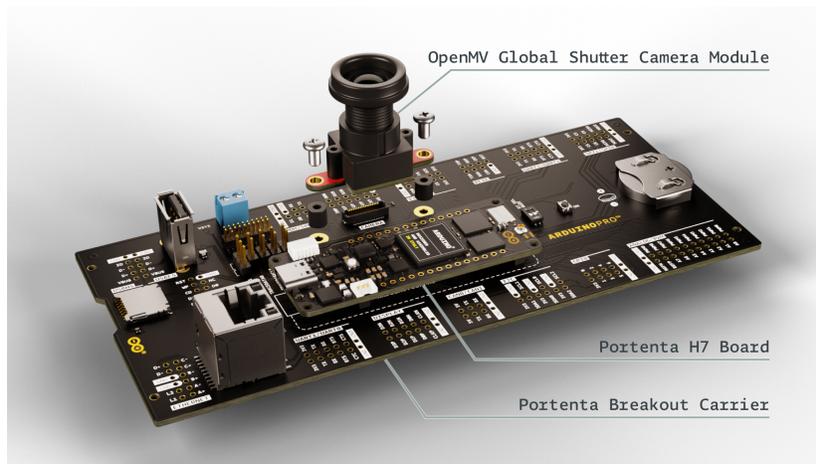
Example of a typical installation for a solution including Portenta H7 and Global Shutter Camera Module. A Portenta board must be connected for operation of the Portenta Breakout Board.

2. Ratings

2.1 Absolute maximum ratings

Symbol	Description	Min	Typ	Max	Unit
T_{Max}	Maximum thermal limit	-40	20	85	°C
$5V_{Max}$	Maximum input voltage from 5V input	4.0	5	5.5	V
P_{Max}	Maximum Power Consumption	-	-	5000	mW

2.2 Recommended Operating Conditions

Symbol	Description	Min	Typ	Max	Unit
T	Conservative thermal limits	-15	20	60	°C
5V	Input voltage from 5V input	4.8	5	5.2	V

3. Functional Overview

3.1 Board topology

Front view
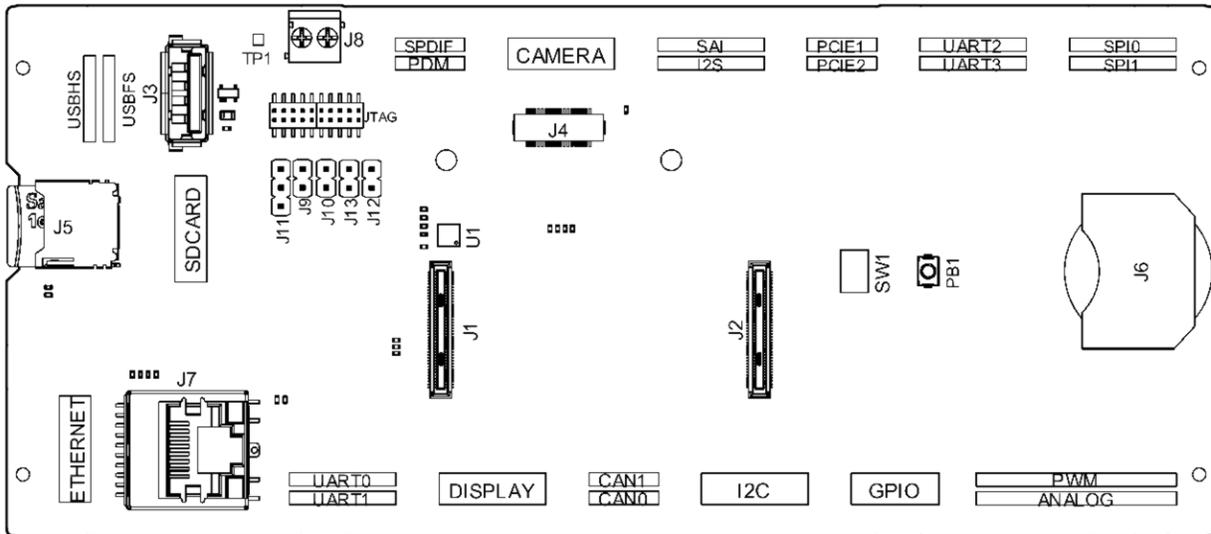
Ref.	Description	Ref.	Description
J1	DF40HC(3.5)-80DS-0.4V(51) High Density connector	J5	Micro SD card
J2	DF40HC(3.5)-80DS-0.4V(51) High Density connector	J6	20 mm coin battery retainer
J3	USB type A connector	J7	Ethernet adaptor
J4	OpenMV cam connector	J8	Power terminal block
SW1	Boot mode selection	PB1	Power ON button
U1	USBA power switch IC		

Back view
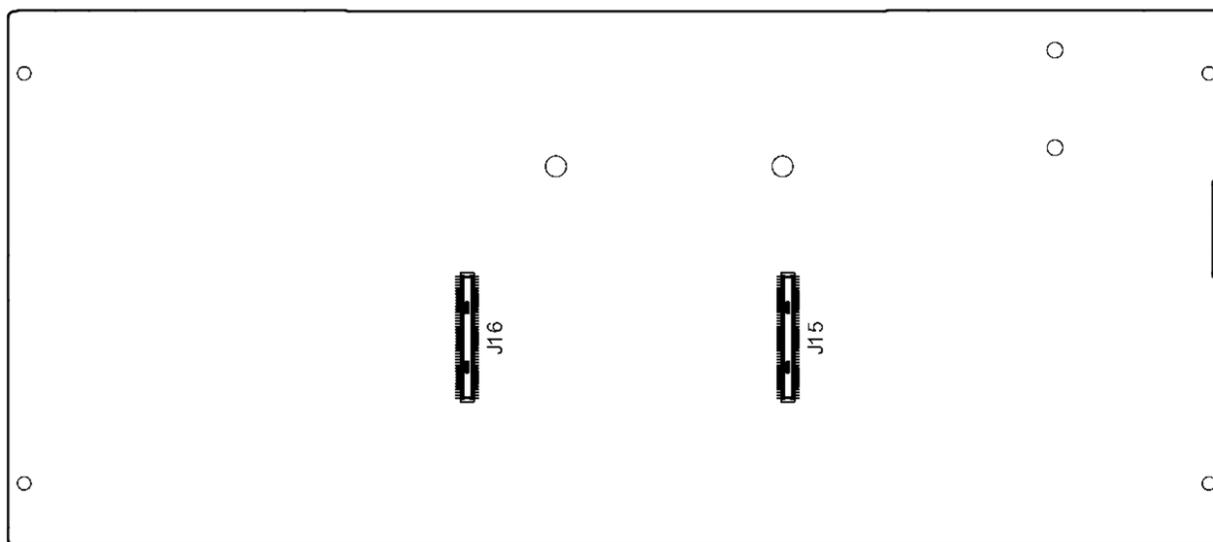
Ref.	Description	Ref.	Description
J15	DF40C-80DP-0.4V(51) High Density connector	J16	DF40C-80DP-0.4V(51) High Density connector

3.2 Shared pins table

 Some nets/pins are electrically shared in the board and precaution must be taken to avoid conflicts. The full list is presented below.

NET	Description	Bus1	Bus2
I2C2_SCL	I2C/OPENMV	I2C2 SCL	OPENMV_CAM_SCL
I2C2_SDA	I2C/OPENMV	I2C2 SDA	OPENMV_CAM_SDA
SPI1_CK	SPI/OPENMV	SPI1 CK	OPENMV_CAM_SCK
SPI1_MISO	SPI/OPENMV	SPI1 MISO	OPENMV_CAM_MISO
SPI1_MOSI	SPI/OPENMV	SPI1 MOSI	OPENMV_CAM_MOSI
SPI1_CS	SPI/OPENMV	SPI1 CS	OPENMV_CAM_CS
GPIO_0	GPIO/OPENMV	GPIO 0	OPENMV_CAM_RST

GPIO_1	GPIO/OPENMV	GPIO 1	OPENMV_CAM_FSIN
GPIO_2	GPIO/USBA	GPIO 2	USBA VBUS FLAG (jumper)
GPIO_3	GPIO/OPENMV	GPIO 3	OPENMV_CAM_PWDN
GPIO_4	GPIO/JTAG	GPIO 4	TRACEDATA_0 (jumper)
GPIO_5	GPIO/USBA	GPIO 5	USBA VBUS ENABLE (jumper)
PWM0	PWM/OPENMV	PWM 0	OPENMV_CAM_CLK
PDM_CK	PDM/JTAG	PDM CK	TRACEDATACLK (jumper)
UART2_TX	UART/JTAG	UART2 TX	TRACEDATA1 (JTAG)

3.3 DIP Switch

Note: Not currently supported. For future use in the Portenta H7

The DIP switch have to selectable options:
BOOT: Allows you to set up the portenta board in Boot mode.
BOOT_SEL: Select between 2 boot addresses.

4. Board Operation

Note: This board is intended to operate together with Portenta H7 (see section 1.4 Solution Overview).

4.1 Getting started - IDE

If you want to program your Portenta H7 with the Breakout Board while offline you need to install the Arduino Desktop IDE **[1]**. To connect your Portenta H7 with the Portenta Breakout Board to your computer, you will need a Type-C USB cable. This also provides power to both the Portenta H7 as well as the Portenta Breakout Board. Alternatively, in order to provide power to the USB connectors and the 5V pins, a 5V source must be applied to J8. This will also provide power to the Portenta H7.

4.2 Getting started - Arduino Web Editor

All Arduino boards, including this one, work out-of-the-box on the Arduino Web Editor **[2]**, by just installing a simple plugin.
The Arduino Web Editor is hosted online, therefore it will always be up-to-date with the latest features and support for all boards. Follow **[3]** to start coding on the browser and upload your sketches onto your board.

4.3 Getting started - Arduino IoT Cloud

All Arduino IoT enabled products are supported on Arduino IoT Cloud which allows you to log, graph and analyze sensor data, trigger events, and automate your home or business.

4.4 Sample Sketches

Sample sketches can be found either in the "Examples" menu in the Arduino IDE or in the "Documentation" section of the Arduino Pro website **[4]**

4.5 Online resources

Now that you have gone through the basics of what you can do with the board you can explore the endless possibilities it provides by checking exciting projects on ProjectHub **[5]**, the Arduino Library Reference **[6]** and the online store **[7]** where you will be able to complement your board with sensors, actuators and more
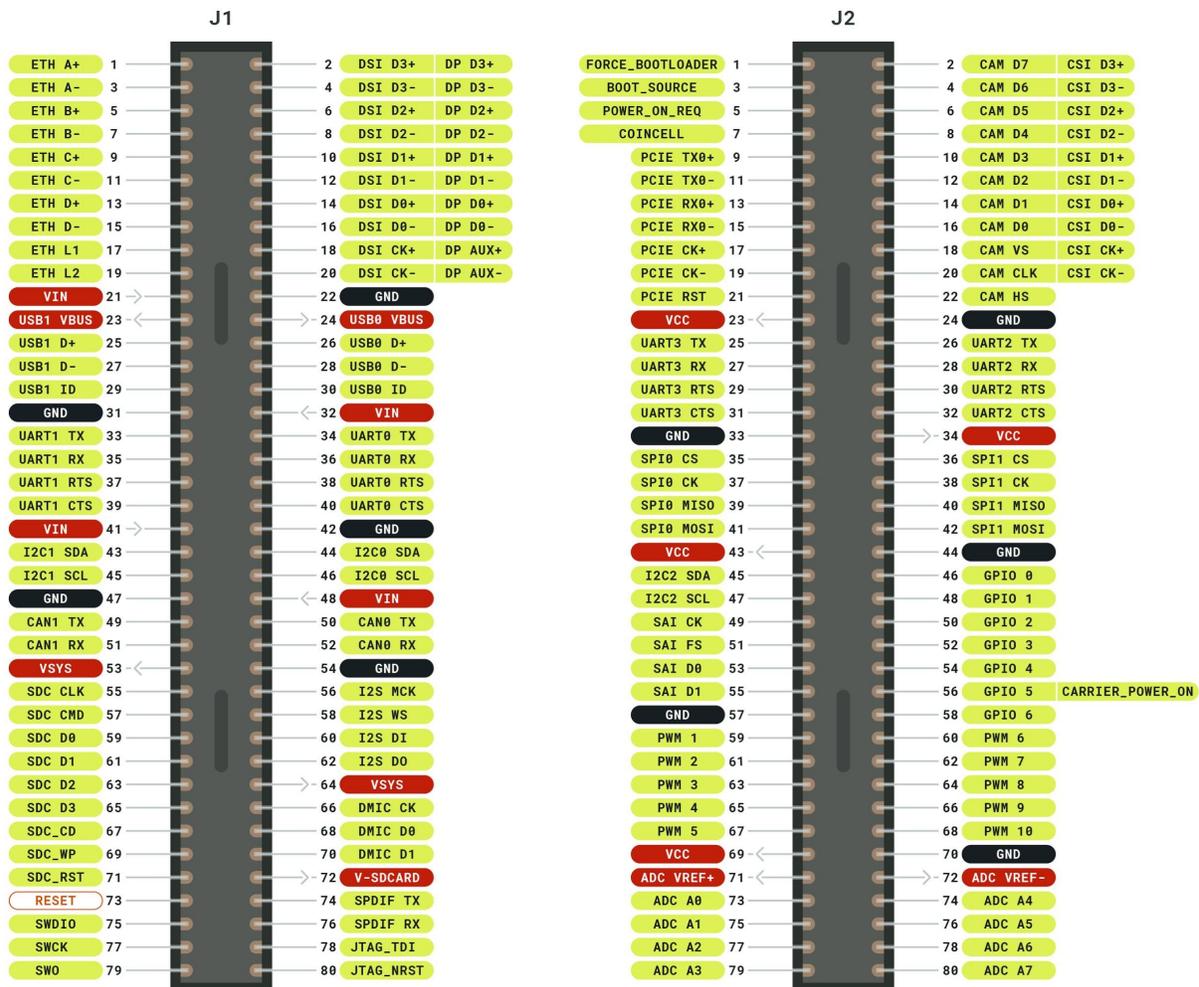
4.6 Board Recovery

All Arduino boards have a built-in bootloader which allows flashing the board via USB. In case a sketch locks up the processor and the board is not reachable anymore via USB it is

possible to enter bootloader mode by double-tapping the reset button right after power up.

5. Connector Pinouts

The Portenta Breakout Board provides easy access to the pins on the high density connector of the Portenta family. The Portenta Breakout Board is shipped in a headerless configuration to provide flexibility in using 2.54mm compatible connectors to meet their specific application.

J1

Pin	Signal		Pin	Signal	
1	ETH A+		2	DSI D3+	DP D3+
3	ETH A-		4	DSI D3-	DP D3-
5	ETH B+		6	DSI D2+	DP D2+
7	ETH B-		8	DSI D2-	DP D2-
9	ETH C+		10	DSI D1+	DP D1+
11	ETH C-		12	DSI D1-	DP D1-
13	ETH D+		14	DSI D0+	DP D0+
15	ETH D-		16	DSI D0-	DP D0-
17	ETH L1		18	DSI CK+	DP AUX+
19	ETH L2		20	DSI CK-	DP AUX-
21	VIN		22	GND	
23	USB1 VBUS		24	USB0 VBUS	
25	USB1 D+		26	USB0 D+	
27	USB1 D-		28	USB0 D-	
29	USB1 ID		30	USB0 ID	
31	GND		32	VIN	
33	UART1 TX		34	UART0 TX	
35	UART1 RX		36	UART0 RX	
37	UART1 RTS		38	UART0 RTS	
39	UART1 CTS		40	UART0 CTS	
41	VIN		42	GND	
43	I2C1 SDA		44	I2C0 SDA	
45	I2C1 SCL		46	I2C0 SCL	
47	GND		48	VIN	
49	CAN1 TX		50	CAN0 TX	
51	CAN1 RX		52	CAN0 RX	
53	VSYS		54	GND	
55	SDC CLK		56	I2S MCK	
57	SDC CMD		58	I2S WS	
59	SDC D0		60	I2S DI	
61	SDC D1		62	I2S DO	
63	SDC D2		64	VSYS	
65	SDC D3		66	DMIC CK	
67	SDC_CD		68	DMIC D0	
69	SDC_WP		70	DMIC D1	
71	SDC_RST		72	V-SDCARD	
73	RESET		74	SPDIF TX	
75	SWDIO		76	SPDIF RX	
77	SWCK		78	JTAG_TDI	
79	SWO		80	JTAG_NRST	

J2

Pin	Signal		Pin	Signal	
1	FORCE_BOOTLOADER		2	CAM D7	CSI D3+
3	BOOT_SOURCE		4	CAM D6	CSI D3-
5	POWER_ON_REQ		6	CAM D5	CSI D2+
7	COINCELL		8	CAM D4	CSI D2-
9	PCIE TX0+		10	CAM D3	CSI D1+
11	PCIE TX0-		12	CAM D2	CSI D1-
13	PCIE RX0+		14	CAM D1	CSI D0+
15	PCIE RX0-		16	CAM D0	CSI D0-
17	PCIE CK+		18	CAM VS	CSI CK+
19	PCIE CK-		20	CAM CLK	CSI CK-
21	PCIE RST		22	CAM HS	
23	VCC		24	GND	
25	UART3 TX		26	UART2 TX	
27	UART3 RX		28	UART2 RX	
29	UART3 RTS		30	UART2 RTS	
31	UART3 CTS		32	UART2 CTS	
33	GND		34	VCC	
35	SPI0 CS		36	SPI1 CS	
37	SPI0 CK		38	SPI1 CK	
39	SPI0 MISO		40	SPI1 MISO	
41	SPI0 MOSI		42	SPI1 MOSI	
43	VCC		44	GND	
45	I2C2 SDA		46	GPIO 0	
47	I2C2 SCL		48	GPIO 1	
49	SAI CK		50	GPIO 2	
51	SAI FS		52	GPIO 3	
53	SAI D0		54	GPIO 4	
55	SAI D1		56	GPIO 5	CARRIER_POWER_ON
57	GND		58	GPIO 6	
59	PWM 1		60	PWM 6	
61	PWM 2		62	PWM 7	
63	PWM 3		64	PWM 8	
65	PWM 4		66	PWM 9	
67	PWM 5		68	PWM 10	
69	VCC		70	GND	
71	ADC VREF+		72	ADC VREF-	
73	ADC A0		74	ADC A4	
75	ADC A1		76	ADC A5	
77	ADC A2		78	ADC A6	
79	ADC A3		80	ADC A7	

In cases where multiple channels are on a single header, the first channel is on the bottom part of the header and the section channel is on the top part of the header. The order of the channel is determined by the silkscreen markings.

5.1 GPIO

Pin	Function	Type	Description
1	3V3	Power	+3.3V power rail
2	GPIO 0	Digital	GPIO 0
3	GPIO 1	Digital	GPIO 1
4	GPIO 2	Digital	GPIO 2
5	GPIO 3	Digital	GPIO 3
6	GPIO 4	Digital	GPIO 4
7	GPIO 5	Digital	GPIO 5
8	GPIO 6	Digital	GPIO 6
9	GND	Power	Ground
10	GND	Power	Ground

5.2 I2C

Pin	Function	Type	Description
1	3V3	Power	+3.3V power rail
2	GND	Power	Ground
3	SDA1	Digital	Serial Data Line 1
4	SCL1	Digital	Serial Clock Line 1
5	3v3	Power	+3.3V power rail
6	GND	Power	Ground

7	SDA0	Digital	Serial Data Line 0
8	SCL0	Digital	Serial Clock Line 0
9	3V3	Power	+3.3V power rail
10	GND	Power	Ground
11	SDA2	Digital	Serial Data Line 2
12	SCL2	Digital	Serial Clock Line 2

5.3 CAN0/CAN1

Pins closer to the edge of the board are CAN0. Pins close to the centre are CAN1.

Pin	Function	Type	Description
1	5V	Power	+5.0V power rail
2	TX	Differential	CAN Bus Transmission Line
3	RX	Differential	CAN Bus Receive Line
4	GND	Power	Ground

5.4 ANALOG/PWM

Pin	Function	Type	Description
1	A0	Analog	Analog Input 0
2	A1	Analog	Analog Input 1
3	A2	Analog	Analog Input 2
4	A3	Analog	Analog Input 3
5	A4	Analog	Analog Input 4
6	A5	Analog	Analog Input 5
7	A6	Analog	Analog Input 6
8	A7	Analog	Analog Input 7

9	REFP	Analog	Analog Reference Positive
10	REFN	Analog	Analog Reference Negative
11	GND	Analog	Ground
1	PWM0	Digital	PWM output 0
2	PWM1	Digital	PWM output 1
3	PWM2	Digital	PWM output 2
4	PWM3	Digital	PWM output 3
5	PWM4	Digital	PWM output 4
6	PWM5	Digital	PWM output 5
7	PWM6	Digital	PWM output 6
8	PWM7	Digital	PWM output 7
9	PWM8	Digital	PWM output 8
10	PWM9	Digital	PWM output 9
11	GND	Digital	Ground

5.5 DISPLAY

Pin	Function	Type	Description
1	D3P	Differential	Differential DSI Data Line 3 Positive
2	D2P	Differential	Differential DSI Data Line 2 Positive
3	D1P	Differential	Differential DSI Data Line 1 Positive
4	D0P	Differential	Differential DSI Data Line 0 Positive
5	CLKP	Differential	Differential DSI Clock Positive
6	GND	Power	Ground
7	D3N	Differential	Differential DSI Data Line 3 Negative

8	D2N	Differential	Differential DSI Data Line 2 Negative
9	D1N	Differential	Differential DSI Data Line 1 Negative
10	D0N	Differential	Differential DSI Data Line 0 Negative
11	CLKN	Differential	Differential DSI Clock Negative
12	GND	Power	Ground

5.6 UART1/UART0

Pins closer to the edge of the board are UART1. Pins closer to the center are UART0.

Pin	Function	Type	Description
1	3V3	Power	+3.3 V power rail
2	TX	Digital	UART Transmission Signal
3	RX	Digital	UART Receive Signal
4	RTS	Digital	Request to send
5	CTS	Digital	Clear to send
6	GND	Power	Ground

5.7 SPI1/SPI0

Pins closer to the edge of the board are SPI0. Pins closer to the center are SPI1.

Pin	Function	Type	Description
1	3V3	Power	+3.3 V power rail
2	CS	Digital	Chip Select
3	CK	Digital	Serial Clock
4	MISO	Digital	Main In Secondary Out
5	MOSI	Digital	Main Out Secondary In
6	GND	Power	Ground

5.8 PCIE

Pin	Function	Type	Description
1	TXN	Differential	Differential PCIe Transmission Line Negative
2	RXN	Differential	Differential PCIe Receive Line Negative
3	CKN	Differential	Differential PCIe Clock Line Negative
4	GND	Power	Ground
1	TXP	Differential	Differential PCIe Transmission Line Positive
2	RXP	Differential	Differential PCIe Receive Line Positive
3	CKP	Differential	Differential PCIe Clock Line Positive
4	RST	Digital	Reset Signal

5.9 UART3/UART2

Pins closer to the edge of the board are UART2. Pins closer to the center are UART3.

Pin	Function	Type	Description
1	3V3	Power	+3.3 V power rail
2	TX	Digital	UART Transmission Signal
3	RX	Digital	UART Receive Signal
4	RTS	Digital	Request to send
5	CTS	Digital	Clear to send
6	GND	Power	Ground

5.10 I2S/SAI

Pin	Function	Type	Description
1	3V3	Power	+3.3 V power rail

2	CK	Digital	I2S Clock
3	WS	Digital	I2S Word Select
4	SD1	Digital	I2S Right Channel
5	SD0	Digital	I2S Left Channel
6	GND	Power	Ground
1	3V3	Power	+3.3 V power rail
2	SCK	Digital	SAI Clock
3	FS	Digital	SAI Frame Synchronisation
4	D0	Digital	SAI Data Line 0
5	D1	Digital	SAI Data Line 1
6	GND	Power	Ground

5.11 CAMERA: DCMI/CSI

Pin	Function	Type	Description
1	GND	Power	Ground
2	HS	Digital	DCMI HSYNC
3	CKN	Digita	DCMI_CLK / CSI CKN
4	CKP	Digital	DCMI VSYNC / CSI CKP
5	D3N	Digital	DCMI D6 / CSI D3P
6	D3P	Digital	DCMI D7 / CSI D3P
7	D2N	Digital	DCMI D4 / CSI D2N
8	D2P	Digital	DCMI D5 / CSI D2P
9	D1N	Digital	DCMI D2 / CSI D1N
10	D1P	Digital	DCMI D3 / CSI D1P

Pin	Function	Type	Description
11	D0N	Digital	DCMI D0 / CSI D0N
12	D0P	Digital	DCMI D1 / CSI D0P

5.12 PDM/SPDIF

Pin	Function	Type	Description
1	CK	Digital	PDM Clock
2	D0	Digital	PDM Data Line 0
3	D1	Digital	PDM Data Line 1
4	GND	Power	Ground
1	TX	Digital	SPDIF Transmission Signal
2	RX	Digital	SPDIF Receive Signal
3	GND	Power	Ground
4	GND	Power	Ground

5.13 J8 Power IN

Pin	Function	Type	Description
1	5V	Power	Supplies power to the CAN bus directly. VIN for the Portenta board and also provides the VUSB voltage through the NCP383
2	GND	Power	Ground

6. Mechanical information

6.1 Board outline
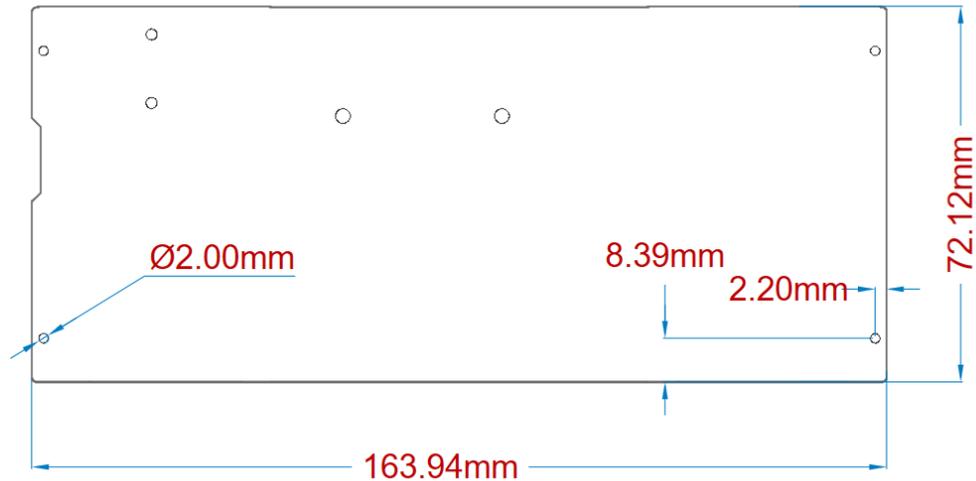
7. Certifications

7.1 Declaration of Conformity CE DoC (EU)

We declare under our sole responsibility that the products above are in conformity with the essential requirements of the following EU Directives and therefore qualify for free movement within markets comprising the European Union (EU) and European Economic Area (EEA).

ROHS 2 Directive 2011/65/EU
Conforms to: EN50581:2012

Directive 2014/35/EU. (LVD)
Conforms to: EN 60950-1:2006/A11:2009/A1:2010/A12:2011/AC:2011

Directive 2004/40/EC & 2008/46/EC & 2013/35/EU, EMF
Conforms to: EN 62311:2008

Arduino boards are in compliance with RoHS 2 Directive 2011/65/EU of the European Parliament and RoHS 3 Directive 2015/863/EU of the Council of 4 June 2015 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Substance	Maximum Limit (ppm)
Lead (Pb)	1000
Cadmium (Cd)	100
Mercury (Hg)	1000
Hexavalent Chromium (Cr6+)	1000
Poly Brominated Biphenyls (PBB)	1000
Poly Brominated Diphenyl ethers (PBDE)	1000
Bis(2-Ethylhexyl} phthalate (DEHP)	1000
Benzyl butyl phthalate (BBP)	1000
Dibutyl phthalate (DBP)	1000
Diisobutyl phthalate (DIBP)	1000

Exemptions : No exemptions are claimed.

Arduino Boards are fully compliant with the related requirements of European Union Regulation (EC) 1907 /2006 concerning the Registration, Evaluation, Authorization and Restriction of Chemicals (REACH). We declare none of the SVHCs (https://echa.europa.eu/web/guest/candidate-list-table), the Candidate List of Substances of Very High Concern for authorization currently released by ECHA, is present in all products (and also package) in quantities totaling in a concentration equal or above 0.1%. To the best of our knowledge, we also declare that our products do not contain any of the substances listed on the "Authorization List" (Annex XIV of the REACH regulations) and Substances of Very High Concern (SVHC) in any significant amounts as specified by the Annex XVII of Candidate list published by ECHA (European Chemical Agency) 1907 /2006/EC.

7.3 Conflict Minerals Declaration

As a global supplier of electronic and electrical components, Arduino is aware of our obligations with regards to laws and regulations regarding Conflict Minerals, specifically the Dodd-Frank Wall Street Reform and Consumer Protection Act, Section 1502. Arduino does not directly source or process conflict minerals such as Tin, Tantalum, Tungsten, or Gold. Conflict minerals are contained in our products in the form of solder, or as a component in metal alloys. As part of our reasonable due diligence Arduino has contacted component suppliers within our supply chain to verify their continued compliance with the regulations.

Based on the information received thus far we declare that our products contain Conflict Minerals sourced from conflict-free areas.

8. Company information

Company name	Arduino S.r.l.
Company Address	Via Ferruccio Pelli 14, 6900 Lugano, TI (Ticino), Switzerland

9. Reference Documentation

Ref	Link
1. Arduino IDE (Desktop)	https://www.arduino.cc/en/Main/Software
2. Arduino IDE (Cloud)	https://create.arduino.cc/editor
3. Cloud IDE Getting Started	https://create.arduino.cc/projecthub/Arduino_Genuino/getting-started-with-arduino-web-editor-4b3e4a
4. Arduino Pro Website	https://www.arduino.cc/pro
5. Project Hub	https://create.arduino.cc/projecthub?by=part&part_id=11332&sort=trending
6. Library Reference	https://www.arduino.cc/reference/en/
7. Online Store	https://store.arduino.cc/

10. Revision History

Date	Revision	Changes
03/03/2021	1	First Release

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Development Boards & Kits - AVR *category:*

Click to view products by Arduino *manufacturer:*

Other Similar products are found below :

3264 ATAVRPARROT ATSAMR21B18MZ210PAT CS-EASE-03 EV70N78A 1222 MIKROE-2474 1260 KIT0018 1405 DEV-10914 1500 1639 1657 174 193 2000 2010 3208 ATRCB256RFR2 ATXMEGAA1U-XPRO 2085 ATSTK600-SC48 2290 2488 DEV-11520 2590 296 3000 ATAVRBLE-IOT ATTINY416-XNANO DFR0010 DFR0100 DFR0164 DFR0191 DFR0221 DFR0222 DFR0225 DFR0233 DFR0282 DFR0327 DRI0027 KIT0111 K030007 DFR0351 DEV-13614 KIT-14265 3379 DFR0216 DEV-11590