


## SERIES 04 4PST

### FEATURES

- Joy Stick Action
- Position Locator On CRT Screens
- Moves Cursor On Menu Display



### DIMENSIONS in inches (and millimeters)

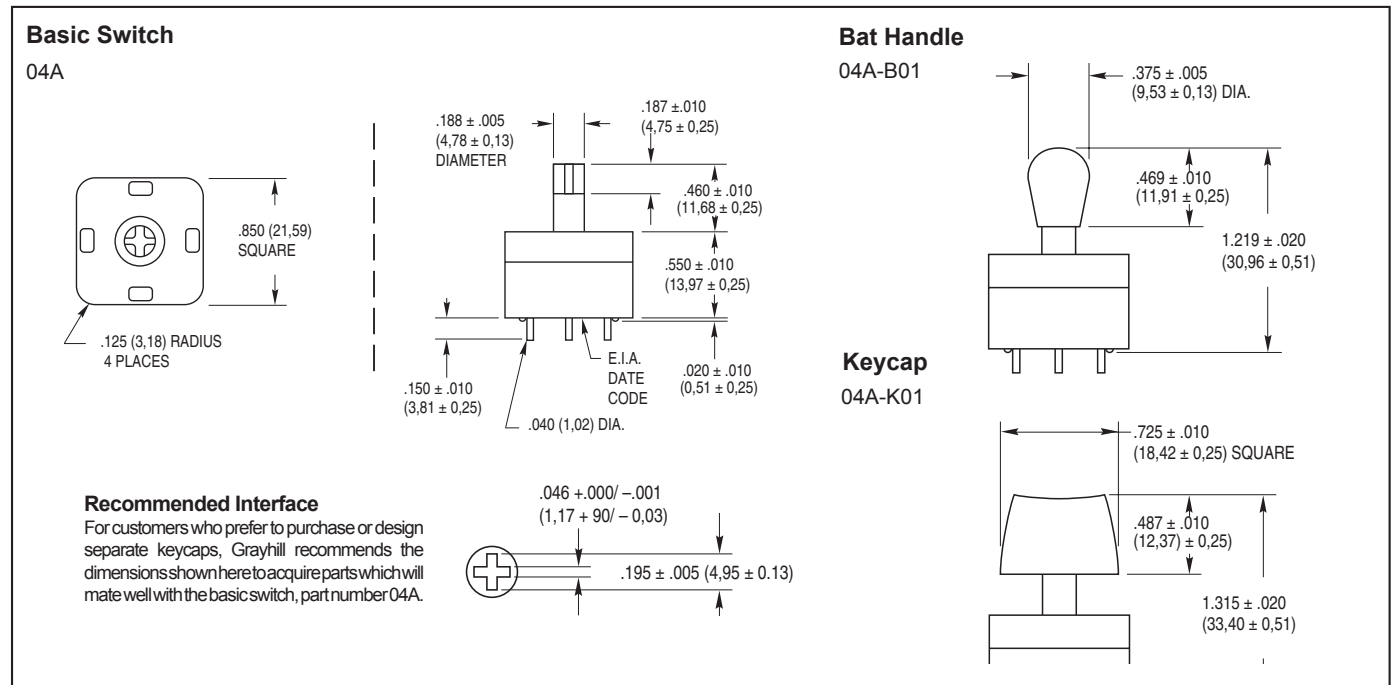

Pushbutton Switches

### SPECIFICATIONS


#### Rating Criteria

Rated: Make and break 250 mA at 115 Vac or 125 mA at 220 Vac resistive load for 500,000 operations  
 Contact Resistance: 25 milliohms maximum on a new switch  
 Insulation Resistance: 1,000 megohms at 100 Vdc  
 Dielectric Strength: 500 Vac RMS minimum  
 Operating Temperature: -40°C to +85°  
 Actuation Force: 13 oz. +/- 3 oz.  
 Actuation travel: 0.095" +/- .020"  
 Actuation lever stop strength: 20 lbs. min.

#### Materials and Finishes

Base, Cover and Switch Actuator: Polyester (Black)  
 Terminals: Brass, gold-plated over nickel  
 Shorting Bar: Phosphor bronze, gold-plated over nickel  
 Spring: Tinned music wire  
 Keycap: ABS or equivalent  
 Bat-Handle: ABS

### CIRCUITRY

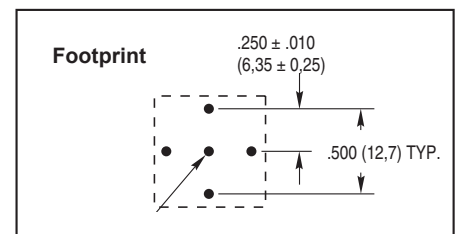

### ORDERING INFORMATION

Description	Part No.
Basic Switch	<b>04A</b>
Switch with Arrowhead Keycap	<b>04A-K01</b>
Switch with Bat-Handle	<b>04A-B01*</b>

\*Shipped with bat handle permanently attached.

Available from your local Grayhill Distributor.  
 For prices and discounts, contact a local Sales Office,  
 an authorized local Distributor or Grayhill.

## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for [Joysticks](#) category:*

*Click to view products by [Grayhill](#) manufacturer:*

Other Similar products are found below :

[M11L0A1](#) [C10O0C1P](#) [JOY-THUMB](#) [S10L0A1M](#) [G3-A1AM151NNNN](#) [TH500P00D4](#) [C10O0C1PMJ0](#) [S10L061J](#) [60C22-M7-4-020S](#) [67A-DF-3C-060C](#) [60A00-8-050C](#) [60A00-4-050C](#) [60C22-M7-4-040S](#) [G3-0425](#) [S30L081F50](#) [3440SAT6476](#) [60A18-4-090C](#) [S30L081J](#)  
[M11L001C](#) [M11L0X1P](#) [USBM31Q081RMJ4S](#) [USBC20O051JMJS](#) [TW08BLK12](#) [HRS202B1](#) [S30L0M1CSJBLK](#) [HF11R11](#) [HG-44MIS000-2654](#) [HG-44MIS000-U-2655](#) [4P182F1E55475](#) [TS4A1S00A](#) [BD140D01GR0000](#) [BD150SD4BL1200](#) [3140SAL6475](#) [TW01BLK11](#)  
[TW01GRY1](#) [ZD4PA203](#) [HF44S10UMJ0](#) [TS3N2S00A](#) [TS1R1U00A](#) [TS1R1S09A](#) [TS1D2S00A](#) [TS1D1U02A](#) [HFX45S02](#) [HFX10S00](#)  
[HF11P11](#) [4R28-2S1E-55-00](#) [BD150A01RE0000](#) [ZD4PA24](#) [ZD4PA22](#) [ZD4PA12](#)