

Manual Switches

Electronic Control Rocker Switches

MML24 Series

LED, INCANDESCENT, OR NON-LIGHTED DISPLAY



PWB Mount



Panel Mount



PWB Mount
(Lighted rocker)

FEATURES

- Accepts one or two LEDs or incandescent lamps which are ordered separately
- Printed wiring board mounting or snap-in panel mounting
- Bezels and mounting clips can be furnished installed or ordered separately
- UL recognized, CSA certified


MML24 ORDER GUIDE (Catalog listing for switch, less assembled display options)

| | | | |
|-------------------------|--|------------------------------------|---|
| MML24K | A | 3 | AA |
| Housing Type | Mounting | Terminals | Circuitry |
| MML24K Black housing | A No bezel (PWB mounting) K Black bezel, mtg. clip/long sides | 3 Printed wiring board 2 Solder | Insert code letters from Circuitry Chart |

| | |
|---------------------------|-------------|
| Electrical Data | page 69 |
| Bezels | page 84 |
| Strip and matrix mounting | page 83 |
| Mounting dimensions | pages 97/98 |
| PWB pin locations | page 97 |


Rockers are permanently installed.

CIRCUITRY

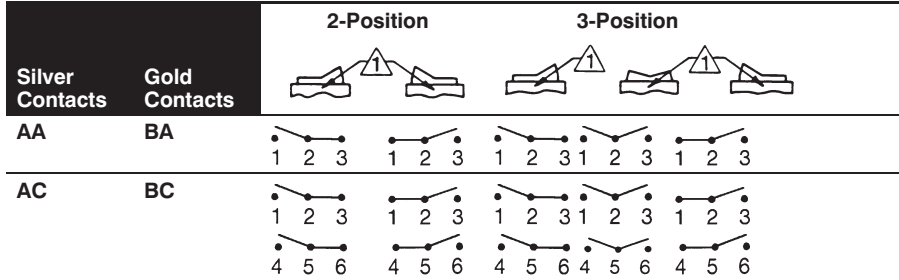

Example: MML24KA3AA01HDRXX
 Electronic control rocker switch with black housing, printed wiring board terminals; 1 pole, silver contacts; 2-position, maintained action; one circuit ON in each position; black rocker, red lens for LED display in Side 1 and no lens in Side 2.

The "MICRO SWITCH" identification is shown on this side of the switch housings.

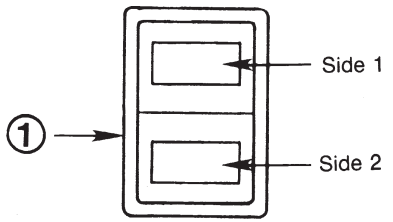

OPERATING ACTION

| 2-Position | 01 | Maint. | None | Maint. |
|------------|----|--------|--------|--------|
| | 02 | Mom. | None | Maint. |
| | 03 | Maint. | None | Mom. |
| 3-Position | 04 | Maint. | Maint. | Maint. |
| | 05 | Mom. | Maint. | Mom. |
| | 07 | Mom. | Maint. | Maint. |

Order display options assembled to switch by adding codes below.

| 01 Action Insert code numbers from Operating Action Chart | H Rocker K Black rocker, non-lighted H Black rocker, one lens* F White rocker, one lens* <small>* Lighted switches with solder terminals require MML93R receptacle to install lamps or LEDs. See page 88.</small> | DRXX Lens <table border="1"> <thead> <tr> <th colspan="2">Side 1</th> <th colspan="2">Side 2</th> </tr> </thead> <tbody> <tr> <td>XX</td> <td>None</td> <td>XX</td> <td>None</td> </tr> <tr> <td>LED display:</td> <td>Incand. display:</td> <td>LED display:</td> <td>Incand. display:</td> </tr> <tr> <td>DR Red</td> <td>LR Red</td> <td>DR Red</td> <td>LR Red</td> </tr> <tr> <td>DY Yellow</td> <td>LY Yellow</td> <td>DY Yellow</td> <td>LY Yellow</td> </tr> <tr> <td>DG Green</td> <td>LG Green</td> <td>DG Green</td> <td>LG Green</td> </tr> <tr> <td></td> <td>LW White</td> <td></td> <td>LW White</td> </tr> </tbody> </table> | Side 1 | | Side 2 | | XX | None | XX | None | LED display: | Incand. display: | LED display: | Incand. display: | DR Red | LR Red | DR Red | LR Red | DY Yellow | LY Yellow | DY Yellow | LY Yellow | DG Green | LG Green | DG Green | LG Green | | LW White | | LW White | Leave blank, if legend not desired Legend 20 With legend Use legend order sheet FO-74193 to cover each catalog listing (see page 82). |
|---|--|---|------------------|--|--------|--|----|------|----|------|--------------|------------------|--------------|------------------|--------|--------|--------|--------|-----------|-----------|-----------|-----------|----------|----------|----------|----------|--|----------|--|----------|--|
| Side 1 | | Side 2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| XX | None | XX | None | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| LED display: | Incand. display: | LED display: | Incand. display: | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DR Red | LR Red | DR Red | LR Red | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DY Yellow | LY Yellow | DY Yellow | LY Yellow | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DG Green | LG Green | DG Green | LG Green | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | LW White | | LW White | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

CUSTOMER INSTALLATION:

LED

- Order LED and receptacle, page 85.
- Installation instructions, pages 86/88.

Incandescent Lamp

- Order lamp/PWB receptacle or lamp/solder receptacle, page 87.
- Installation instructions, page 88.

Manuals

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Rocker Switches](#) category:

Click to view products by [Honeywell](#) manufacturer:

Other Similar products are found below :

[LTILA6E-1S-WH-RC-FN12VXCR1](#) [6-1571986-9](#) [8007K26N324V52](#) [8055K23Z7V](#) [8055K32Z7V](#) [8055K52Z7V](#) [8138K20E6M50](#) [84206L](#)
[84312LX](#) [PREDD5-07F-BB0GW](#) [999-16716-002](#) [999-16716-003](#) [999-16716-004](#) [A101J1V3Q004](#) [A101J2ZQ004](#) [A101J4ZQ004](#)
[A101J51CB0004](#) [A103J1ZQ004](#) [A201J1AQ004](#) [A201J3ZB004](#) [A201J50ZQ004](#) [A203J51ZQ0004](#) [A435S1YZQ](#) [H8500XBBBBL-A](#)
[H8653VBBG2577W](#) [HB130CHNWWNAAC](#) [R13112ABB-602W](#) [1251.0303](#) [AE205J60V3B004](#) [1352.0107](#) [1500G51E](#) [1571099-3](#)
[1571987-4](#) [1571987-5](#) [1571989-7](#) [1571988-5](#) [B123J77V7B2](#) [B226J50W4Q22P](#) [B433J37ZQ22M](#) [160212E](#) [1634200-7](#) [1801.1164](#) [1839.1502](#)
[PANEL-PLUG-VHP-BLACK](#) [PANEL-PLUG-VHP-WT](#) [K1ABBSCADN](#) [K2ABAAAAAA](#) [KG312A2DXD246X](#) [250011E714](#) [2600HM11E](#)