ICE5xRxxxAG



Fixed Frequency 700 V/800 V CoolSET™ - in DSO-12 Package

Product highlights

- Integrated 700 V/ 800 V avalanche rugged CoolMOS™
- Enhanced Active Burst Mode with selectable entry and exit standby power to reach the lowest standby power <100 mW
- Digital frequency reduction for better overall system efficiency
- Fast startup achieved with cascode configuration
- Frequency jitter and soft gate driving for low EMI
- Integrated error amplifier
- Comprehensive protection with input line over voltage protection
- Pb-free lead plating, halogen-free mold compound, RoHS compliant

Features

- Integrated 700 V/ 800 V avalanche rugged CoolMOS[™]
- Enhanced Active Burst Mode with selectable entry and exit standby power
- Digital frequency reduction for better overall system efficiency
- Fast startup achieved with cascode configuration
- DCM and CCM operation with slope compensation
- Frequency jitter and soft gate driving for low EMI
- Built-in digital soft start
- Integrated error amplifier to support direct feedback in non-isolated flyback
- Comprehensive protection with input line over voltage protection, V_{cc} over voltage, V_{cc} under voltage, overload/open loop, over temperature
- All protections are in auto restart mode
- Limited charging current for V_{cc} short to GND

Applications

- Auxiliary power supply for home appliances/white goods, TV, PC & server
- Blu-ray player, set-top box & LCD/LED monitor

Product validation

Fully qualified according to JEDEC for Industrial Applications

Description

The ICE5xRxxxAG is the 5th generation of fixed frequency integrated power IC (CoolSET[™]) optimized for off-line switch mode power supply in cascode configuration. The CoolSET[™] package has 2 separate chips inside; one is controller chip and the other is a 700 V/ 800 V CoolMOS[™] chip. The cascode configuration helps achieve fast startup. The frequency reduction with soft gate driving and frequency jitter operation offers lower EMI and better efficiency between light load and 50% load. The selectable entry and exit standby power ABM enables flexibility and ultra-low power consumption at standby mode with small and controllable output voltage ripple. The product has a wide operating range (10.0 ~ 25.5 V) of IC power supply and lower power consumption. The numerous protection functions with adjustable line over voltage protection support the power supply system in failure situations. All these make the 5th generation CoolSET[™] series an outstanding integrated power stage fixed frequency flyback converter in the market.





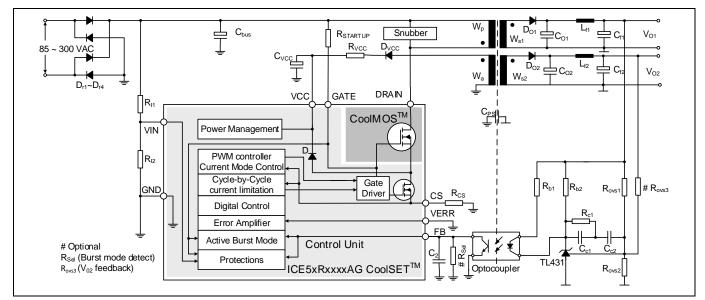


Figure 1 Typical application in isolated flyback using TL431 and optocoupler

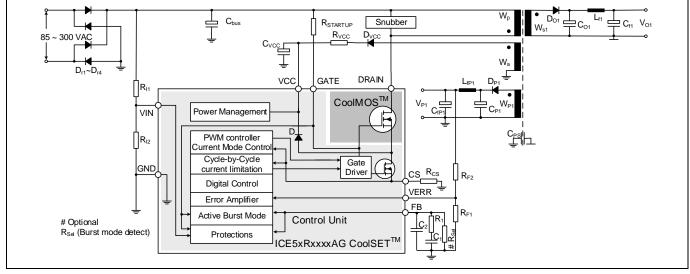


Figure 2 Typical application in non-isolated flyback utilizing integrated error amplifier

Output power of 5th generation Fixed-Frequency CoolSET[™]

Table 1 Output power of 5 generation Fixed-Frequency Coolse 1									
Туре	Package	Marking	V _{DS}	Fsw	R _{DSon} ¹	220 V AC ±20% ² at DCM	85-300 V AC ² at DCM	85-300 V AC ² at CCM	
ICE5AR4770AG	PG-DSO-12	5AR4770AG	700 V	100 kHz	4.73 Ω	27 W	15 W	16 W	
ICE5GR4780AG	PG-DSO-12	5GR4780AG	800 V	125 kHz	4.13 Ω	27.5 W	15 W	16 W	
ICE5GR2280AG	PG-DSO-12	5GR2280AG	800 V	125 kHz	2.13 Ω	41 W	23 W	24 W	
ICE5GR1680AG	PG-DSO-12	5GR1680AG	800 V	125 kHz	1.53 Ω	48 W	27 W	28 W	
ICE5AR0680AG	PG-DSO-12	5AR0680AG	800 V	100 kHz	0.71 Ω	68 W	40 W	42 W	

 Table 1
 Output power of 5th generation Fixed-Frequency CoolSET[™]

 1 Typ. at T $_{\rm J}$ =25 °C (inclusive of low side MOSFET)

² Calculated maximum output power rating in an open frame design at T_a=50 °C, T_J=125 °C (integrated high voltage MOSFET) and using minimum drain pin copper area in a 2 oz copper single sided PCB. The output power figure is for selection purpose only. The actual power can vary depending on particular designs. Please contact to a technical expert from Infineon for more information.



Pin configuration and functionality

Table of contents

3.4.1 Propagation delay compensation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 C	Produ	uct highlights	. 1
Product validation 1 Description 1 Output power of 5 th generation Fixed-Frequency CoolSET TM 2 Table of contents 3 1 Pin configuration and functionality. 5 2 Representative block diagram 7 3 Functional description 8 3.1 V:c pre-charging and typical V:c voltage during start-up. 8 3.1 V:c pre-charging and typical V:c voltage during start-up. 8 3.1.1 Switch-on determination 9 3.3.1 PWM operation and peak current mode control 9 3.3.1.1 Switch-off determination 9 3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.4 Slope compensation 11 3.4 Slope compensation 12 3.4 Peak current limitation 12 3.5 Oscillator and frequency jittering. 12	Featu	ires	. 1
Description 1 Output power of 5 th generation Fixed-Frequency CoolSET TM . 2 Table of contents 3 1 Pin configuration and functionality 5 2 Representative block diagram 7 3 Functional description 8 3.1 Vcc pre-charging and typical Vcc voltage during start-up 8 3.2 Soft-start 9 3.3.1 PVM operation and peak current mode control 9 3.3.1.1 Switch-off determination 9 3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.3.4 Slope compensation 12 3.3.5 Oscillator and frequency jittering 12 3.4 Peak current limitation 12 3.4 Propagation delay compensation 12 3.5 Modulated gate drive 12 3.4 Propagation delay compensation 14 3.5.1 Entering ABM operation 14 3.5.1 Entering ABM operation 14 3.5.1 Entering ABM operation 16	Appli	cations	. 1
Output power of 5 th generation Fixed-Frequency CoolSET** 2 Table of contents 3 1 Pin configuration and functionality 5 2 Representative block diagram 7 3 Functional description 8 3.1 Vcc pre-charging and typical Vcc voltage during start-up 8 3.2 Soft-start 9 3.3.1 PWM operation and peak current mode control 9 3.3.1.1 Switch-on determination 9 3.3.2 Switch-off determination 9 3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering 12 3.4 Slope compensation 12 3.4 Peak current limitation 12 3.4 Propagation delay compensation 12 3.4 Propagation delay compensation 12 3.5.1 Entering ABM operation 14 3.5.2 Luring ABM operation 14 3.5.4 Ative Burst Mode (ABM) with selectable power level 14 3.5.4 During ABM operation 16 3.6 Non-isola	Produ	uct validation	. 1
Output power of 5 th generation Fixed-Frequency CoolSET TM 2 Table of contents 3 1 Pin configuration and functionality 5 2 Representative block diagram 7 3 Functional description 8 3.1 Vcc pre-charging and typical Vcc voltage during start-up 8 3.2 Soft-start 9 3.3.1 PWM operation and peak current mode control 9 3.3.1.1 Switch-on determination 9 3.3.2 Switch-off determination 9 3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering 12 3.4 Slope compensation 12 3.4 Peak current limitation 12 3.4 Propagation delay compensation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 Luring ABM operation 16 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 16 3.6<	Descr	iption	. 1
Table of contents 3 1 Pin configuration and functionality 5 2 Representative block diagram 7 3 Functional description 8 3.1 Vcc pre-charging and typical Vcc voltage during start-up 8 3.2 Soft-start 9 3.3 Normal operation 9 3.3.1 PWM operation and peak current mode control 9 3.3.1.1 Switch-off determination 9 3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering 12 3.4 Peak current limitation 12 3.4 Propagation delay compensation 12 3.4.1 Propagation delay compensation 12 3.5.2 During ABM operation 12 3.5.4 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.4 Leaving ABM operation		•	
1 Pin configuration and functionality 5 2 Representative block diagram 7 3 Functional description 8 3.1 Vcc pre-charging and typical Vcc voltage during start-up 8 3.2 Soft-start 9 3.3 Normal operation 9 3.3.1 PWM operation and peak current mode control 9 3.3.1.1 Switch-off determination 9 3.3.2 Switch-off determination 9 3.3.3 Frequency reduction 11 3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering. 12 3.4 Slope compensation 12 3.4 Peak current limitation 12 3.4 Propagation delay compensation 12 3.4 Propagation delay compensation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.4 Leaving ABM operation 16 3.6 Non-is	-		
2 Representative block diagram 7 3 Functional description 8 3.1 Vcc pre-charging and typical Vcc voltage during start-up 8 3.2 Soft-start 9 3.3 Normal operation 9 3.3.1 PWM operation and peak current mode control 9 3.3.1.1 Switch-off determination 9 3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.3.4 Slope compensation 12 3.3.5 Oscillator and frequency jittering 12 3.4 Slope compensation 12 3.4 Peak current limitation 12 3.4 Peak current limitation 12 3.4.1 Propagation delay compensation 12 3.5.2 During ABM operation 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 16 3.6 Nornisolated/isolated configuration			
3 Functional description 8 3.1 Vcc pre-charging and typical Vcc voltage during start-up. 8 3.2 Soft-start 9 3.3 Normal operation 9 3.3.1 PWM operation and peak current mode control 9 3.3.1.1 Switch-on determination 9 3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.4 Slope compensation 11 3.5 Oscillator and frequency jittering. 12 3.4 Peak current limitation 12 3.4.1 Propagation delay compensation 12 3.4 Peak current limitation 12 3.4 Propagation delay compensation 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.4 ABM configuration 14 3.5.5 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17	_	•	
3.1 V _{CC} pre-charging and typical V _{CC} voltage during start-up. 8 3.2 Soft-start. 9 3.3 Normal operation 9 3.3.1 PWM operation and peak current mode control 9 3.3.1.1 Switch-off determination 9 3.3.2 Switch-off determination 9 3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering 12 3.4 Slope compensation 12 3.4 Peak current limitation 12 3.4 Peak current limitation 12 3.4 Propagation delay compensation 12 3.4 Propagation delay compensation 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions			
3.2 Soft-start 9 3.3 Normal operation 9 3.3.1 PWM operation and peak current mode control 9 3.3.1.1 Switch-on determination 9 3.3.1.2 Switch-off determination 9 3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering. 12 3.3.6 Modulated gate drive 12 3.4 Peak current limitation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.6 Non-isolated (solated configuration 16	-	•	
3.3 Normal operation and peak current mode control 9 3.3.1 PWM operation and peak current mode control 9 3.3.1.1 Switch-off determination 9 3.3.2 Switch-off determination 9 3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.4 Slope compensation 11 3.5 Oscillator and frequency jittering. 12 3.6 Modulated gate drive 12 3.4 Peak current limitation 12 3.4.1 Propagation delay compensation. 12 3.5.1 Entering ABM operation 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.4 Leaving ABM operation 14 3.5.5 Leaving ABM operation 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 Vcc over/under voltage 17 3.7.4 Over temperature 17			
3.3.1 PWM operation and peak current mode control			
3.3.1.1 Switch-on determination 9 3.3.1.2 Switch-off determination 9 3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering 12 3.6 Modulated gate drive 12 3.6 Modulated gate drive 12 3.4 Peak current limitation 12 3.4.1 Propagation delay compensation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{CC} over/under voltage 17 3.7.4 Over temperature 17 3.7.5 V _{CC} over/under voltage 18 3.7.6 Protection modes 18			
3.3.1.2 Switch-off determination 9 3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering. 12 3.3.6 Modulated gate drive 12 3.4 Peak current limitation 12 3.4.1 Propagation delay compensation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.4 ABM configuration 14 3.5.2 During ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 Vcc short to GND 18 3.7.6 Protection modes 18			
3.3.2 Current sense 10 3.3.3 Frequency reduction 11 3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering 12 3.4.6 Modulated gate drive 12 3.4.7 Peak current limitation 12 3.4.1 Propagation delay compensation 12 3.5.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.6 Non-isolated/isolated configuration 17 3.7.1 Line over voltage 17 3.7.2 V _{CC} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{CC} short to GND 18 3.7.6 Protection modes 18 3.7.6 Protection modes 20			
3.3.3 Frequency reduction 11 3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering 12 3.4 Peak current limitation 12 3.4 Peak current limitation 12 3.4 Peak current limitation 12 3.4.1 Propagation delay compensation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{CC} over/under voltage 17 3.7.4 Over temperature 17 3.7.6 Protection modes 18 3.7.6 Protection modes 18 3.7.6 Protection modes 12 4.1 Abslute maximum ratings 20			
3.3.4 Slope compensation 11 3.3.5 Oscillator and frequency jittering 12 3.3.6 Modulated gate drive 12 3.4 Peak current limitation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 Vccc over/under voltage 17			
3.3.5 Oscillator and frequency jittering 12 3.3.6 Modulated gate drive 12 3.4 Peak current limitation 12 3.4.1 Propagation delay compensation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.6 Non-isolated/isolated configuration 17 3.7.1 Line over voltage 17 3.7.2 V _{CC} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{CC} short to GND 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 <td></td> <td></td> <td></td>			
3.3.6 Modulated gate drive 12 3.4 Peak current limitation 12 3.4.1 Propagation delay compensation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{CC} over/under voltage 17 3.7.4 Over temperature 17 3.7.5 V _{CC} short to GND 18 3.7.6 Protection modes 18 3.7.6 Protection modes 20 4.1 Absolute maximum ratings 20 4.2 Operating conditions 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 <tr< td=""><td></td><td></td><td></td></tr<>			
3.4 Peak current limitation 12 3.4.1 Propagation delay compensation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating conditions 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22			
3.4.1 Propagation delay compensation 12 3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{CC} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{CC} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 C	3.3.6		
3.5 Active Burst Mode (ABM) with selectable power level 14 3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating conditions 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense 23 4.8 Soft start	3.4		
3.5.1 Entering ABM operation 14 3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense 23 4.8 Soft start 23	3.4.1		
3.5.2 During ABM operation 14 3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense 23 4.8 Soft start 23	3.5		
3.5.3 Leaving ABM operation 14 3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense 23 4.8 Soft start 23	3.5.1	Entering ABM operation	14
3.5.4 ABM configuration 16 3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense 23 4.8 Soft start 23	3.5.2	During ABM operation	14
3.6 Non-isolated/isolated configuration 16 3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense 23 4.8 Soft start 23	3.5.3	Leaving ABM operation	14
3.7 Protection functions 17 3.7.1 Line over voltage 17 3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense. 23 4.8 Soft start 23	3.5.4	ABM configuration	16
3.7.1 Line over voltage 17 3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense 23 4.8 Soft start 23	3.6		
3.7.2 V _{cc} over/under voltage 17 3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense 23 4.8 Soft start 23	3.7	Protection functions	17
3.7.3 Overload/ open loop 17 3.7.4 Over temperature 17 3.7.5 V _{cc} short to GND 18 3.7.6 Protection modes 18 4 Electrical characteristics 20 4.1 Absolute maximum ratings 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense 23 4.8 Soft start 23	3.7.1	Line over voltage	17
3.7.4 Over temperature. 17 3.7.5 V _{cc} short to GND. 18 3.7.6 Protection modes. 18 4 Electrical characteristics. 20 4.1 Absolute maximum ratings. 20 4.2 Operating range 21 4.3 Operating conditions 21 4.4 Internal voltage reference. 22 4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense. 23 4.8 Soft start 23	3.7.2	V _{cc} over/under voltage	17
3.7.5Vcc short to GND.183.7.6Protection modes.184Electrical characteristics.204.1Absolute maximum ratings.204.2Operating range	3.7.3	Overload/ open loop	17
3.7.6Protection modes.184Electrical characteristics.204.1Absolute maximum ratings.204.2Operating range214.3Operating conditions.214.4Internal voltage reference.224.5PWM section224.6Error amplifier234.7Current sense.234.8Soft start23	3.7.4	Over temperature	17
4Electrical characteristics204.1Absolute maximum ratings204.2Operating range214.3Operating conditions214.4Internal voltage reference224.5PWM section224.6Error amplifier234.7Current sense234.8Soft start23	3.7.5	V _{cc} short to GND	18
4.1Absolute maximum ratings204.2Operating range214.3Operating conditions214.4Internal voltage reference224.5PWM section224.6Error amplifier234.7Current sense234.8Soft start23	3.7.6	Protection modes	18
4.2Operating range214.3Operating conditions214.4Internal voltage reference224.5PWM section224.6Error amplifier234.7Current sense234.8Soft start23	4	Electrical characteristics	20
4.3Operating conditions214.4Internal voltage reference224.5PWM section224.6Error amplifier234.7Current sense234.8Soft start23	4.1	Absolute maximum ratings	20
4.4Internal voltage reference.224.5PWM section224.6Error amplifier	4.2	Operating range	21
4.5 PWM section 22 4.6 Error amplifier 23 4.7 Current sense 23 4.8 Soft start 23	4.3	Operating conditions	21
4.6 Error amplifier	4.4	Internal voltage reference	22
4.7 Current sense	4.5	PWM section	22
4.8 Soft start	4.6	Error amplifier	23
	4.7	Current sense	23
4.9 Active Burst Mode24	4.8	Soft start	23
	4.9	Active Burst Mode	24



Pin configuration and functionality

4.10	Line over voltage protection	
4.11	V _{cc} over voltage protection	
4.12	Overload protection	
4.13	Thermal protection	
4.14	CoolMOS [™] section	
5	CoolMOS [™] performance characteristics	27
6	Output power curve	36
7	Outline dimension	39
8	Marking	40
Revis	ion history	41



Pin configuration and functionality

1 Pin configuration and functionality

The pin configuration is shown in Figure 3 and the functions are described in Table 2.

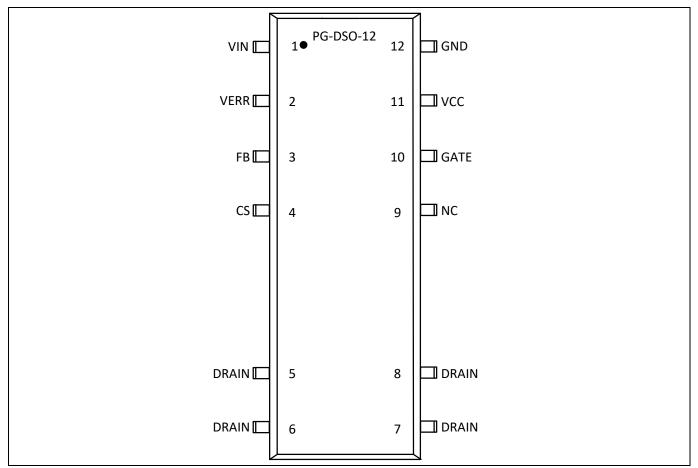


Figure 3 Pin configuration

Table 2Pin definitions and functions

Pin	Symbol	Function
1	VIN	Input Line Over Voltage Protection (LOVP)
		VIN pin is connected to the bus via resistor divider (see Figure 1) to sense the line voltage. Internally, it is connected to the line over voltage comparator which will stop the switching when LOVP condition occurs. To disable LOVP, connect this pin to GND.
2	VERR	Error amplifier
		VERR pin is internally connected to the transconductance error amplifier for non-isolated flyback application. Connect this pin to GND for isolated flyback application.
3	FB	Feedback and ABM entry/exit control
		FB pin combines the functions of feedback control, selectable burst entry/exit control and overload/open loop protection.
4	CS	Current sense
		The CS pin is connected to the shunt resistor for the primary current sensing externally and to the PWM signal generator block for switch-off determination (together with the feedback voltage) internally.



Pin	Symbol	Function
5, 6, 7,	DRAIN	DRAIN(Drain of integrated CoolMOS™)
8		The DRAIN pin is connected to the drain of the integrated CoolMOS™.
9	NC	No connection
10	GATE	Gate driver output
		The GATE pin is connected to the Gate of the internal CoolMOS TM and additionally, a pull up resistor is connected from bus voltage to turn on the internal CoolMOS TM for charging up the V_{cc} capacitor during startup.
11	VCC	VCC(Positive voltage supply)
		The VCC pin is the positive voltage supply to the IC. The operating range is between V_{VCC_OFF} and V_{VCC_OVP} .
12	GND	Ground
		The GND pin is the common ground of the controller.

Pin configuration and functionality



Representative block diagram

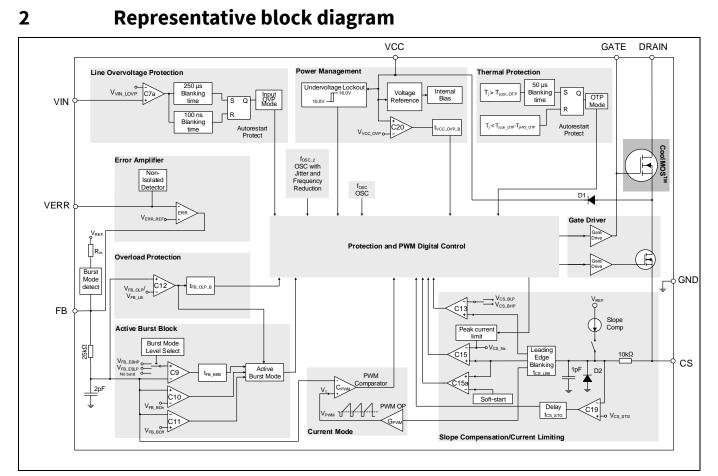


Figure 4 Representative block diagram

Note: Junction temperature of the controller chip is sensed for over temperature protection. The CoolMOS[™] is a separate chip from the controller chip in the same package. Please refer to the design guide and/or consult a technical expert for the proper thermal design.



3 Functional description

3.1 V_{cc} pre-charging and typical V_{cc} voltage during start-up

As shown in Figure 1, once the line input voltage is applied, a rectified voltage appears across the capacitor $C_{BUS.}$ The pull up resistor $R_{STARTUP}$ provides a current to charge the C_{iss} (input capacitance) of CoolMOSTM and gradually generate one voltage level. If the voltage over C_{iss} is high enough, CoolMOSTM on and V_{CC} capacitor will be charged through primary inductance of transformer $L_{P,}$ CoolMOSTM and internal diode D_1 with two steps constant current source $I_{VCC_Charge1}^1$ and $I_{VCC_Charge3}^1$.

A very small constant current source $(I_{VCC_Charge1})$ is charged to the V_{CC} capacitor till V_{CC} reach V_{CC_SCP} to protect the controller from V_{CC} pin short to ground during the start up. After this, the second step constant current source $(I_{VCC_Charge3})$ is provided to charge the V_{CC} capacitor further, until the V_{CC} voltage exceeds the turned-on threshold V_{VCC_ON}. As shown in the time phase I in Figure 5, the V_{CC} voltage increase almost linearly with two steps.

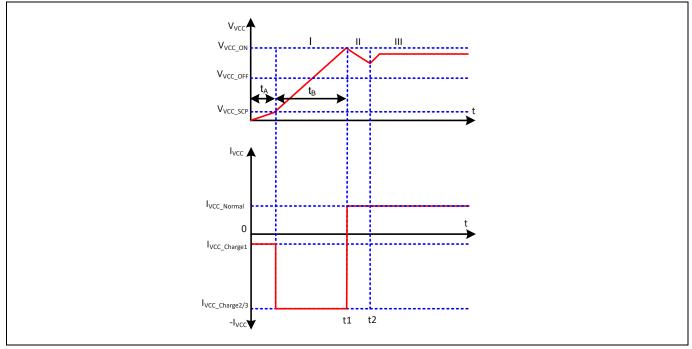


Figure 5 V_{cc} voltage and current at startup

The time taking for the V_{cc} pre-charging can then be approximately calculated as:

$$t_{1} = t_{A} + t_{B} = \frac{V_{VCC_SCP} \cdot C_{VCC}}{I_{VCC_Charge1}} + \frac{(V_{VCC_ON} - V_{VCC_SCP}) \cdot C_{VCC}}{I_{VCC_Charge3}}$$
(1)

When the V_{cc} voltage exceeds the V_{cc} turn on threshold V_{vcc_ON} at time t₁, the IC begins to operate with soft-start. Due to power consumption of the IC and the fact that there is still no energy from the auxiliary winding to charge the V_{cc} capacitor before the output voltage is built up, the V_{cc} voltage drops (Phase II). Once the output voltage rises close to regulation, the auxiliary winding starts to charge the V_{cc} capacitor from the time t₂ onward and delivering the I_{vcc_Normal}² to the CoolSETTM. The V_{cc} then will reach a constant value depending on output load.

 $^{^1}$ $I_{\text{VCC_Charge1/2/3}}$ is charging current from the controller to VCC capacitor during start up

² I_{VCC_Normal} is supply current from VCC capacitor or auxiliary winding to the CoolSET[™] during normal operation



3.2 Soft-start

As shown in Figure 6, the IC begins to operate with a soft-start at time t_{on} . The switching stresses on the power MOSFET, diode and transformer are minimized during soft-start. The soft-start implemented in ICE5xRxxxAG is a digital time-based function. The preset soft-start time is t_{SS} (12 ms) with 4 steps. If not limited by other functions, the peak voltage on CS pin will increase step by step from 0.3 V to V_{CS_N} (0.8 V) finally. The normal feedback loop will take over the control when the output voltage reaches its regulated value.

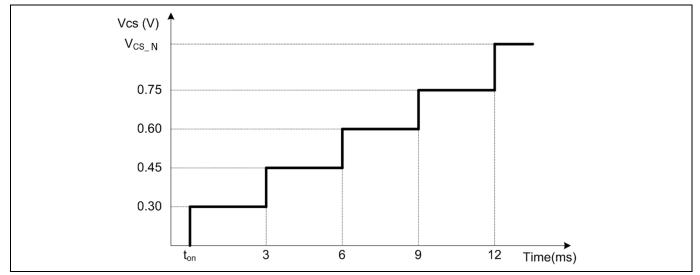


Figure 6 Maximum current sense voltage during soft start

3.3 Normal operation

The PWM controller during normal operation consists of a digital signal processing circuit including regulation control and an analog circuit including a current measurement unit and a comparator. Details about the full operation of the CoolSET[™] in normal operation are illustrated in the following paragraphs.

3.3.1 PWM operation and peak current mode control

3.3.1.1 Switch-on determination

The power MOSFET turn-on is synchronized with the internal oscillator with a switching frequency f_{sw} that corresponds to the voltage level V_{FB} (see Figure 8).

3.3.1.2 Switch-off determination

In peak current mode control, the PWM comparator monitors voltage V_1 (see Figure 4) which is the representation of the instantaneous current of the power MOSFET. When V_1 exceeds V_{FB} , the PWM comparator sends a signal to switch off the GATE of the power MOSFET. Therefore, the peak current of the power MOSFET is controlled by the feedback voltage V_{FB} (see Figure 7).

At switch on transient of the power MOSFET, a voltage spike across R_{CS} can cause V_1 to increase and exceed V_{FB} . To avoid a false switch off, the IC has a blanking time t_{CS_LEB} before detecting the voltage across R_{CS} to mask the voltage spike. Therefore, the minimum turn on time of the power MOSFET is t_{CS_LEB} .

For some reason that the voltage level at V_1 takes long time to exceed V_{FB} , the IC has implemented a maximum duty cycle control to force the power MOSFET to switch off when $D_{MAX} = 0.75$ is reached.



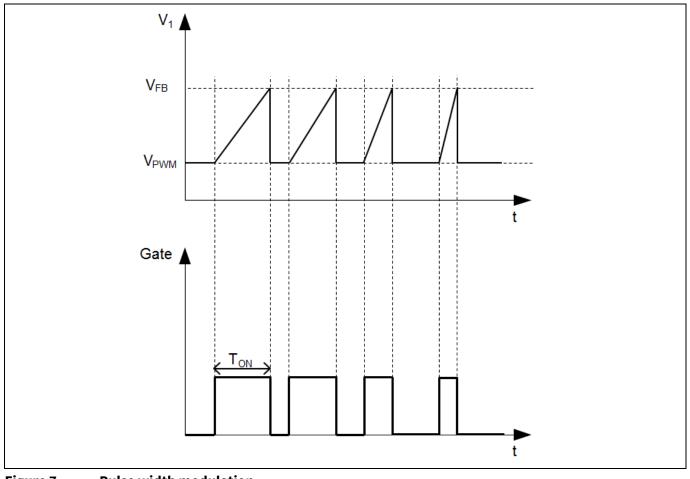


Figure 7 Pulse width modulation

3.3.2 Current sense

The power MOSFET current generates a voltage V_{CS} across the current sense resistor R_{CS} connected between the CS pin and the GND pin. V_{CS} is amplified with gain G_{PWM} , then, added with an offset V_{PWM} to become V_1 as described below in below equation 3.

$$V_{CS} = I_D \times R_{CS}$$
(2)

$$V_1 = V_{CS} * G_{PWM} + V_{PWM}$$
(3)
where, V_{CS} : CS pin voltage

I_D : power MOSFET current

- R_{cs} : resistance of the current sense resistor
- V₁ : voltage level compared to V_{FB} as described in section 3.3.1.2
- G_{PWM} : PWM-OP gain
- V_{PWM} : offset for voltage ramp

If the voltage at the current sense pin is lower than the preset threshold V_{CS_STG} after the time $t_{CS_STG_SAM}$ for three consecutive pulses during on-time of the power switch, this abnormal V_{CS} will trigger IC into auto restart mode.



3.3.3 Frequency reduction

Frequency reduction is implemented in ICE5xRxxxAG to achieve a better efficiency during the light load. At light load, the reduced switching frequency F_{sw} improves efficiency by reducing the switching loses.

When load decreases, V_{FB} decreases as well. F_{SW} is dependent on the V_{FB} as shown in Figure 8. Therefore, F_{SW} decreases as the load decreases.

Typically, F_{SW} at high load is 100 kHz/ 125 kHz and starts to decrease at V_{FB} = 1.7V. There is no further frequency reduction once it reached the f_{OSCx_MIN} even the load is further reduced.

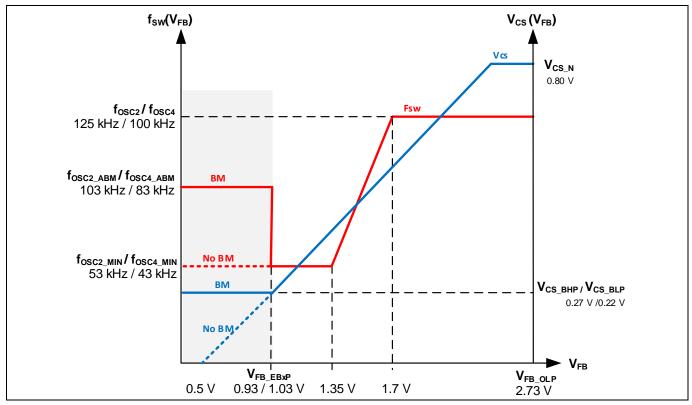


Figure 8 Frequency reduction curve

3.3.4 Slope compensation

ICE5xRxxxAG can operate at Continuous Conduction Mode (CCM). At CCM operation, duty cycle greater than 50% may generate a sub-harmonic oscillation. To avoid the sub-harmonic oscillation, slope compensation is added to V_{CS} pin when the gate of the power MOSFET is turned on for more than 40% of the switching cycle period. The relationship between V_{FB} and the V_{CS} for CCM operation is described in below equation 4:

 $V_{\rm FB} = V_{\rm CS} * G_{\rm PWM} + V_{\rm PWM} + M_{\rm COMP} * (T_{\rm ON} - 40\% * T_{\rm PERIOD})$

(4)

where, T_{oN} : gate turn on time of the power MOSFET

 $M_{\text{COMP}} \quad : slope \ compensation \ rate$

T_{PERIOD} : switching cycle period

Slope compensation circuit is disabled and no slope compensation is added into the V_{cs} pin during active burst mode to save the power consumption.



3.3.5 Oscillator and frequency jittering

The oscillator generates a frequency of 100 kHz/ 125 kHz with frequency jittering of $\pm 4\%$ at a jittering period of T_{JITTER} (4 ms). The frequency jittering helps to reduce conducted EMI.

A capacitor, a current source and current sink which determine the frequency are integrated. The charging and discharging current of the implemented oscillator capacitor are internally trimmed in order to achieve a highly accurate switching frequency.

Once the soft-start period is over and when the IC goes into normal operating mode, the frequency jittering is enabled. There is also frequency jittering during frequency reduction.

3.3.6 Modulated gate drive

The drive-stage is optimized for EMI consideration. The switch on speed is slowed down before it reaches the CoolMOS[™] turn on threshold. That is a slope control of the rising edge at the output of driver (see Figure 9). Thus the leading switch spike during turn on is minimized.

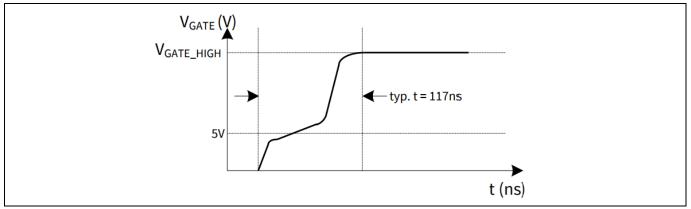


Figure 9 Gate rising waveform

3.4 Peak current limitation

There is a cycle by cycle peak current limitation realized by the current limit comparator to provide primary over-current protection. The primary current generates a voltage V_{cs} across the current sense resistor R_{cs} connected between the CS pin and the GND pin. If the voltage V_{cs} exceeds an internal voltage limit V_{cs_N} , the comparator immediately turns off the gate drive.

The primary peak current $I_{\text{PEAK_PRI}}$ can be calculated as below:

$$I_{\text{PEAK}_{\text{PRI}}} = V_{\text{CS}_{\text{N}}}/R_{\text{CS}}$$

(5)

To avoid mistriggering caused by MOSFET switch on transient voltage spikes, a leading edge blanking time (t_{CS_LEB}) is integrated in the current sensing path.

3.4.1 Propagation delay compensation

In case of overcurrent detection, there is always a propagation delay from sensing the V_{cs} to switching the power MOSFET off. An overshoot on the peak current I_{peak} caused by the delay depends on the ratio of dI/dt of the primary current (see Figure 10).



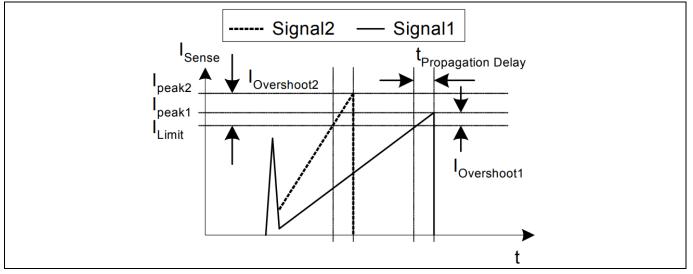


Figure 10 Current limiting

The overshoot of Signal2 is larger than Signal1 due to the steeper rising waveform. This change in the slope is depending on the AC input voltage. Propagation delay compensation is integrated to reduce the overshoot due to dI/dt of the rising primary current. Thus the propagation delay time between exceeding the current sense threshold V_{CS_N} and the switching off of the power MOSFET is compensated over wide bus voltage range. Current limiting becomes more accurate which will result in a minimum difference of overload protection triggering power between low and high AC line input voltage.

Under CCM operation, the same V_{CS} do not result in the same power. In order to achieve a close overload triggering level for CCM, ICE5xRxxxAG has implemented a 2 compensation curve as shown Figure 11. One of the curve is used for T_{ON} greater than 0.40 duty cycle and the other is for lower than 0.40 duty cycle.

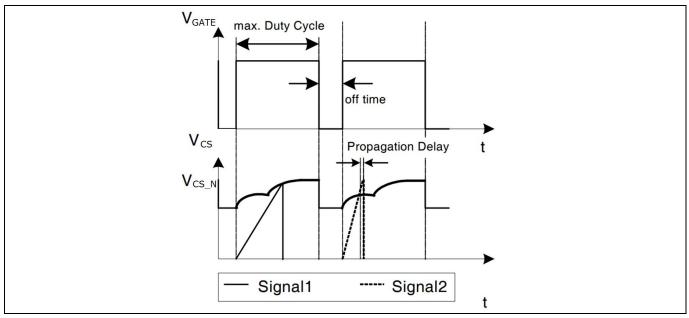


Figure 11 Dynamic voltage threshold V_{CS_N}

Similarly, the same concept of propagation delay compensation is also implemented in ABM with reduced level. With this implementation, the entry and exit burst mode power can be close between low and high AC line input voltage.



3.5 Active Burst Mode (ABM) with selectable power level

At light load condition, the IC enters ABM operation to minimize the power consumption. Details about ABM operation are explained in the following paragraphs.

3.5.1 Entering ABM operation

The sytem will enter into ABM operation when two conditions below are met:

- the FB voltage is lower than the threshold of V_{FB_EBLP}/V_{FB_EBHP} depending on burst configuration option setup
- and a certain blanking time $t_{\mbox{\tiny FB_BEB}}$

Once all of these conditions are fulfilled, the ABM flip-flop is set and the controller enters ABM operation. This multi-condition determination for entering ABM operation prevents mis-triggering of entering ABM operation, so that the controller enters ABM operation only when the output power is really low.

3.5.2 During ABM operation

After entering ABM, the PWM section will be inactive making the V_{OUT} start todecrease. As the V_{OUT} decreases, V_{FB} rises. Once V_{FB} exceeded V_{FB_BON} , the internal circuit is again activated by the internal bias to start with the switching.

If the PWM is still operating and the output load is still low, V_{OUT} increases and V_{FB} signal starts to decrease. When V_{FB} reaches the low threshold V_{FB_BOff} , the internal bias is reset again and the PWM section is disabled with no switching until V_{FB} increases back to exceed V_{FB_BOff} threshold.

In ABM, V_{FB} is like a sawtooth waveform swinging between V_{FB_BOff} and V_{FB_BOn} shown in Figure 12.

During ABM, the switching frequency f_{OSCX_ABM} is 83 kHz for 100 kHz version and 103 kHz for 125 kHz version IC. The peak current I_{PEAK_ABM} of the power MOSFET is defined by:

 $I_{\text{PEAK}_\text{ABM}} = V_{\text{CS}_\text{BxP}}/R_{\text{CS}}$

(6)

where V_{CS_BxP} is the peak current limitation in ABM

3.5.3 Leaving ABM operation

The FB voltage immediately increases if there is a sudden increase in the output load. When V_{FB} exceeds V_{FB_LB} , it will leave ABM and the peak current limitation trhreshold voltage will return back to V_{CS_N} immediately.

Fixed Frequency 700 V/800 V CoolSET[™] - in DSO-12 Package



Functional description

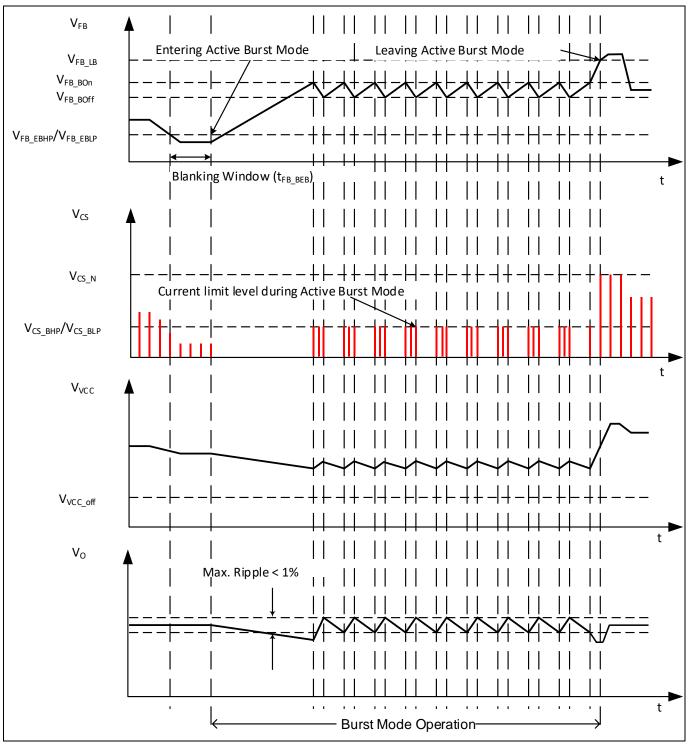


Figure 12 Signals in Active Burst Mode



3.5.4 ABM configuration

The burst mode entry level can be selected by changing the different resistance R_{sel} at FB pin. There are 3 configuration options depending on R_{sel} which corresponds to the options of no ABM (Option 1), low range of ABM power (Option 2) and high range of ABM power (Option 3). The table below shows the control logic for the entry and exit level with the FB voltage.

Ontion	P	V	V	Entry level	Exit level	
Option	R _{sel}	V _{FB}	V _{CS_BxP}	V _{FB_EBxP}	V_{FB_LB}	
1	<470 kΩ	$V_{FB} < V_{FB_P_BIAS1}$	-	No ABM	No ABM	
2	720 kΩ ~ 790 kΩ	$V_{FB_P_BIAS1} < V_{FB} < V_{FB_P_BIAS2}$	0.22V	0.93 V	2.73 V	
3(Default)	>1210 kΩ	$V_{FB} > V_{FB_P_BIAS2}$	0.27V	1.03 V	2.73 V	

During IC first startup, the controller preset the ABM selection to Option 3, the FB resistor (R_{FB}) is turned off by internal switch S2 (see Figure 13) and a current source I_{sel} is turned on instead. From V_{cc} = 4.44 V to V_{cc} on threshold, the FB pin will start to charge resistor R_{Sel} with current I_{Sel} to a certain voltage level. When V_{cc} reaches V_{cc} on threshold, the FB voltage is sensed. The burst mode option is then chosen according to the FB voltage level. After finishing the selection, any change on the FB level will not change the burst mode option and the current source (I_{sel}) is turned off while the FB resistor (R_{FB}) is connected back to the circuit (Figure 13).

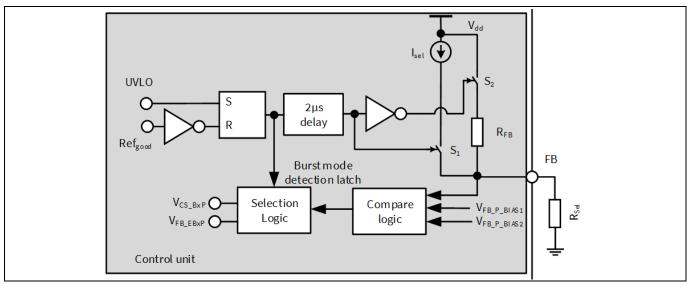


Figure 13 ABM detect and adjust

3.6 Non-isolated/isolated configuration

ICE5xRxxxAG has a VERR Pin, which is connected to the input of an integrated error amplifier to support nonisolated flyback application (see Figure 2). When V_{CC} is charging and before reaching the V_{CC} on threshold, a current source $I_{ERR_P_BIAS}$ from VERR pin together with R_{F1} and R_{F2} will generate a voltage across it. If VERR voltage is more than $V_{ERR_P_BIAS}$ (0.2 V), non-isolated configuration is selected, otherwise, isolated configuration is selected. In isolated configuration, the error amplifier output is disconnected from the FB pin.

In case of non-isolated configuration, the voltage divider R_{F1} and R_{F2} is used to sense the output voltage and compared with the internal reference voltage V_{ERR_REF} . The difference between the sensed voltage and the reference voltage is converted as an output current by the error amplifier. The output current will charge/discharge the resistor and capacitor network connected at the FB pin for the loop compensation.



3.7 Protection functions

The ICE5xRxxxAG provides numerous protection functions which considerably improve the power supply system robustness, safety and reliability. The following table summarizes these protection functions and the corresponding protection mode whether as a non switch auto restart, auto restart or odd skip auto restart mode. Refer to Figure 14, Figure 15 and Figure 16 for the waveform illustration of protection modes.

Protection Functions	Normal Mode Burst Mode			Protection Mode
	-	Burst ON	Burst OFF	
Line over voltage		\checkmark		Non switch auto restart
V _{cc} over voltage	\checkmark	\checkmark	NA ¹	Odd skip auto restart
V _{cc} under voltage	\checkmark		\checkmark	Auto restart
Overload/ open loop	\checkmark	NA^1	NA ¹	Odd skip auto restart
Over temperature	\checkmark		\checkmark	Non switch auto restart
V _{cc} short to GND	\checkmark		\checkmark	No startup

Table 4Protection functions

3.7.1 Line over voltage

The AC Line Over Voltage Protection (LOVP) is detected by sensing bus capacitor voltage through VIN pin via voltage divider resistors, Rl1 and Rl2 (Figure 1). Once V_{VIN} voltage is higher than the line over voltage threshold (V_{VIN_LOVP}), the controller enters into protection mode until V_{VIN} is lower than V_{VIN_LOVP} . This protection can be disabled by connecting VIN pin to GND.

3.7.2 V_{cc} over/under voltage

During operation, the V_{CC} voltage is continuously monitored. If V_{CC} is either below V_{VCC_OFF} for 50 μ s (t_{VCC_OFF_B}) or above V_{VCC_OVP} for 55 μ s (t_{VCC_OVP_B}), the power MOSFET is kept switch off. After the V_{CC} voltage falls below the threshold V_{VCC_OFF}, the new start up sequence is activated. The V_{CC} capacitor is then charged up. Once the voltage exceeds the threshold V_{VCC_ON}, the IC begins to operate with a new soft-start.

3.7.3 Overload/ open loop

In case of open control loop or output overload, the FB voltage will be pulled up. When V_{FB} exceeds V_{FB_OLP} after a blanking time of $t_{FB_OLP_B}$, the IC enters odd skip auto restart mode. The blanking time enables the converter to provide a peak power in case the increase in V_{FB} is due to a sudden load increase.

3.7.4 Over temperature

If the junction temperature of controller exceeds T_{jcon_OTP} , the IC enters into Over Temperature Protection (OTP) auto restart mode. The IC has also implemented with a 40 °C hysteresis. That means the IC can only be recovered from OTP when the controller junction temperature is dropped 40 °C lower than the over temperature trigger point.

¹ Not Applicable



3.7.5 V_{cc} short to GND

To limit the power dissipation of the startup circuit at V_{cc} short to GND condition, the V_{cc} charging current is limited to a minimum level of $I_{VCC_Charge1}$. With such low current, the power loss of the IC is limited to prevent overheating.

3.7.6 Protection modes

All the protections are in auto restart mode with a new soft start sequence. The three auto restart modes are illustrated in the following figures.

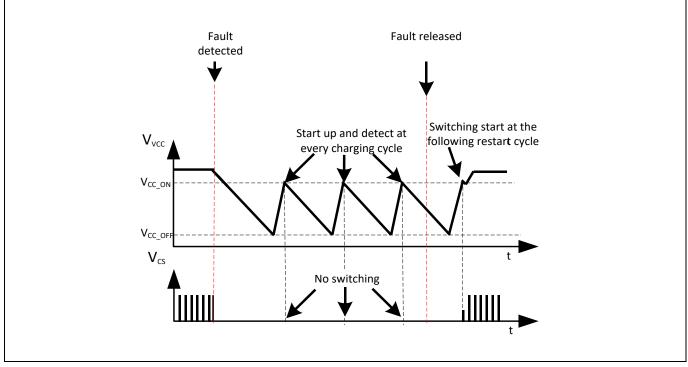
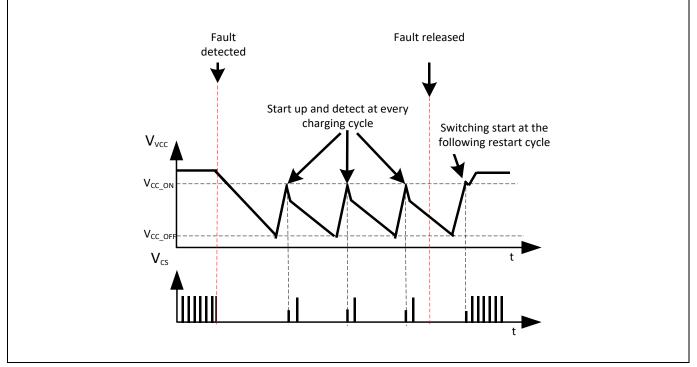
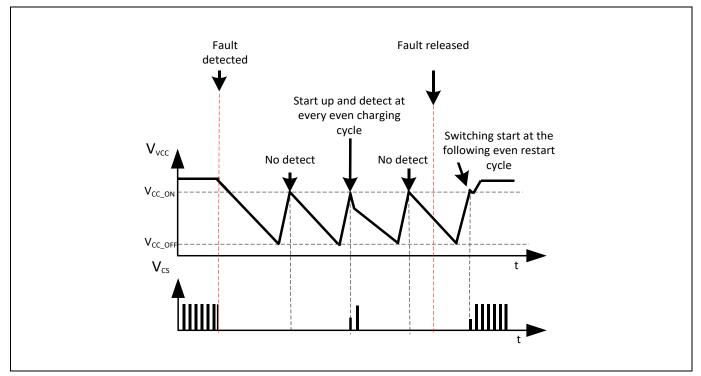


Figure 14 Non switch auto restart mode













Electrical characteristics

4 Electrical characteristics

Attention: All voltages are measured with respect to ground (Pin 12). The voltage levels are valid if other ratings are not violated.

4.1 Absolute maximum ratings

Attention: Stresses above the maximum values listed here may cause permanent damage to the device. Exposure to absolute maximum rating conditions for extended periods may affect device reliability. Maximum ratings are absolute ratings; exceeding any one of these values may cause irreversible damage to the integrated circuit. For the same reason, make sure that any capacitor that will be connected to pin 11 (VCC) is discharged before assembling the application circuit. T_a=25 °C unless otherwise specified.

Parameter	Symbol Limit Values		Values	Unit	Note / Test Condition
		Min.	Max.		
Drain Voltage	$V_{\rm drain}$			V	T _j = 25 °C
ICE5xRxx70AG		-	700		
ICE5xRxx80AG		-	800		
Pulse drain current	I _{D,Pulse}			Α	
ICE5AR4770AG		-	2.2 ¹		
ICE5GR4780AG		-	2.6 ¹		
ICE5GR2280AG		-	5.8 ²		
ICE5GR1680AG		-	5.8 ²		
ICE5AR0680AG		-	5.8 ²		
Avalanche energy, repetitive, t _{AR} limited	E_{AR}			mJ	
by max. T_J =150 °C and $T_{J,Start}$ = 25 °C					
ICE5AR4770AG		-	0.02		I _D =0.14 A, V _{DD} =50 V
ICE5GR4780AG		-	0.02		I _D =0.20 A, V _{DD} =50 V
ICE5GR2280AG		-	0.05		I _D =0.40 A, V _{DD} =50 V
ICE5GR1680AG		-	0.07		I _D =0.60 A, V _{DD} =50 V
ICE5AR0680AG		-	0.22		I _D =1.80 A, V _{DD} =50 V
Avalanche current, repetitive,t _{AR} limited	I _{AR}			Α	
by max. T_J =150 °C and $T_{J,Start}$ = 25 °C					
ICE5AR4770AG		-	0.14		
ICE5GR4780AG		-	0.20		
ICE5GR2280AG		-	0.40		
ICE5GR1680AG		-	0.60		
ICE5AR0680AG		-	1.80		
VCC Supply Voltage	V _{cc}	-0.3	27.0	V	
GATE Voltage	$V_{\rm GATE}$	-0.3	27.0	V	

Table 5Absolute maximum ratings

 1 Pulse width t_{P} limited by $T_{j,\text{max}}$

 2 Pulse width t_P = 20 μs and limited by $T_{j,max}$

Fixed Frequency 700 V/800 V CoolSET[™] - in DSO-12 Package



Electrical characteristics

FB Voltage	V _{FB}	-0.3	3.6	V		
VERR Voltage	$V_{\rm ERR}$	-0.3	3.6	V		
CS Voltage	V _{cs}	-0.3	3.6	V		
VIN Voltage	$V_{\rm IN}$	-0.3	3.6	V		
Maximum DC current on any pin		-10.0	10.0	mA	Except DRAIN and CS pin	
ESD robustness HBM	$V_{\text{ESD}_{\text{HBM}}}$	-	2000	V	According to EIA/JESD22	
ESD robustness CDM	$V_{\rm esd_cdm}$	-	500	V		
Junction temperature range	TJ	-40	150	°C	Controller & CoolMOS	
Storage Temperature	T_{STORE}	-55	150	°C		
Thermal Resistance (Junction- Ambient)	$R_{ m thJA}$			K/W	Setup according to the JEDEC	
ICE5AR4770AG		-	104		standard JESD51 and using	
ICE5GR4780AG		-	105		minimum drain pin copper	
ICE5GR2280AG		-	98		area in a 2 oz copper single	
ICE5GR1680AG		-	95		sided PCB	
ICE5AR0680AG		-	94			

4.2 **Operating range**

Note: Within the operating range, the IC operates as described in the functional description.

Table 6Operating range

Parameter	Symbol	Limit Values		Unit	Remark
		Min.	Max.		
VCC Supply Voltage	V _{vcc}	V _{VCC_OFF}	V _{VCC_OVP}		
Junction Temperature of controller	T _{jCon_op}	-40	T _{jCon_OTP}	°C	Max value limited due to OTP of controller chip
Junction Temperature of CoolMOS	T _{jCoolMOS_op}	-40	150	°C	

4.3 Operating conditions

Note: The electrical characteristics involve the spread of values within the specified supply voltage and junction temperature range T_J from – 40 °C to 125 °C. Typical values represent the median values, which are related to 25 °C. If not otherwise stated, a supply voltage of V_{cc} = 18 V is assumed.

Table 7Operating conditions

Parameter	Symbol	Limit Values			Unit	Note / Test Condition
		Min.	Тур.	Max.		
VCC Charge Current	I _{VCC_Charge1}	-0.35	-0.20	-0.09	mA	$V_{\text{VCC}}\text{=}0$ V, $R_{\text{StartUp}}\text{=}50$ M Ω and $V_{\text{DRAIN}}\text{=}90$ V
	I _{VCC_Charge2}	-	-3.2	-	mA	$V_{\text{VCC}}{=}3$ V, $R_{\text{StartUp}}{=}50$ M Ω and $V_{\text{DRAIN}}{=}90$ V
	I _{VCC_Charge3}	-5	-3	-1	mA	$V_{\text{VCC}}\text{=}15$ V, $R_{\text{StartUp}}\text{=}50$ M Ω and $V_{\text{DRAIN}}\text{=}90$ V
Current Consumption, Startup Current	I _{VCC_Startup}	-	0.25	-	mA	V _{vcc} =15 V



Electrical characteristics

Current Consumption, Normal	I _{VCC_Normal}	-	0.9	-	mA	I _{FB} =0 A (No gate switching)
Current Consumption, Auto Restart	I _{VCC_AR}	-	410	-	μA	
Current Consumption, Burst Mode – Isolated	I _{VCC_Burst} Mode_ISO	-	0.54	-	mA	
Current Consumption, Burst Mode – Non-Isolated	I _{VCC_Burst} Mode_NISO	-	0.61	-	mA	
VCC Turn-on Threshold Voltage	$V_{\rm VCC_ON}$	15.3	16.0	16.5	V	
VCC Turn-off Threshold Voltage	$V_{\rm VCC_OFF}$	9.4	10.0	10.4	V	
VCC Short Circuit Protection	V _{VCC_SCP}	-	1.1	1.9	V	
VCC Turn-off blanking	tvcc_off_b	-	50	-	μs	

4.4 Internal voltage reference

Table 8Internal voltage reference

Parameter	Symbol	Limit Values			Unit	Note / Test Condition
		Min.	Тур.	Max.		
Internal Reference Voltage	V_{REF}	3.20	3.30	3.39	V	Measured at pin FB I _{FB} =0 A

4.5 **PWM section**

Table 9PWM section

Parameter	Symbol	I	Limit Value	es	Unit	Note / Test
		Min.	Тур.	Max.		Condition
Fixed Oscillator Frequency –	f _{osc1}	117	125	133	kНz	
125 kHz	f_{OSC2}	119	125	131	k H z	T _j = 25 °C
Fixed Oscillator Frequency –	f _{osc3}	92	100	108	k H z	
100 kHz	f _{osc4}	94	100	106	k H z	T _j = 25 °C
Fixed Oscillator Frequency – 125 kHz (Active Burst Mode)	f _{osc2_ABM}	91	103	114	k H z	T _j = 25 °C
Fixed Oscillator Frequency – 100 kHz (Active Burst Mode)	f _{osc4_ABM}	71	83	94	k H z	T _j = 25 °C
Fixed Oscillator Frequency – 125 kHz (Minimum Fsw)	f _{osc2_MIN}	46	53	61	k H z	T _j = 25 °C
Fixed Oscillator Frequency – 100 kHz (Minimum Fsw)	f _{osc4_MIN}	36	43	51	k H z	T _j = 25 °C
Frequency Jittering Range	F _{JITTER}	-	+/- 4	-	%	T _j = 25 °C
Frequency Jittering period	T _{JITTER}	-	4	-	m s	T _j = 25 °C
Maximum Duty Cycle	D _{MAX}	70	75	80	%	
Feedback Pull-Up Resistor	R _{FB}	11	15	20	kΩ	
PWM-OP Gain	G_{PWM}	1.91	2.03	2.16		
Offset for Voltage Ramp	V_{PWM}	0.42	0.50	0.58	V	
Slope Compensation rate – 125 kHz	M _{COMP}	52.5	61.0	68.0	mV/μs	V _{cs} =0 V

Fixed Frequency 700 V/800 V CoolSET™ - in DSO-12 Package



Electrical characteristics

Slope Compensation rate -	M _{COMP}	41	50	58	mV/μs	V _{cs} =0 V
100 kHz						

4.6 Error amplifier

Table 10 Error amplifier

Parameter	Symbol		Unit	Note / Test		
		Min.	Тур.	Max.		Condition
Transconductance	$G_{\rm ERR_M}$	2.14	2.80	3.44	m A / V	
Transconductance – Burst Mode	$G_{\rm ERR_BM}$	6.9	9.2	11.6	m A / V	
Error Amplifier Source Current	I _{ERR_SOURCE}	85	150	223	μA	
Error Amplifier Sink Current	I _{ERR_SINK}	85	150	223	μA	
Error Amplifier Reference Voltage	$V_{\text{ERR}_{\text{REF}}}$	1.76	1.80	1.84	V	
Error Amplifier Output Dynamic Range of Transconductance	$V_{\rm ERR_DYN}$	0.05	-	3.15	V	
Error Amplifier Mode Bias Current	I _{ERR_P_BIAS}	9.5	14.0	18.5	μA	
Error Amplifier Mode Threshold	V _{ERR_P_BIAS}	0.16	0.20	0.24	V	

4.7 Current sense

Table 11Current sense

Parameter	Symbol	L	imit Valu	es	Unit	Note / Test Condition
		Min.	Тур.	Max.		
Peak current limitation in normal operation	V _{cs_n}	0.72	0.80	0.88	V	$dv_{sense}/dt = 0.41V/\mu s$
Peak current limitation in normal operation, 15% of T _{on}	V _{CS_N15}	0.74	0.79	0.84	V	
Leading Edge Blanking time	$t_{\text{CS_LEB}}$	70	220	365	ns	
Peak Current Limitation in Active Burst Mode - High Power	$V_{\rm CS_BHP}$	0.23	0.27	0.31	V	
Peak Current Limitation in Active Burst Mode - Low Power	$V_{\rm CS_BLP}$	0.18	0.22	0.26	V	
Abnormal CS voltage threshold	V _{cs_stg}	0.06	0.10	0.15	V	
Abnormal CS voltage Consecutive Trigger	P _{CS_STG}	-	3	-	cycle	
Abnormal CS voltage Sample period	t _{cs_stg_sam}	t _{PERIOD} * 0.36	t _{PERIOD} * 0.4	t _{PERIOD} * 0.44	μs	

4.8 Soft start

Table 12 Soft start

Parameter	Symbol	Limit Values			Unit	Note / Test Condition
		Min.	Тур.	Max.		

Fixed Frequency 700 V/800 V CoolSET[™] - in DSO-12 Package



Electrical characteristics

Soft-Start time	$t_{ m ss}$	7.3	12.0	-	ms	
Soft-start time step	$t_{ss_s^1}$	-	3	-	ms	
CS peak voltage at first step of soft start	V _{SS1} ²	-	0.30	-	V	CS peak voltage
Step increment of CS peak voltage in soft start	$V_{SS_s^1}$	-	0.15	-	V	CS peak voltage

4.9 Active Burst Mode

Table 13Active Burst Mode

Parameter	Symbol	L	imit Valu	es	Unit	Note / Test Condition
		Min.	Тур.	Max.		
Charging current to select burst mode	I _{sel}	2.5	3.0	3.5	μA	
Burst mode selection reference voltage Threshold	V _{FB_P_BIAS1}	1.65	1.73	1.80	V	
Burst mode selection reference voltage Threshold	V _{FB_P_BIAS2}	2.76	2.89	3.01	V	
Feedback voltage for entering ABM for high power	$V_{\rm FB_EBHP}$	0.98	1.03	1.08	V	
Feedback voltage for entering ABM for low power	$V_{\rm FB_EBLP}$	0.88	0.93	0.98	V	
Blanking time for entering Active Burst Mode	$t_{ ext{fb_beb}}$	-	36	-	ms	
Feedback voltage for leaving Active Burst Mode	$V_{\rm FB_LB}$	2.63	2.73	2.83	V	
Feedback voltage for burst-on – Isolated Case	$V_{\rm FB_Bon_ISO}$	2.26	2.35	2.45	V	
Feedback voltage for burst-off – Isolated Case	$V_{\rm FB_BOff_ISO}$	1.88	2.00	2.05	V	
Feedback voltage for burst-on – Non-Isolated Case	$V_{\rm FB_Bon_NISO}$	1.88	1.95	2.05	V	
Feedback voltage for burst-off – Non-Isolated Case	$V_{\rm FB_BOff_NISO}$	1.50	1.55	1.64	V	

4.10 Line over voltage protection

Table 14 Line OVP

Parameter	Symbol	Limit Values			Unit	Note / Test Condition
		Min.	Тур.	Max.		

 $^{^{\}rm 1}$ The parameter is not subjected to production test - verified by design/characterization

² The parameter is not subjected to production test - verified by design/characterization



Electrical characteristics

Line Over Voltage threshold	$V_{\rm VIN_LOVP}$	2.75	2.85	2.95	V	
Line Over Voltage Blanking	$t_{\rm VIN_LOVP_B}$	-	250	-	μs	

4.11 V_{cc} over voltage protection

Table 15Vcc over voltage protection

Parameter	Symbol	L	imit Valu	es	Unit	Note / Test Condition
		Min.	Тур.	Max.		
VCC Over Voltage threshold	V _{VCC_OVP}	24.0	25.5	27.0	V	
VCC Over Voltage blanking	t _{vcc_ovp_b}	-	55	I	μs	

4.12 Overload protection

Table 16Overload protection

Parameter	Symbol	Limit Values			Unit	Note / Test Condition
		Min.	Тур.	Max.		
Over Load Detection threshold for OLP protection at FB pin	$V_{\rm FB_OLP}$	2.63	2.73	2.83	V	
Over Load Protection Blanking Time	t _{fb_olp_b}	30	54	-	ms	

4.13 Thermal protection

Table 17Thermal protection

Parameter	Symbol	Limit Values			Unit	Note / Test Condition
		Min.	Тур.	Max.		
Over temperature protection	$T_{\rm jcon_OTP}^{1}$	129	140	150	°C	Junction temperature of
Over temperature Hysteresis	T _{jhys_otp}	-	40	-	°C	the controller chip (not the CoolMOS™ chip)
Over temperature Blanking Time	T _{jcon_OTP_B}	-	50	-	μs	CoolmOS ^m chip)

4.14 CoolMOS[™] section

Table 18ICE5xRxxxAG

Parameter	Symbol	L	Limit Values			Note / Test
		Min.	Тур.	Max.		Condition
Drain Source Breakdown Voltage	$V_{(BR)DSS}$				V	<i>T</i> _j = 25°C
ICE5xRxx70AG		700	-	-		
ICE5xRxx80AG		800	-	-		

¹The parameter is not subjected to production test - verified by design/characterization



Electrical characteristics

Drain Source On-Resistance (inclusive of low	R _{DSon}				Ω	
side MOSFET)						
ICE5AR4770AG		-	4.73	5.18		<i>T</i> j = 25°C
		-	8.73 ¹	-		<i>T</i> j=125°C at <i>I</i> _D =0.4A
ICE5GR4780AG		-	4.13	4.85		<i>T</i> j = 25°C
		-	8.69 ¹	-		<i>T</i> j=125°C at / _D =0.4A
ICE5GR2280AG		-	2.13	2.35		<i>T</i> j = 25°C
		-	4.31 ¹	-		<i>T</i> j=125°C at <i>I</i> _D =1A
ICE5GR1680AG		-	1.53	1.75		<i>T</i> j = 25°C
		-	3.01 ¹	-		<i>T</i> j=125°C at <i>I</i> _D =1.4A
ICE5AR0680AG		-	0.71	0.80		<i>T</i> j = 25°C
		-	1.27 ¹	-		<i>T</i> j=125°C at <i>I</i> _D =2A
Effective output capacitance, energy related ¹	$C_{o(er)}$				рF	
ICE5AR4770AG		-	3.4	-		V _{GS} =0V, V _{DS} =0~480V
ICE5GR4780AG		-	3	-		V _{GS} =0V, V _{DS} =0~500V
ICE5GR2280AG		-	7	-		V _{GS} =0V, V _{DS} =0~500V
ICE5GR1680AG		-	8	-		<i>V</i> _{GS} =0V, <i>V</i> _{DS} =0~500V
ICE5AR0680AG		-	24	-		V _{GS} =0V, V _{DS} =0~500V
Rise Time	$t_{\rm rise}^2$	-	30	-	ns	
Fall Time	$t_{\rm fall}^2$	-	30	-	ns	

¹The parameter is not subjected to production test - verified by design/characterization ²Measured in a typical flyback converter application





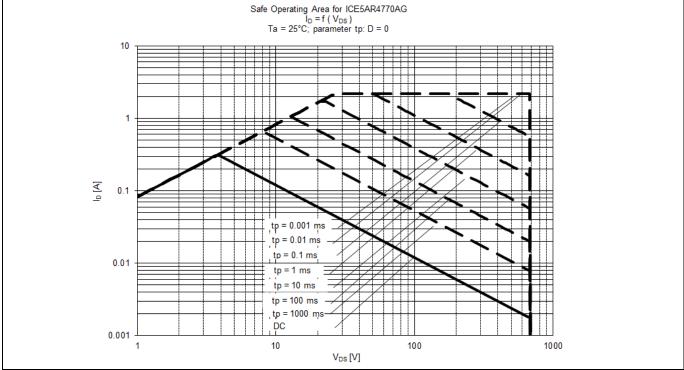
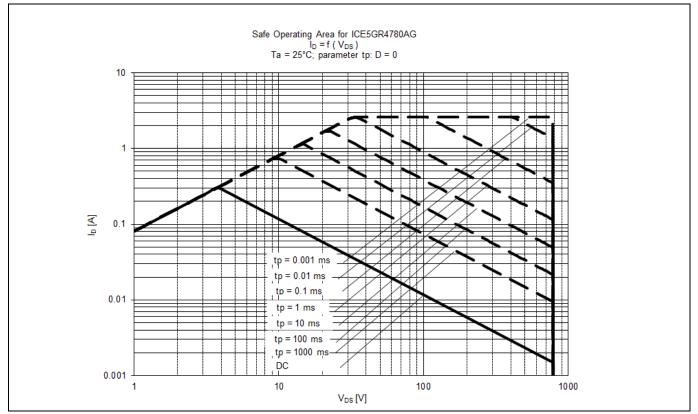


Figure 17 Safe Operating Area (SOA) curve for ICE5AR4770AG







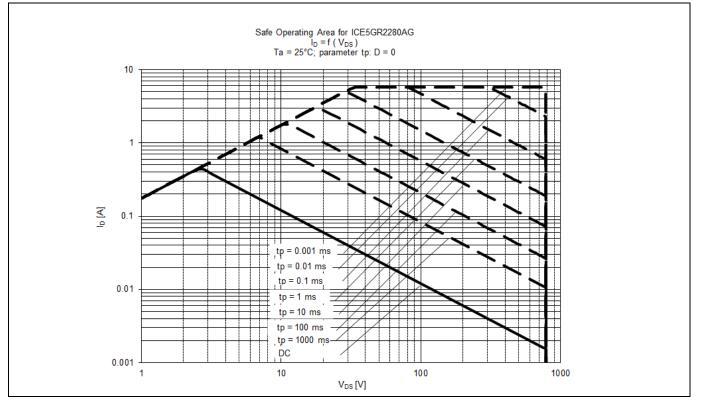


Figure 19 Safe Operating Area (SOA) curve for ICE5GR2280AG

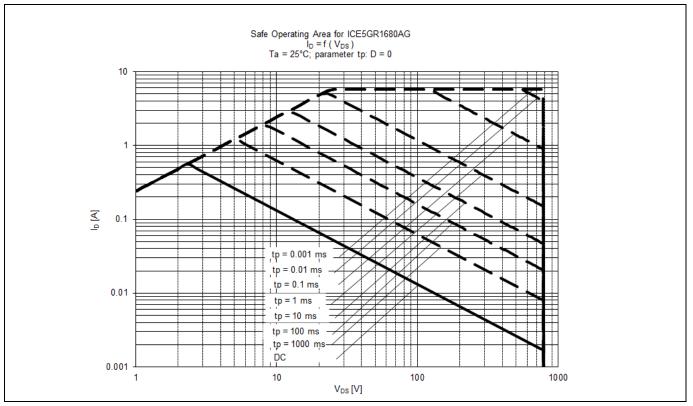


Figure 20 Safe Operating Area (SOA) curve for ICE5GR1680AG



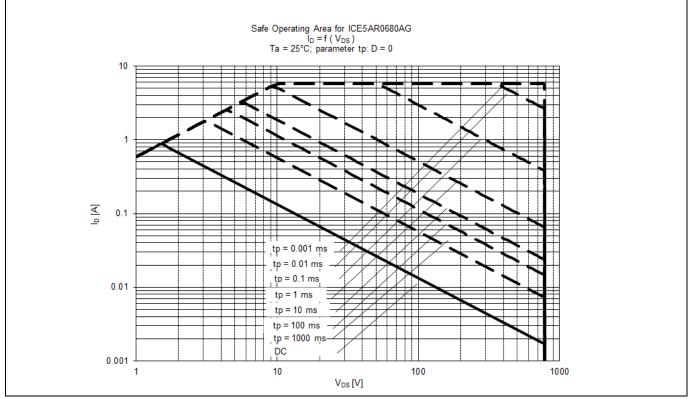


Figure 21 Safe Operating Area (SOA) curve for ICE5AR0680AG

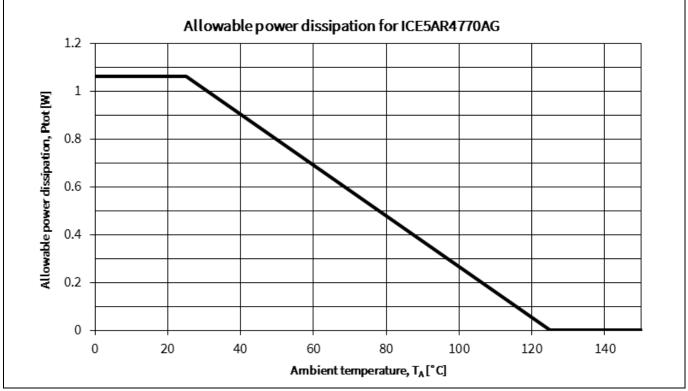


Figure 22Power dissipation of ICE5AR4770AG; $P_{tot}=f(T_a)$, (Maximum ratings as given in section 4.1must not be exceeded)



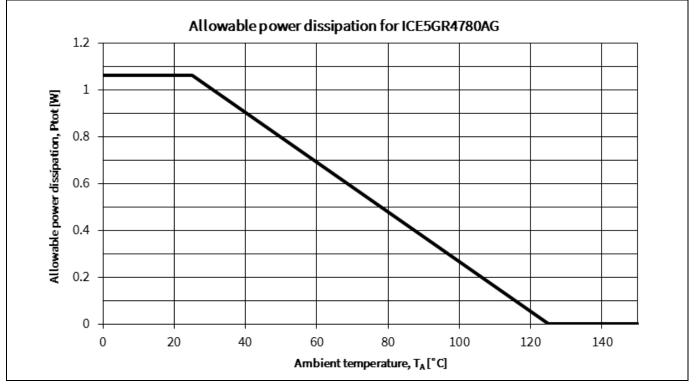
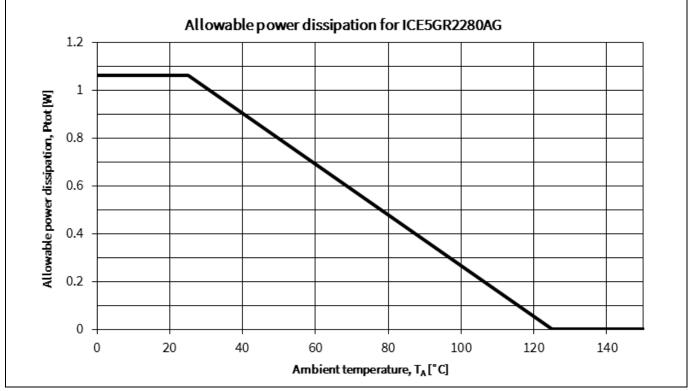
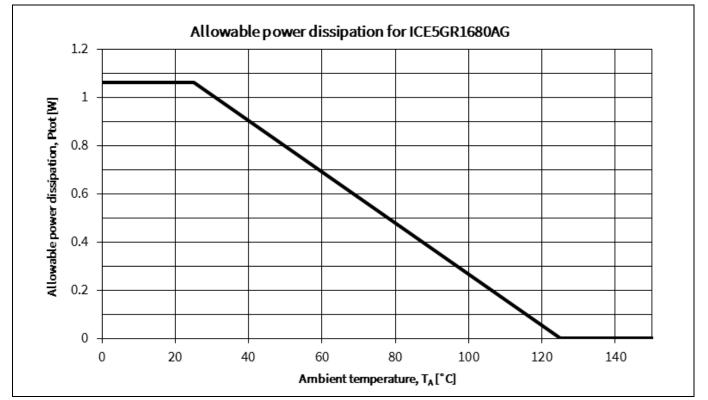


Figure 23 Power dissipation of ICE5GR4780AG; $P_{tot}=f(T_a)$, (Maximum ratings as given in section 4.1 must not be exceeded)

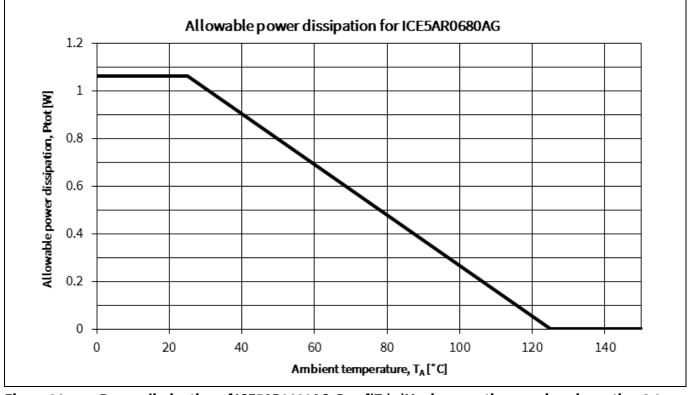






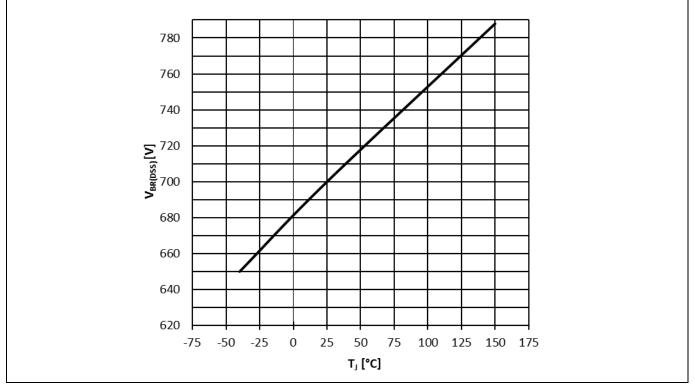




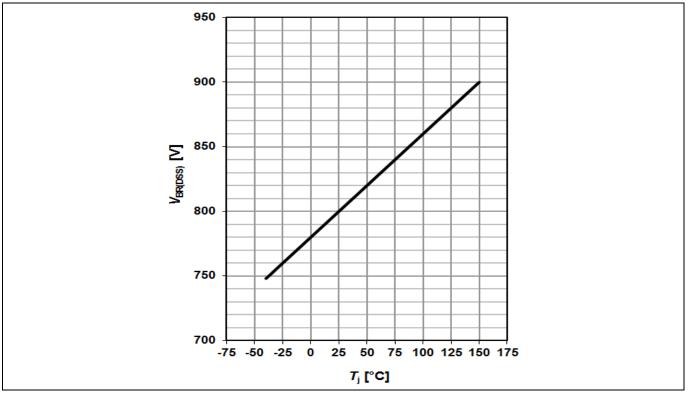
















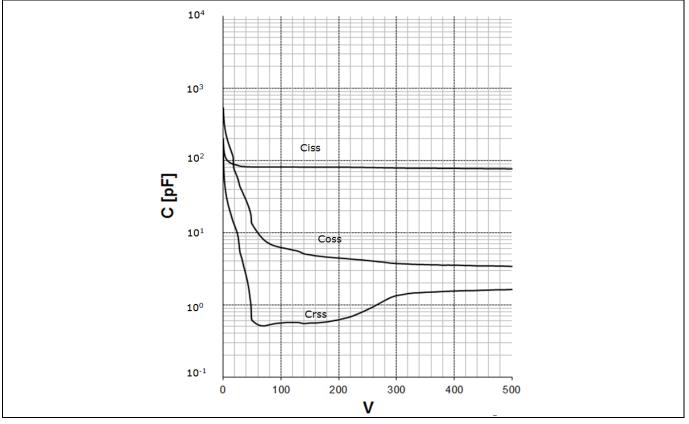
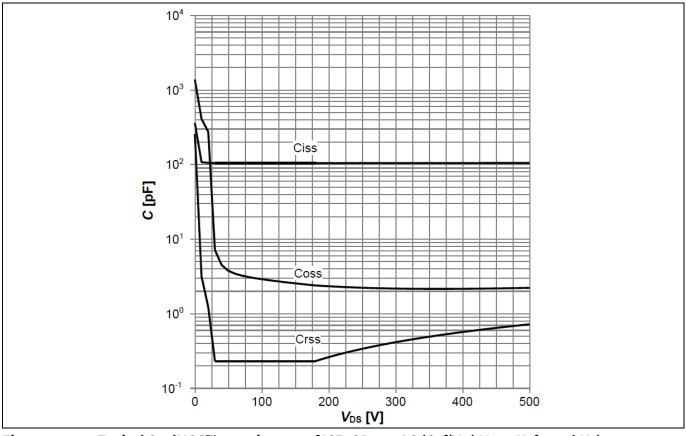


Figure 29 Typical CoolMOS[™] capacitances of ICE5AR4770AG (C=f(V_{DS});V_{GS}=0 V; f=1 MHz)







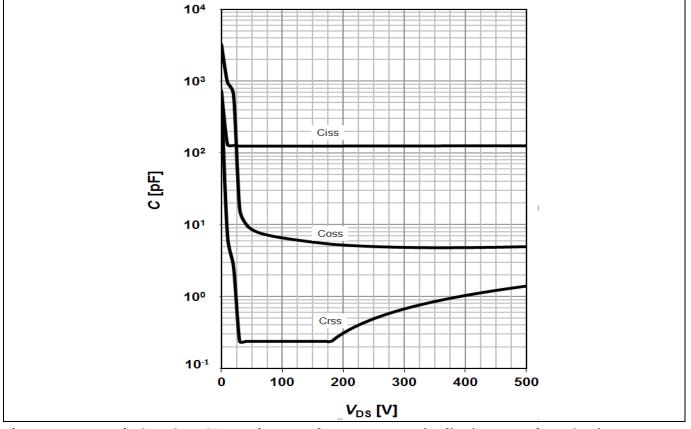
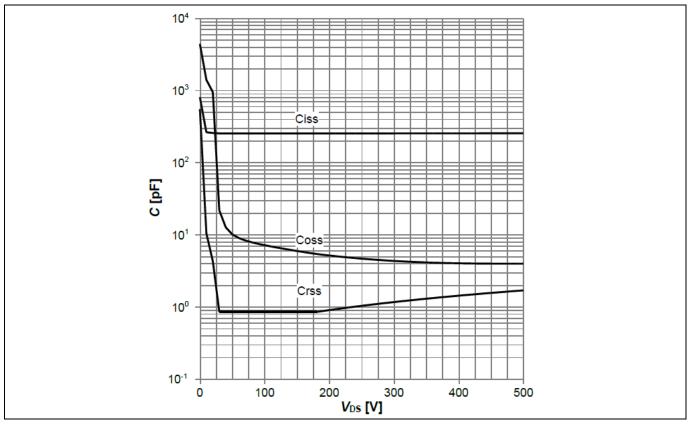


Figure 31 Typical CoolMOS[™] capacitances of ICE5GR2280AG (C=f(V_{DS});V_{GS}=0 V; f=250 kHz)







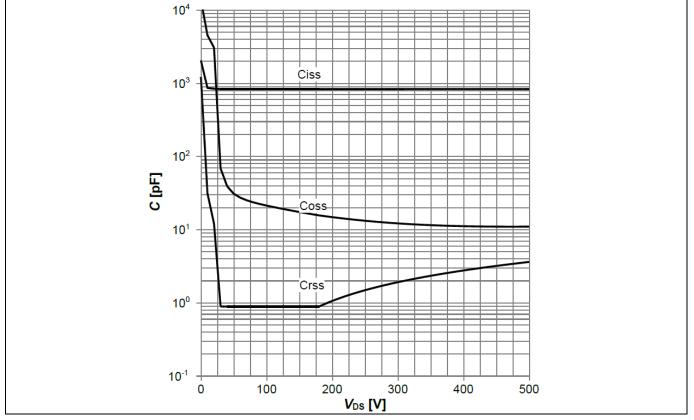


Figure 33 Typical CoolMOS[™] capacitances of ICE5AR0680AG (C=f(V_{DS});V_{GS}=0 V; f=250 kHz)



Output power curve

6 Output power curve

The calculated output power curves versus ambient temperature are shown below. The curves are derived based on a typical DCM/CCM flyback in an open frame design setting the maximum T_J of the integrated CoolMOS[™] at 125 °C, using minimum drain pin copper area in a 2 oz copper single sided PCB and steady state operation only (no design margins for abnormal operation modes are included).

The output power figure is for selection purpose only. The actual power can vary depending on a particular design. In a power supply system, appropriate thermal design margins must be considered to make sure that the operation of the device is within the maximum ratings given in section 4.1.

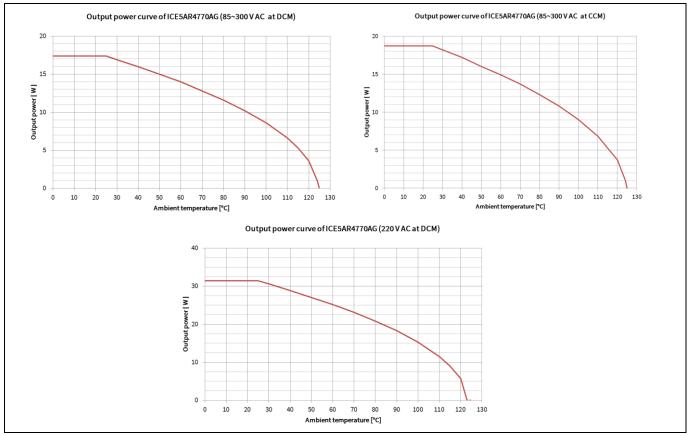
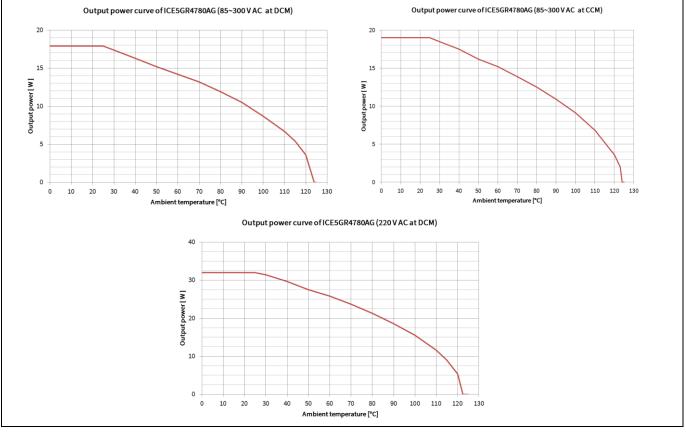


Figure 34 Output power curve of ICE5AR4770AG



Output power curve





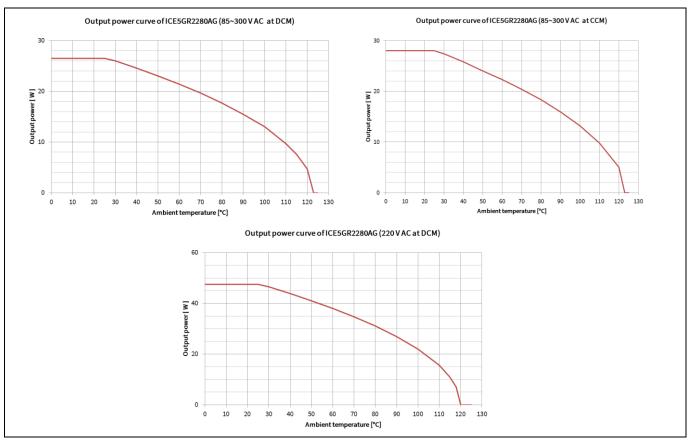
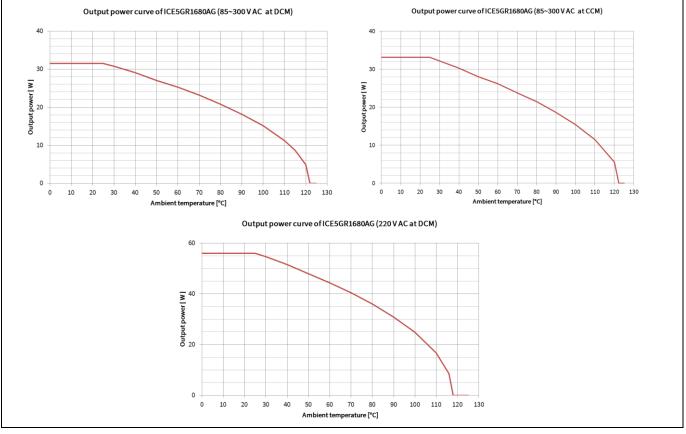


Figure 36 Output power curve of ICE5GR2280AG



Output power curve





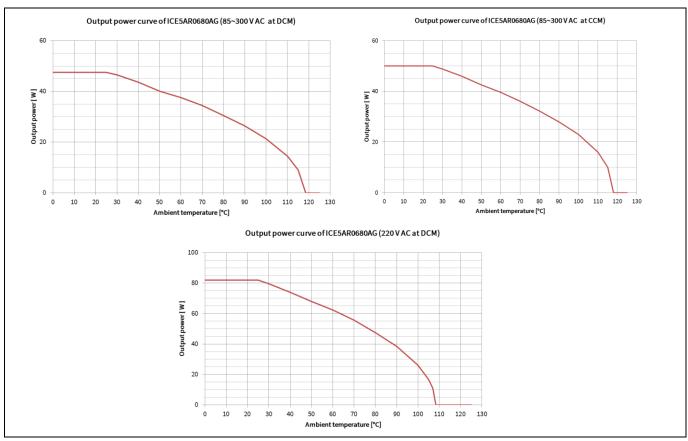



Figure 38 Output power curve of ICE5AR0680AG



Outline dimension



Outline dimension

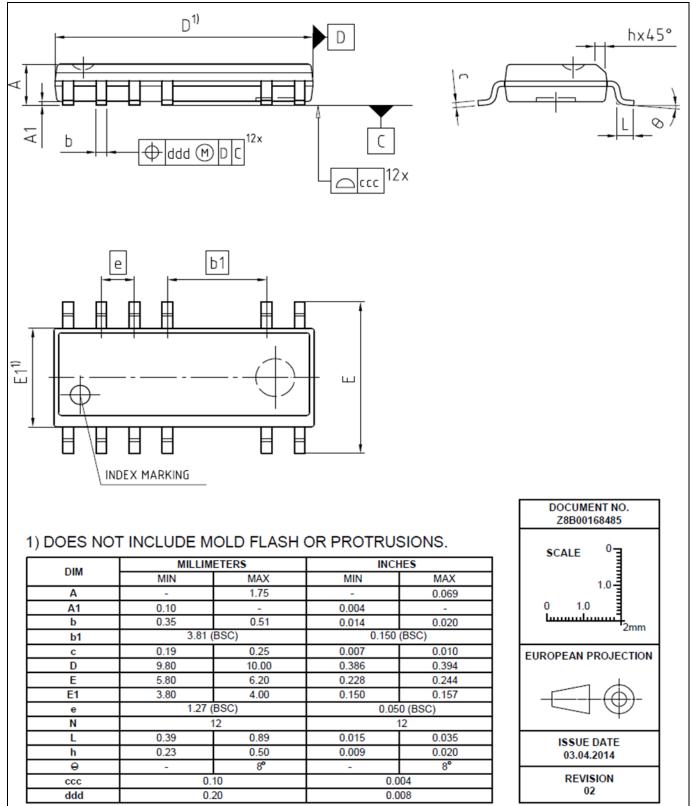
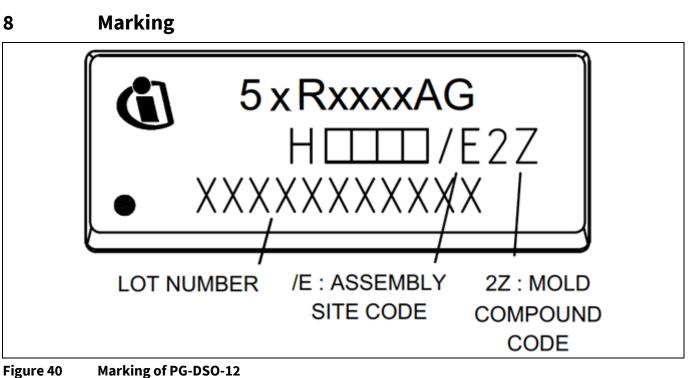


Figure 39 PG-DSO-12



Marking







Revision history

Revision history

Document version	Date of release	Description of changes
V 2.0	21 Nov 2017	First release
V 2.1	27 Feb 2018	Page 1 Product validation text content revised
V 2.2	2 Mar 2018	Page 21, Table 5 The symbol of parameter VIN voltage changed from V _{cs} to V _{IN}
V 2.3	3 Feb 2020	Update of CS pin function and description (refer to errata sheet ES_2001_PL83_2002_024629)

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2020-02-03

Published by Infineon Technologies AG 81726 Munich, Germany

© 2020 Infineon Technologies AG. All Rights Reserved.

Do you have a question about this document?

Email: erratum@infineon.com

Document reference ICE5xRxxxxAG

IMPORTANT NOTICE

The information contained in this application note is given as a hint for the implementation of the product only and shall in no event be regarded as a description or warranty of a certain functionality, condition or quality of the product. Before implementation of the product, the recipient of this application note must verify any function and other technical information given herein in the real application. Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind (including without limitation warranties of non-infringement of intellectual property rights of any third party) with respect to any and all information given in this application note.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application. For further information on the product, technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies office (www.infineon.com).

WARNINGS

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Power Management IC Development Tools category:

Click to view products by Infineon manufacturer:

Other Similar products are found below :

EVB-EP5348UI MIC23451-AAAYFL EV MIC5281YMME EV 124352-HMC860LP3E DA9063-EVAL ADP122-3.3-EVALZ ADP130-0.8-EVALZ ADP130-1.8-EVALZ ADP1740-1.5-EVALZ ADP1870-0.3-EVALZ ADP1874-0.3-EVALZ ADP199CB-EVALZ ADP2102-1.25-EVALZ ADP2102-1.875EVALZ ADP2102-1.8-EVALZ ADP2102-2-EVALZ ADP2102-3-EVALZ ADP2102-4-EVALZ AS3606-DB BQ25010EVM BQ3055EVM ISLUSBI2CKIT1Z LM2734YEVAL LP38512TS-1.8EV EVAL-ADM1186-1MBZ EVAL-ADM1186-2MBZ ADP122UJZ-REDYKIT ADP166Z-REDYKIT ADP170-1.8-EVALZ ADP171-EVALZ ADP1853-EVALZ ADP1873-0.3-EVALZ ADP198CP-EVALZ ADP2102-1.0-EVALZ ADP2102-1-EVALZ ADP2107-1.8-EVALZ ADP1853-EVALZ ADP1873-0.3-EVALZ ADP198CP-EVALZ ADP2102-1.0-EVALZ ADP2102-1-EVALZ ADP2107-1.8-EVALZ ADP5020CP-EVALZ CC-ACC-DBMX-51 ATPL230A-EK MIC23250-S4YMT EV MIC26603YJL EV MIC33050-SYHL EV TPS60100EVM-131 TPS65010EVM-230 TPS71933-28EVM-213 TPS72728YFFEVM-407 TPS79318YEQEVM UCC28810EVM-002 XILINXPWR-083 LMR22007YMINI-EVM