

Intel[®] NUC Pro Assembly Element CMA1BB Product Specification

Revision 1.1

Regulatory Model: CM1BB

July 2020

Intel[®] NUC Pro Assembly Element CMA1BB may contain design defects or errors known as errata that may cause the product to deviate from published specifications. Current characterized errata, if any, are documented in this product specification.

Revision History

Revision	Revision History	Date
1.0	First release	October 2019
1.01	Part number correction	December 2019
1.1	Added back panel power connector section and vPro® section.	July 2020

Disclaimer

This product specification applies only to the standard Intel® NUC Pro Assembly Element CMA1BB.

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL® PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN INTEL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, INTEL ASSUMES NO LIABILITY WHATSOEVER, AND INTEL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF INTEL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT. UNLESS OTHERWISE AGREED IN WRITING BY INTEL, THE INTEL PRODUCTS ARE NOT DESIGNED NOR INTENDED FOR ANY APPLICATION IN WHICH THE FAILURE OF THE INTEL PRODUCT COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR.

All Intel® NUC Pro Assembly Elements are evaluated as Information Technology Equipment (I.T.E.) for use in personal computers (PC) for installation in homes, offices, schools, computer rooms, and similar locations. The suitability of this product for other PC or embedded non-PC applications or other environments, such as medical, industrial, alarm systems, test equipment, etc. may not be supported without further evaluation by Intel.

Intel Corporation may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Intel may make changes to specifications and product descriptions at any time, without notice.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Intel reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Intel processor numbers are not a measure of performance. Processor numbers differentiate features within each processor family, not across different processor families: Go to:

[Learn About Intel® Processor Numbers](#)

Intel® NUC Pro Assembly Elements may contain design defects or errors known as errata, which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Contact your local Intel sales office or your distributor to obtain the latest specifications before placing your product order.

Intel, the Intel logo and Intel Core are trademarks of Intel Corporation in the U.S. and/or other countries.

* Other names and brands may be claimed as the property of others.

Copyright © 2020 Intel Corporation. All rights reserved.

Preface

This Product Specification specifies the layout, components, connectors, power and environmental features for the Intel® NUC Pro Assembly Element CMA1BB.

Intended Audience

This document is intended to provide technical information about Intel® NUC Pro Assembly Element CMA1BB and its components to the vendors, system integrators, and other engineers and technicians who need this level of information. It is specifically *not* intended for general audiences.

What This Document Contains

Chapter	Description
1	A description of the NUC Pro Assembly Element CMA1BB
2	A technical description of the NUC Pro Assembly Element CMA1BB

Typographical Conventions

This section contains information about the conventions used in this specification. Not all of these symbols and abbreviations appear in all specifications of this type.

Notes, Cautions, and Warnings



NOTE

Notes call attention to important information.



CAUTION

Cautions are included to help you avoid damaging hardware or losing data.

Other Common Notation

#	Used after a signal name to identify an active-low signal (such as USBP0#)
GB	Gigabyte (1,073,741,824 bytes)
GB/s	Gigabytes per second
Gb/s	Gigabits per second
KB	Kilobyte (1024 bytes)
Kb	Kilobit (1024 bits)
kb/s	1000 bits per second
MB	Megabyte (1,048,576 bytes)
MB/s	Megabytes per second
Mb	Megabit (1,048,576 bits)
Mb/s	Megabits per second
TDP	Thermal Design Power
Xxh	An address or data value ending with a lowercase h indicates a hexadecimal value.
x.x V	Volts. Voltages are DC unless otherwise specified.
*	This symbol is used to indicate third-party brands and names that are the property of their respective owners.

Intel® NUC Pro Assembly Element Information

NUC Pro Assembly Element CMA1BB Identification Information

SA Revision	Product Code	Notes
K73388-202	BKCMA1BB	1

Notes:

1. The SA number is found on the bottom of the metal bracket.

Specification Changes or Clarifications

The table below indicates the Specification Changes or Specification Clarifications that apply to the Intel® NUC Pro Assembly Element BKCMA1BB.

Specification Changes or Clarifications

Date	Type of Change	Description of Changes or Clarifications

Errata

Current characterized errata, if any, will be documented in Section 3 of this Product Specification.

Contents

Revision History	ii
Disclaimer	ii
Preface	iii
Intended Audience.....	iii
What This Document Contains	iii
Typographical Conventions	iii
Intel® NUC Pro Assembly Element Information	iv
Specification Changes or Clarifications.....	iv
Errata.....	iv
Contents	v
1 Product Description	7
1.1 Overview	7
1.2 Feature Summary.....	7
2 Technical Reference	9
2.1 Block Diagram.....	9
2.2 Features.....	10
2.3 USB 2.0 Headers.....	11
2.4 Embedded DisplayPort Connector	12
2.5 Fan Headers.....	13
2.6 Power Input Connector.....	13
2.7 Front Panel Header.....	13
2.8 Power Connector.....	13
2.9 Wireless Enable/Disable Switch.....	14
2.10 Power	14
2.11 Intel® vPro® Technology	15
2.12 Mechanical	16
2.13 Thermal	16
2.14 Environmental	17
3 Characterized Errata	18
 Figures	
Figure 1. CMA1BB Block Diagram	9
Figure 2. Metal Bracket Features	10
Figure 3. Board Features	11
Figure 4. Wireless Enable/Disable Switch Location.....	14
Figure 5. CMA1BB Assembly	16

Tables

Table 1. Feature Summary	7
Table 2. Metal Bracket Features	10
Table 3. Board Features	11
Table 4. USB 2.0 Header Pinout.....	11
Table 5. eDP Connector Pinout.....	12
Table 6. Fan Header Pinout	13
Table 7. Power Input Connector Pinout.....	13
Table 8. Front Panel Header Pinout.....	13
Table 9. Wireless Enable/Disable Switch Settings.....	14
Table 10. Environmental Specifications.....	17

1 Product Description

1.1 Overview

The Intel® NUC Pro Assembly Element CMA1BB is an assembly solution for the Intel® NUC Compute Element and consists of a connector for the NUC Compute Element to plug into along with input/output connectors, headers, a thermal solution, a fan and a metal bracket.

The Intel® NUC Pro Assembly Element CMA1BB requires a compatible Intel® NUC Compute Element in order to operate.

For information on compatible devices for use with the Intel® NUC Pro Assembly Element CMA1BB see <http://www.intel.com/NUCElements>.



NOTE

The Intel® NUC Pro Assembly Element CMA1BB has been certified for use as a component in Information Technology Equipment in certain countries. The system integrator is responsible for testing and acquiring any additional country-specific regulatory approvals, including all system-wide certifications.

1.2 Feature Summary

Table 1 summarizes the major features of the Intel® NUC Pro Assembly Element CMA1BB.

Table 1. Feature Summary

Assembly Size	117 millimeters by 147 millimeters by 25 millimeters
Graphics	<ul style="list-style-type: none"> • One HDMI* 2.0a Connector on the assembly back panel • One HDMI 2.0a Connector on the assembly edge • One eDP 1.4 Connector on the board edge • High-Bandwidth Digital Content Protection 2.2 support for content protection • Up to 4K @ 60 Hz Resolutions and refresh rates supported
Audio	Intel® High Definition (Intel® HD) Audio via HDMI
Storage	A single M.2 2280 Connector supporting PCIe x4 NVMe or SATA SSD
USB	<ul style="list-style-type: none"> • Four USB 3.x¹ Ports on the back panel • Two USB 2.0 headers
Front Panel Header	Single 1x10 header
Wired LAN	<ul style="list-style-type: none"> • Intel® Ethernet Connection i219-LM • Support for Intel® vPro™ Technology (When using a vPro™ enabled NUC Compute Element)
Wireless LAN	Intel® NUC Compute Element supplies the solution, antennas will be required
Power Input	12-24 V DC
Compute Module Connector	Lotes APCI0468-P001A01 Edge Mount Connector
Thermal Solution	Heat Pipes, Ducting, Heat Sink Fins and Fan

¹ USB 3.x port speed is determined by the Intel® NUC Pro Compute Element.

To find information about...

Intel® NUC Compute Element
Intel® NUC Pro Assembly Element Support
Intel® NUC Element Warranty Information
Available configurations for Intel® NUC Pro
Assembly Element
Intel Processors
Intel Graphics
Intel Wireless
Intel Technologies

Visit this World Wide Web site:


<https://www.intel.com/NUCElements>
<https://www.intel.com/NUCElementsSupport>
<http://www.intel.com/NUCWarranty>
<https://ark.intel.com>

<https://www.intel.com/processors>
<https://www.intel.com/graphics>
<https://www.intel.com/wireless>
<https://www.intel.com/technology>

2 Technical Reference

2.1 Block Diagram

Figure 1 is a block diagram of the major functional areas of Intel® NUC Pro Assembly Element CMA1BB.

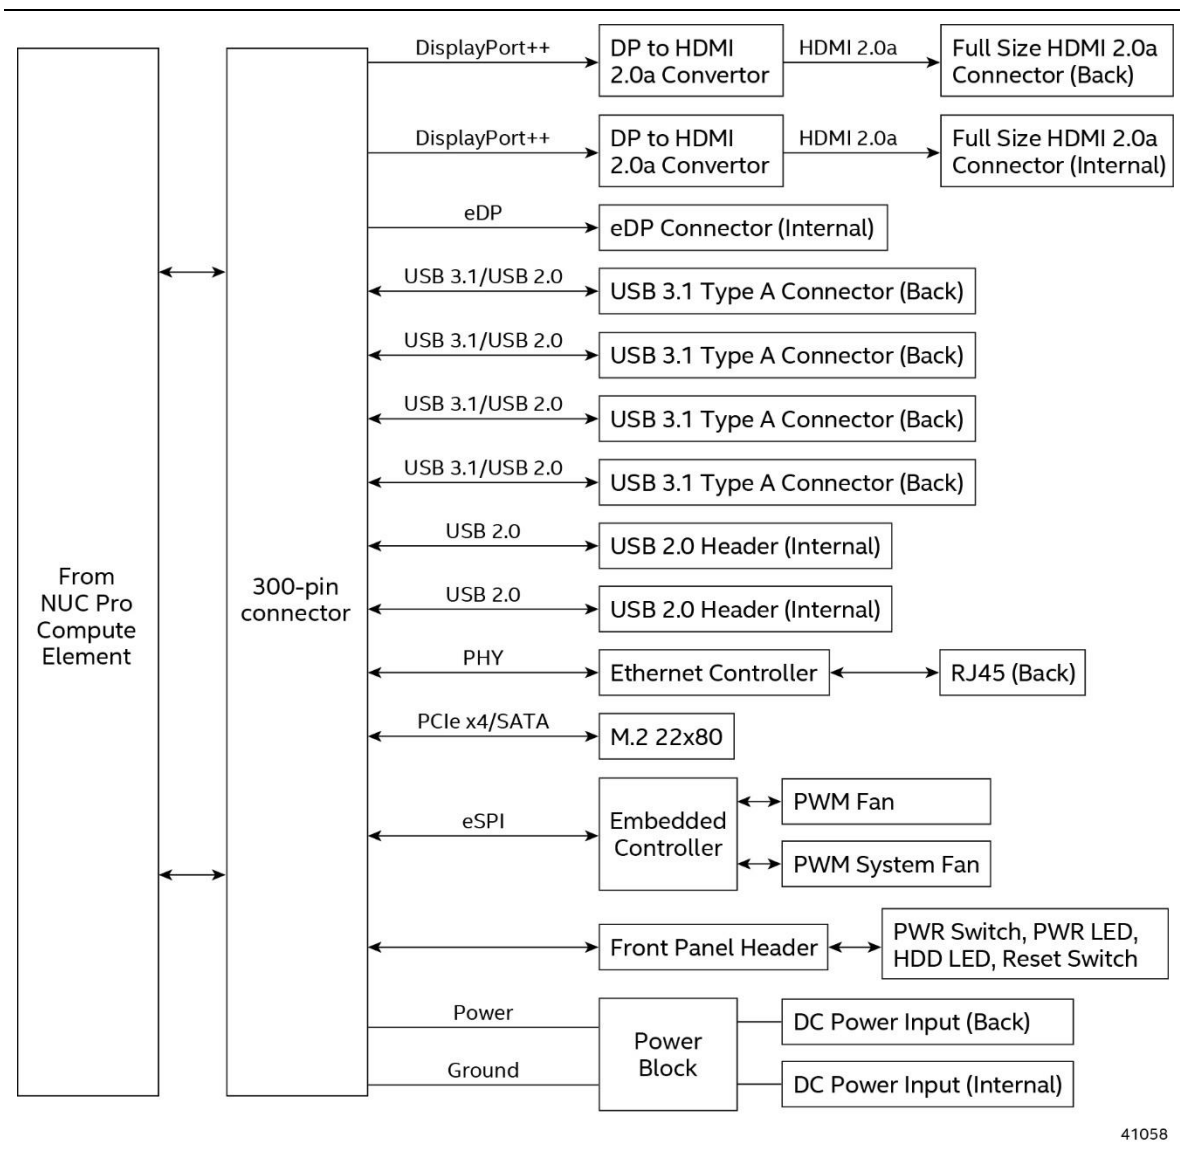


41058

Figure 1. CMA1BB Block Diagram

2.2 Features

The NUC Pro Assembly Element CMA1BB has a 300-pin edge connector. Each side of the assembly, the back panel and the board have input/output connectors and headers. See the below figures for the locations of the connectors, headers and switches.

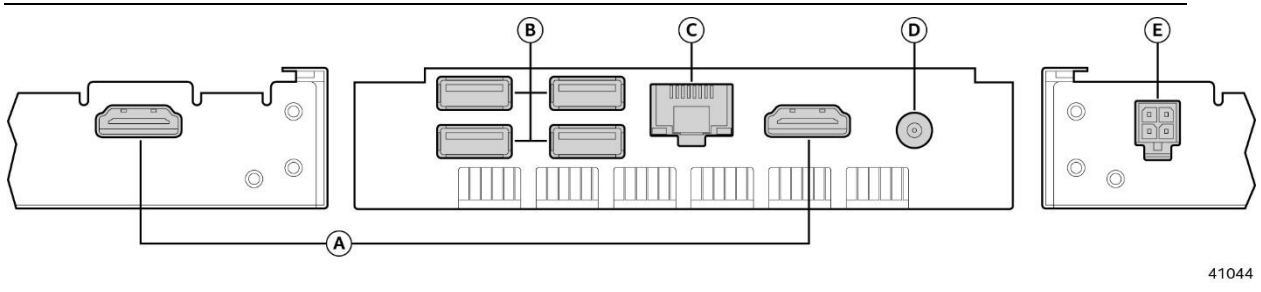


41044

Figure 2. Metal Bracket Features

Table 2. Metal Bracket Features

Item	Description	Item	Description
A	HDMI Ports	D	Power Input Jack
B	USB 3.x ¹ Ports	E	2x2 Power Input Connector
C	Ethernet Connector (RJ-45)		

¹ USB 3.x port speed is determined by the Intel® NUC Pro Compute Element.

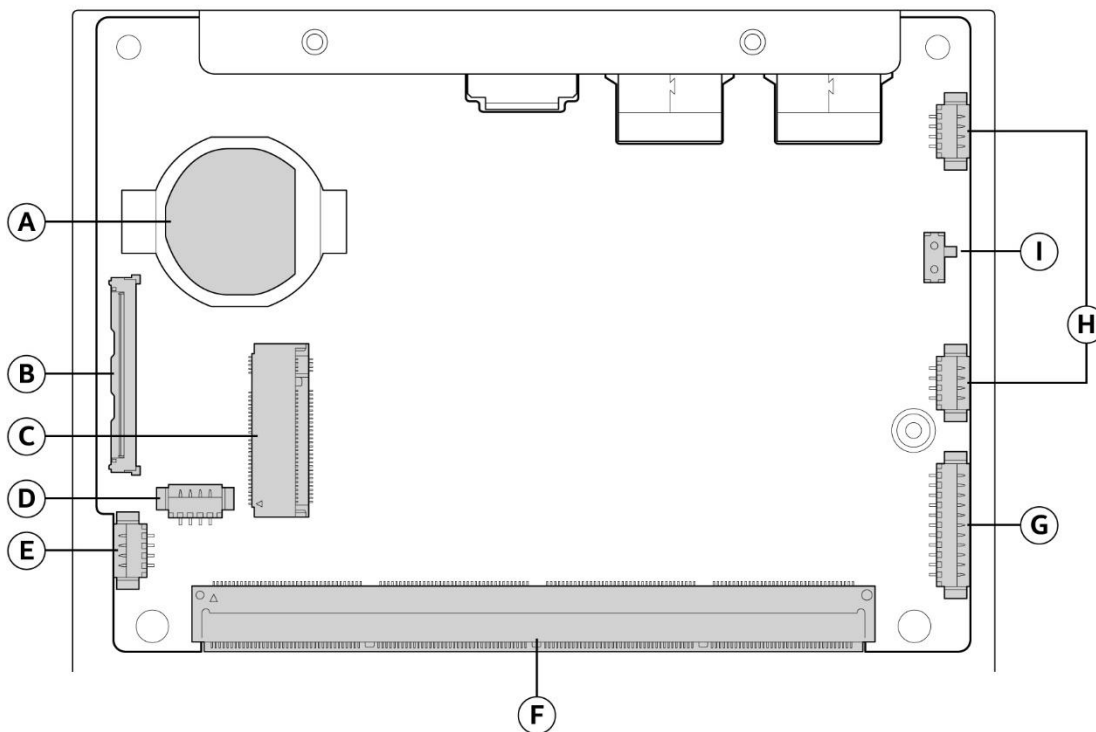

41077

Figure 3. Board Features

Table 3. Board Features

Item	Description	Item	Description
A	Battery	F	300-pin Connector
B	Embedded DisplayPort (eDP) Connector	G	Front Panel Headers
C	M.2 Connector (NVMe/SATA)	H	USB 2.0 Headers (white)
D	System Fan Header (black)	I	Wireless Enable/Disable Switch
E	Thermal Solution Fan Header (black)		

2.3 USB 2.0 Headers

The NUC Pro Assembly Element CMA1BB has two white, 1x4, 1.25mm pitch right angled USB 2.0 headers.

Table 4. USB 2.0 Header Pinout

Pin	Signal Name	Description
1	+5 V DC	Voltage In
2	D-	Data Minus
3	D+	Data Positive
4	GND	Ground

2.4 Embedded DisplayPort Connector

The NUC Pro Assembly Element CMA1BB has a 1x40, 0.5mm pitch, right angled Embedded DisplayPort (eDP) connector.

Table 5. eDP Connector Pinout

Pin	Signal Name	Description
1	NC - RESERVED	Reserved for LCD manufacturer's use
2	H_GND	High Speed Ground
3	Lane3_N	Complement Signal Link Lane 3
4	Lane3_P	True Signal Link Lane 3
5	H_GND	High Speed Ground
6	Lane2_N	Complement Signal Link Lane 2
7	Lane2_P	True Signal Link Lane 2
8	H_GND	High Speed Ground
9	Lane1_N	Complement Signal Link Lane 1
10	Lane1_P	True Signal Link Lane 1
11	H_GND	High Speed Ground
12	Lane0_N	Complement Signal Link Lane 0
13	Lane0_P	True Signal Link Lane 0
14	H_GND	High Speed Ground
15	AUX_CH_P	True Signal Auxiliary Channel
16	AUX_CH_N	Complement Signal Auxiliary Channel
17	H_GND	High Speed Ground
18	LCD_VCC	LCD logic and driver power (Vcc3)
19	LCD_VCC	LCD logic and driver power (Vcc3)
20	LCD_VCC	LCD logic and driver power (Vcc3)
21	LCD_VCC	LCD logic and driver power (Vcc3)
22	NC	LCD Panel Self-Test Enable (Optional)
23	LCD_GND	LCD logic and driver ground
24	LCD_GND	LCD logic and driver ground
25	LCD_GND	LCD logic and driver ground
26	LCD_GND	LCD logic and driver ground
27	HPD	HPD signal pin
28	BL_GND	Backlight ground
29	BL_GND	Backlight ground
30	BL_GND	Backlight ground
31	BL_GND	Backlight ground
32	BL_ENABLE	Backlight On/Off
33	BL_PWM_DIM	PWM dimming control signal
34	NC - RESERVED	Reserved for LCD manufacturer's use
35	NC - RESERVED	Reserved for LCD manufacturer's use
36	BL_PWR	Backlight power (+Vin)
37	BL_PWR	Backlight power (+Vin)
38	BL_PWR	Backlight power (+Vin)
39	BL_PWR	Backlight power (+Vin)
40	NC - RESERVED	RESERVED for LCD manufacturer's use

2.5 Fan Headers

The NUC Pro Assembly Element CMA1BB has two black, 1x4, 1.25mm pitch, right angled fan headers. One fan header is used for the NUC Compute Element thermal solution and the other fan header is used for a system fan.

Table 6. Fan Header Pinout

Pin	Signal Name	Description
1	GND	Ground
2	+VCC	Fan Power
3	FAN_TAC	Fan Speed
4	FAN_PWM	Fan Pulse Width Modulation

2.6 Power Input Connector

The NUC Pro Assembly Element CMA1BB has a 2x2, 1.25mm pitch right angled power input connector. See section 2.10 for information on power requirements.

Table 7. Power Input Connector Pinout

Pin	Signal Name	Description
1	Vin	Voltage In
2	Vin	Voltage In
3	GND	Ground
4	GND	Ground

2.7 Front Panel Header

The NUC Pro Assembly Element CMA1BB has a 1x11, 1.25mm pitch, right angle front panel header.

Table 8. Front Panel Header Pinout

Pin	Signal Name	Description
1	POWER_SWITCH#	[In] Power Switch
2	GND	Ground
3	POWER_LED_MAIN	[Out] Front Panel LED (main color)
4	POWER_LED_ALT	[Out] Front Panel LED (alternate color)
5	RSVD	Reserved
6	+5V_DC	Power, 1A (Vcc)
7	RSVD	Reserved
8	HDD_LED-	[Out] HDD activity LED
9	HDD_LED+	[Out] HDD activity LED with current limiting resistor
10	GND	Ground
11	RESET_SWITCH#	[In] Reset Switch

2.8 Power Connector

The NUC Pro Assembly Element has a power connector on the back panel. The connector is a dual barrel connector, with a 2.5mm inner diameter and a 5.5mm outer diameter. See section 2.10 for information on power requirements.


2.9 Wireless Enable/Disable Switch



CAUTION

Do not change the switch with the power on. Always turn off the power and unplug the power cord from the carrier board before changing a switch setting. Otherwise, the board could be damaged.

The 2-position switch determines whether the wireless module on the NUC Compute Element is enabled or disabled. Figure 4 shows the location of the switch. Table 9 describes the switch settings.

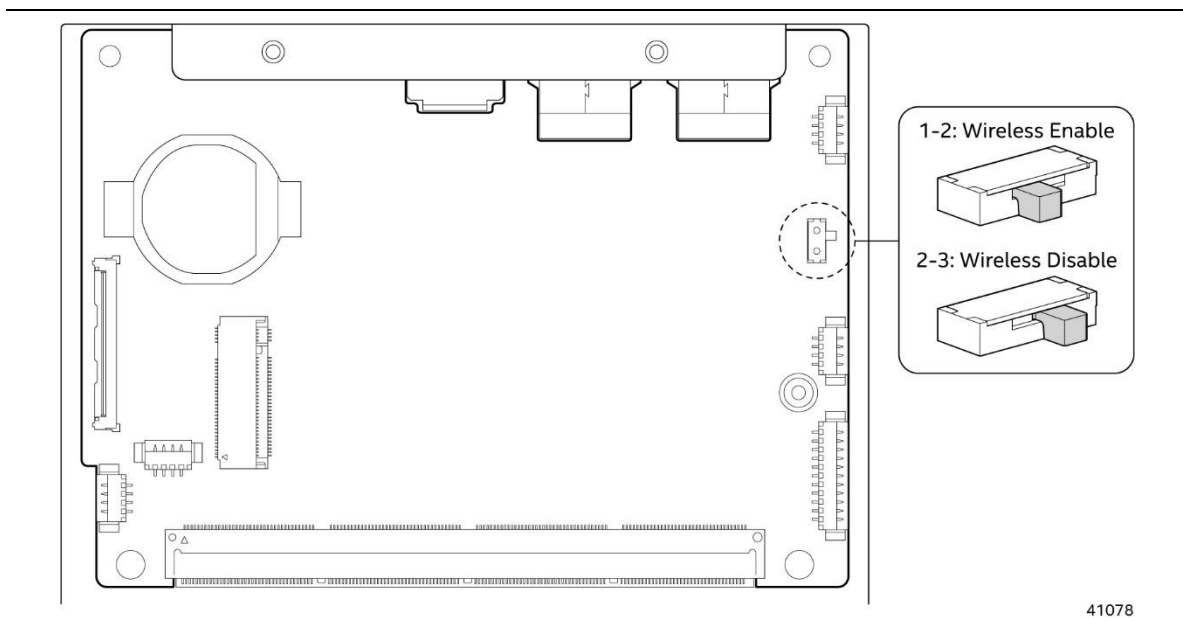

41078

Figure 4. Wireless Enable/Disable Switch Location

Table 9. Wireless Enable/Disable Switch Settings

Function/Mode	Switch Setting	Configuration
Enable	1-2	Wireless and Bluetooth will be enabled on the NUC Pro Compute Element
Disable	2-3	Wireless and Bluetooth will be disabled on the NUC Pro Compute Element

2.10 Power

The NUC Pro Assembly Element requires a 12-24 \pm 8% V DC input via the back-panel power jack or the internal power connector. Both inputs provide delayed AC start as well as transient voltage suppression (TVS) at 26 V.



NOTE

Total power required will need to take into account the NUC Compute Element power requirements, the NUC Pro Assembly Element CMA1BB power requirements, the NUC Pro Assembly Element CMA1BB thermal fan power requirements and any devices or peripherals that are plugged into the NUC Pro Assembly Element CMA1BB.



CAUTION

It is strongly recommended to make sure that the NUC Pro Assembly Element CMA1BB is powered off and AC power is removed before removing the NUC Compute Element from the board connector. Removing the NUC Compute Element from the board connector while powered on may cause damage to the NUC Compute Element, operating system corruption, create a no boot condition or result in data loss. If the Blue LED on the board is illuminated, do not remove the NUC Compute Element from the board connector.

2.11 Intel® vPro® Technology

Intel® vPro™ Technology is a collection of platform capabilities that support enhanced manageability, security, virtualization and power efficiency.

For information about	Refer to
Intel® vPro® Technology	http://support.intel.com/support/vpro/




NOTE

Intel® vPro® Technology is only supported on the Intel® NUC Pro Assembly Element if an Intel NUC Compute Element with Intel® vPro® Technology support is connected.

2.12 Mechanical

The following figure illustrates the mechanical form factor for the Intel® NUC Pro Assembly Element CMA1BB. Dimensions are given in millimeters (mm).

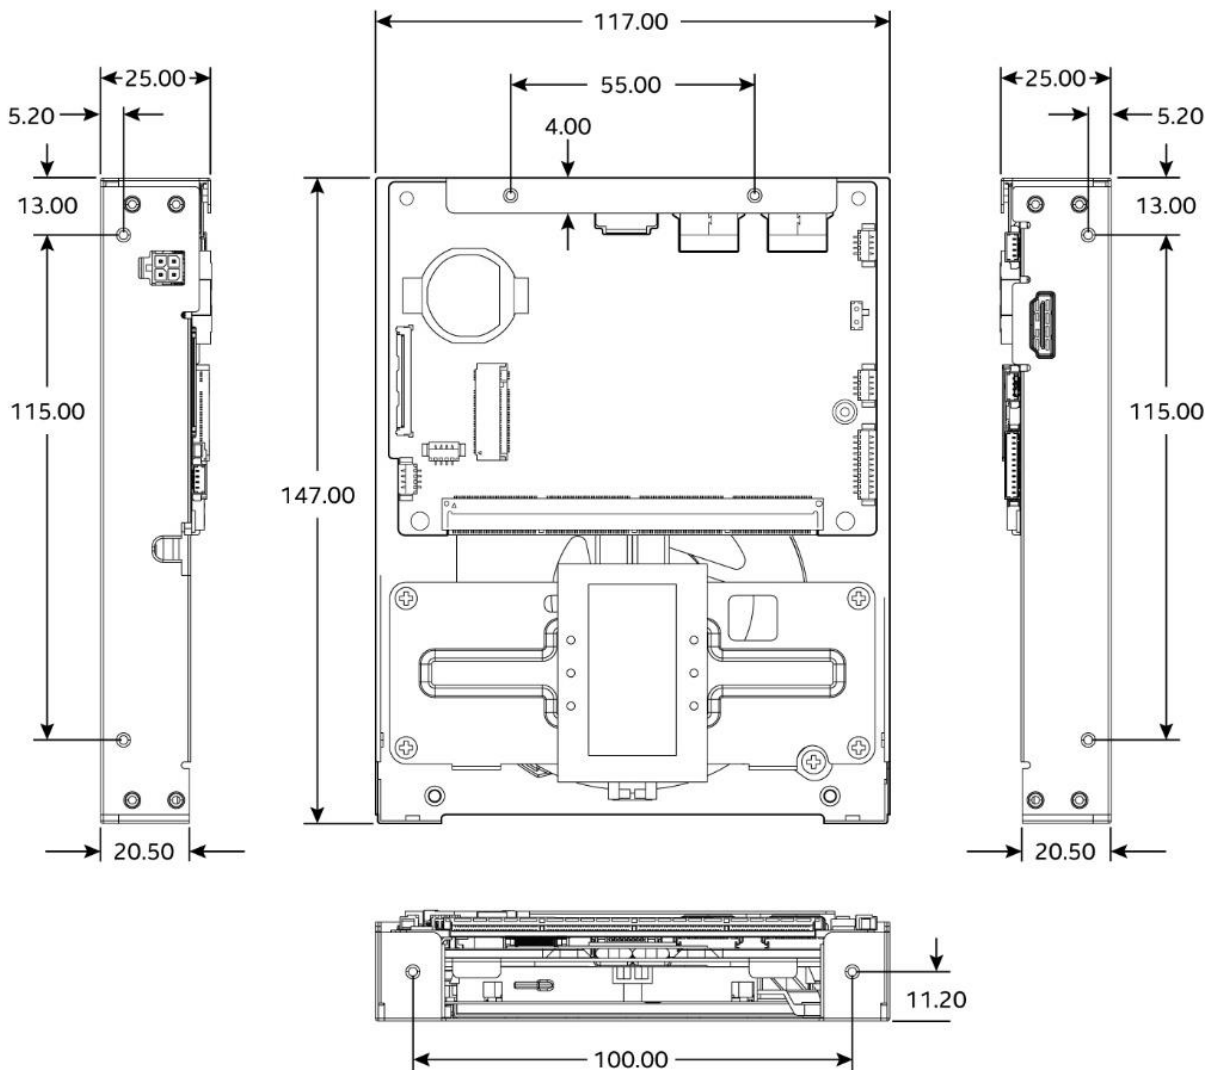

41079

Figure 5. CMA1BB Assembly

2.13 Thermal

The Intel® NUC Pro Assembly Element CMA1BB comes with a complete thermal solution for the Intel® NUC Compute Element. The thermal solution includes a cold plate with thermal interface material, heat pipes, heat sink and a fan. A second fan header is also provided for a system fan.

2.14 Environmental

Table 10 lists the environmental specifications for the Intel® NUC Pro Assembly Element CMA1BB.

Table 10. Environmental Specifications

Parameter	Specification	
Temperature		
Non-Operating	-40 °C to +60 °C	
Operating (Board)	0 °C to +50 °C	
Operating (Assembly)	0 °C to +50 °C	
Shock (Board)		
Unpackaged	25 g trapezoidal waveform	
	Velocity change of 250 inches/s ²	
Packaged	Free fall package drop machine set to the height determined by the weight of the package.	
	Product Weight (pounds)	Free Fall (inches)
	<20	36
	21-40	30
	41-80	24
	81-100	18
Vibration (Assembly)		
Unpackaged	5 Hz to 20 Hz: 0.01 g ² /Hz sloping up to 20 Hz @ 0.02 g ² /Hz	
	20 Hz to 500 Hz: 0.02 g ² /Hz (flat)	
	Input acceleration is 3.13 g RMS	
Packaged	5 Hz to 40 Hz: 0.015 g ² /Hz (flat)	
	40 Hz to 500 Hz: 0.015 g ² /Hz sloping down to 0.00015 g ² /Hz	
	Input acceleration is 1.09 g RMS	

Note: Before attempting to operate this Intel® NUC Pro Assembly Element CMA1bb, the overall temperature of the system must be above the minimum operating temperature specified. It is recommended that the NUC Pro Assembly Element CMA1BB temperature be at least room temperature before attempting to power on the system. The operating and non-operating environment must avoid condensing humidity.

3 Characterized Errata

This section of the document communicates product Errata for the Intel® NUC Pro Assembly Element CMA1BB.

Errata are design defects or deviations from current published specifications for a given product. Published errata may or may not be corrected. Hardware and software designed to be used with any given processor stepping must assume that all errata documented for that process stepping are present on all devices.

There are no known characterized errata.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Embedded Box Computers](#) category:

Click to view products by [Intel](#) manufacturer:

Other Similar products are found below :

[tBOX312-870-FL-i7-DC](#) [tBOX313-835-FL-RJ-DC](#) [UPOS-3150-R0W0E](#) [ARK-20-S8A1E](#) [R2224WTTYSR](#) [BXNUC9i5QNX](#)
[BXNUC9i5QNX1](#) [BKNUC9V7QNX](#) [BKNUC9V7QNX1](#) [2-A0DF-2001](#) [BKCMB1ABB](#) [BKCMB1ABA](#) [EM3000-3845-8-128-WL-U-1](#)
[TANK-870AI-i5/8G/2A-R10](#) [PRFE21000038](#) [EM5000-I3-8-128-WL-W7-1](#) [EM3000-3845-8-128-WL-W7-1](#) [PRFE21000039](#) [AMOS-825-](#)
[1Q10A1](#) [UPS-EDAI-X70864-U01-DC01](#) [UPX-EDGEI7-A10-1664-F01](#) [MXE-211/M8G](#) [PXIe-3985/M16G](#) [PXIe-3987/M16G/SSD](#) [AIMB-](#)
[T1215DA-00Y0E](#) [AIMB-T12315A-00Y0E](#) [AMAX-5580-54000A](#) [APAX-5580-474AE](#) [ARK-6322-Q0A2E](#) [DS-100GF-S8A1E](#) [DS-100GL-](#)
[S8A1E](#) [EPC-R4680CQ-XAA1E](#) [ESRP-CSS-UNO2484](#) [ITA-1611-10A1E](#) [ITA-1711-10A1E](#) [MIC-710AI-00A1](#) [MIC-720AI-00A1](#) [UNO-247-](#)
[J1N1AE](#) [UTX-3115FS-S6A2E](#) [AMI220AF-4L-7500](#) [ELIT-1200](#) [AIE100-903-FL](#) [EBOX671-517-FL-DC](#) [MVS900-511-FL](#) [AMS200](#) [SE-92-](#)
[I7](#) [SI-606](#) [SI-60E](#) [TANK-760-HM86i-i5/4G-R10](#) [BKCM8i7CB8N](#)