#### MAX44298 Evaluation Kit

#### **General Description**

The MAX44298 evaluation kit (EV kit) provides a proven design to evaluate the MAX44298 current, voltage, and power monitor. The device offers a precision power monitor with very low offset for low-side monitoring. This EV kit demonstrates the MAX44298 in an ultra-small, 2.4mm x 2.4mm, 16-bump wafer-level package (WLP) with 0.5mm bump spacing.

The EV kit PCB is preconfigured with the CSA full-scale input voltage range ( $V_{SENSE}$ ) of 10mV and 100 $\mu$ A of output current ranges, but can be reconfigured to 10mV/5mV of FS  $V_{SENSE}$  or 50 $\mu$ A of output current by changing a few jumpers.

The EV kit comes with a MAX44298EWE+ and a voltage divider to provide a forced full-scale V<sub>SENSE</sub> of 10mV range at the CSA inputs installed.

#### **Features**

- Precision Real-Time, Low-Side Current/Voltage/ Power Monitoring
- +3V to +5.5V Single-Supply Voltage Range
- Proven PCB Layout
- Fully Assembled and Tested

Ordering Information appears at end of data sheet.

#### **Quick Start**

#### **Required Equipment**

Before beginning, the following equipment is needed:

**Evaluates: MAX44298** 

- MAX44298 EV kit
- +3V to +5.5V, 100mA DC power supply
- +0.4V to +1.005V DC power supply
- Precision DC voltage source
- Five digital multimeters (DMMs)

#### **Procedure**

The EV kit is fully assembled and tested. Follow the steps below to verify board operation. Caution: Do not turn on power supply until all connections are made.

- Set the +3V to +5.5V supply to +3.3V and turn it off. Connect the positive terminal of the supply to the VDD test point and the negative terminal of the supply to the nearest GND test point.
- Set the +0.4V to +1.005V supply to +1V and turn it off. Connect the positive terminal of the supply to the VIN test point and the negative terminal of the supply to the nearest GND test point.
- 3) Set the precision DC voltage source to 5mV and turn it off. Apply this voltage source across the V<sub>SENSE</sub> inputs as a forced voltage V<sub>SENSE</sub> (i.e., connect the positive terminal of the DC voltage source to the RS+ test point and connect its negative terminal to the RS- test point).
- Connect one DMM across RS+ and RS- to monitor the V<sub>SENSE</sub> input. Connect each DMM to each output of the device (IOUT, VOUT, POUT, and REF) to monitor the output voltages.
- 5) Enable all supplies.
- Observe the output voltage from all four digital voltmeter displays. Verify that V<sub>IOUT</sub> = 1.2V, V<sub>VOUT</sub> = 2.4V, V<sub>POUT</sub> = 1.2V and V<sub>REF</sub> = 2.4V.



**Table 1. Jumper Description** 

JUMPER	SHUNT POSITION	DESCRIPTION				
	1-2	Sets the full-scale output current to 50µA.				
JU1 (ISET)	1-3	Reserved				
(IOL1)	1-4*	Sets the full-scale output current to 100µA.				
JU2	1-2	Enters calibration mode, sets the output current to 10µA (for IOUT, VOUT, and POUT) and full-scale output current set by JU1 (for the REF).				
(CAL)	1-3	Reserved				
	1-4*	Sets the device in normal operation mode and the output current full scale is set by JU1.				
	1-2	Connects G0 to logic 1 to set the full-scale sensing voltage range (VFS). See Table 2.				
JU3 (G0)	1-3	Reserved				
(30)	1-4*	Connects G0 to logic 0 to set the full-scale sensing voltage range (VFS). See Table 2.				
	1-2*	Connect G1 to logic1 to set the full-scale sensing voltage range (VFS). See Table 2.				
JU4 (G1)	2-3	Reserved				
(01)	1-4	Connect G1 to logic 0 to set the full-scale sensing voltage range (VFS). See Table 2.				

<sup>\*</sup>Default configuration

Table 2. Full-Scale V<sub>SENSE</sub> Range Selection

G1 (JU4)	G0 (JU3)	FS V <sub>SENSE</sub>	R <sub>SENSE</sub> = 1mΩ	R <sub>SENSE</sub> = 2mΩ	R <sub>SENSE</sub> = 10mΩ		
0	1	5mV	0.5A				
1*	0*	10mV*	10mV* 10A 5A				
1	1	20mV 20A 10A 2A					
0	0	Device enters power-down mode					

<sup>\*</sup>Default configuration

#### **Detailed Description of Hardware**

The MAX44298 EV kit low-side current-sensing measures the load current by using a precision CSA, allowing accurate full-scale V<sub>SENSE</sub> ranges of 5mV, 10mV, and 20mV, providing scaled output current at IOUT. The floating source voltage is measured through a user-selectable resistive-divider (dividing the source input voltage down to a full-scale VIN of 1.00V) and provides scaled output current at VOUT. The device monitors the instantaneous input power by internally multiplying the scaled load current by a scaled fraction of the load voltage, providing scaled output current at POUT. The device also provides a reference output current at the REF output. All four output currents are converted to voltages by using scaled resistors (R3–R6).

## Output-Scaling Resistors: R3, R4, R5, R6, and the ISET Input

The output-scaling resistors should all be the same value and be of a type with very low temperature coefficients, with metal film types being recommended. Metal foil is more effective, though significantly more expensive. The chosen values of these resistors will depend on the ISET setting. JU1 determines the full-scale output current range. When ISET is connected to ground (JU1: 1-2), the full-scale output current from all four outputs will be  $100\mu A$ . When ISET is connected to VDD (JU1: 1-4), the full-scale current will be  $50\mu A$ . This can be a simple and convenient way to change all four scaling resistors simultaneously. The EV kit is shipped with all four  $24k\Omega$  scaling resistors.

Evaluates: MAX44298

www.maximintegrated.com Maxim Integrated | 2

#### Calibration

JU2 sets the device in operational mode (or CAL) mode. The EV kit is shipped with JU2 in 1-4 position for operational mode. Set JU2 in 1-2 position to place the device in CAL mode.

#### **Applying the Source Voltage**

The two options for applying source voltage are through an external voltage divider (R1 and R2) or as a direct voltage input (VIN). For using an R1–R2 voltage-divider: apply the source voltage to IN+ and IN-. For a maximum input source voltage of say 57V, R1 could be  $560k\Omega$  with R2 being  $10k\Omega$ . The voltage-divider, formed by R1 and R2, provides 1V at the VIN input test point. The second option is to apply the voltage directly to the VIN test point. In either configuration, care must be taken not to apply a voltage greater than 1V to the VIN input of the device. The EV kit is shipped with the voltage-divider formed by R1 ( $560k\Omega$ ) and R2 ( $10k\Omega$ ), and a VIN test point as well.

#### Measuring the Low-Side Load Current

The device measures the unidirection load current (flowing from RS+ to RS-) as a voltage drop (V<sub>SENSE</sub>) across an external sense resistor (R14, not installed) and provides scaled output at IOUT. To ensure proper load current measurements, the sense resistor must be chosen so that its voltage drop does not exceed the full-scale sense voltage of the device. The full-scale sense voltage should be reached when the full-scale load current is being supplied to the load. The external sense resistor R14 is determined by setting the full-scale load current and selecting a full-scale sense voltage that does not exceed the full-scale sense-voltage rating of the IC:

$$R_{14} = \frac{V_{SENSE\_FS}}{I_{LOAD\_FS}}$$

The EV kit supports a full-scale sense voltage drop of 5mV, 10mV, and 20mV (see <u>Table 2</u> for selections). The EV kit defaults to the 10mV full-scale setting. For different full-scale sense ranges and full-scale load current arrangements, the equation above can be used to determine the appropriate sense-resistor value.

Evaluates: MAX44298

Other options to evaluate the current-sensing capability of the MAX44298 are to create a voltage across RS+ and RS- without applying heavy load current going through these two test points. Apply a negative voltage to the VNEG test point (using the resistive-divider R12 and R13) or a direct precision voltage source across RS+ and RS-. In either case, ensure that the sense voltage across RS+ and RS- is within its set full-scale range. The device is shipped with a voltage-divider formed by R12 =  $4.99k\Omega$  and R13 =  $10\Omega$ . When using this option, the users should note that there exists approximately 100µA bias current coming out of the RS- pin due to the CSA internal gain settings. This input bias current should be taken into account for error when sensing small currents in milli-ampere ranges. Therefore, measuring the actual drop across RS+ and RS- is necessary for accuracy. For example, applying a negative supply voltage of -5V at the VNEG test point would give about 9mV across RS+ and RS- instead of 10mV, theoretically.

For 5mV and 20mV full-scale sense ranges, R12 and R13 should be re-scaled accordingly.

#### **Monitoring the Load Power**

The device monitors the instantaneous input power by internally multiplying the scaled load current and a scaled fraction of the load voltage and provides scaled output at POUT.

www.maximintegrated.com Maxim Integrated | 3

## MAX44298 Evaluation Kit

# **Component List, PCB Layout, and Schematic**

See the following links for component information, PCB layout diagrams, and schematics.

- MAX44298 EV BOM
- MAX44298 EV PCB Layout
- MAX44298 EV Schematic

## **Ordering Information**

PART	TYPE
MAX44298EVKIT#	EV Kit

Evaluates: MAX44298

#RoHS-compliant

www.maximintegrated.com Maxim Integrated | 4

## MAX44298 Evaluation Kit

## **Revision History**

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	11/15	Initial release	_

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

Evaluates: MAX44298

TITLE: Bill of Materials

DATE: 09/30/2015

DESIGN:	: max44298_evkit_b						
TEM	DEE DEC	DNI/DNP	QTY	MFG PART #	MANUFACTURER	VALUE	DESCRIPTION
Elvi	REF_DES	אוט /וווט	QIT	WIFG PART #	MANUFACTURER	VALUE	DESCRIPTION
	1		'	C0603X7R500103JNP;	!	1	CAPACITOR; SMT (0603); CERAMIC CHIP; 0.02
1	C3-C6	_		4 C0603C103J5	KEMET	0.01UF	TOL=5%; MODEL=X7R; TG=-55 DEGC TO +125
$\dashv$	1	<del></del>	+-		ICLIVILI	0.0101	10L-3/0, WODEL-X/N, 13 33 DEGE 13 1223
Ī	ı		'	1	'	1	CAPACITOR; SMT (1206); CERAMIC CHIP; 0.06
2	C7	_	1 1	1 CGA5L1C0G2A683J160	TDK	0.068UF	TOL=5%; TG=-55 DEGC TO +125 DEGC; TC=C0
	1	+	+	99.19.22.22.22.22.22.22.22.22.22.22.22.22.22	-		1.02 0/1, 12 22 22 2
	1		'	1		1	CAPACITOR; SMT (1206); CERAMIC CHIP; 0.02
3	C8	_	1	1 GCM3195C2A103JA16D	MURATA	0.01UF	TOL=5%; MODEL=; TG=-55 DEGC TO +125 DE
	1	†	_	ECJ-1VB1H104K;			, , ,
	i			GRM188R71H104KA;	'	1	1
Ì	i			CGJ3E2X7R1H104K080AA;	PANASONIC/MURATA/TD	,[	CAPACITOR; SMT (0603); CERAMIC CHIP; 0.11
4	C10	_		1 C1608X7R1H104K080AA	K	0.1UF	TOL=10%; TG=-55 DEGC TO +125 DEGC; TC=X
	1	<del>                                     </del>	+		<u> </u>		CAPACITOR; SMT (0603); CERAMIC CHIP; 4.7U
Ì	1		'	1	'	'	TOL=10%; MODEL=C SERIES; TG=-55 DEGC TO
5	C11	<u> </u> _	1 1	1 C1608X5R1E475K080AC	TDK	4.7UF	TC=X5R
	1	+	+	01000		<del> </del>	CAPACITOR; SMT (0603); CERAMIC CHIP; 10P
	i		'	1	'	1	TOL=10%; MODEL=COG; TG=-55 DEGC TO +12
6	C13	<u> </u> _	1 1	1 C0603C100K1GAC	KEMET	10PF	TC=+/
	1	+	+		The state of the s	1	TEST POINT; PIN DIA=0.1IN; TOTAL LENGTH=0
ĺ	CF, VIN, IOUT,		'	1	'	'	HOLE=0.04IN; RED; PHOSPHOR BRONZE WIRE
	POUT, VOUT, VREF	<u> </u> _	6	5000	KEYSTONE	N/A	PLATE FINISH;
	IN+, IN-, LOAD+,	+	+	<del></del>	EMERSON NETWORK	114,7.	CONNECTOR; MALE; PANELMOUNT; BANANA
	LOAD-	_	⊿′	4 108-0740-001	POWER	108-0740-001	STRAIGHT; 1PIN
	1	<del>                                     </del>	+	1	SULLINS ELECTRONICS	1	CONNECTOR; MALE; THROUGH HOLE; BREAK
9	JU1-JU4	<u> </u> -	⊿′	4 PECO4SAAN	CORP.	PEC04SAAN	STRAIGHT; 4PINS
	1	<del>                                     </del>	+	1	-	1	RESISTOR; 0603; 560K OHM; 0.1%; 25PPM; 0
10	IR1	_	1	1 1-1879417-3; CPF0603B560KE	TE CONNECTIVITY	560K	FILM
	1	<del>                                     </del>		TNPW060310K0BE;	VISHAY DALE/KOA SPEER		RESISTOR; 0603; 10K OHM; 0.1%; 25PPM; 0.1
11	IR2	<u> </u> -		1 RN731JTTD1002B	ELECTRONICS	10K	FILM
	i	<del>                                     </del>	+	1			RESISTOR; 0603; 24K OHM; 0.1%; 25PPM; 0.1
12	R3-R6	<u> </u> -	⊿′	4 RG1608P-243-B	SUSUMU CO LTD.	24K	FILM
	1	<del>                                     </del>	+	1102000: 2:22	36552	† · · · ·	RESISTOR; 0603; 4.7K OHM; 5%; 200PPM; 0.3
13	R7-R10	_	⊿′	4 ERJ-3GEYJ472V	PANASONIC	4.7K	FILM
	1	<del>                                     </del>	+		17		RESISTOR; 0603; 4.99K OHM; 0.1%; 25PPM; (
14	R12	-	1 1	1 RG1608P-4991-B	SUSUMU CO LTD.	4.99K	FILM
	1	<del>                                     </del>	+	102000. 15121	56552 22	1.55.5	RESISTOR; 0603; 10 OHM; 0.1%; 25PPM; 0.0
15	R13	_	1 1	1 CRT0603-BY-10R0ELF	BOURNS	10	FILM
	RS+, RS-, VCC, VDD,	<del>                                     </del>	+	011.0000 21. 22		<u> </u>	TESTPOINT WITH 1.80MM HOLE DIA, RED,
	VNEG	_	5	5010	1 2	5010	MULTIPURPOSE


17	SU4-SU7	-	4	STC02SYAN	SULLINS ELECTRONICS CORP.		TEST POINT; JUMPER; STR; TOTAL LENGTH=C BLACK; INSULATION=PBT CONTACT=PHOSPH COPPER PLATED TIN OVERALL
							TEST POINT; PIN DIA=0.125IN; TOTAL LENGT
18	TP1-TP6	-	6	5011	?		BOARD HOLE=0.063IN; BLACK; PHOSPHOR B SILVER PLATE FINISH;
							EVKIT PART-IC; PACKAGE CODE: WLP162P2+
19	U1	-	1	MAX44298	MAXIM	MAX44298	21-1000005
				ECJ-1VB1H104K; GRM188R71H104KA; CGJ3E2X7R1H104K080AA;	PANASONIC/MURATA/TD		CAPACITOR; SMT (0603); CERAMIC CHIP; 0.1
20	C9	DNP	1	C1608X7R1H104K080AA	K	0.1UF	TOL=10%; TG=-55 DEGC TO +125 DEGC; TC=
21	C17, C41	DNP		GRM32ER72A225KA35; CGA6N3X7R2A225K230	MURATA/TDK		CAPACITOR; SMT (1210); CERAMIC CHIP; 2.2 TOL=10%; MODEL=GRM SERIES; TG=-55 DEG DEGC; TC=X7R
21	C17, C41	DINP		CGAON3X/RZAZZ3RZ30	WORATAYTOK	2.20F	CAPACITOR; SMT; 0805; CERAMIC; 0.1uF; 10
22	C18, C42	DNP	2	C0805C104J1RAL	KEMET	0.1UF	55degC to + 125degC
	010, 0.12		1 -	200000101011011	NEW E		INDUCTOR; SMT (0603); FERRITE-BEAD; 2500
23	FB3	DNP	1	BLM18BD252SN1	MURATA		25%; 0.05A
24	R11	DNP		TNPW060310K0BE; RN731JTTD1002B	VISHAY DALE/KOA SPEER ELECTRONICS		RESISTOR; 0603; 10K OHM; 0.1%; 25PPM; 0. FILM
	R14	DNP		Y14880R00100D9	VISHAY FOIL RESISTOR	0.001	
26	R15	DNP	1	N/A	N/A		PACKAGE OUTLINE 0603 RESISTOR
27	R16	DNP	1	TNPW060320R0BE	VISHAY DALE		RESISTOR; 0603; 20 OHM; 0.1%; 25PPM; 0.10 FILM
28	R17	DNP	1	PATT0603E8982BG	VISHAY DALE	89.8K	RESISTOR; 0603; 89.8K OHM; 0.1%; 25PPM; FILM
29	SU1-SU3	DNP	3	801-93-010-10-001000	MILL-MAX	801-93-010-10-	IC-SOCKET;SIP; STANDARD SOLDER TAIL; 801 0.024D/0.118L; 0.1IN GRID; STRAIGHT SOCK FRAME; 10PINS
							IC; AMP; DUAL-CHANNEL; HIGH-PRECISION; VOLTAGE; CURRENT-SENSE AMPLIFIER; GAIN
30	U2	DNP	1	MAX44285TAUA+	MAXIM	+	UMAX8

TOTAL 66

maxim integrated	an entitud to others without specific written production.
HARDWARE NAME:MAX44298_EVKIT_B	
HARDWARE NUMBER:	
ENGINEER:	DESIGNER:
DATE: 04/29/2015	ODB++/GERBER: SILK_TOP






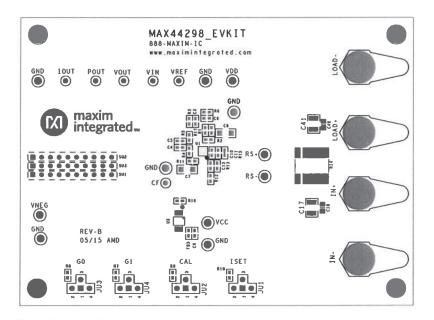






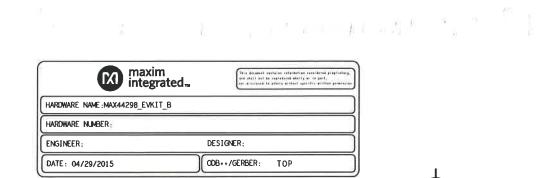






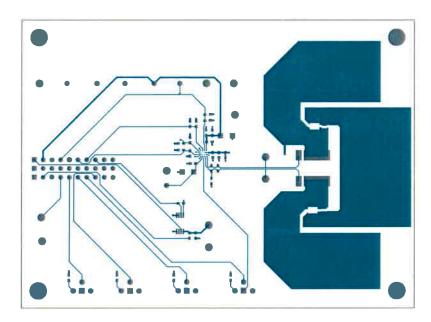






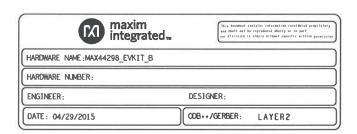






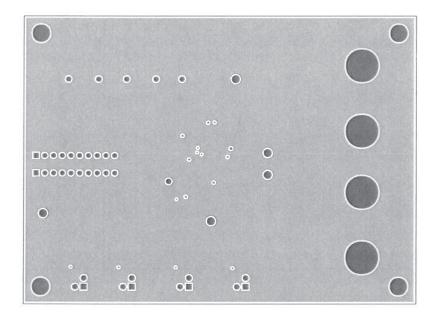




DO NOT MODIFY TOP SOLDERMASK ON UI



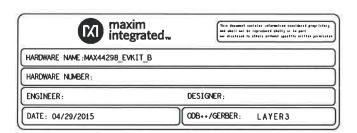






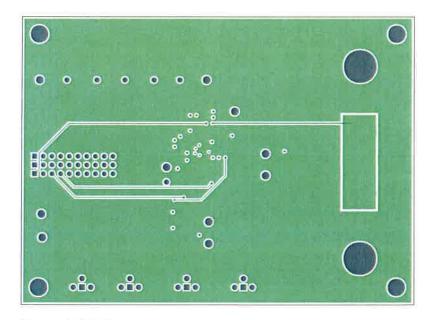




DO NOT MODIFY TOP SOLDERMASK ON U1




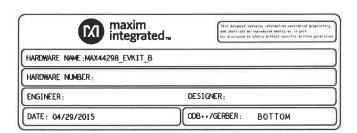






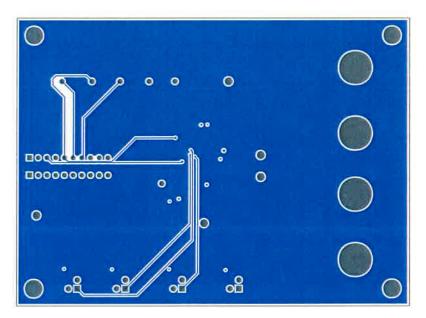






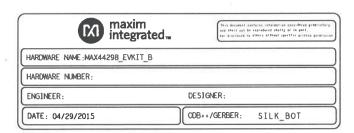






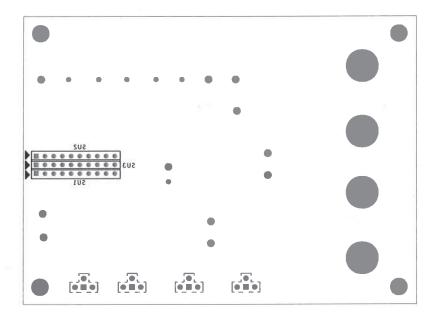





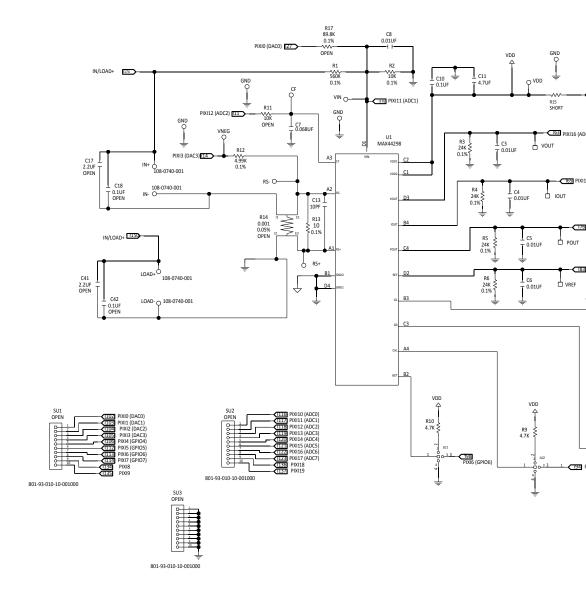

## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Power Management IC Development Tools category:

Click to view products by Maxim manufacturer:

Other Similar products are found below:

EVALZ ADP130-1.8-EVALZ ADP1740-1.5-EVALZ ADP1870-0.3-EVALZ ADP1870-0.3-EVALZ ADP199CB-EVALZ ADP199CB-EVALZ ADP2102-1.25-EVALZ ADP2102-1.875EVALZ ADP2102-1.8-EVALZ ADP2102-2-EVALZ ADP2102-3-EVALZ ADP2102-4-EVALZ AS3606-DB
BQ25010EVM BQ3055EVM ISLUSBI2CKIT1Z LP38512TS-1.8EV EVAL-ADM1186-1MBZ EVAL-ADM1186-2MBZ ADP122UJZ-REDYKIT ADP166Z-REDYKIT ADP170-1.8-EVALZ ADP171-EVALZ ADP1853-EVALZ ADP1873-0.3-EVALZ ADP198CP-EVALZ ADP2102-1.0-EVALZ ADP2102-1-EVALZ ADP2107-1.8-EVALZ ADP5020CP-EVALZ CC-ACC-DBMX-51 ATPL230A-EK MIC23250-S4YMT EV MIC26603YJL EV MIC33050-SYHL EV TPS60100EVM-131 TPS65010EVM-230 TPS71933-28EVM-213
TPS72728YFFEVM-407 TPS79318YEQEVM UCC28810EVM-002 XILINXPWR-083 LMR22007YMINI-EVM LP38501ATJ-EV