MPLAB® PICkit™ 4 In-Circuit Debugger

QUICK START GUIDE

GETTING STARTED

1   Install the Latest Software

Download the MPLAB X IDE software from www.microchip.com/mplabx and install onto your computer. The installer automatically loads the USB drivers. Launch MPLAB X IDE.
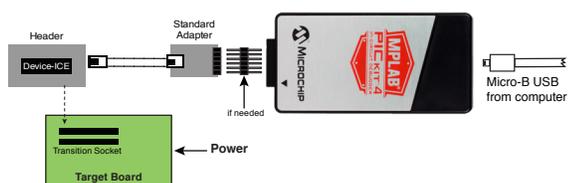
2   Connect to Target Device

1. Connect the MPLAB PICkit 4 to the computer using the supplied Micro-B USB cable.
2. Attach the communications cable between the debugger and target board.
3. Connect external power to target board.

Typical Debugger System – Device with On-Board Debug Circuitry

Power → Target Device — Target Board — MICROCHIP — Micro-B USB from computer

Alternative Debugger System – ICE Device

Header — Device-ICE — Standard Adapter — if needed — MICROCHIP — Micro-B USB from computer
Transition Socket — Target Board — Power

*External target board power supply to be provided by user.

3   Create, Build and Run Project

1. Refer to the MPLAB X IDE User's Guide or online help for instructions to install language tools, create or open a project, and configure project properties.
2. Check that the configuration bits in your code match the Recommended Settings below.
3. To execute your code in Debug mode, perform a debug run. To execute your code in Non-Debug (release) mode, perform a run. To hold a device in Reset after programming, use the Hold in Reset icon in the toolbar.

Recommended Settings

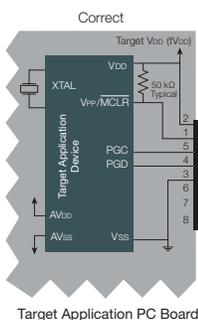| Component	Setting
Oscillator	• OSC bits set properly • Running
Power	Supplied by target
WDT	Disabled (device dependent)
Code-Protect	Disabled
Table Read Protect	Disabled
LVP	Disabled
BOD	V_{DD} > BOD V_{DD} min.
JTAG	Disabled
AV_{DD} and AV_{SS}	Must be connected
PGCx/PGDx	Proper channel selected, if applicable
Programming	V_{DD} voltage levels meet programming spec

Note: *See MPLAB PICkit 4 In-Circuit Debugger online help for more information.*

Reserved Resources

For information on reserved resources used by the debugger, see the MPLAB PICkit 4 In-Circuit Debugger online help.

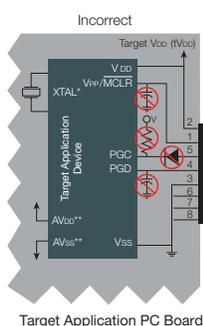MICROCHIP

ADDITIONAL INFORMATION

Circuitry and Connector Pinouts

Correct

Target Application PC Board

Connect Pin 1 to Pin 1

Typical 6-Pin ICSP Pinout

Pin	Target	MPLAB® PICkit 4
1	$\overline{MCLR}$/VPP	$\overline{NMCLR}$
2	VDD Target	VDD
3	VSS (ground)	Ground
4	PGD (ICSPDAT)	PGD
5	PGC (ICSPCLK)	PGC
6	Do Not Connect	Do Not Connect
7		Reserved for Future use
8		Reserved for Future use

Target Circuit Design Precautions

Incorrect

Target Application PC Board

- **Do not use pull-ups on PGC/PGD:** they will disrupt the voltage levels, since these lines have programmable pull-down resistors in the debugger.
- **Do not use capacitors on PGC/PGD:** they will prevent fast transitions on data and clock lines during programming and debug communications.
- **Do not use capacitors on $\overline{MCLR}$:** they will prevent fast transitions of VPP. A simple pull-up resistor is generally sufficient.
- **Do not use diodes on PGC/PGD:** they will prevent bidirectional communication between the debugger and the target device.
- **Do not exceed recommended cable lengths:** Refer to the Hardware Specification of the MPLAB PICkit 4 online help or user's guide for cable lengths.

Pinouts for Additional Interfaces

MPLAB® PICkit 4	Debugging and Programming			Data Stream	
Pin #	ICSP	MIPS EJTAG	Cortex® SWD	DMCI/DGI U(S)ART/CDC	DGI SPI
1	$\overline{V_{PP}/NMCLR}$				
2	VDD	VIO_REF	VTG	VTG	
3	GND	GND	GND	GND	
4	PGD	TDO	SWO		MISO
5	PGC	TCK	SWCLK		SCK
6	AUX	NRESET	NRST	(SCK)	
7	TDI	TDI		TX	MOSI
8	TMS	TMS	SWDIO	RX	SS

** Target device must be running with an oscillator for the debugger to function as a debugger.
*** If the device has AVDD and AVSS lines, they must be connected for the debugger to operate.

www.microchip.com/pickit4

MICROCHIP

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Hardware Debuggers *category:*

Click to view products by Microchip *manufacturer:*

Other Similar products are found below :

IJET-RISCV 410-251 1550 AC244028 AC244045 DV164045 AC244036 DB40 LPC_DEBUG_2 ATATMEL-ICE ATATMEL-ICE-BASIC ATAVRONEKIT 76002055 IJET AC162051 AC162062 AC162064 AC162074 AC162078 AC162079 AC162087 AC162088 AC244024 AC244027 AC244034 AC244035 AC244043 AC244044 AC244047 AC244048 AC244051 AC244054 AC320202 DV164131 DV164232 PG164100 ARM-USB-OCD-H ARM-USB-TINY-H 32115 ACC-DEBUG 114991786 8.07.10 8.08.28 8.18.00 8.19.00 8.19.28 8.20.00 U2D-ATOM-24 AC244023 2209