

Motor Condition Monitoring Device K6CM

Quantifying the status of a three-phase induction motor and pump.

The alarm output threshold default is set. You can customize the value according to the site.

As for comprehensive current diagnosis, the degradation can be detected comprehensively by combining each motor part and the load side.

The insulation resistance of the threephase induction motor and pump can be measured with current flowing (the secondary side leakage current of the inverter can also be detected).





For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

Features

- Since the condition of the motor can be displayed in numeric values on the LCD, the motor condition can be checked without a dedicated tool.
- The alarm output settings can be made according to the device, with reference to the threshold value that has already been set by default.
- Depending on the threshold value setting for alarm output, the condition of the motor can be displayed on an alarm bar in three colors; Green (normal), Yellow (warning), and Red (critical).
- Equipped with a transistor output that externally outputs the status of the motor and error states of the K6CM main unit.
- Monitoring can be performed easily on the PC by EtherNet/IP communication and a dedicated tool.
- The numeric values of vibrations, temperature, insulation resistance, and current can be monitored by the same dedicated tool.
- The trend of the motor condition can be monitored by a dedicated tool, and thus indications of a degradation can be monitored.
- Clamp-type CT/ZCT that supports easy post installation. With a clamp-type CT/ZCT, the device can be installed without changing or removing the existing wiring, which makes post-installation easy.
- · Comes with the self-diagnosis function of the main unit internal circuit and analog sensing circuit.
- Push-in Plus Terminal Technology reduces wiring work (double-insertion holes for crossover wiring).
- UL listed for easy shipping to North America (ZCT (IRT) is UL recognized).


Windows is a registered trademark of Microsoft Corporation in the United States and or other countries. EtherNet/IPTM is the trademarks of ODVA.

Other company names and product names in this document are the trademarks or registered rademarks of their respective companies.

System Configuration


Basic Configuration

Vibration & temperature type (K6CM-VB)

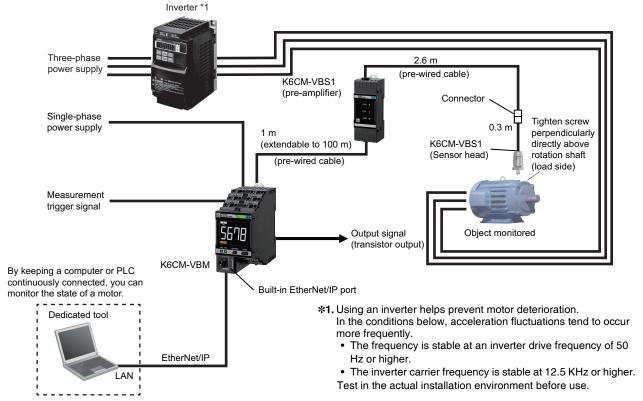

Note: Even without a computer, the alarm bar of the main unit notifies you of changes of motor state.


Insulation resistance type (K6CM-IS) Three-phase, three-conductor, S-phase ground

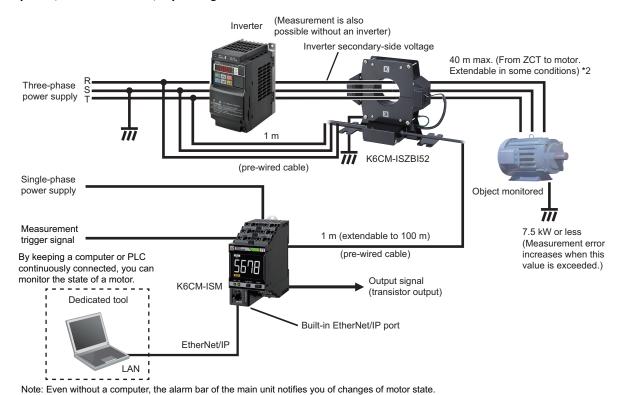


*2. For details, refer to the technical data on page 16.

Three-phase, four-conductor, N-phase ground

Note: When an inverter is used with three-phase, four-conductor, N-phase ground, correct measurement is not possible

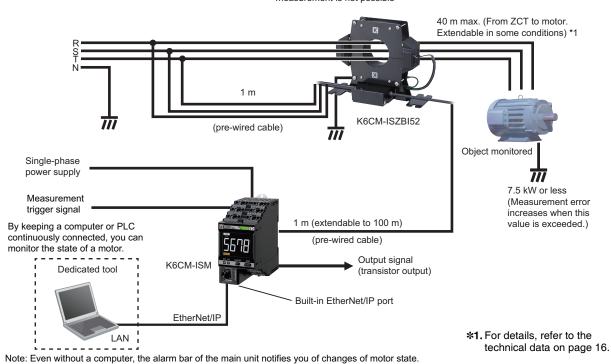

Comprehensive current diagnosis type (K6CM-CI)

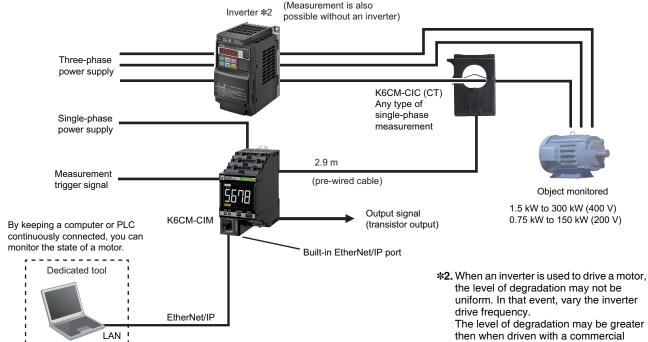

Note: 1. Even without a computer, the alarm bar of the main unit notifies you of changes of motor state.

The degradation level may appear differently depending on the failure condition of the motor or load, or depending on the installation condition. The level of degradation may be greater then when driven with a commercial power supply. Adjust the alarm threshold appropriately for the motor drive method. Always measure and monitor the level of degradation using the same inverter drive frequency.

K6CM

Ordering Information

List of Models

| Monitoring type | Power supply voltage | Model | |
|--------------------------------------|----------------------|---------------|--|
| Vibration 8 townsature true | 100 to 240 VAC | K6CM-VBMA-EIP | |
| Vibration & temperature type | 24 VAC/VDC | K6CM-VBMD-EIP | |
| Includition registance type | 100 to 240 VAC | K6CM-ISMA-EIP | |
| Insulation resistance type | 24 VAC/VDC | K6CM-ISMD-EIP | |
| O | 100 to 240 VAC | K6CM-CIMA-EIP | |
| Comprehensive current diagnosis type | 24 VAC/VDC | K6CM-CIMD-EIP | |

Input part Vibration & temperature sensor (Order separately)

| Appearance (pre-amplifier) | Appearance (sensor head) | Attachment part | Applicable Relay | Model |
|----------------------------|--------------------------|-----------------|------------------|-----------|
| | Þ | M6 screw | K6CM-VBM | K6CM-VBS1 |

Note: The vibration and temperature sensor consists of a sensor head and a pre-amplifier.

A magnet is provided for the easy attachment of the vibration and temperature sensor.

ZCT (IRT) (Order separately)

| Rated voltage | Through hole dia. (mm) | Applicable Relay | Model |
|----------------|---------------------------|------------------|--------------|
| 200 to 480 VAC | 52 dia. | K6CM-ISM | K6CM-ISZBI52 |

Note: ZCT (IRT) is the abbreviation for Zero Current Transfer (Insulation Resistance Transfer).

A cable for connection is provided with the ZCT (IRT).

CT (Order separately)

| Rated primary-side current | Applicable Relay | Model | |
|----------------------------------|------------------|--------------|--|
| 5 A | | K6CM-CICB005 | |
| 25 A | | K6CM-CICB025 | |
| 100 A 200 A 400 A 600 A | K6CM-CIM | K6CM-CICB100 | |
| | | K6CM-CICB200 | |
| | | K6CM-CICB400 | |
| | | K6CM-CICB600 | |

Note: A cable for connection is provided with the CT. Select a CT that sets the current of the applicable motor within the measurement range. To calculate the current, refer to *Comprehensive Current Diagnosis Type Technical Data (Reference)* on page 17.

EtherNet/IP communication cable recommended parts

Use a Category 5 or higher STP cable (shielded twisted pair cable).

Cable with Connectors

| | Item | | | Model |
|--|---|-------|-----|----------------------|
| | Cable with Connectors on Both Ends | | 0.3 | XS6W-6LSZH8SS30CM-Y |
| | (RJ45/RJ45) Standard RJ45 plug type ≭ 1 | | 0.5 | XS6W-6LSZH8SS50CM-Y |
| Wire Gauge and Number of Pairs: | Cable color: Yellow *3 | OMBON | 1 | XS6W-6LSZH8SS100CM-Y |
| AWG26, 4-pair Cable Cable Sheath material: LSZH *2 | | OMRON | 2 | XS6W-6LSZH8SS200CM-Y |
| | | | 3 | XS6W-6LSZH8SS300CM-Y |
| | | | 5 | XS6W-6LSZH8SS500CM-Y |
| | Cable with Connectors on Both Ends | | 0.3 | XS5W-T421-AMD-K |
| | (RJ45/RJ45) Rugged RJ45 plug type *1 | | 0.5 | XS5W-T421-BMD-K |
| Wire Gauge and Number of Pairs: | Cable color: Light blue | OMBON | 1 | XS5W-T421-CMD-K |
| AWG22, 2-pair Cable | | OMRON | 2 | XS5W-T421-DMD-K |
| | ~ 0 | | 5 | XS5W-T421-GMD-K |
| | ~ O | | 10 | XS5W-T421-JMD-K |

^{*1.} Cables with standard RJ45 plugs are available in the following lengths: 0.2 m, 0.3 m, 0.5 m, 1 m, 1.5 m, 2 m, 3 m, 5 m, 7.5 m, 10 m, 15 m, 20 m. Cables with rugged RJ45 plugs are available in the following lengths: 0.3 m, 0.5 m, 1 m, 2 m, 3 m, 5 m, 10 m, 15 m. For details, refer to the *Industrial Ethernet Connectors Catalog* (Cat. No. G019).

Cable/Connector

| Part name | Manufacturer | Model |
|----------------|----------------------|---------------------------|
| Cable | Hitachi Metals, Ltd. | NETSTAR-C5E SA 0.5 × 4P * |
| RJ45 connector | Panduit Corporation | MPS588-C * |

^{*} It is recommended to use the cable and connector in combination described above.

Industrial switching hub (recommended parts)

| | | Specifications | | | |
|--------------------------|------------|--|--------------|----------------------------------|----------|
| Product name | Appearance | Function | No. of ports | Failure detection function | Model |
| Industrial switching hub | | Priority control (QoS): EtherNet/IP control data priority Failure detection: Broadcast storm / LSI failure detection 10/100BASE-TX, Auto-Negotiation | 3 | × | W4S1-03B |
| | | | 5 | × | W4S1-05B |
| | D.C. | | 5 | О | W4S1-05C |

List of Combinations

As for the K6CM, it is necessary to provide a combination of a vibration and temperature sensor, ZCT (IRT), and CT for the main unit and each model.

One sensor must be provided for one main unit.

O: Can be combined, ---: Cannot be combined

| | | State monitoring components | | |
|--------------------------------|--------------|---------------------------------|---------------------------------|---------------------------------|
| | | K6CM-VBMA-EIP/ K6CM-VBMD-EIP | K6CM-ISMA-EIP/ K6CM-ISMD-EIP | K6CM-CIMA-EIP/ K6CM-CIMD-EIP |
| Vibration & temperature sensor | K6CM-VBS1 | 0 | | |
| ZCT (IRT) | K6CM-ISZBI52 | | 0 | |
| | K6CM-CICB005 | | | 0 |
| | K6CM-CICB025 | | | 0 |
| CT | K6CM-CICB100 | | | 0 |
| СТ | K6CM-CICB200 | | | 0 |
| | K6CM-CICB400 | | | 0 |
| | K6CM-CICB600 | | | 0 |

^{*2.} The lineup features Low Smoke Zero Halogen cables for in-cabinet use and PUR cables for out-of-cabinet use.

^{*3.} Cable colors are available in yellow, green, and blue. The last character of the model changes to "-G" or "-B".

K6CM

Ratings and Specifications

List of Models Ratings

| | <i>-</i> | | | |
|----------------------|---|-----------------------------|--|--|
| | Power supply voltage | | K6CM-□□MA: 100 to 240 VAC, 50/60 Hz K6CM-□□MD: 24 VAC, 50/60 Hz, 24 VDC | |
| | Allowable operating voltage range | | 85% to 110% of power supply voltage | |
| | Power supply frequency range | | 45 to 65 Hz | |
| Power Supply | Power consumption | | K6CM-VBM□ 24 VAC/24 VDC: 3.8 VA/2.1 W max. 100 to 240 VAC: 7.1 VA max. K6CM-ISM□ 24 VAC/24 VDC: 3.7 VA/2.0 W max. 100 to 240 VAC: 6.2 VA max. K6CM-CIM□ 24 VAC/24 VDC: 3.1 VA/1.6 W max. 100 to 240 VAC: 6.0 VA max. | |
| | Vibrations | Detection frequency | 10 Hz to 10 kHz | |
| | (vibration sensor) | Max. operating acceleration | 10 G | |
| Input | Insulation resistance | Rated input voltage | (Line voltage) 200 to 480 VAC, 50 Hz/60 Hz | |
| | (ZCT (IRT)) | Rated path current | 300 AAC | |
| | Current, comprehensive current diagnosis (CT) | Rated input current | 5 A, 25 A, 100 A, 200 A, 400 A, 600 A | |
| Applicabl | e motor type | | Three-phase induction motor (Rated voltage 480 V or less) | |
| | Output form | | Transistor output | |
| Outputs | Output capacity | | 3-point | |
| • | Output rating | | Rated voltage: 24 VDC Max. current: 50 mA, DC | |
| Ambient of | operating temperature | | -10 to +55°C (with no condensation or icing) | |
| Storage to | emperature | | -20 to +65°C (with no condensation or icing) | |
| Ambient of | operating humidity | | 25% to 85% RH (with no condensation) | |
| Storage h | umidity | | 25% to 85% RH (with no condensation) | |
| Case cold | or | | Black | |
| Case mat | erial | | Polycarbonate UL94-V0 | |
| Altitude | | | 2,000 m max. | |
| Applicabl | e wires | | Stranded wires, solid wires, or ferrules | |
| Applicabl | e wire size | | 0.25 to 1.5 mm ² (AWG24 to 16) | |
| | rtion force | | 8 N max. (AWG20) | |
| | ver insertion force | | 15 N max. | |
| - | ping length | | 8 mm | |
| | ended flat-blade screwdriv | rer | XW4Z-00B (Omron) | |
| Current capacity | | | 10 A (per pole) | |
| Number of insertions | | | 50 times | |
| Weight | | | Approx. 200 g | |
| Mounting | Mounting | | Mounts to DIN Track screw mounting | |
| Dimensio | ns | | 45 (W) × 90 (H) × 90 (D) mm | |
| Setting m | ethod | | Communication settings from a dedicated tool via EtherNet/IP | |
| Other fun | ctions | | Display value selection, self-diagnosis error output, setting value initialization, operation integration | |
| Accessor | ies | | Operation manual, CD-ROM (Motor condition monitoring Tool) | |

Characteristics

| | K6CM-VB | | Acceleration: 0.05 to 9.99 G, Velocity: 0.90 to 45.00 mm/s, Motor temperature: 0 to 80°C, Differential temperature: 0 to 80°C | |
|------------------------|-------------------------------|-----------------------|--|--|
| | K6CM-IS | | Insulation resistance: 0.000 M to 1.000 MΩ, Leakage current: 0.0 mA to 200.0 mA | |
| Measurement range | K6CM-CI | | Current Rating 5 A: 1.00 to 5.00 A Rating 25 A: 5.0 to 25.0 A Rating 100 A: 20.0 to 100.0 A Rating 200 A: 40.0 to 200.0 A Rating 400 A: 80.0 to 400.0 A Rating 600 A: 120.0 to 600.0 A Rated frequency: 20 to 80 Hz Degradation level: 0 to 999 | |
| | | Acceleration | Recommended frequency: 20 to 80 Hz *1 ±3 dB±2 digit (at 25°C) | |
| Measurement | K6CM-VB | Temperature | Motor temperature: ±3°C±2 digit (±6°F±2 digit) Temperature Gap: ±6°C±2 digit (±12°F±2 digit) | |
| absolute accuracy | K6CM-IS | Insulation resistance | $\pm 35\%$ rdg ± 2 digit (when the insulation resistance is 0.2 M Ω max.), when a 200-V/7.5-kW max. motor is used $\pm 25\%$ rdg ± 2 digit (when the insulation resistance is 0.4 M Ω max.), when a 400-V/7.5-kW max. motor is used $\pm 20\%$ | |
| | K6CM-CI | Current | ±1.0% FS±1 digit (at 10 to 30°C, CT variation is not included) *3 | |
| | K6CM-VB | | Acceleration: 50 ms, Velocity: 0.5 s, Temperature: 0.5 s | |
| Sampling cycle | K6CM-IS | | Normal mode: 10 s, Inverter special measurement mode: 60 s | |
| | K6CM-CI | | Comprehensive current diagnosis: 5 s, Current: 5 s | |
| Moving average | | | 1, 2, 4, 8, 16, 32 times | |
| External trigger | External con specification | <u> </u> | Short-circuit: Residual voltage 1.5 V max. Open: Leakage current 0.1 mA max. | |
| *4 | Current during | ng short- | Approx. 7 mA | |
| Transistor outpu | t | | Contact configuration: NPN open collector Rated voltage: 24 VDC (maximum voltage: 26.4 VDC) Max. current: 50 mA, DC | |
| | Parameters to output | hat can be | K6CM-VB: Acceleration, Velocity, motor temperature, Temperature Gap K6CM-IS: Insulation resistance Degradation level, current | |
| | Expression r | nethod | Transistor output, alarm bar | |
| | | K6CM-VB | Acceleration: 0.00 to 99.99 G, Velocity: 0.00 to 99.99 mm/s, Motor temperature: 0 to 9999 deg., Differential temperature: 0 to 9999 deg. | |
| Alarm | Setting | K6CM-IS | Insulation resistance: 0.000 M to 9.999 M Ω | |
| Alailli | value | K6CM-CI | Current Rating 5 A: 00.00 to 99.99 A Rating 25 A/100 A/ 200 A/400 A/600 A: 0.0 to 999.9 A | |
| | Uvatavasia | | Degradation level: 0 to 999 | |
| | Hysteresis | | 10% width of setting value | |
| | Reset metho | d | Manual reset/automatic reset (switchable) * Manual return method: Press the ALMRST button | |
| LCD display | 1 | | 7-Segment digital display and single-shot display Font height 14 mm | |
| | Conforming | standards | EN61010-2-030 Installation environment: Pollution degree 2, overvoltage category II, measurement category II | |
| Applicable standards | ЕМС | | EN61326-1(EMI: Class A EMS: Industrial Location) Acceleration ± 0.1G, Velocity ±2.25mm/s, Temperature ± 6°C, insulation resistance ± 35% rdg, current ± 10% F.S. | |
| | Safety standards | | UL61010-2-030 (listing) Korean Radio Waves Act (Act 10564) RCM EAC | |
| Insulation resista | ance | | $20~\text{M}\Omega$ min. Between all external terminals and the case Between all power supply terminals and all other terminals Between all sensor connection terminals and trigger input terminal + output terminal + all EtherNet/IP ports | |
| Dielectric strength | | | 2,000 VAC for 1 minute Between all external terminals and the case Between all power supply terminals and all other terminals Between all sensor connection terminals and trigger input terminal + output terminal + all EtherNet/IP ports | |
| Vibration resista | nce | | Vibration frequency 10 to 55 Hz, slice amplitude 0.35 mm in each of X, Y, Z directions 5 minute × 10 | |
| Shock resistance | , | | 100 m/s², 3 times each in 6 directions along 3 axes | |
| Degree of protec | tion | | IP20 | |
| Alarm bar | | | Red/Yellow/Green | |
| LED display | MS, NS *5 | | Red/Green | |
| | Number of p | orts | 1 | |
| | Physical layer | er | Ethernet: Connector RJ45 | |
| | | | | |
| Ethernet | Туре | | 100BASE-TX | |
| Ethernet communication | Type Transmission (Maximum ca | | 100BASE-TX 100 m (Between hub and node) | |

^{*1.} When used at a frequency higher than 80 Hz, the tendency toward motor degradation is less noticeable.

^{*2.} For details, refer to the technical data on page 16.

^{*3.} For the frequency characteristics of the CT, refer to the technical data on page 18.

*4. The external trigger function can be used only when the insulation resistance type is EIP CPU version 1.1 or higher.

*5. MS: Product status display, NS: Network status display.

Input part Vibration & temperature sensor Ratings

| Item | Model | K6CM-VBS1 |
|----------------------|-------------------|--|
| Power supply voltage | е | Supplied from K6CM-VBM |
| Sensor head | Max. acceleration | 10 G |
| Ambient operating to | emperature | Pre-amplifier: -10 to +55°C (with no condensation or icing) Sensor head: -10 to +80°C (with no condensation or icing) |
| Storage temperature | | Pre-amplifier: -20 to +65°C (with no condensation or icing) Sensor head: -20 to +90°C (with no condensation or icing) |
| Ambient operating h | umidity | 25% to 85% RH (with no condensation) |
| Storage humidity | | 25% to 85% RH (with no condensation) |
| Altitude | | 2,000 m max. |
| Case color | | Pre-amplifier: Black Sensor head: Silver |
| Case material | | Pre-amplifier: Polycarbonate UL94-V0 Sensor head: Aluminum alloy (ADC12) / Zinc die casting (ZDC2) (the threaded part is Steel (S45C)) |
| Weight | | Pre-amplifier: Approx. 210 g (including cables) Sensor head: Approx. 40 g (including cables) |
| Mounting | | Pre-amplifier: DIN rail mounting, screw mounting Sensor head: Screw mounting Between pre-amplifier and sensor head: Connector connection (smart click connector) |
| Wire length | | Between pre-amplifier and sensor head: 2.6 m+0.3 m (cannot be extended) Between pre-amplifier and main unit: 1 m Can be extended up to a maximum length of 100 m |

Characteristics

| Item | Model | K6CM-VBS1 |
|------------------------------|----------------------|---|
| Measurement range | | Specified in main unit "Characteristics" |
| | Conforming standards | EN 61010-2-030 Installation environment: Pollution degree 2, overvoltage category II, measurement category II |
| Applicable | EMC | EN 61326-1 (EMI: Class A EMS: Industrial Location) |
| standards | Safety standards | UL 61010-2-030 (listing) RCM EAC |
| Insulation resistant | ce | 20 M Ω min. |
| Dielectric strength | | 500 VAC for one minute |
| Vibration | Pre-amplifier | Vibration frequency 10 to 55 Hz, slice amplitude 0.35 mm in each of X, Y, Z directions 5 minute × 10 |
| resistance | Sensor head | Vibration frequency 10 to 55 Hz, slice amplitude 0.35 mm in each of X, Y, Z directions 5 minute × 10 |
| Oh | Pre-amplifier | 100 m/s², 3 times each in 6 directions along 3 axes |
| Shock resistance Sensor head | | 100 m/s², 3 times each in 6 directions along 3 axes |
| Degree of | Pre-amplifier | IP20 (excluding the sensor-side cable) |
| protection | Sensor head | Conforming to IP67G (JIS C 0920 : 2003, Appendix 1) |
| LED display | | Pre-amplifier PWR: Green, ERR: Red, COM: Orange |

8

ZCT (IRT)

Ratings and Specifications

| Item | Model | K6CM-ISZBI52 | | | |
|-------------------------------|----------------------|---|--|--|--|
| Construction | | Indoor split type | | | |
| Rated path current | | 300 A | | | |
| Through hole dia | а. | 2 mm dia. | | | |
| Rated voltage | | 200 to 480 VAC, 50 Hz/60 Hz three phase | | | |
| Measurement ra | nge | Specified in main unit "Characteristics" | | | |
| Measurement ac | curacy | Specified in main unit "Characteristics" | | | |
| Voltage input ter | rminal | 3-terminal lead wire, Length: 1m (pre-wired cable) | | | |
| Output terminal | | 4-terminal lead wire, Length: 1m (pre-wired cable) Available wire length 100 m max. | | | |
| | Conforming standards | EN 61010-2-030 Installation environment: Pollution degree 2, overvoltage category II, measurement category II | | | |
| Applicable | EMC | EN 61326-1 (EMI: Class A EMS: Industrial Location) | | | |
| standards | Safety standards | UL 61010-2-030 (Recognition) + CSA C22.2 No. 61010-2-030 RCM EAC | | | |
| Insulation resist | ance | Between Mounting bracket - Secondary winding: 100 MΩ min. | | | |
| Dielectric streng | th | Between Mounting bracket - Secondary winding: 2000 VAC, 1 minute | | | |
| Ambient operating temperature | | -10 to +55°C (with no condensation or icing) | | | |
| Ambient operati | ng humidity | 25 to 85% (with no condensation) | | | |
| Weight | | Approx. 2.3 kg (including cables) | | | |
| Degree of protection | | IP20 | | | |

CT

Ratings and Specifications

| Item | Model | K6CM-CICB005 | K6CM-CICB025 | K6CM-CICB100 | K6CM-CICB200 | K6CM-CICB400 | K6CM-CICB600 | |
|--|----------------|---|-----------------------|-------------------|-------------------|--------------------------|--------------|--|
| Construction | | Indoor split type | | • | 1 | 1 | 1 | |
| Primary-side rate | ed current | 5 A | 25 A | 100 A | 200 A | 400 A 600 A | | |
| Measurement ran | nge *1 | 1 to 5 A | 5 to 25 A | 20 to 100 A | 40 to 200 A | 80 to 400 A 120 to 600 A | | |
| Secondary-side | rated current | Dedicated current | | | | | | |
| Secondary windi | ng | 3000 turns | | | | 6000 turns | 9000 turns | |
| Insulation resista | ance | Between output tern | ninal and case: 50 M | Ω min. | | | | |
| Dielectric streng | th | Between output tern | ninal and case: 2,000 | VAC, 1 minute | | | | |
| Protective element | | 7.5 V clamp element | | | | | | |
| Permissible attachment/removal frequency | | 100 times | | | | | | |
| Attachable wire | diameter *2 | 7.9 mm dia. max. | 9.5 mm dia. max. | 14.5 mm dia. max. | 24.0 mm dia. max. | . 35.5 mm dia. max. | | |
| Operating temperature / humidity range | | -20 to +60°C, 25 to 85% (with no condensation or icing) | | | | | | |
| Storage temperature / humidity range | | -30 to +65°C, 25 to 85% (with no condensation or icing) | | | | | | |
| Supplied cable length | | 2.9 m (pre-wired cable) | | | | | | |
| Supplied cable | Main unit side | Ferrule terminal | | | | | | |
| terminal | CT side | Round terminal | Round terminal | | | | | |
| Degree of protection | | IP20 | | | | | | |

^{*1.} Select a CT that brings the current of the applicable motor into the measurement range.

To calculate the current, refer to the technical data on page 18.

^{*2.} When using a flat wire, be sure to refer to the external dimensions drawing of the CT before selection on page 15.

Motor condition monitoring Tool (Software included with main unit) Operating Environment

| Element | Specification | |
|--------------|---|--|
| Supported OS | Vindows 7, Windows 8.1, Windows 10 (32 bit/64 bit) (Japanese/English) | |
| .NET | .NET Framework 4 and .NET Framework 3.5 | |
| CPU | 1 GHz or more, 32 bit or 64 bit processor | |
| Memory | 1 GB or more, or 2 GB or more (for 64 bit) | |
| HDD | Available space of 16 GB or more, or 20 GB or more (for 64 bit) | |
| Others | Since this software is provided on a CD-ROM, a CD-ROM reading device must be available. If data is to be collected, a LAN I/F must be available. | |

Functions/Specifications (For more details, refer to the catalog of each product.)


| | Item | Specification | |
|---|--|---|--|
| Project Number of files that can be created | | No limit | |
| Log file | | CSV data format | |
| Monitoring cycle | | 5 second to 99999 second (one-second step) | |
| Number that can be | Number of motors (device groups) | 10 | |
| registered in one project | Number of devices per motor (device group) | 3* | |
| | Type of graph | Line graph | |
| Graphic display | Display period | 1 hour, 1 day, 1 month, 3 months, 6 months, 1 year, 2 years, 5 years, 10 years, 20 years | |

^{*}One vibration and temperature type, one insulation resistance type, and one current comprehensive diagnosis type can be set for one motor.


Connection Diagram

Terminal Diagram (Main Unit)

K6CM- $\frac{VB}{(1)}$ M $\frac{A}{(2)}$ -EIP

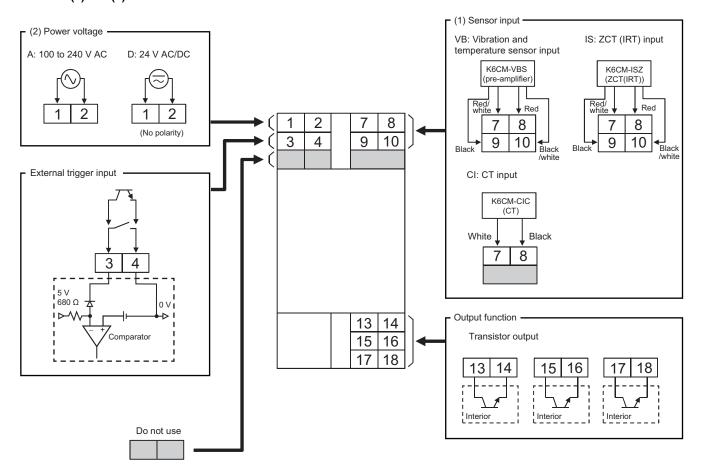

Nomenclature

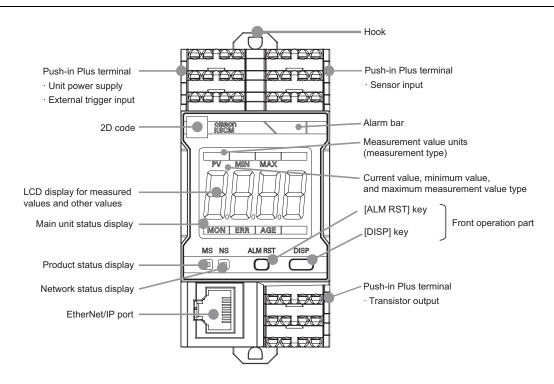

| Name | | | Meaning | | | |
|---------------------------|-------|---|---|--|--|--|
| Alarm bar | | A bar on which the color of the emitted light changes according to the alarm status. | It is indicated in the following colors during measurement/monitoring. Green: Alarm status (normal) Yellow: Alarm status (Warning) Red: Alarm status (Critical) The alarm bar is lit out in each of the following states: When the power is OFF, when measurement is not being performed, and when a self-diagnosis error has occurred, etc. | | | |
| Measurement type | | Indicates the type of the measured value being displayed. The type can be switched each time the [DISP] key is pressed on the front operation part. | K6CM-VB "G": Acceleration, "mm/s": Velocity, "T"; Motor temperature, "⊿T": Temperature Gap (difference between motor temperature and room temperature) K6CM-IS "MΩ": Insulation resistance, "mA": Leakage current K6CM-CI "Cim": Degradation level, "A": Current | | | |
| Front [ALM RST] key | | Releases the latched alarm state. | The main use of this key is to release the latched and fixed alarm state after returning from the fault state to the normal state. | | | |
| operation part [DISP] key | | Switches the type of the measured value being displayed. | | | | |
| Others | | If two keys are simultaneously pressed and held for 5 seconds or longer, all settings of the main unit are reset to factory defau | | | | |
| Main unit status display | | The status of the main unit is indicated by lighting of the LCD characters. | "MON": Measurement / monitoring is being performed "ERR": A self-diagnosis error has occurred "AGE": Running Time notification (it is recommended to replace the product main unit) | | | |
| | 13-14 | Output of the alarm status (Warning). Can be set to Normally Closed or Normally Open. | When measurement/monitoring is in progress, and the output method is Normally Closed ON = Comprehensive alarm: Normal / OFF = Comprehensive alarm: Warning or Critical and the output method is Normally Open OFF = Comprehensive alarm: Normal / ON = Comprehensive alarm: Warning or Critical | | | |
| Transistor output | 15-16 | Output of the alarm status (Critical). Can be set to Normally Closed or Normally Open. | When measurement/monitoring is in progress, and the output method is Normally Closed ON = Comprehensive alarm: Warning or Normal / OFF = Comprehensive alarm: Critical and the output method is Normally Open OFF = Comprehensive alarm: Warning or Normal / ON = Comprehensive alarm: Critical | | | |
| | 17-18 | Self-diagnosis error output. | OFF: A self-diagnosis error has occurred ON: Other than the above | | | |
| External trigger input | 3-4 | Input of the external contact signal to control measurement timing. | You can use "Trigger Type" to specify whether measurement/monitoring continue for a set time after starting by the rise or fall of the external contact, or are executed while the external contact is ON. You can also specify settings to enable selection of a trigger mode other than external trigger. * | | | |

Note: Warning: Indicates that it is time for maintenance.
Critical: Indicates that it is time for replacement.

* Trigger modes other than external trigger

Always: Trigger is not used. Measurement/monitoring are performed continuously after the power of the K6CM unit is turned on.

Internal trigger: Measurement/monitoring starts based on the relation between the measured value and set value (trigger level).

You can use "Trigger Type" to specify whether measurement/monitoring start and continue for a set time when the measured value is over, or under, the set value (trigger level), or are executed while the measured value exceeds the set value (trigger

level).


Also, the external trigger function can be used only when the insulation resistance type is EIP CPU version 1.1 or higher.


Dimensions (Unit: mm)

List of Models

K6CM-□□M





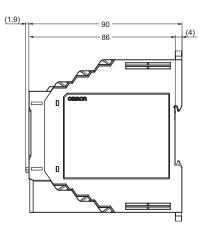


Vibration & temperature sensor

K6CM-VBS1


Pre-amplifier




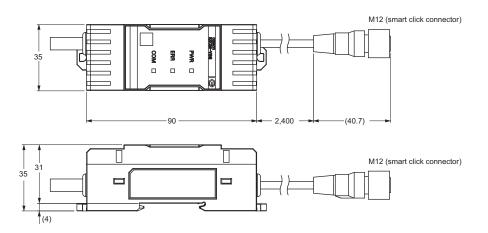


Sensor head










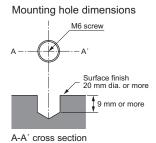



ZCT (IRT)


Indoor split type K6CM-ISZBI52



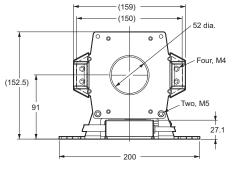









CT


K6CM-CICB005

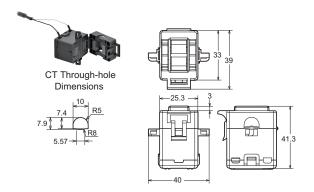


K6CM-CICB025

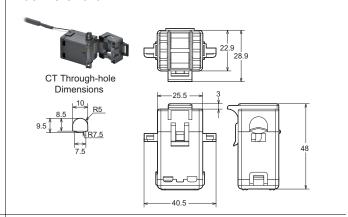


K6CM-CICB100

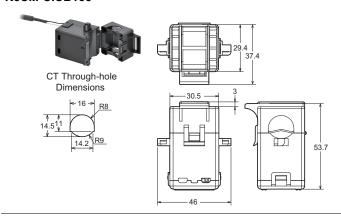


K6CM-CICB200

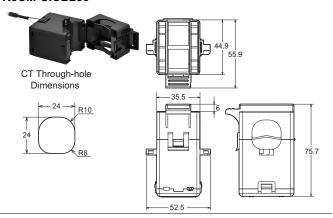

K6CM-CICB400 K6CM-CICB600

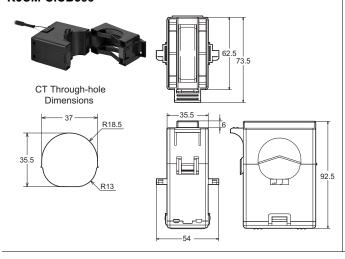

Cable supplied with CT

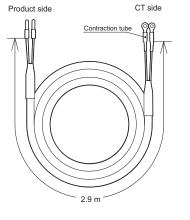


The cable supplied with the CT is shipped in the connected state.

Insulation Resistance Type Technical Data (Reference)

Method of measuring the value on the insulation resistance meter

Leakage current includes two types, namely capacitive leakage current (loc) that flows through the earth capacity, and resistive leakage current (lor) that flows due to the degradation of wiring and devices, and is the cause of electric shock and fire. The leakage current is determined by detecting the value of the zero-phase current lo, which is the combined component of loc and lor. (See the figure below)

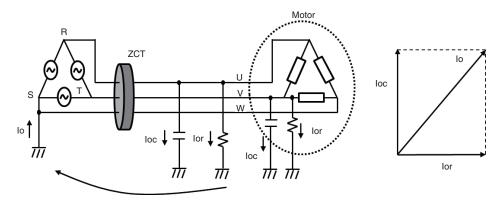

About changes in the measurement accuracy


If there is almost no insulation deterioration in the motor, almost the entire constituent of lo becomes loc, and the measurement accuracy of lor declines. Further, if the loc based on the motor-specific electrical capacitance is larger than lor, then the measurement accuracy will similarly decline. Particularly, if the electrical capacitance increases in proportion to the capacitance of the motor, the measurement accuracy changes depending on the motor capacitance.

The following items are the possible parameters affecting the measurement accuracy.

and the length of wire between ZCT (IRT) and the motor

Other noise components...... Through-current, through-position

External factors......Voltage imbalance

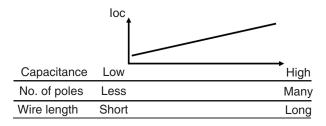

[Effect of residual current]

Another noise component is the residual current* (hereinafter, specified as Ir). Ir increases in proportion to the through-current.

* Residual current

Residual current refers to the error that occurs as a result of an imbalance in the magnetic flux of each phase inside the core due to the arrangement of the through-wire of ZCT.

Errors also occur as a result of the imbalance in the magnetic circuit of ZCT.

Ir combines with Io, and is output to the secondary side of ZCT. Ir is the same frequency component as Ior, and the amount of current or the phase difference with respect to Ior changes depending on the through-position of the power line passing through ZCT. Therefore, isolation from Ior, which must essentially be detected, becomes difficult.

If the position of ZCT and the through-wire is fixed once, the phase of Ir does not change. Moreover, by fixing the through-wire in the center of ZCT, Ir can be reduced. Fix and install the through-wire in the center as much as possible.

Use the following holder to fix the through-wire in the center of ZCT.

| Part name | Manufacturer | Model |
|---------------|-----------------------|-------|
| Rubber holder | Midori Anzen Co. Ltd. | HZ-25 |


Effect of voltage imbalance

The ZCT (IRT) calculates the lor from the phase difference between the measured lo and the voltage. If there is a voltage imbalance, the phase of each phase voltage will change, and an error will occur in the calculation of lor. Use the measurement results of the case when the voltage imbalance ratio is within 3%.

Range indicated by the measured value during insulation deterioration

The accuracy of the insulation resistance value is decided under the influence of several parameters. (The parameters are as described on page 16)

An example of the range shown by the measured value as a result of deterioration of the insulation resistance is shown in the figure below. loc may further increase depending on the manufacturer and structure of the motor, which may result in a decline in accuracy.

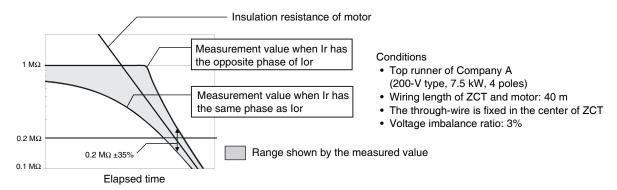

Inverter special measurement

A case is known where a motor is driven by setting the system voltage and inverter to the same frequency.

(Ex. System frequency: 60 Hz, inverter frequency: 60 Hz)

In the past, since it was not possible to remove the frequency component of the inverter in such a configuration, it was difficult to measure the insulation resistance.

In the inverter special measurement, the measurement of the insulation resistance is made possible by detecting the minute deviation in frequency. The 60 seconds required as the measurement time is the time for accumulation of the data necessary for this measurement.

Comprehensive Current Diagnosis Type Technical Data (Reference)

Use one CT per motor to detect current flowing into the motor. Select a CT that matches the motor capacity.

| CT type | Measurement range | Maximum measurement range | Applicable motor (200 VAC) | Applicable motor (400 VAC) |
|--------------------|-------------------|---------------------------|----------------------------|----------------------------|
| K6CM-CICB005 5 A | 1.00 A to 5.00 A | 1.00 A to 5.25 A | 0.75 kW | 1.5 kW to 2.2 kW |
| K6CM-CICB025 25 A | 5.00 A to 25.00 A | 5.00 A to 26.25 A | 1.5 kW to 5.5 kW | 3.7 kW to 11 kW |
| K6CM-CICB100 100 A | 20 A to 100 A | 20 A to 105 A | 7.5 kW to 22 kW | 15 kW to 45 kW |
| K6CM-CICB200 200 A | 40 A to 200 A | 40 A to 210 A | 30 kW to 45 kW | 55 kW to 90 kW |
| K6CM-CICB400 400 A | 80 A to 400 A | 80 A to 420 A | 55 kW to 90 kW | 110 kW to 200 kW |
| K6CM-CICB600 600 A | 120 A to 600 A | 120 A to 630 A | 110 kW to 150 kW | 250 kW to 300 kW |

Note: At no load, the motor current is at approximately half rated load.

Select a CT that can cover the range of 50% to 100% of rated current.

Use the following expression when calculating the current value from the motor capacitance.

Current value of motor (A) =
$$\frac{\text{Motor capacitance (kW)} \times 1000}{\text{Motor voltage (V)} \times \sqrt{3} \times \text{Power factor (0.9)} \times \text{Efficiency (0.8)}}$$

(Example) When a 5.5-kW motor is used at 200 V

Current value of motor =
$$\frac{5.5 \times 1000}{200 \times \sqrt{3} \times 0.9 \times 0.8} = 22 \text{ A}$$

Therefore, the CT K6CM-CICB025 in which 22 A is within the measurement range is selected.

The measurement range is within 20 and 100 A even in the case of K6CM-CICB100, which means that 22 A is within the range and this model can also be used. However, during selection, priority must be given to a CT having a small rated current value in order to realize more accurate measurement.


Note: In the expression shown above, general values must be used for the power factor and efficiency, and the load factor must be 100%. However, depending on the actual operating environment, the actual current value and measured value may be different. If the CT is used at a current value that is below the lower-limit value of the measurement range of the CT, the measurement error of the degradation level will increase. Therefore, if possible, measure the current during a steady-state operation with a clamp meter, etc., and select a CT corresponding to the current value.

The frequency characteristics of the CT are as indicated below.


K6CM-CICB005 5A

1.00% 0.50% 0.00% 0.


K6CM-CICB025 25A

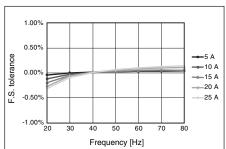


K6CM-CICB100 100A

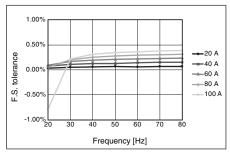


K6CM-CICB200 200A

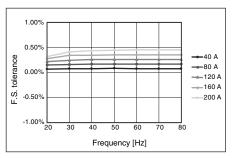

K6CM-CICB400 400A

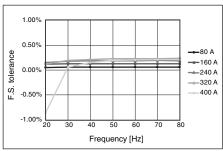

K6CM-CICB600 600A

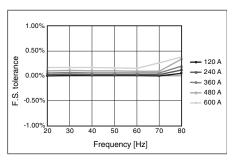


Vibration & Temperature Type: Technical Data

Pairing of sensor head and pre-amplifier

The sensor head and the pre-amplifier are calibrated and inspected as a set at the factory shipment. Be sure to use them with the combination shipped. The sensor head cannot be replaced.

To verify the combination, check the serial numbers on the label of the sensor head and the label of the pre-amplifier. The same serial number means the correct combination.

If you change the combination of factory shipping conditions and then use them, the value of acceleration and the value of velocity will be inconsistent, so measurement cannot be correctly monitored.

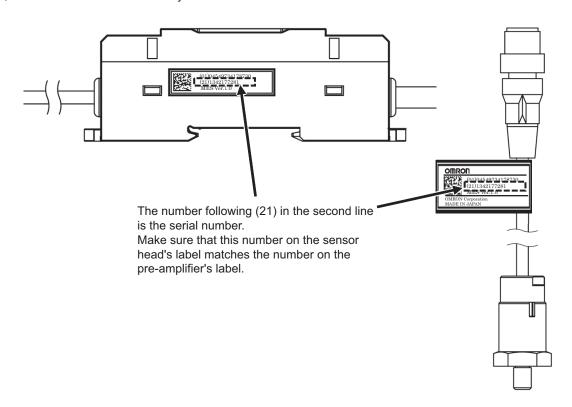

List of Parameters

Setting values

| | <u>.</u> | Model | | |
|--|---|--------------|--------------|--------------|
| Parameter | Content | K6CM -VBM | K6CM -ISM | K6CM -CIM |
| Acceleration/upper-limit alarm threshold value (Critical and Warning) | 0.00 to 99.99 G | • | | |
| Velocity/upper-limit alarm threshold value (Critical and Warning) | 0.00 to 99.99 mm/s | • | | |
| Motor temperature/upper-limit alarm threshold value (Critical and Warning) | 0 to 9999 deg. | • | | |
| Temperature gap/upper-limit alarm threshold value (Critical and Warning) | 0 to 9999 deg. | • | | |
| Insulation resistance/lower-limit alarm threshold value (Critical and Warning) | 0.000 to 9.999 MΩ | | • | |
| Degradation level/lower-limit alarm threshold value (Critical and Warning) | 0 to 999 | | | • |
| Current/upper-limit alarm threshold value (Critical and Warning) | CT rating 5 A: 00.00 to 99.99 A CT rating 25 A/100 A/200 A/400 A/600 A: 0.0 to 999.9 A | | | • |
| Main unit IP address | Sets the IP address of the main unit. The default value is "192.168.250.10" (common to all models) | • | • | • |
| Software reset | Restarts the K6CM. Used to enable the settings after changing the setting values. $0 \to 1$: Execute | • | • | • |
| MAX/MIN reset | Initializes the MAX/MIN value. $0 \rightarrow 1$: Execute | • | • | • |
| Display value type | Sets which measurement value to display in the 7-segment display at the front of the main unit. 0: PV (Present Value), 1: MIN, 2: MAX | • | • | • |
| Trigger mode *1 | Sets the trigger mode. 0: At all times, 1: External trigger, 2: Internal trigger | • | • | • |
| Trigger type | Sets Rise, Fall, or Level in the case of an internal trigger or external trigger. 0: Rise, 1: Fall, 2: Level | • | • | • |
| Trigger level | Sets the trigger level when "Internal trigger" and the trigger type "Level" have been selected. | • | • | • |
| Monitoring time | Sets the time for continuing measurement or monitoring in the case of an internal trigger or external trigger, when the trigger type is either Rise or Fall. Setting value: 0.1 to 600.0 s | • | • | • |
| Alarm latch | Sets whether to enable or disable the alarm latch function. 0: Disable (no latch), 1: Enable (latched) | • | • | • |
| Use Running Time | Sets whether or not to use the main unit residual amount function. 0: OFF (Do not use), 1: ON (Use) | • | • | • |
| Moving average times | Performs the averaging process for the past n-times of data including the sampling data of that time, each time sampling of the measurement value is performed. 0: OFF, 1: 2 times, 2: 4 times, 3: 8 times, 4: 16 times, 5: 32 times | • | • | • |
| Temperature unit | Sets the temperature unit. 0: °C, 1: °F | • | | |
| Circuit topology | Sets the Circuit topology. 0: Three-phase, three-conductor, S-phase ground 1: Three-phase, four-conductor, N-phase ground, load-side connection | | • | |
| Using inverter | Sets the Using inverter. 0: OFF (without inverter), 1: ON (with inverter) | | • | |
| Inverter special measurement | Sets the inverter special measurement. 0: OFF, 1: ON (Refers to the special calculation performed when the inverter frequency and commercial frequency are close.) | | • | |
| Current range | Selects the connected CT. 0: 5 A, 1: 25 A, 2: 100 A, 3: 200 A, 4: 400 A, 5: 600 A | | | • |
| Transistor output method *2 | 0: Normally Closed/1: Normally Open | • | • | • |

^{*1.} The external trigger function can be used only when the insulation resistance type is EIP CPU version 1.1 or higher. ***2.** Can be used only with EIP CPU version 1.1 or higher.

Measured values / Status data

| _ | | Model | | |
|---|---|--------------|--------------|--------------|
| Parameter | Content | K6CM -VBM | K6CM -ISM | K6CM -CIM |
| Acceleration (Present value, MIN, MAX) | 0.00 to 9.99 G | | | |
| Velocity (Present value, MIN, MAX) | 0.00 to 45.00 mm/s | • | | |
| Motor temperature | 0 to 80°C (32 to 176°F) | • | | |
| Temperature gap (Difference between motor temperature and room temperature) | 0 to 80°C (32 to 176°F) | • | | |
| Acceleration status | Bit 00: Present value measurement status Bit 01: Present value input error | | | |
| Velocity status | Bit 04: MAX value measurement status Bit 05: MAX value input error | • | | |
| Motor temperature status | Bit 08: MIN value measurement status Bit 09: MIN value input error Bit 12: Individual alarm threshold value (Warning) setting | | | |
| Temperature gap status | Bit 13: Individual alarm threshold value (Critical) setting | | | |
| Insulation resistance (Present value, MIN, MAX) | 0.000 to 1.000 MΩ | | • | |
| Leakage current lor (Present value, MIN, MAX) | 0.0 to 200.0 mA | | • | |
| Leakage current loc (Present value) | 0.0 to 200.0 mA | | • | |
| lor status | Bit 00: Present value measurement status Bit 01: Present value input error Bit 04: MAX value measurement status Bit 05: MAX value input error | | • | |
| loc status | Bit 08: MIN value measurement status Bit 09: MIN value input error Bit 12: Individual alarm threshold value (Warning) setting Bit 13: Individual alarm threshold value (Critical) setting | | - | |
| Degradation level (Present value, MIN, MAX) | Degradation level of the motor calculated by measuring the current including the high-frequency component. 0 to 999 | | | • |
| Current (Present value, MIN, MAX) | 10 to 100% of the rated value | | | • |
| Degradation level status | Bit 00: Present value measurement status Bit 01: Present value input error Bit 04: MAX value measurement status Bit 05: MAX value input error Bit 08: MIN value measurement status Bit 09: MIN value input error Bit 12: Individual alarm threshold value (Warning) setting Bit 13: Individual alarm threshold value (Critical) setting | | | • |
| Current value status | | | | |
| Measurement CPU version | Measurement unit version | • | • | • |
| Main CPU version | Main unit version | • | • | • |
| EIP CPU version | EtherNet/IP unit version | • | • | • |
| Measurement status | Measurement/monitoring in progress, Measurement/monitoring stopped | • | • | • |
| Running time status | The product of the operation time and internal temperature is integrated, and ON is set if it reaches the design life. 1: Reached (Operation integration has reached 100%) 0: Not reached (Operation integration has not reached 100%) | • | • | • |
| Trigger input | Status of external trigger input. 1: ON, 0: OFF | • | • | • |
| TR1 (Transistor 1 output status) | Status of transistor 1. 1: ON, 0: OFF | • | • | • |
| TR2 (Transistor 2 output status) | Status of transistor 2. 1: ON, 0: OFF | • | • | • |
| TR3 (Transistor 3 output status) | Status of transistor 3. 1: ON, 0: OFF | • | • | • |
| Running time | Coefficient showing the extent of life of the main unit based on the product of the operation time and internal temperature. Incremented in units of 10% starting from 0%. 0000 hex to 0064 hex (0 to 100) | • | • | • |

| | | Model | | |
|--|--|--------------|--------------|--------------|
| Parameter | Content | K6CM -VBM | K6CM -ISM | K6CM -CIM |
| Trigger frequency | Total integrated number of external triggers and internal triggers. Incremented by 1 after every 100 times. 0 to 65535 | • | • | • |
| Threshold value setting of integrated alarm (Warning) | State when the measurement value is "Warning". | • | • | • |
| Threshold value setting of integrated alarm (Critical) | State when the measurement value is "Critical". | • | • | • |
| Acceleration/upper-limit alarm (Critical and Warning) | ON, OFF | • | | |
| Velocity/upper-limit alarm (Critical and Warning) | ON, OFF | • | | |
| Motor temperature/upper-limit alarm (Critical and Warning) | ON, OFF | • | | |
| Temperature gap/upper-limit alarm (Critical and Warning) | ON, OFF | • | | |
| Insulation resistance/lower-limit alarm (Critical and Warning) | ON, OFF | | • | |
| Degradation level/lower-limit alarm (Critical and Warning) | ON, OFF | | | • |
| Current/upper-limit alarm (Critical and Warning) | ON, OFF | | | • |

| MEMO |
|------|
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |



OMRON AUTOMATION AMERICAS HEADQUARTERS • Chicago, IL USA • 847.843.7900 • 800.556.6766 • www.omron247.com

OMRON CANADA, INC. • HEAD OFFICE

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • www.omron247.com

OMRON ELECTRONICS DE MEXICO • HEAD OFFICE

México DF • 52.55.59.01.43.00 • 01-800-226-6766 • mela@omron.com

OMRON ELECTRONICS DE MEXICO • SALES OFFICE

Apodaca, N.L. • 52.81.11.56.99.20 • 01-800-226-6766 • mela@omron.com

OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE

São Paulo, SP, Brasil • 55.11.2101.6300 • www.omron.com.br

OMRON ARGENTINA • SALES OFFICE

Cono Sur • 54.11.4783.5300

OMRON CHILE • SALES OFFICE

Santiago • 56.9.9917.3920

OTHER OMRON LATIN AMERICA SALES

54.11.4783.5300

OMRON EUROPE B.V. • Wegalaan 67-69, NL-2132 JD, Hoofddorp, The Netherlands. • +31 (0) 23 568 13 00 • www.industrial.omron.eu

Authorized Distributor:

Controllers & I/O

- Machine Automation Controllers (MAC) Motion Controllers
- Programmable Logic Controllers (PLC) Temperature Controllers Remote I/O

Robotics

• Industrial Robots • Mobile Robots

Operator Interfaces

• Human Machine Interface (HMI)

Motion & Drives

- Machine Automation Controllers (MAC) Motion Controllers Servo Systems
- Frequency Inverters

Vision, Measurement & Identification

 $\bullet \ Vision \ Sensors \ \& \ Systems \ \bullet \ Measurement \ Sensors \ \bullet \ Auto \ Identification \ Systems$

Sensing

- Photoelectric Sensors Fiber-Optic Sensors Proximity Sensors
- Rotary Encoders Ultrasonic Sensors

Safety

- Safety Light Curtains Safety Laser Scanners Programmable Safety Systems
- Safety Mats and Edges Safety Door Switches Emergency Stop Devices
- Safety Switches & Operator Controls Safety Monitoring/Force-guided Relays

Control Components

- Power Supplies Timers Counters Programmable Relays
- Digital Panel Meters Monitoring Products

Switches & Relays

- Limit Switches Pushbutton Switches Electromechanical Relays
- Solid State Relays

Software

• Programming & Configuration • Runtime



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Interface Modules category:

Click to view products by Omron manufacturer:

Other Similar products are found below:

CYG2218 FAB118 8500-003 IFD8520 FAB100-RC 20-101-1338 cPCI-3544 CYG2217 CYG2320 422CON ATX6022/14GP7

ATX6022/8 AX93221-24/48 cPCI-3538 USB30-MIPI-TESTER-OV10640 MTAC-LORA-H-915 OPT8AP-AE 60006-016 96RMKVM
19V1C-A 60016-011 60016-014 60006-008 60016-015 60011-075 LPCIe-3488A HPCI-14S12U cBP-3208 cBP-3062A FAB205-6P5

FAB114 ATX6022/6 60016-012 96RMKVM-17V1C-A BB-QCLDVDSV2-KIT MOS-1120Y-0201E 96RMLCD-17V1-A 96RMKVM
17V8C-A 60004-005 60016-017 60006-019 60006-009 60004-002C 60016-035 60016-034 60016-031 60016-030 60016-026 60016-025 60016-024 60016-022