
## **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator

### **Product Overview**

The QPC3624 is a  $75\Omega$  6-bit digital step attenuator (DSA) that features high linearity over the entire 31.5 dB gain control range in 0.5 dB steps and has a low insertion loss of 1.2 dB at 1 GHz. The QPC3624 features three modes of control: serial, latched parallel, and direct parallel programming. Patented circuit architecture provides overshoot-free transient switching performance. The QPC3624 is available in a 24-pad 4mm x 4mm x 0.90 mm QFN package.





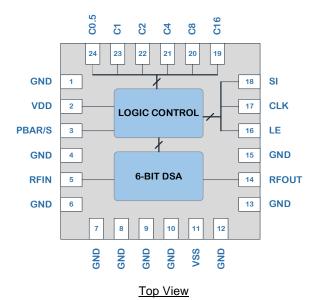

24 Pad 4 x 4 mm QFN Package

### **Key Features**

- 6-Bit, 31.5 dB Range, 0.5 dB Step
- Patented Circuit Architecture
- Overshoot-free Transient Switching Performance
- Frequency Range 47 MHz to 2000 MHz
- High Linearity, IIP3 55dBm Typical
- Serial and Parallel Control Interface
- Fast Switching Speed, <250 nsec Typical
- RF Pads Have No DC Voltage, Can be DC Grounded Externally
- Option to Turn Off Negative Voltage Generator and Supply Vss Externally
- Power-up Default Setting Is Maximum Attenuation

### **Applications**

- Optical Nodes
- Point-to-Point
- MDU Amplifiers
- Pre-amplifier Attenuation
- Inter-stage Attenuation
- Return Attenuation
- AGC

## **Ordering Information**

Part No.	Description
QPC3624SQ	Sample bag with 25 pieces
QPC3624SR	7" Reel with 100 pieces
QPC3624TR13	13" Reel with 2500 pieces
QPC3624PCK	47-2000 MHz PCBA with 5 pc. sample bag

# QPC3624

## **Absolute Maximum Ratings**

Parameter	Rating
Supply Voltage (V <sub>DD</sub> )	-0.5 to +6.0 V
Supply Voltage (V <sub>SS</sub> )	-6.0 to +0.5 V
All Other DC and Logic Pads (Supply Voltage Must Be Applied Prior to Any Other Pin Voltage)	-0.5 to VDD
Maximum Input Power at RFIN Pad at 85 °C Case Temperature	+30 dBm
Maximum Input Power at RFOUT Pad at 85 °C Case Temperature	+27 dBm
Storage Temperature Range	−65 to +150 °C

Exceeding any one or a combination of the Absolute Maximum Rating conditions may cause permanent damage to the device. Extended application of Absolute Maximum Rating conditions to the device may reduce device reliability.

## **Recommended Operating Conditions**

75Ω 47-2000 MHz Digital Step Attenuator

Parameter	Min	Тур	Мах	Units
Supply Voltage, V <sub>DD</sub>	+2.7	+5.0	+5.5	V
Supply Voltage, V <sub>SS</sub>	-5.5	-5.0	-4.5	V
Temperature Range	-40		+85	°C
Junction Temperature			+125	°C

Electrical specifications are measured at specified test conditions. Specifications are not guaranteed over all recommended operating conditions.

## **Electrical Specifications**

Parameter	Condition <sup>(1)</sup>	Min	Тур	Max	Unit
Supply Current (IDD)	Steady state operation, current draw during attenuation state transitions is higher.	190			μA
Supply Current (Iss)	Steady state operation, current draw during attenuation state transitions is higher.		105		μA
Frequency Range		47		2000	MHz
Insertion Loss	1GHz		1.2		
Maximum Attenuation			31.5		dB
Absolute Attenuation Error		±(0.2 + 4%)			dB
Input IP3	47MHz, Two tones, 13dBm/tone		55		dBm
Input P0.1dB <sup>(2)</sup>			>30		dBm
CSO	130 Channel, Flat Tilt, +42 dBmV/ch, 0dB Atten		-80		dBc
СТВ	130 Channel, Flat Tilt, +42 dBmV/ch, 0dB Atten		<-90		dBc
Return Loss	1GHz		20		dB
Input and Output Impedance			75		Ω
Switching Speed	50% control to 10% / 90% RF		230		nsec
Digital Logic Low				0.63	V
Digital Logic High		1.17			V
Thermal Resistance, θjc	Junction to case		56		°C/W


Notes:

1. Typical performance at these conditions: Temp = +25°C, 1000MHz,  $V_{DD}$  = +5V,  $V_{SS}$  = -5V, 75 $\Omega$  system.

2. Figure of merit – exceeds maximum input power of device.


# **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator

## Typical Application Schematic – Serial Mode 47–1200 MHz

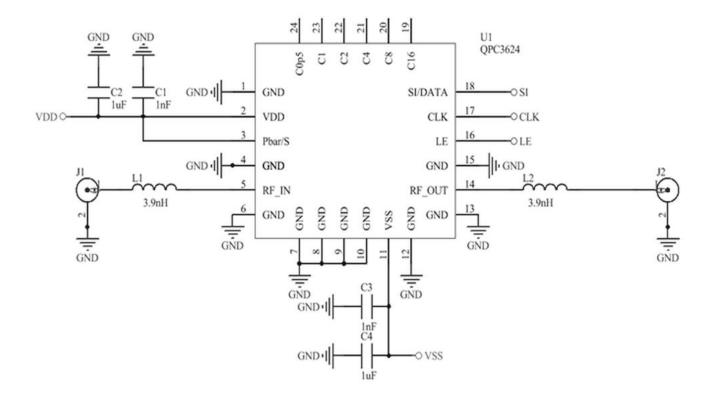

# **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator

### **Evaluation Board Schematic 47–2000 MHz**

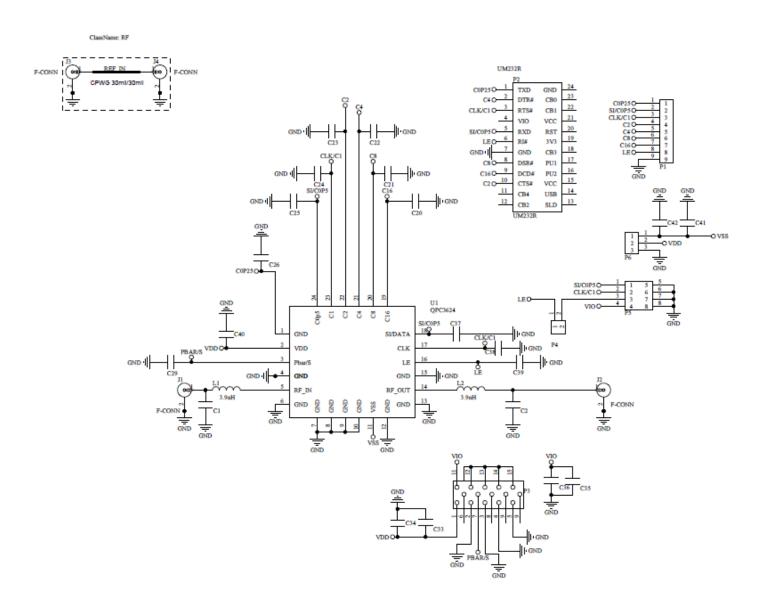

# **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator


Ref. Designator	Description	Manufacturer	Part Number
PCB	QPC3624-4000	Viasystems	QPC3624-4000(A)
U1	Digital Step Attenuator, 47 MHz to 2000 MHz	Qorvo	QPC3624SB
C34, C42	CAP, 1 μF, 10%, 25 V, X7R, 1206	Taiyo Yuden (USA), Inc.	CE TMK316BJ105KL-T
J1-J4	CONN, F FEM, EDGE MOUNT, 75 $\Omega$ , 0.065"	Genesis Technology USA	GT20-300204
P1	CONN, HDR, ST, 9-PIN, 0.100"	Samtec Inc.	TSW-109-07-G-S
Р3	CONN, HDR, ST, 3 x 5, 0.100", T/H	Samtec Inc.	TSW-105-07-L-T
P4	CONN, HDR, ST, 2-PIN, 0.100"	Samtec Inc.	TSW-102-07-G-S
Р5	CONN, HDR, 2 x 4, RA, 0.100", T/H	Samtec Inc.	TSW-104-08-G-D-RA
P2	CONN, SKT, 24-PIN DIP, 0.600", T/H	Aries Electronics Inc.	24-6518-10
Р6	CONN. HDR, SRT, PLRZD, 3-PIN, 0.100"	ITW Pancon	MPSS100-3-C
M1 (See Note 1)	MOD, USB TO SERIAL UART, SSOP-28	Future Technology Devices Int'l	UM232R
S1, S2	JMPR, 2-PIN	3M Interconnect Solutions	929950-00
C40, C41	CAP, 1 nF, 5%, 50 V, C0G, 0402	Murata Electronics	GRM1555C1H102JA01D
L1, L2	IND, 3.9 nH, FILM, 0402, +/- 0.1 nH	Murata Electronics	LQP15MN3N9B02
C1, C2, C5-C13, S6	DNP	N/A	N/A

Notes:

- 1. M1 should be mounted into P2 with respect to the Pin 1 alignment of M1 and P2.
- 2. Jumpers S1 and S2 should be installed on P3. Jumper S6 is DNP.

# **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator

## **Evaluation Board Assembly Drawing**

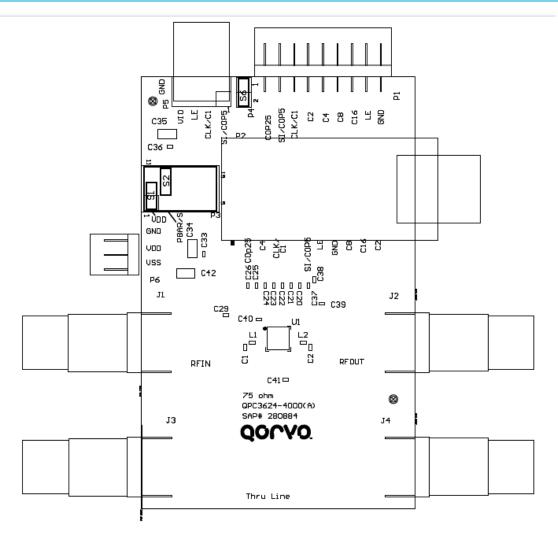


### **On Board Jumpers**


Jumpers	Connector	Signal	Position	U1 Connection	Comment	
S1		Logic	0	VDD (From P6)		
51	52	Voltage PBar/S		1	VIO (From P5)	
S2	P3			0	GND	Parallel Mode
52		PDai/S	1	U1_VDD	Serial Mode	
86	D4	LE	OPEN	LE (from UM232R)	Only install for external SPI control	
	S6 P4		INSTALLED	LE (from P5.3)	through P5	


# **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator


### **Performance Plots**


Test conditions unless otherwise noted:  $V_{DD}$  =+5 V,  $V_{SS}$  = -5V, Temp= +25 °C,  $Z_o$  = 75 $\Omega$ 

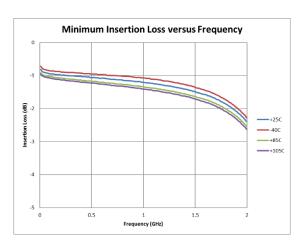


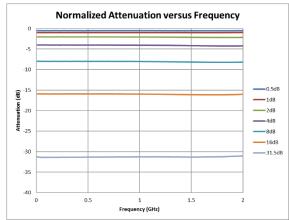

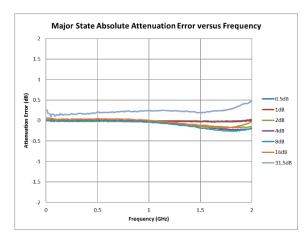

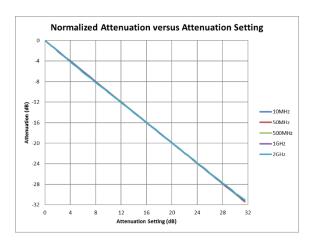

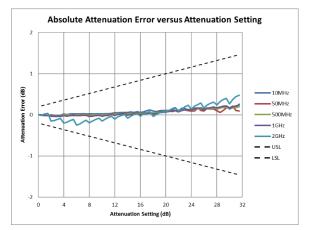


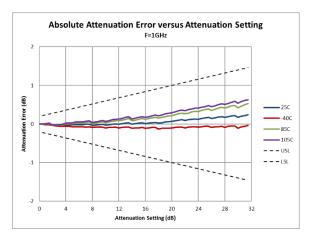



# **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator


## **Performance Plots (cont'd.)**


Test conditions unless otherwise noted:  $V_{DD}$  =+5 V,  $V_{SS}$ = -5V Temp= +25 °C,  $Z_{o}$  = 75 $\Omega$ 

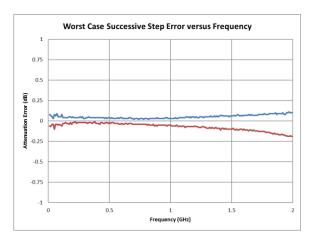


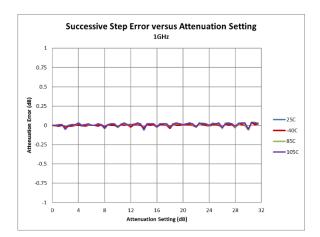

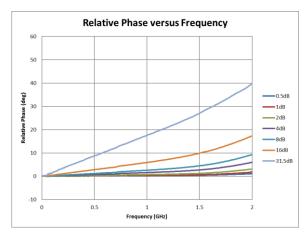

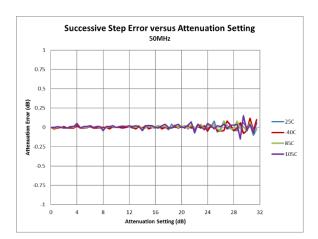

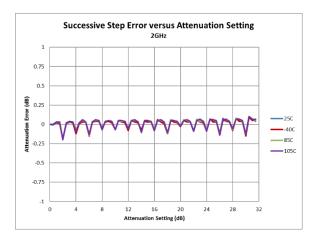


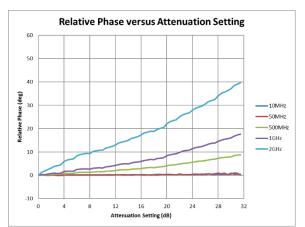



# **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator


## **Performance Plots (cont'd.)**


Test conditions unless otherwise noted:  $V_{DD}$  =+5 V,  $V_{SS}$ = -5V Temp= +25 °C,  $Z_0$  = 75 $\Omega$ 

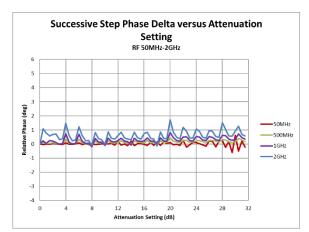


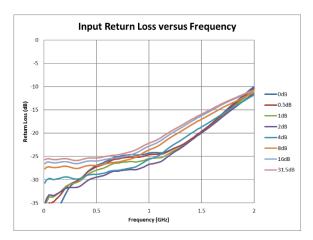

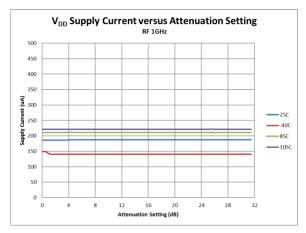

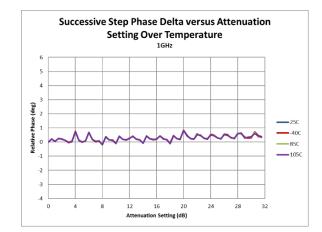

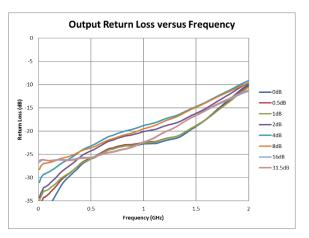


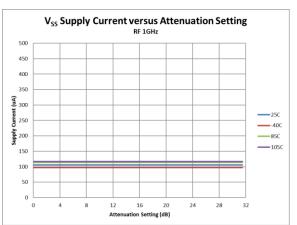



# **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator


## **Performance Plots (cont'd.)**


Test conditions unless otherwise noted:  $V_{DD}$  =+5 V,  $V_{SS}$ = -5V Temp= +25 °C,  $Z_{o}$  = 75 $\Omega$ 

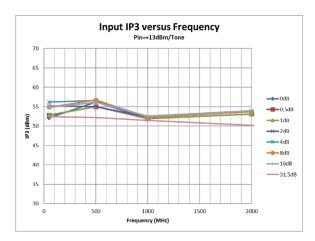


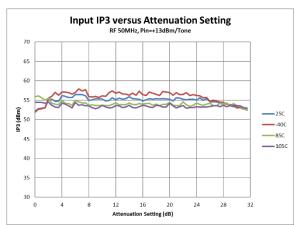

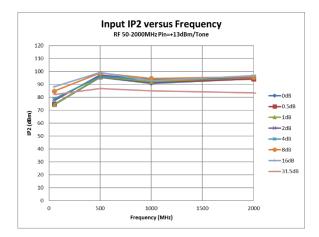

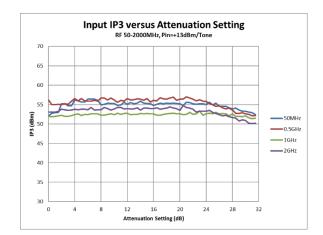

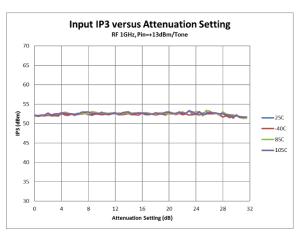


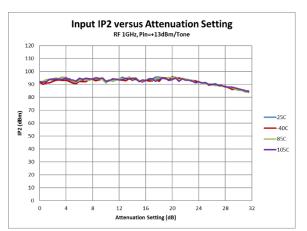



# **QPC3624** 75Ω 47-2000 MHz Digital Step Attenuator


## **Performance Plots (cont'd.)**


Test conditions unless otherwise noted:  $V_{DD}$  =+5 V,  $V_{SS}$ = -5V Temp= +25 °C,  $Z_{o}$  = 75 $\Omega$ 

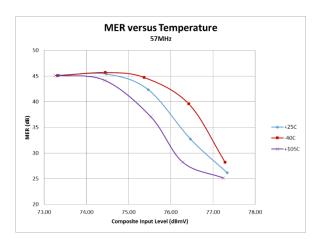


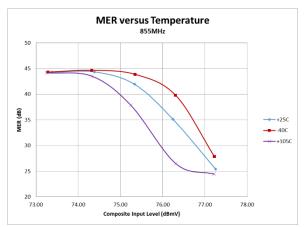

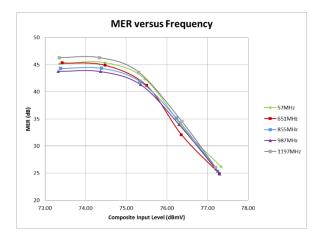

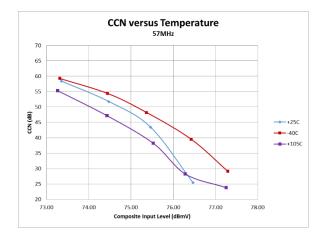

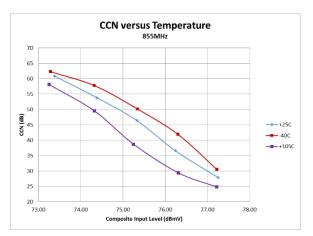

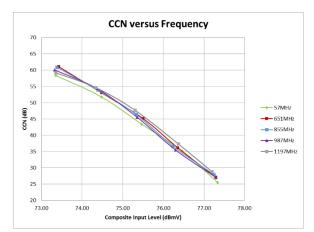

MER/CCN Test Conditions:

- 1. 190 QAM256 Channels, 57-1215MHz, ITU-T J.83, Annex B
- 2. CCN test procedure according to ANSI/SCTE 17. System BW 5.36MHz.
- 3. OdB Attenuation Setting

## **Evaluation Board Programming Using USB Interface**

#### Serial Mode

All programming jumpers on the evaluation board are set to the default values indicated in the table. Refer to the Control Bit Generator (CBG) Software Reference Manual for instructions on how to setup the software for use. Apply supply voltage to P6. Select 'QPC3624' for serial operation from the parts list of the CBG user interface. Set the attenuation value using the CBG user interface.

#### **Direct Parallel Mode**

Evaluation board programming jumper S2 is set to '0'. Refer to the Control Bit Generator (CBG) Software Reference Manual for instructions on how to setup the software for use. Apply the supply voltage to P6. Select 'QPC3624-P' from the parts list of the CBG user interface. Set the attenuation value using the CBG user interface.

### **Evaluation Board Programming Using External Bus**

#### Serial Mode

This configuration allows the user to control the attenuator through the P5 connector using an external harness. Remove the USB interface board if it is currently installed on the evaluation board. Connect a user-supplied harness to the P5 connector. Note that the top row of P5 contains the serial bus signals and the bottom row is ground. Programming jumper S2 is set to '1' to select serial mode. Jumper S6 is installed and allows the LE signal to be routed from the P5 connector to the attenuator. Apply the supply voltage to P6. Send the appropriate signals onto the serial bus lines in accordance with the Serial Addressable Mode Timing Diagram.

#### Latched Parallel Mode

This configuration allows the user to control the attenuator through the P1 connector using an external harness. Remove the USB interface if it is currently installed on the evaluation board. Connect a user-supplied harness to the P1 connector. The parallel bus signal names for P1 are indicated on the evaluation board. Programming jumper S2 is set to '0' to select parallel mode. Apply the supply voltage to P6. Send the appropriate signals onto the parallel bus lines in accordance with the Latched Parallel Mode Timing Diagram.

#### **Direct Parallel Mode**


This configuration allows the user to control the attenuator through the P1 connector using an external harness. When using this mode the LE signal is held at logic high so that the attenuation will change immediately when there is a change in logic state for any of the parallel bus signals. Remove the USB interface if it is currently installed on the evaluation board. Connect a user-supplied harness to the P1 connector. The parallel bus signal names for P1 are indicated on the evaluation board. Programming jumper S2 is set to '0' to select parallel mode. Apply the supply voltage to P6. Send the appropriate signals onto the parallel bus lines.

### **Default Power-up State**

This default attenuation state is maximum (31.5 dB) when supply voltage is applied to the attenuator in both serial and parallel modes. If a different attenuation state is desired during power-up, this can be accomplished by applying signals according to the Parallel Mode Truth Table. The attenuator will power-up to the state applied to the parallel bus during turn on. The LE signal must be held to logic '0' during power-up. Note that the FDTI controller can interfere with the default power-up state – removing the plug in module will allow normal expected power default operation.

## **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator

## **Pad Configuration and Description**

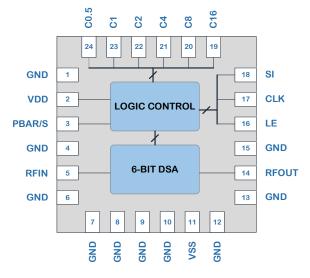

#### Top View

Pad No.	Label	Description						
1, 4, 6, 7, 8, 9, 10, 12, 13, 15	GND	Ground Pad						
2	VDD	Positive Supply Voltage						
3	PBAR/S	Mode Select Pad, Logic Low = Parallel, Logic High = Serial						
		RF Input Pad. Incident RF power must enter this pad for rated thermal performance and reliability						
5	RF <sub>IN</sub>	Do not apply DC power to this pad. Pad may be DC grounded externally and is grounded thru resistors internal to the part.						
11	VSS	External Negative Supply Voltage. Grounding pin enables on-chip negative voltage generator. Apply negative voltage to disable on-chip generator.						
14	RF <sub>OUT</sub>	RF Output Pad; Do not apply DC power to this pad. Pad may be DC grounded externally and is grounded thru resistors internal to the part.						
16	LE	Latch Enable. The leading edge of signal on LE causes the attenuator to change states for serial and latched parallel modes. For direct parallel mode, keep LE at a logic high level.						
17	CLK	Serial Clock Input						
18	SI	Serial Data Input						
19	C16	16 dB Parallel Control Bit						
20	C8	8 dB Parallel Control Bit						
21	C4	4 dB Parallel Control Bit						
22	C2	2 dB Parallel Control Bit						
23	C1	1 dB Parallel Control Bit						
24	C0.5	0.5 dB Parallel Control Bit						
Backside Paddle	RF/DC GND	RF/DC ground. Use recommended via pattern to minimize inductance and thermal resistance. See PCB Mounting Pattern for suggested footprint.						

## **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator

### **Serial Mode Attenuation Word Truth Table**


D5	D4	D3	D2	D1	D0 (LSB)	Attenuation State
L	L	L	L	L	L	0 dB / Reference Insertion Loss
L	L	L	L	L	Н	0.5 dB
L	L	L	L	Н	L	1 dB
L	L	L	Н	L	L	2 dB
L	L	Н	L	L	L	4 dB
L	Н	L	L	L	L	8 dB
Н	L	L	L	L	L	16 dB
 Н	Н	Н	Н	Н	н	31.5 dB

### Parallel Mode Attenuation Word Truth


		Attenuat	ion Word			
C16	C8	C4	C2	C1	C0.5 (LSB)	Attenuation State
L	L	L	L	L	L	0 dB / Reference Insertion Loss
L	L	L	L	L	Н	0.5 dB
L	L	L	L	Н	L	1 dB
L	L	L	н	L	L	2 dB
L	L	Н	L	L	L	4 dB
L	Н	L	L	L	L	8 dB
Н	L	L	L	L	L	16 dB
Н	Н	Н	Н	Н	Н	31.5dB

## **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator

## **Serial Mode Timing Diagram**

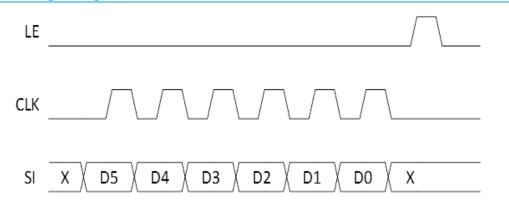


### Latched Parallel Mode Timing Diagram

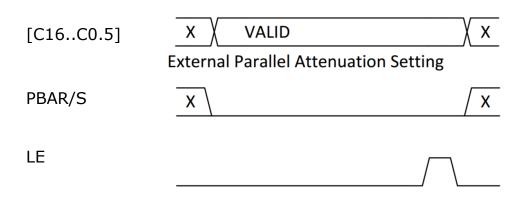

# **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator


## **Serial BUS Timing Specifications**

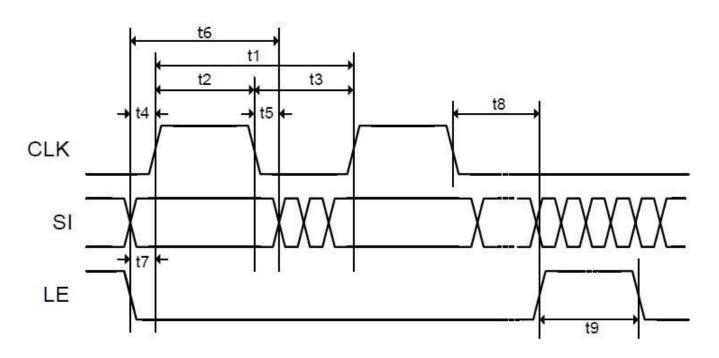

Parameter	Limit	Unit	Comment
t1	25	MHz max	CLK Frequency
t2	20	ns min	CLK High
t3	20	ns min	CLK Low
t4	5	ns min	SI to CLK Setup Time
t5	5	ns min	SI to CLK Hold Time
t6	30	ns min	SI Valid
t7	5	ns min	LE to CLK Setup Time
t8	5	ns min	CLK to LE Setup Time
t9	10	ns min	LE Pulse Width

## **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator

## **Package Dimensions**

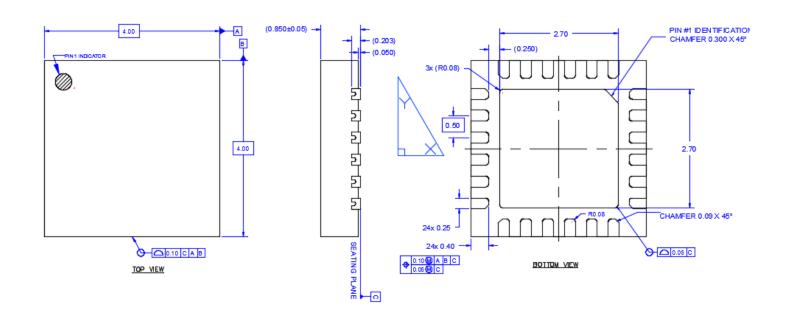


Notes:

- 1. All dimensions are in millimeters. Angles are in degrees.
- 2. Dimension and tolerance formats conform to ASME Y14.4M-1994.
- 3. The terminal #1 identifier and terminal numbering conform to JESD 95-1 SPP-012.
- 4. Contact plating: NiPdAu

# **QPC3624** 75Ω 47–2000 MHz Digital Step Attenuator


### **Package Marking**

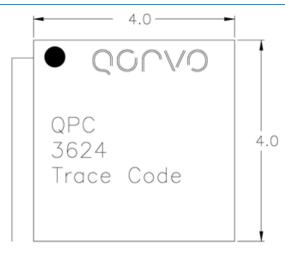

Pin 1 Indicator

Trace Code to be assigned by SubCon

### **Recommended Mounting Pattern**

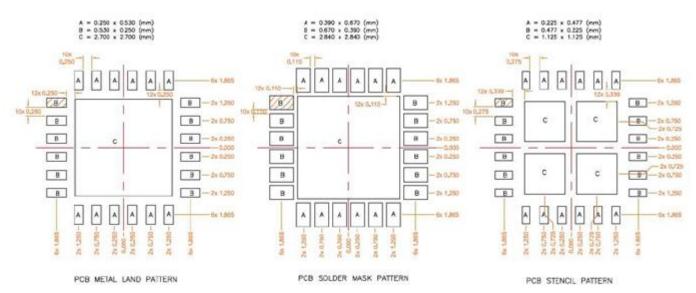

Thermal vias for center slug "C" should be incorporated into the PCB design. The number and size of thermal vias will depend on the application, the power dissipation, and the electrical requirements. Example of the number and size of vias can be found on the Qorvo evaluation board layout.

### Handling Precautions

Parameter	Rating	Standard	
ESD-Human Body Model (HBM)	Class 1C (1000V)	ESDA/JEDEC JS-001-2012	Caution!
ESD-Charged Device Model (CDM)	Class C3 (1000V)	JEDEC JESD22-C101F	ESD-Sensitive Device
MSL-Moisture Sensitivity Level	Level 1	IPC/JEDEC J-STD-020	

### **Solderability**

Compatible with both lead-free (260°C max. reflow temp.) and tin/lead (245°C max. reflow temp.) soldering processes. Solder profiles available upon request.

Contact plating: NiPdAu

## **RoHS Compliance**

This part is compliant with 2011/65/EU RoHS directive (Restrictions on the Use of Certain Hazardous Substances in Electrical and Electronic Equipment) as amended by Directive.

This product also has the following attributes:

- Lead Free
- Halogen Free (Chlorine, Bromine)
- Antimony Free
- TBBP-A (C<sub>15</sub>H<sub>12</sub>Br<sub>4</sub>0<sub>2</sub>) Free
- PFOS Free
- SVHC Free

## **Contact Information**

For the latest specifications, additional product information, worldwide sales and distribution locations:

Tel: 1-844-890-8163

Web: <u>www.qorvo.com</u>

Email: customer.support@gorvo.com

### **Important Notice**

The information contained herein is believed to be reliable; however, Qorvo makes no warranties regarding the information contained herein and assumes no responsibility or liability whatsoever for the use of the information contained herein. All information contained herein is subject to change without notice. Customers should obtain and verify the latest relevant information before placing orders for Qorvo products. The information contained herein or any use of such information does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other intellectual property rights, whether with regard to such information itself or anything described by such information. THIS INFORMATION DOES NOT CONSTITUTE A WARRANTY WITH RESPECT TO THE PRODUCTS DESCRIBED HEREIN, AND QORVO HEREBY DISCLAIMS ANY AND ALL WARRANTIES WITH RESPECT TO SUCH PRODUCTS WHETHER EXPRESS OR IMPLIED BY LAW, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE OF TRADE OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Without limiting the generality of the foregoing, Qorvo products are not warranted or authorized for use as critical components in medical, life-saving, or life-sustaining applications, or other applications where a failure would reasonably be expected to cause severe personal injury or death.

Copyright 2016 © Qorvo, Inc. | Qorvo is a registered trademark of Qorvo, Inc.



# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for RF Development Tools category:

Click to view products by Qorvo manufacturer:

Other Similar products are found below :

MAAM-011117 MAAP-015036-DIEEV2 EV1HMC1113LP5 EV1HMC6146BLC5A EV1HMC637ALP5 EVAL-ADG919EBZ ADL5363-EVALZ LMV228SDEVAL SKYA21001-EVB SMP1331-085-EVB EV1HMC618ALP3 EVAL01-HMC1041LC4 MAAL-011111-000SMB MAAM-009633-001SMB MASW-000936-001SMB 107712-HMC369LP3 107780-HMC322ALP4 SP000416870 EV1HMC470ALP3 EV1HMC520ALC4 EV1HMC244AG16 MAX2614EVKIT# 124694-HMC742ALP5 SC20ASATEA-8GB-STD MAX2837EVKIT+ MAX2612EVKIT# MAX2692EVKIT# EV1HMC629ALP4E SKY12343-364LF-EVB 108703-HMC452QS16G EV1HMC863ALC4 EV1HMC427ALP3E 119197-HMC658LP2 EV1HMC647ALP6 ADL5725-EVALZ MAX2371EVKIT# 106815-HMC441LM1 EV1HMC1018ALP4 UXN14M9PE MAX2016EVKIT EV1HMC939ALP4 MAX2410EVKIT MAX2204EVKIT+ EV1HMC8073LP3D SIMSA868-DKL SIMSA868C-DKL SKY65806-636EK1 SKY68020-11EK1 SKY67159-396EK1 SKY66181-11-EK1