

PAGE 1/8

ISSUE 06-11-2014


SERIES SPnT

PART NUMBER R594 XXX XXX

SPnT Coaxial Switches DC to 6 GHz, DC to 20 GHz, DC to 26.5 GHz, DC to 40 GHz

Radiall's PLATINUM SERIES switches are optimised to perform at a high level over an extended life span. With outstanding RF performances, and a guaranteed Insertion Loss repeatability of 0.03 dB over a life span of 10 million switching cycles. PLATINUM SERIES switches are perfect for automated test and measurement equipment, as well as signal monitoring devices.

PART NUMBER SELECTION

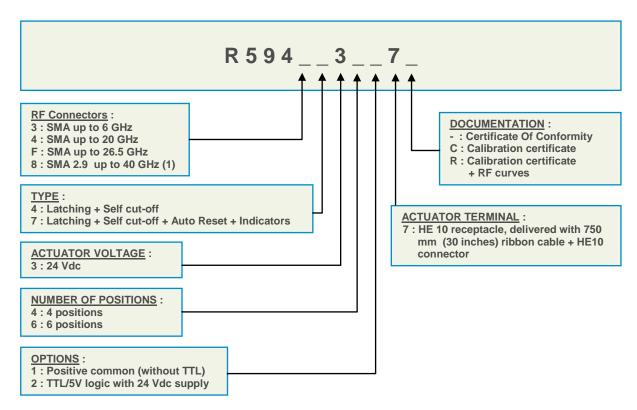

(1) Connector SMA2.9 is equivalent to "K Connector®", registered trademark of Anritsu

PICTURE





Technical Data Sheet

TERMINATED MULTIPORT SWITCHES PLATINUM Series

PAGE **2/8**

ISSUE 06-11-2014


SERIES SPnT

PART NUMBER R594 XXX XXX

RF PERFORMANCES

PART NUMBER	R5943-34-7 R5943-36-7	R5944-34-7 R5944-36-7	R594F-34-7 R594F-36-7	R5948-34-7 R5948-36-7	
Frequency Range GHz	DC to 6	DC to 20	DC to 26.5	DC to 40	
Impedance Ohms	50				
Insertion Loss dB (Maximum)	0.3 + 0.015 x frequency (GHz)				
Isolation dB (Minimum)	100	DC to 6 GHz : 100 6 to 12.4 GHz : 90 12.4 to 20 GHz : 80	DC to 6 GHz : 100 6 to 12.4 GHz : 90 12.4 to 20 GHz : 80 20 to 26.5 GHz : 70	DC to 6 GHz : 100 6 to 12.4 GHz : 90 12.4 to 20 GHz : 80 20 to 26.5 GHz : 70 26.5 to 40 GHz : 60	
V.S.W.R. (Maximum)	1.20	DC to 6 GHz : 1.20 6 to 12.4 GHz : 1.35 12.4 to 18 GHz : 1.45 18 to 20 GHz : 1.70	DC to 6 GHz : 1.20 6 to 12.4 GHz : 1.35 12.4 to 18 GHz : 1.45 18 to 26.5 GHz : 1.70	DC to 6 GHz : 1.20 6 to 12.4 GHz : 1.35 12.4 to 18 GHz : 1.45 18 to 26.5 GHz : 1.70 26.5 to 40 GHz : 1.90	
Third order Inter Modulation	-120 dBc typical (2 carriers 20W)				
Repeatability (measured at 25°C)	0.03 dB			0.05 dB	

TYPICAL RF PERFORMANCES

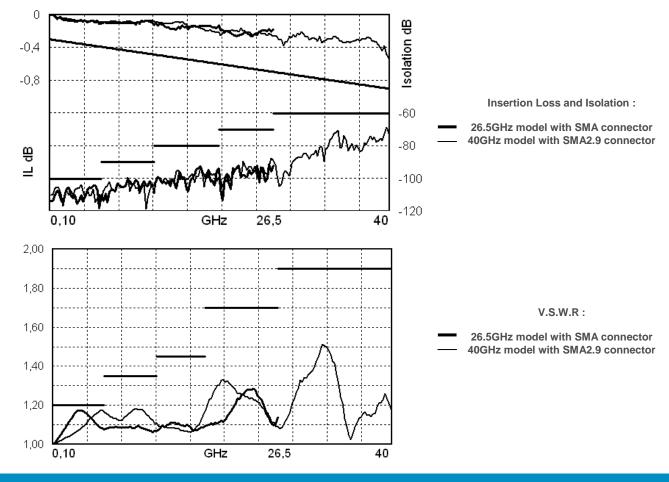



Technical Data Sheet

TERMINATED MULTIPORT SWITCHES PLATINUM Series

PAGE 3/8	
-----------------	--

ISSUE 06-11-2014

SERIES SPnT

PART NUMBER R594 XXX XXX

ADDITIONAL SPECIFICATIONS

Operating mode		Latching			
Nominal operating voltage (Vdc) (across operating temperature)		24 (20 / 32)			
Coil resistance (+/-10%) (Ohms)		120			
Nominal operating current at 23°C (mA)		200			
Maximum stand-by current (mA)		50			
Average power		, v	RF path Cold switching : see Power Rating Chart on page 8 Hot switching : 1 Watt CW		
	High Level	3 to 7 V	1.4 mA max at Vcc = Max		
TTL input	Low Level	0 to 0.8 V			
Indicator specifications		Maximum withstanding Maximum current capa Maximum « ON » resis Minimum « OFF » resi	acity : 150 mA stance : 2.5 Ω		
Switch	ing time max (ms)	15			
Life min for	SMA	10 million cycles			
	SMA 2.9	2.5 million cycles			
	Connectors	SMA – SMA 2.9			
Act	tuator terminal	HE10 ribbon receptacle			
Weight max (g)		230			

ENVIRONMENTAL SPECIFICATIONS

Operating temperature range (°C)	-25 to +75		
Storage temperature range (°C)	-55 to +85		
Temperature cycling (MIL-STD-202 , Method 107D , Cond.A) (°C)	-55 to +85 (10 cycles)		
Vibration (MIL STD 202 , Method 204D , Cond.D)	10-2000 Hz , 10g operating		
Shock (MIL STD 202 , Method 213B , Cond.C)	50g / 6 ms , 1/2 sine operating		
Moisture resistance (MIL STD 202 , Method 106E , Cond.E)	65°C, 95% RH, 10 days		
Altitude storage (MIL STD 202 , Method 105C , Cond.B)	50,000 feet (15,240 meters)		
RFI (MIL STD 1344 , Method 3008 or IEC 61726)	55dB at 20GHz		
Magnetic field	< 5.10 ⁻⁵ gauss at 1 meter		



Technical Data Sheet

TERMINATED MULTIPORT SWITCHES PLATINUM Series

PAGE	4/8
------	-----

ISSUE 06-11-2014

SERIES SPnT

PART NUMBER R594 XXX XXX

ELECTRONIC POSITION INDICATORS

The electronic position indicators use photo-MOS transistors which are driven by the mechanical position of the RF paths moving elements. The circuitry consists of a common which can be connected to an output corresponding to selected RF path. If one or several RF paths are closed, the corresponding indicators are connected to the common. The photo-MOS transistors are configured for AC and/or DC operation. The electronic position indicators require the supply (20 to 32 VDC) to be connected to pin 1 and ground connected to pin 15.

	Pin	number	Function			
<		2	Indicator	Cor	nmon	
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		4	Indicator	RF	path	1
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		6	Indicator	RF	path	2
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		8	Indicator	RF	path	3
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		10	Indicator	RF	path	4
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~		12	Indicator	RF	path	5
		14	Indicator	RF	path	6

Ways 1 and 4 are not connected for SP4T switches.



PAGE **5/8** 


ISSUE 06-11-2014

SERIES SPnT

PART NUMBER R594 XXX XXX

### DRIVING THE SWITCH : Type 4 : without TTL and indicator

Each RF path is driven independently. Each path can be closed or open by applying ground to the corresponding "open" or "close" pin.

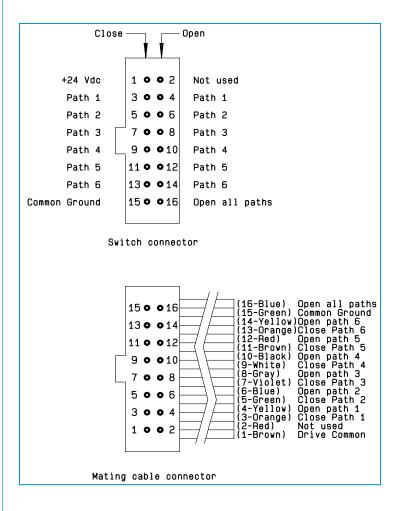

Ways 1 and 4 are not connected for SP4T switches.

#### Standard drive:

- Connect pin 15 to ground.
- Connect pin 1 to supply (+20 VDC to +32 VDC).

• Select desired RF path by applying ground to the corresponding "close" pin (Ex: ground pin 3 to close RF path 1).

• To open desired RF path connect ground to the corresponding "open" pin (Ex: ground pin 4 to open RF path 1).

• To open all RF paths, first ensure that all RF path "close" pins are disconnected from ground. To complete the operation, connect pin 16 to ground.

#### Make-Before-Break

Make-Before-Break switching can be accomplished by closing the new RF path before opening the previously selected RF path. To complete the operation, close the new RF port. A minimum of 15 ms must be allowed before opening the previously selected RF port.



PAGE 6/8


ISSUE 06-11-2014

SERIES SPnT

PART NUMBER R594 XXX XXX

### DRIVING THE SWITCH : Type 7 : with TTL (option "2") / without TTL (option "1").

Each RF path can be closed by applying Ground or TTL "High" for option 2 to the corresponding "drive" pin. In general, except for Make-Before-Break drive, all other RF paths are simultaneously opened by internal logic.

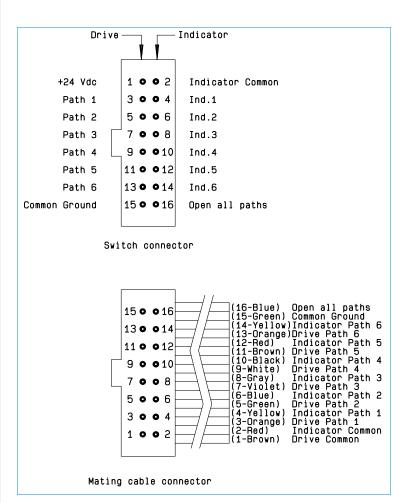

Ways 1 and 4 are not connected for SP4T switches.

# Standard drive option "1"

- Connect pin 15 to ground.
- Connect pin 1 to supply (+20 VDC to +32 VDC)

• Select (close) desired RF path by applying Ground to the corresponding "drive" pin (Ex: apply Ground to pin 3 to close RF path 1).

• To select another path, ensure that all unwanted RF path "drive" pins are disconnected from Ground (to prevent multiple RF path engagement). Apply Ground to the "drive" pin which corresponds to the desired RF path.

• To open all RF paths, ensure that all RF path "drive" pins are disconnected from Ground. Complete the operation by applying Ground to pin 16.

#### TTL drive option "2"

- Connect pin 15 to ground.
- Connect pin 1 to supply (+20 VDC to +32 VDC)

• Select (close) desired RF path by applying TTL "High " to the corresponding "drive" pin (Ex: apply TTL "High" to pin 3 to close RF path 1).

• To select another path, ensure that all unwanted RF path "drive" pins are in TTL "Low" position (to prevent multiple RF path engagement). Apply TTL "High" to the "drive" pin which corresponds to the desired RF path.


• To open all RF paths, ensure that all RF path "drive" pins are in TTL "Low" position. Complete the operation by applying TTL "High" to pin 16.


#### **Break-Before-Make**

Open the undesired RF path. After 15 ms (minimum), close the new RF port.

#### Make-Before-Break


Ensure that the previously selected RF path "drive" is connected to Ground (or TTL "High" for option "2", then close the new RF path.

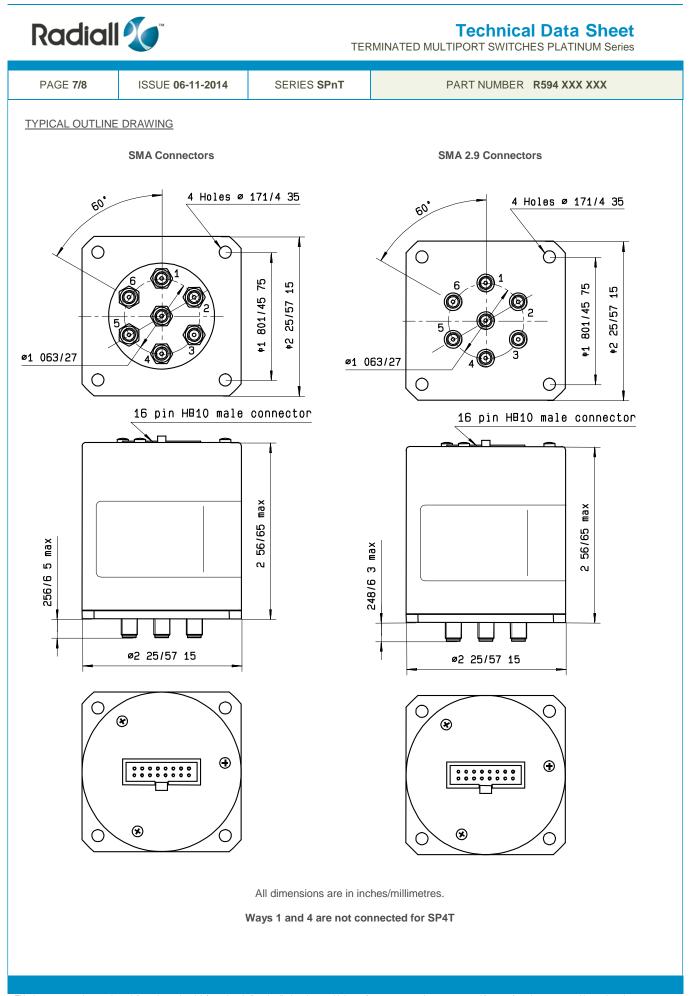

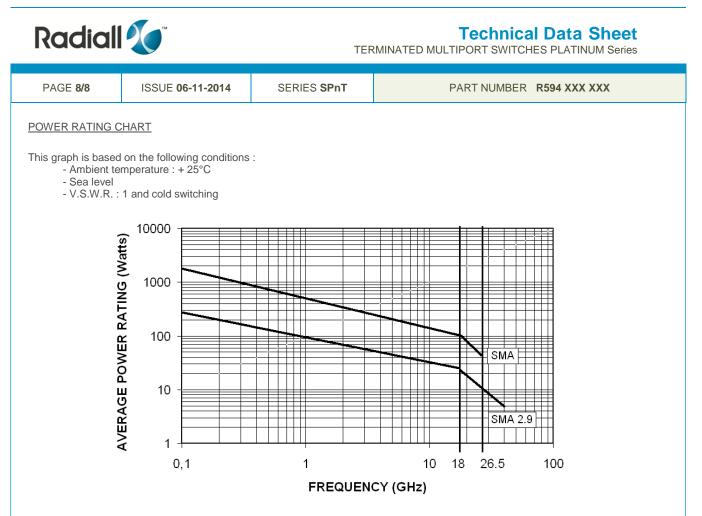

#### DERATING FACTOR VERSUS V.S.W.R.

The average power input must be reduced for load V.S.W.R. above 1.

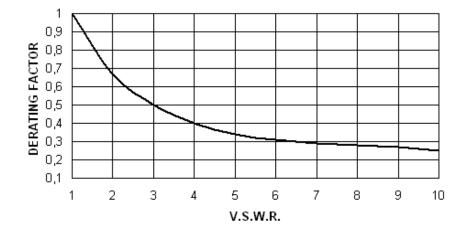

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for High Frequency / RF Relays category:

Click to view products by Radiall manufacturer:

Other Similar products are found below :

 134M4-26
 134YZM4-12
 136CM9-5
 ER136CZM9-5B
 ER412DYM-12B
 ARA200A4HM01
 3SBH1020A2
 400-192-10
 412TM-18

 ARN12A12
 422DM-26
 411T-12
 LB363-100-5
 D3210
 ARN10A12
 ER116C-26A
 ER114ZM4-12A/SQ
 ER412-26B/Q
 ER134DYZ-12A
 36

 AT5
 25-200ZA
 36 T5
 48-000ZA
 27 T5
 24-200ZA
 27 T5
 26-200ZA
 27 T5
 28-200ZA
 ER411DM4-12A/SQ
 732-5/Q

 R591362640
 R591723400
 SGRF100-12
 R595867120
 HF3 02
 R594873417
 R595863115
 IM43TS
 IMB03CTS
 IM05CGR
 IM02CGR

 IM21TS
 732TN-26
 IMB06CTS
 1462051-5
 1462050-1
 1462050-2
 G6K-2F-RF-S-DC5
 ARE10A4H
 ARE1024
 ARS1012

 ARS1024
 ARJ22A12
 IMB06CTS
 1462051-5
 1462050-1
 1462050-2
 G6K-2F-RF-S-DC5
 ARE10A4H
 ARE1024
 ARS1012