TPP0250 & TPP0500B 250 MHz and 500 MHz 10X Passive Probes

Instructions




071-3164-00



Operating Information

The TPP0250 & TPP0500B 10X Passive Probes are high impedance probes with 10X attenuation that are designed for use with Tektronix MDO3000, MDO/MSO/DPO4000B & MSO/DPO5000 series ground-referenced oscilloscopes.

Connect the probe as shown in the illustrations below.

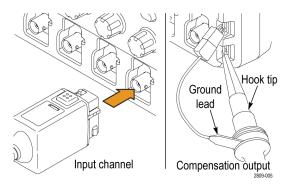

Compensating the Probe

You should compensate the probe after you attach it to an oscilloscope for the first time, or after you have changed the probe tip cartridge.

- 1. Connect the probe to an oscilloscope channel.
- 2. On MSO/DPO5000 instruments:
 - **a.** Connect the probe to the probe compensation output terminals on the oscilloscope front panel.
 - **b.** Select Vertical > Probe Cal....
 - c. Select the channel number tab of the channel that you connected the probe to.
 - **d.** In the Calibration section, click Calibrate Probe.

On MDO3000 and MDO/MSO/DPO4000B instruments:

- a. Press the Channel Menu front panel button for the channel that you connected the probe to.
- **b.** Push the More button until Probe Setup is selected.
- c. Push the Calibrate Probe button and follow the on-screen instructions.


If the probe compensation fails, verify that the signal and ground connections are secure at the Probe Comp connections on the oscilloscope. Also check that the ground connection is secure at the probe head, the rigid or pogo tip is secured tightly in the probe head, and the hook tip is securely connected to the tip.



Standard Accessories

WARNING. To avoid electric shock when using the probe or accessories. keep fingers behind the finger guard of

or accessories, keep fingers be probe body and accessories.	nina ine jinger guara oj
Item	Description
2 2	Probe tips
3164001	The rigid tip (gray tip) is pre-installed on the TPP0250 probe. The pogo tip (white tip) is pre-installed on the TPP0500B probe, and is spring-loaded for compliant testing of circuit boards. Reorder numbers:
	206-0649-xx (rigid tip) 206-0650-xx (pogo tip)
3164022	Insulator sleeve
	Unscrew this sleeve to replace the probe tips. (See procedure on next page).
	Reorder Tektronix part number 204-1226-xx
probe tip and ti the hook onto t Rating: 300 V o Reorder Tektro	Hook tip
	Press the hook tip onto the probe tip and then clamp the hook onto the circuit.
	Rating: 300 V CAT II
	Reorder Tektronix part number 013-0362-xx
×	Micro hook tip
	Use this tip to access test

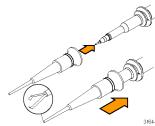

ess test points in tight spaces. Press the hook tip onto the probe tip and then extend the pincers around the circuit.

Rating: 300 V CAT II Reorder Tektronix part number 013-0363-xx



Universal IC cap

Use this cap to prevent shorting the probe tip between IC pins.

Snap the cap onto the probe tip, and then spin the cap to expose the probe tip toward the IC lead.

Reorder Tektronix part number 013-0366-xx


Item

Description

Ground springs To limit aberrations on high

frequency signals caused by ground path inductance. bend the spring to reach nearby ground connections (<0.75 in, long; <0.25 in, short). Reorder Tektronix part numbers:

016-2028-xx (long, 2 ea.) 016-2034-xx (short, 2 ea.)

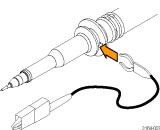


Do not use on circuits that exceed 30 V_{RMS}

Ground lead, with alligator clip

Secure the lead to the probe head ground and then to your circuit ground.

Reorder Tektronix part number 196-3521-xx



Color bands

Use these bands to identify the oscilloscope channel at the probe head.

Reorder Tektronix part number 016-0633-xx (5 pairs)

Optional Accessories


The accessories shown below are available for the probes and are rated ≤30 V unless indicated otherwise.

Accessory		Part number
MicroCKT Test Tip	Tek 30.0%	206-0569-xx
BNC to Tip Adapter, Unterminated	<-	_ 013-0367-xx -
Circuit Board Test Point/PCB Adapter	0	016-2016-xx
Chassis-Mount Probe Test Jack	< 7	131-4210-xx
6" Clip-on Ground Lead		196-3198-xx
12" Alligator Ground Lead		196-3512-xx
Wire, spool, 32 AWG		020-3045-xx

Interchanging the Probe Tip



WARNING. To reduce the risk of shock, disconnect the probe before changing the probe tips.

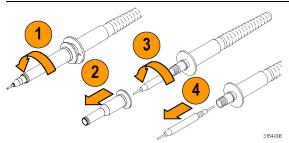


For optimal performance, do a probe compensation after the tip has been replaced.

Specifications

Table 1: Electrical and mechanical specifications

Characteristic	TPP0250	TPP0500B
Bandwidth (-3 dB)	250 MHz	500 MHz
System rise time (typical)	<1.4 ns	<700 ps
System input capacitance	Rigid tip: 3.9 pF ±0.3 pF	
	Pogo pin tip:	5.1 pF ±0.5 pF
System attenuation accuracy	10:1	±2.2%
Probe series resistance @DC	9.75 M	Ω ±0.5%
System input resistance @DC	10 M	Ω ±2%
Propagation delay	~5.0	67 ns
Maximum input voltage	300 V _R	MS CAT II
Cable length	1.3 m	±3 cm

Performance Graphs

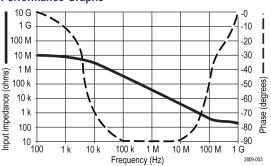

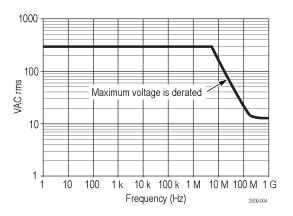


Table 2: Environmental specifications

Characteristics	Description
Temperature	
Operating Nonoperating	–15 °C to +65 °C (+5 °F to +149 °F) –62 °C to +85 °C (–80 °F to +185 °F)
Humidity	
Operating	5% to 95% relative humidity (%RH) up to +30 °C, 5% to 75% RH above +30 °C up to +65 °C. Noncondensing
Nonoperating	5% to 45% RH above +65 °C up to +85 °C. Noncondensing
Altitude	
Operating Nonoperating	3.0 km (9,842 ft) maximum 12.2 km (40,000 ft) maximum

Table 3: Certifications and compliances

Characteristics Description

Onaraoteriotico	Description
EC Declaration of	Compliance was demonstrated to the following specification as listed in the Official Journal of the European Communities:
Conformity	Low Voltage Directive 2006/95/EC: EN61010-031/A1: 2008
Category installation	CAT III: Distribution-level mains, fixed installation
	CAT II: Local-level mains, appliances, portable equipment
	CAT I: Circuits not directly connected to mains.

Characteristics Description

	Equipment Recycling. This product complies with the European Union's requirements
Additional Safety Standards	UL61010-031;2010 CAN/CSA C22.2 No. 61010-031:07/A1:2010 IEC61010-031; IEC 61010-031/A1:2008
Pollution Degree 2	Do not operate in environments where conductive pollutants may be present (as defined in IEC 61010-1). Rated for indoor use only.



according to Directive 2002/96/EC on waste electrical and electronic equipment (WEEE). For more information about recycling options, check the Support/Service section of the Tektronix Web site (www.tektronix.com).

Safety Summary

Review the following safety precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use this product only as specified. Using the probe or accessories in a manner not specified could result in a shock or fire hazard.

To Avoid Fire or Personal Injury

Ground-Referenced Oscilloscope Use. Do not float the reference lead of this probe when using with ground referenced oscilloscopes (for example, MDO, MSO, and DPO series oscilloscopes). The reference lead must be connected to earth potential (0 V).

Connect and Disconnect Properly. Connect the probe output to the measurement instrument before connecting the probe to the circuit under test. Disconnect the probe input and the probe reference lead from the circuit under test before disconnecting the probe from the measurement instrument.

Avoid Electric Shock. To avoid injury or loss of life, do not connect or disconnect probes or test leads while they are connected to a voltage source.

Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.

Avoid Electric Shock. When using probe accessories, never exceed the lowest rating of the probe or its accessory, whichever is less, including the measurement category and voltage rating.

Avoid Electric Overload. To avoid injury or fire hazard, do not apply potential to any input, including the reference inputs, that varies from ground by more than the maximum rating for that input.


Avoid Exposed Circuitry and Do not Operate Without **Covers.** Do not touch exposed connections and components when power is present.

Inspect The Probe And Accessories. Before each use, inspect probe and accessories for damage (cuts, tears, defects in the probe body, accessories, cable jacket, etc.). Do not use if damaged.

Do Not Operate in Wet/Damp Conditions. Do Not Operate in an Explosive Atmosphere. Keep Product Surfaces Clean and Dry.

Safety Terms and Symbols Terms in This Manual.

These terms may appear in this manual:





CAUTION. Caution statements identify conditions or practices that could result in damage to this product or other property.

Symbols on the Product. These symbols may appear on the product:



Refer to Manual

Contacting Tektronix

Web site: www.tektronix.com Phone: 1-800-833-9200

Address: Tektronix. Inc.

> Department or name (if known) 14200 SW Karl Braun Drive

P.O. Box 500

Beaverton, OR 97077 USA

Fmail: techsupport@tektronix.com

Warranty Information

For warranty information, go to www.tektronix.com/warranty.

Copyright © Tektronix, Inc. All rights reserved. www.tektronix.com

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Test Probes category:

Click to view products by Tektronix manufacturer:

Other Similar products are found below:

6214 6474 815003 923832-BK-B P-KIT-1 KT-MS001 925250-R 973368101 972318101 972318100 MXHQ87WJ3000 PK106-3 PK2-5MM-102 TAS90 VL1735/45 973368100 972327100 972327101 973995100 973995101 CT3982B-120 MO50-PINS CT4386 PP023-1 PK1-5MM-127 PP026-1 PK103 PK-ZS-013 P6139B-PK10 PQ215 PQ218 RT-ZI10C TT-SI 8071 TT-SI 8050 TT-SI 8010A TT-SI 7005 GE.3421 GE.2521 GE.3121 GE.1511 GE.1521 GE.2511 GE.4511 HVP15B TT-SI7002 4005 4011 4012 4013 4014