


PicoScope® 2000 Series

2-CHANNEL OSCILLOSCOPES WITH ARBITRARY WAVEFORM GENERATOR

High Quality from a Name You Can Trust

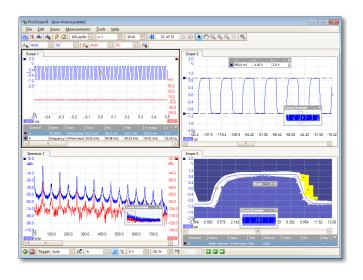

10 MHz to 200 MHz bandwidths
Up to 1 GS/s sampling rate
Advanced digital triggers
Persistence display modes
Mask limit testing
Serial decoding
Fast USB 2.0 interface
USB-powered and portable
Free software upgrades











Supplied with a full Software Development Kit including example programs • Software compatible with Windows XP, Windows Vista and Windows 7 • Free Technical Support

PicoScope for power, portability and versatility



These handy, economical oscilloscopes have all the power you need for your application, whether it's design, research, test, education, service or repair. They are available with bandwidths from 10 MHz to 200 MHz.

PicoScope oscilloscopes are small, light and portable. They easily slip into a laptop bag and so are ideal for the

engineer on the move. They don't need an external power supply, so they are perfect for field use. The connection to your PC means that functions such as printing, copying and email are always at your fingertips.

The first USB-powered 1 GS/s oscilloscopes!

The series includes the first USB-powered oscilloscopes to offer a 1 GS/s real-time sampling rate, previously possible only with mains-powered instruments. Most other USB-powered oscilloscopes are limited to only 100 or 200 MS/s. For repetitive signals, equivalent-time sampling (ETS) mode boosts the maximum effective sampling rate even higher to 10 GS/s, allowing exceptionally fine timing resolution.

Digital triggering

Most digital oscilloscopes sold today still use an analog trigger architecture based on comparators. This can cause time and amplitude errors that cannot always be calibrated out. The use of comparators often limits the trigger sensitivity at high bandwidths and can also create a long trigger re-arm delay.




Since 1991 we have been pioneering the use of fully digital triggering using the actual digitized data. This reduces trigger errors and allows our oscilloscopes to trigger on the smallest signals, even at the full bandwidth. Trigger levels and hysteresis can be set with great precision and resolution.

The reduced re-arm delay provided by digital triggering, together with segmented memory, allows the capture of events that happen in rapid sequence. At the fastest timebase, rapid triggering can capture a new waveform every 2 microseconds until the buffer is full. The mask limit testing feature (see below) helps to detect waveforms that fail to meet your specifications.

Advanced triggers

As well as the standard range of triggers found on all oscilloscopes, the PicoScope 2000 Series offers one of the best selections of advanced triggers available, including pulse width, windowed and dropout triggers to help you find your signal quickly.


Custom probe settings

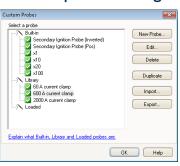

The custom probes feature allows you to correct for gain, attenuation, offsets and nonlinearities in special probes, or to convert to different units of measurement (such as current, power or temperature). You can save definitions to disk for later use. Definitions for standard Pico-supplied oscilloscope probes and current clamps are built in.


Arbitrary waveform and function generator

All units have a built-in function generator with sine, square, triangle, DC level and many more standard waveforms. As well as level, offset and frequency controls, more advanced options allow you to sweep over a range of frequencies. Combined with the spectrum peak hold option, this creates a powerful tool for testing amplifier and filter responses.

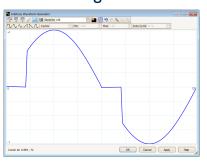

The PicoScope 2000 Series scopes also include a full arbitrary waveform generator. Waveforms can be created or edited using the built-in AWG editor, imported from oscilloscope traces, or loaded from a spreadsheet.

Spectrum analyzer

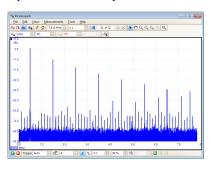

With the click of a button, you can display a spectrum plot of selected channels. The spectrum analyzer allows signals up to the full scope bandwidth to be viewed in the frequency domain. A full range of settings gives you control over the number of spectrum bands, window types and display modes: instantaneous, average, or peak-hold.

PicoScope allows you to display multiple spectrum views with different channel selections and zoom factors, and see these alongside time-domain waveforms of the same data. A comprehensive set of automatic frequency-domain measurements, including THD, THD+N, SNR, SINAD and IMD, can be added to the display.

Math channels

The PicoScope 2000 Series oscilloscopes offer a full range of math functions for processing and combining channels. The functions can also operate on reference waveforms.

Use the built-in list for simple functions such as addition and inversion, or open the equation editor and create complex




functions involving trigonometry, exponentials, logarithms, statistics, integrals and derivatives.

Measurements

• A								
• A	AC RMS	Whole trace	642 mV	640.8 mV	643.6 mV	641.6 mV	680.4 μV	20
• A	DC Average	Whole trace	-103 mV	-103 6 mV	-101.7 mV	-102.9 mV	503.6 uV	20

You can add any combination of automatic measurements to the display, chosen from a list of 26 scope and spectrum parameters. Every measurement includes statistics of minimum, maximum, average, standard deviation and sample size.


Advanced display modes

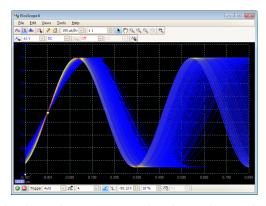

See old and new data superimposed, with new data in a brighter color or shade. This makes it easy to see glitches and dropouts and to estimate their relative frequency. Choose between analog persistence and digital color, or create a custom display mode.

The design of the PicoScope software ensures that maximum display area is available for waveform viewing. Even with a laptop you have a much bigger viewing area and higher resolution than a typical benchtop scope.

Serial decoding

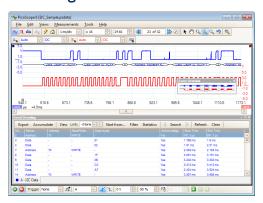

The PicoScope 2000 Series includes serial decoding capability as standard. Protocols currently included are I^2C , SPI, RS232/UART and CAN bus. Expect this list to grow as we release free software updates.

PicoScope displays the decoded data in the format of your choice: "in view", "in window", or both at once. The "in view" format shows the decoded data beneath the waveform on a common time axis, with error frames marked in red. You can zoom in on these frames to look for noise or distortion on the waveform.

"In window" format shows a list of the decoded frames, including the data and all flags and identifiers. You can set up filtering conditions to display only the frames you are interested in, search for frames with specified properties, or define a start pattern that the program will wait for before listing the data.

You can also create a spreadsheet to decode the hexadecimal data into arbitrary text strings.

High-speed data acquisition and digitizing


The drivers and software development kit supplied allow you to write your own software or interface to popular third-party software packages such as LabVIEW.

The driver supports data streaming, a mode that captures gap-free continuous data through the USB port directly to the PC's RAM or hard disk at a rate of 1 MS/s or more, so that you are not limited by the size of the device's buffer memory. Maximum speed is PC-dependent.

Mask limit testing

This feature is specially designed for production and debugging environments. Capture a signal from a known working system, and PicoScope will draw a mask around it with your specified tolerance. Connect the system under test, and PicoScope will highlight any parts of the waveform that fall outside the mask area. The highlighted details persist on the display, allowing the scope to catch intermittent glitches while you work on something else. The measurements window counts the number of failures, and can display other measurements and statistics at the same time.

The numerical and graphical mask editors can be used separately or in combination, allowing you to enter accurate mask specifications and modify existing masks. You can import and export masks as files.

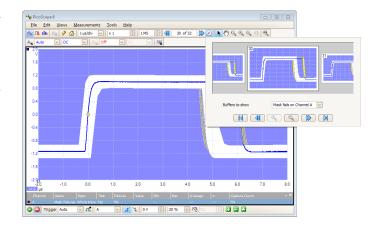

High-end features as standard

Buying a scope from some companies is a bit like buying a car. By the time you have added all the optional extras you need, the price has gone up considerably. With the PicoScope 2000 Series, high-end features such as resolution enhancement, mask limit testing, serial decoding, advanced triggering, automatic measurements, math channels and XY mode are all included in the price.

To protect your investment, both the PC software and firmware inside the unit can be updated. We have a long history of providing new features for free through software downloads. Other companies make vague promises about future enhancements but we deliver on our promises year after year. Users of our products reward us by becoming lifelong customers, frequently recommending us to their colleagues.

High signal integrity

Most oscilloscopes are built down to a price; ours are built up to a specification.

Careful front-end design and shielding reduces noise, crosstalk and harmonic distortion. Our 20 years of oscilloscope design experience can be seen in improved pulse response and bandwidth flatness.

We are proud of the dynamic performance of our products and publish these specifications in detail. The result is simple: when you probe a circuit, you can trust in the waveform you see on the screen.



PicoScope 2206 front-end screening

The PicoScope window

Oscilloscope controls: Commonly-used controls such as voltage range selection, timebase, memory depth and channel selection are placed on the toolbars for quick access, leaving the main display area clear for waveforms. More advanced controls and functions are located in the Tools menu.

Tools>Math channels: Combine input channels and reference waveforms using simple arithmetic, or create custom equations with trigonometric and other functions.

Tools>Serial decoding: Decode a serial data signal and display the data alongside the physical signal or as a detailed table.

Tools>Reference channels: Store waveforms in memory or on disk and display them alongside live inputs. Ideal for diagnostics and production testing.

Auto setup button: Configures the timebase and voltage ranges for stable display of your signals.


PicoScope: The display can be as simple or as complex as you need. Begin with a single view of one channel, and then expand the display to include any number of live channels, math channels and reference waveforms.

Waveform replay tool: PicoScope automatically records up to 10,000 of the most recent waveforms. You can quickly scan through to look for intermittent events.

Views: PicoScope is carefully designed to make the best use of the display area. You can add new scope and spectrum views, all of which are fully adjustable in size and shape.

Rulers: Each axis has two rulers that can be dragged onto the screen to make quick measurements of amplitude, time and frequency.

Zoom and pan tools: Use the conventional zoom buttons, or try the zoom overview window for fast navigation. No fiddly buttons and knobs: just use your mouse!

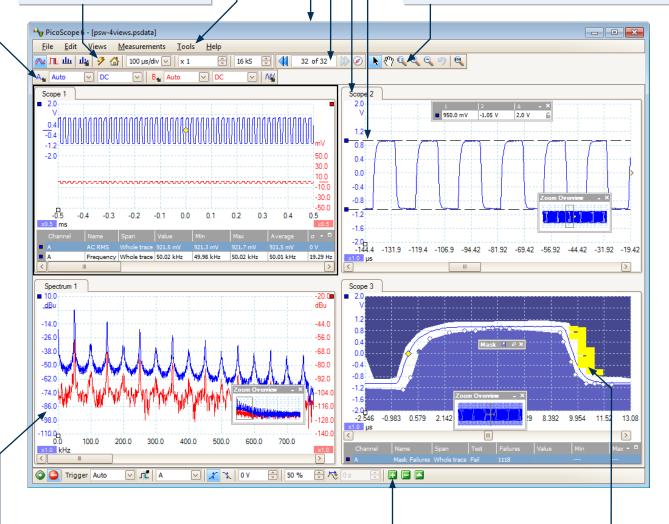

Movable axes: The vertical axes can be dragged up and down. This feature is particularly useful when one waveform is obscuring another. There's also a command to rearrange all the axes automatically.

Automatic measurements: Display calculated measurements for troubleshooting and analysis. You can add as many measurements as you need on each view. Each measurement includes statistical parameters showing its variability.

Mask limit testing:

Automatically generate a test mask from a waveform or draw one by hand. PicoScope highlights any parts of the waveform that fall outside the mask and shows error statistics.

PicoScope 2000 Series Oscilloscopes - Specifications

PRODUCT SELECTOR

MODEL	PicoScope 2204	PicoScope 2205	PicoScope 2206	PicoScope 2207	PicoScope 2208
Bandwidth	10 MHz	25 MHz	50 MHz	100 MHz	200 MHz
Sampling rate	100 MS/s	200 MS/s	500 MS/s	1 GS/s	1 GS/s
Memory	8 kS	16 kS	24 kS	32 kS	40 kS
Function generator + AWG	100 kHz	100 kHz	1 MHz	1 MHz	1 MHz
EXT trigger	No	No	Yes	Yes	Yes

DETAILED SPECIFICATIONS

VERTICAL					
Number of channels			2		
Bandwidth (-3 dB)	10 MHz	25 MHz	50 MHz	100 MHz	200 MHz
Rise time (calculated)	35 ns	14 ns	7 ns	3.5 ns	1.75 ns
Resolution	8 bits (12 bits with resolution enhancement)				
Input characteristics	BNC, 1 M Ω \parallel 20 pF BNC, 1 M Ω ±1% \parallel 13 pF ±1 pF				
Input coupling	AC/DC				
Input sensitivity	10 mV/div to 4 V/div (10 vertical divisions)				
Input ranges	±50 mV, ±100 mV, ±200 mV, ±500 mV, ±1 V, ±2 V, ±5 V, ±10 V, ±20 V				
Analog offset range (vertical position adjustment)	±250 mV (50 mV, 100 mV, 200 mV ranges) None ±2.5 V (500 mV, 1 V, 2 V ranges) ±20 V (5 V, 10 V, 20 V ranges)				anges)
DC accuracy	±3% of full scale				
Overvoltage protection	±100 V (DC + AC peak)				

HORIZONTAL						
Max. sampling rate (real-time 1 ch.)	100 MS/s	200 MS/s	500 MS/s	1 GS/s	1 GS/s	
Max. sampling rate (real-time 2 ch.)	50 MS/s	100 MS/s	250 MS/s	500 MS/s	500 MS/s	
Max. sampling rate (repetitive/ETS)	Max. sampling rate (repetitive/ETS) 2 GS/s		5 GS/s	10 GS/s	10 GS/s	
Max. sampling rate (streaming)	1 MS/s (typical) in PicoScope software. Rate using supplied SDK is PC-dependent.					
Timebase ranges	10 ns to 1000 s/div	5 ns to 1000 s/div	2 ns to 1000 s/div	1 ns to 1000 s/div	500 ps to 1000 s/div	
Buffer memory size (shared)	8 k samples 16 k samples		24 k samples	32 k samples	40 k samples	
Max. buffers (normal triggering)	10,000					
Max. buffers (rapid block triggering) N/A		/A	32			
Timebase accuracy	±100 ppm		±50 ppm			
Sample jitter	unspe	ecified	< 5 ps RMS			


DYNAMIC PERFORMANCE (typical)						
Crosstalk (full bandwidth)	Better than 200:1 (equal ranges) Better than 400:1 (equal ranges)					
Harmonic distortion < -50 dB at 100 kHz, full-scale input						
SFDR	> 52 dB at 100 kHz, full-scale input					
Noise	1 LSB (±1 V range)	< 180 µV RMS (±50 mV range)				
Pulse response	< 7% overshoot	< 5% overshoot				
Bandwidth flatness (at scope input)	at scope input) (+0.3 dB, –3 dB) from DC to full bandwidth					

TRIGGERING					
Sources	Ch A, Ch B	Ch A, Ch B, Ext			
Modes	None, auto, repeat, single None, auto, repeat, single, rapid (segmented m				
Advanced digital triggers (Ch A, B)	Rising, falling, dual, hysteresis, window, pulse width, window pulse width, window dropout, interval, logic, delayed				
Trigger types, ETS (Ch A, Ch B)	Edge				
Trigger sensitivity (Ch A, Ch B)	ity (Ch A, Ch B) Digital triggering provides 1 LSB accuracy up to full bandwidth (ETS: typical 10 mV p-p at fu				
Max. pre-trigger capture	100% of capture size				
Max. post-trigger delay	4 billion samples				
Trigger re-arm time	PC-dependent < 2 μs on fastest timebase				
Max. trigger rate	PC-dependent Burst of 32 in 64 μs				

EXTERNAL TRIGGER INPUT						
Trigger types		Edge, pulse width, dropout, interval, logic				
Input characteristics		Front-panel BNC, 1 M Ω ±1% \parallel 13 pF ±1 pF				
Bandwidth		50 MHz 100 MHz 200 MHz ±5 V, DC coupled				
Threshold range	N/A					
Threshold accuracy		±3% of full scale				
Sensitivity		200 mV p-p typical, at full bandwidth				
Overvoltage protection		±100 V (DC + AC peak) up to 10 kHz				

Specifications continued...

PicoScope 2004						
None	FUNCTION GENERATOR	PicoScope 2204	PicoScope 2205	PicoScope 2206	PicoScope 2207	PicoScope 2208
Standard signal frequency Successory DC to 100 MHz DC to 1 MHz	Standard output signals		Sine, square, triangle, [OC voltage, ramp, sin(x)/x, Gaussian, half-sin	e
Sweep modes Up, down, dual with selectable starty stop frequencies and increments Up down, frequency accuracy ±100 ppm	Pseudorandom output signals	None			White noise, PRBS	
0.100 ppm		DC to 100 kHz			DC to 1 MHz	
Country troolings rearge 250 mV to ±2 V amplitude, ±1 V offset Any amplitude and offset within ±2 V range Amplitude fatness (vpical) 250 mV to ±2 V amplitude, ±1 V offset Any amplitude and offset within ±2 V range Amplitude fatness (vpical) 255 dB ±1 kHz full-scale sine wave 50 dB ±1 0 kHz full-scale sine wave 50 d	Sweep modes		Up, down, dual with se	lectable start/stop fre	quencies and increment	ts
Cutput valuage range	Output frequency accuracy	±10	±100 ppm		±50 ppm	
Applicated filteress (cypical)	Output frequency resolution			< 0.01 Hz		
Amplitude fatness (typical)	Output voltage range			±2 V		
SPECIAL PROPERTY STEEL PROPERTY SPECIAL PROP	Output adjustments	±250 mV to ±2 V a	amplitude, ±1 V offset	Any ampli	tude and offset within ±	£2 V range
SFDR	Amplitude flatness (typical)	< 1 dB t	o 100 kHz		< 0.5 dB to 1 MHz	
Output characteristics Overoritage protection ### 20 V ### 20 MS/s	DC accuracy			±1% of full scale		
Overvoltage protection ARBITRATY WAVEFORM GENERATOR Update rate 2 MS/s 8 th samples 8 k samples 8 k samples 8 bits 12 bits Bandwidth 100 kHz > 1 MHz Rise time (10%-90%) 5 PECTRUM ANALYZER Frequency range DC to 10 MHz DC to 25 MHz DC to 50 MHz DC to 50 MHz DC to 100 MHz DC to 200 MHz Windowing functions Rectangular, Gaussian, triangular, Blackman-Harris, Hamming, Hann, flat-top Number of FFT points Selectable from 128 to haif available buffer memory in power of 2 MATH CHANNELS +, -, *, /, sqrt, *, exp, in, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, codh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (inne), reference waveforms, constants, P) AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, site time, high pulse width, wandrum, minimum, peak to peak requency at peak, average amplitude at peak, total power, ThD %, ThD Ba, ThD Ba, thD Ba, thD Ba, thD Ba, thank peak to peak frequency at peak, average and standard deviation SERIAL PECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fall, failure count, total count Diseasons (including connectors) Weight Operating S or Los So C (20 °C co 30 °C for stated accuracy), Storage - 20 °C to +60 °C. Derantur range Operating S fix as 80% RH non-condensing. Designed to RM 6100-12001 Designed to RM 6100-12000 Designed to RM 6100-12000 Des	SFDR	> 55 dB @ 1 kHz	z full-scale sine wave	> 60 dl	3 @ 10 kHz full-scale sir	ne wave
ARBITRARY WAVEFORM CENERATOR Update rate 2 MS/s	Output characteristics		Front pane	el BNC, 600 Ω output	impedance	
Update rate 2 MS/s 20 MS/s 8 k samples 8 k samp	Overvoltage protection			± 10 V		
Update rate 2 MS/s 20 MS/s 8 k samples 8 k samp	ARBITRARY WAVEFORM GENERATOR					
Buffer size		2 !	MS/s		20 MS/s	
Resolution Bandwidth Bandw	·		•		· · · · · · · · · · · · · · · · · · ·	
Rise time (10% - 90%) SPECTRUM ANALYZER Frequency range DC to 10 MHz DC to 25 MHz Magnitude, average, peak hold Windowing functions Number of FT points Rectangular, Gaussian, triangular, Blackman, Blackman-Harris, Hamming, Hann, flat-top Selectable from 128 to half available buffer memory in powers of 2 MATH CHANNELS Functions A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope A, B (input channels), T (time), reference waveforms, constants, Pi AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak frequency at peak, average angitude at peak, average angitude at peak, average angitude at peak average angitu			•			
Rise time (10% - 90%) SPECTRUM ANALYZER Frequency range DC to 10 MHz DC to 25 MHz DC to 50 MHz DC to 100 MHz DC to 200 MHz Display modes Magnitude, average, peak hold Windowing functions Rectangular, Gaussian, triangular, Blackmann-Blackmann-Harris, Hamming, Hann, flat-top Number of FFT points Selectable from 128 to half available buffer memory in powers of 2 MATH CHANNELS Functions \$\frac{+\tau_{-\tau_{-\text{*}}\text{*}}{\text{*}}\text{*}, \text{*}, *						
SPECTRUM ANALYZER Frequency range DC to 10 MHz DC to 25 MHz DC to 50 MHz DD to 100 MHz DD to 200 MHz DD to 100 MHz DD to 200 MHz						
DC to 10 MHz DC to 25 MHz DC to 50 MHz DC to 100 MHz DC to 200 MHz	,					
Display modes Magnitude, average, peak hold Windowing functions Rectangular, Gaussian, triangular, Blackman, Blackman-Harris, Hamming, Hann, flat-top Number of FFT points Selectable from 128 to half available buffer memory in powers of 2 MATH CHANNELS Functions \$\frac{+, -, *, \}, sqrt, ^*, exp, in, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, cosh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope ACRMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Minimum, maximum, average and standard deviation SERIAL DECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Protocols CENERAL USB 2.0 hi-speed (full-speed compatible) Power requirements Dimensions (including connectors) Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm		DC: 40.1411	DG: 25.1411	DC : 50.1411	DC / 400 MI	DC / 200 M
Windowing functions Number of FFT points Selectable from 128 to half available buffer memory in powers of 2 MATH CHANNELS **, /, sqrt, ^, exp, in, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, cosh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, stotal power, THD %, THD Bt, THD plus noise, SFDR, SINAD, SNR, IMD SERIAL DECODING Protocols SERIAL DECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dower requirements Dimensions (including connectors) Weight CO, 22 kg (7.8 oz) Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Uses 2 on in-speed Single Forwards Tested to ENG1326-1:2006 and FCC Part 15 Subpart B Environmental approvals Finder of Windows SDK, example programs (C, Visual Basis, VEE, Excel, LabVIEW, Delphi) Microsoft Windows SDK, example programs (C, Visual Basis, VEE, Excel, LabVIEW, Delphi) Microsoft Windows SDK, example Programs (L, Danish, Dutch, Finnish, Greek, Chinese (Simplified). Chinese (Fimplified). Chi		DC to 10 MHz				DC to 200 MHz
Number of FFT points Selectable from 128 to half available buffer memory in powers of 2 MATH CHANNELS Functions **, -*, **, /*, sqrt, ^*, exp, In, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, cosh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, aperigae amplitude at peak, average amplitude at peak, sold a peak, sold	· '					G
MATH CHANNELS Functions ##, -, **, /, sqrt, ^, exp, in, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, cosh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, severage amplitude at peak, s		·				
Functions +, -, *, /, sqrt, ^, exp, in, log, abs, norm, sign, sin, cos, tan, asin, acos, atan, sinh, cosh, tanh, derivative, integral, freq. min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, P! AUTOMATIC MEASUREMENTS	Number of FFT points Selectable from 128 to half available buffer memory in powers of 2					
Sinh, cosh, tanh, derivative, integral, freq, min, max, average, peak A, B (input channels), T (time), reference waveforms, constants, Pi AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak at peak average, average	MATH CHANNELS					
sinh, cosh, tanh, derivative, integral, freq, min, max, verage, peak A, B (input channels), T (time), reference waveforms, constants, Pl AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Statistics Frequency at peak, amplitude at peak, average amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Minimum, maximum, average and standard deviation SERIAL DECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fall, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Power requirements Powered from USB port Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 200 x 150 x 100 x 40 mm 200 x 140 x 40 mm 200 x 150 x 100 x 40 mm 200	Functions	+, -				atan,
AUTOMATIC MEASUREMENTS Oscilloscope AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, falling rate, fall time, rising rate, rise time, high pulse width, low pulse width, low pulse width, now much peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, serrage amplitude at peak, s						
AC RMS, true RMS, DC average, cycle time, frequency, duty cycle, fall time, rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, serage amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Statistics SERIAL DECODING Protocols CAN Bus, PC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity USB 2.0 hi-speed (full-speed compatible) Power requirements Powered from USB port Dimensions (including connectors) Meight COD x 140 x 40 mm 200 x 140 x 40 mm 2	Operands		A, B (input channels),	I (time), reference w	aveforms, constants, Pi	
rising rate, rise time, high pulse width, low pulse width, maximum, minimum, peak to peak Frequency at peak, amplitude at peak, average amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Statistics SERIAL DECODING Protocols CAN Bus, I²C, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity USB 2.0 hi-speed (full-speed compatible) Power requirements Powered from USB port Dimensions (including connectors) Weight O2.2 kg (7.8 oz) Operating: 0°C to 50 °C (20 °C to 30 °C for stated accuracy), Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 EMC approvals Tested to EN61326-1:2006 and FCO Part 15 Subpart B Environmental approvals Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	AUTOMATIC MEASUREMENTS					
Frequency at peak, amplitude at peak, average amplitude at peak, total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Statistics SERIAL DECODING Protocols CAN Bus, IPC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity USB 2.0 hi-speed (full-speed compatible) Power requirements Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm Veight C 0.22 kg (7.8 oz) C 0.25 kg (17.7 oz.) Temperature range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 Designed to EN 61010-1:2001 PC requirements ROHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Languages (UI and manual): Languages (UI and manual): Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	Oscilloscope					
total power, THD %, THD dB, THD plus noise, SFDR, SINAD, SNR, IMD Statistics Minimum, maximum, average and standard deviation SERIAL DECODING Protocols CAN Bus, IPC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Power requirements Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 40.22 kg (7.8 oz) Poperature range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Safety approvals Designed to EN 61010-1:2001 EMC approvals Environmental approvals Environmental approvals ROHS and WEEE compliant Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Accessories Languages (Ul and manual): Languages (Ul and manual): Chinese (Simplified), Chinese (Fraditional), Czech, Danish, Dutch, Finnish, Greek,	·	rising rate,				еак то реак
SERIAL DECODING Protocols CAN Bus, I ² C, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Prosistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Power requirements Dimensions (including connectors) Veight Conections of Can Su Can	Spectrum	to				MD
Protocols CAN Bus, IPC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dower requirements Powered from USB port Dimensions (including connectors) Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm Weight 2.0 5 kg (17.7 oz.) Temperature range Operating: 0°C to 50°C (20°C to 30°C for stated accuracy). Storage: -20°C to +60°C. Humidity range Safety approvals Designed to EN 61010-1:2001 EMC approvals Designed to EN 61010-1:2001 EMC approvals Fortware included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	Statistics		Minimum, max	imum, average and sta	andard deviation	
Protocols CAN Bus, IPC, SPI, UART MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dower requirements Powered from USB port Dimensions (including connectors) Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm Weight 2.0 5 kg (17.7 oz.) Temperature range Operating: 0°C to 50°C (20°C to 30°C for stated accuracy). Storage: -20°C to +60°C. Humidity range Safety approvals Designed to EN 61010-1:2001 EMC approvals Designed to EN 61010-1:2001 EMC approvals Fortware included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	SERIAL DECODING					
MASK LIMIT TESTING Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dimensions (including connectors) Dimensions (including connectors) Dimensions (including connectors) Veight Concertive and Concertication and Concertive and Concertive and Concertication and Concertication and Conc				CANI Rue 12C SDI LIAI	DT	
Statistics Pass/fail, failure count, total count DISPLAY Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Power requirements Dimensions (including connectors) Veight Color to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Designed to EN 61010-1:2001 Designed to EN 61010-1:2010 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	Trotocois			AN bus, I-C, 31 I, OAI	XI	
DISPLAY Interpolation Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Power requirements Dimensions (including connectors) Dimensions (including connectors) Dimensions (including connectors) Veight Vo.22 kg (7.8 oz) Temperature range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Designed to EN 61010-1:2001 EMC approvals Environmental approvals Designed to EN 61010-1:2001 EMC approvals PricoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	MASK LIMIT TESTING					
Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dimensions (including connectors) Dimensions (including connectors) Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 200 x	Statistics		Pass/	fail, failure count, tota	l count	
Interpolation Linear or sin(x)/x Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dimensions (including connectors) Dimensions (including connectors) Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 200 x	DISPLAY					
Persistence modes Digital color, analog intensity, custom, or none GENERAL PC connectivity Dimensions (including connectors) Dimensions (including connectors) 150 × 100 × 40 mm 200 × 140 × 10 mm				Linear or sin(x)/x		
GENERAL PC connectivity Power requirements Powered from USB port Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm Weight Co.22 kg (7.8 oz) Coperating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 Designed to EN 61010-1:2010 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals ROHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,			Digital colo		tom, or none	
PC connectivity Power requirements Powered from USB port Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 20.22 kg (7.8 oz) Coperating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Safety approvals Designed to EN 61010-1:2001 EMC approvals Environmental approvals Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	CENTED AT		-	,		
Power requirements Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 10 x 10 mm 200 x 10 x 10 x 10 mm 200 x 140 x 10 x 10 mm 200 x 10 x 10 x 10 m			LICE 2.0	h: d /£.ll d		
Dimensions (including connectors) 150 x 100 x 40 mm 200 x 140 x 40 mm 40.22 kg (7.8 oz) Consider the second state of the s	,					
Weight	•	450 40		owered from USB po		
Temperature range Operating: 0 °C to 50 °C (20 °C to 30 °C for stated accuracy). Storage: -20 °C to +60 °C. Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Designed to EN 61010-1:2001 Designed to EN 61010-1:2010 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,						
Humidity range Operating: 5% to 80% RH non-condensing. Storage: 5% to 95% RH non-condensing. Designed to EN 61010-1:2001 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,			• ,	20.00 5	- ,	C 4- 140 0C
Safety approvals Designed to EN 61010-1:2001 Designed to EN 61010-1:2010 EMC approvals Tested to EN61326-1:2006 and FCC Part 15 Subpart B Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,						
EMC approvals Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	, ,				•	
Environmental approvals RoHS and WEEE compliant Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,	,					010
Software included PicoScope 6, Windows SDK, example programs (C, Visual Basic, VEE, Excel, LabVIEW, Delphi) PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,		·				
PC requirements Microsoft Windows XP, Vista or Windows 7, 32 or 64-bit USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,		·				VIENAL D. L.L.S.
Accessories USB cable Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,					vicvv, Delphi)	
Languages (UI and manual): English, French, German, Italian, Spanish Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,			Microsoft Window		ows /, 32 or 64-bit	
Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, Greek,			F 1:1		n Cnamial-	
	Languages (Of and manual):	China			•	Greek
	Languages (UI only):					

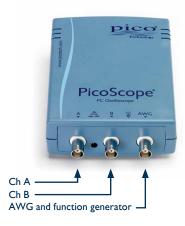

PicoScope 2204
PicoScope 2205





PicoScope 2206
PicoScope 2207
PicoScope 2208



Pack Contents

- PicoScope 2000 Series oscilloscope
- USB cable
- Quick Start Guide
- Software and Reference CD

Matching Probes Available

If you don't already have suitable probes, order a set from us. A durable storage pouch is included.



Optional Case

Fitted with foam padding for your scope. A compartment in the lid holds probes and other accessories.



Hand-held Oscilloscopes



Also available in the PicoScope 2000 Series, the PicoScope 2104 and 2105 single-channel handheld oscilloscopes are the ultimate in compact design. See our website for details.

Ordering Information

ORDER CODE	DESCRIPTION	GBP	USD*	EUR*
PP419	PicoScope 2204 10 MHz oscilloscope	159	265	195
PP420	PicoScope 2205 25 MHz oscilloscope	249	4 15	305
PP800	PicoScope 2206 50 MHz oscilloscope	349	575	425
PP801	PicoScope 2207 100 MHz oscilloscope	449	745	545
PP802	PicoScope 2208 200 MHz oscilloscope	599	995	725
PP787	2 x 60 MHz probes for PicoScope 2204, 2205 and 2206	30	50	36
PP821	2 x 150 MHz probes for PicoScope 2207	40	66	48
PP822	2 x 250 MHz probes for PicoScope 2208	50	83	60
MI136	Carrying case	30	50	36



Pico Technology, James House, Colmworth Business Park, St. Neots, Cambridgeshire, PE19 8YP, United Kingdom T:+44 (0) 1480 396 395 F: +44 (0) 1480 396 296 E: sales@picotech.com





X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for pico manufacturer:

Other Similar products are found below:

MI136 PA149 PICO CONNECT 442 SE050 SE055 SE056 SE057 SE058 PICOCONNECT 910 KIT TA328 TA155 MI078 81170 SE049 SE054 MI106 TA384 TA385 100501 SE053 44740M2735659 PICOLOG 1216 TA139 TA313 TA089 TC-08 BUNDLE PICOSCOPE 5442D TA050 TA018 42345M2735662 75005 TA090 PS010 TA058 SE028 TC-08 PICOSCOPE 2204A