

# PicoScope<sup>®</sup> 6000 Series

HIGH-PERFORMANCE USB OSCILLOSCOPES

# Ultra-deep memory. Fast data transfers.

4 CHANNELS • 500 MHz BANDWIDTH • 5 GS/s SAMPLING 2 GSAMPLE BUFFER MEMORY

PicoScope



SuperSpeed USB 3.0 interface 500 MHz spectrum analyzer Arbitrary waveform generator Advanced triggers 100 million x zoom Mask limit testing Serial bus decoding

Compatible with Windows XP, Windows Vista, Windows 7 and Windows 8, USB 2.0 and USB 3.0 • Supplied with an SDK including example programs • Free technical support

From a name you can trust

www.picotech.com


#### PicoScope performance and reliability

With over 20 years' experience in the test and measurement industry, we know what's important in a new oscilloscope. The PicoScope 6000 Series scopes give you the best value for money of any oscilloscope, with outstanding bandwidth, sampling rate and memory depth specifications. These features are backed up by advanced software optimized with the help of feedback from our customers.

#### High bandwidth, high sampling rate


With 250 MHz to 500 MHz analog bandwidths complemented by a real-time sampling rate of 5 GS/s, the PicoScope 6000 Series scopes can display single-shot pulses with 200 ps time resolution. Equivalent time sampling (ETS) mode boosts the maximum sampling rate to 50 GS/s, giving an even finer timing resolution of 20 ps for repetitive signals.

#### Huge buffer memory

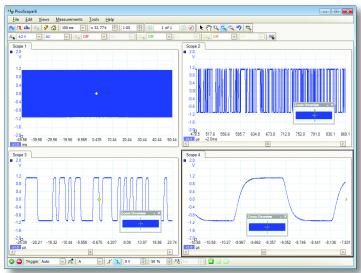

Deep memory allows you to zoom in... and in... and in


The PicoScope 6000 Series gives you the deepest buffer memory available as standard on any oscilloscope at any price. The SuperSpeed USB 3.0 interface ensures that the display is smooth and responsive even with long captures. Other oscilloscopes have high maximum sampling rates, but without deep memory they cannot sustain these rates on long timebases. The 2-gigasample buffer on the PicoScope 6404D can hold two 200 ms captures at the maximum sampling rate of 5 GS/s. To help manage all this data, PicoScope can zoom up to 100 million times using a choice of two zoom methods. There are zoom buttons as well as an overview window that lets you zoom and reposition the display by simply dragging with the mouse.

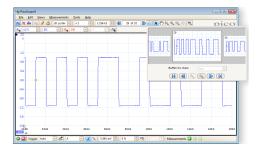


To help you find you way around the buffer memory, you can divide it into as many as 10,000 individually triggered segments. Use the visual buffer navigator to scan through the segments, or set up a mask to filter out the waveforms of interest.

#### Custom probe settings

The custom probes menu allows you to correct for gain, attenuation, offsets and nonlinearities of probes and transducers, or convert to different measurement units. Definitions for standard Pico-supplied probes are built in, but you can also create your own using linear scaling or even an interpolated data table.

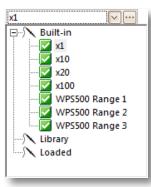

#### Arbitrary waveform and function generator

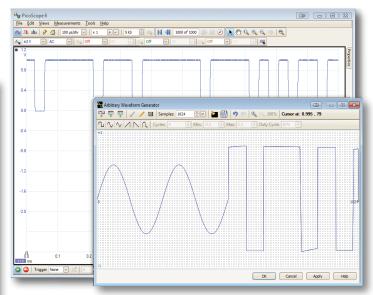


Every model includes a built-in DC to 20 MHz function generator with sine, square, triangle and DC waveforms. D models add a built-in 12-bit, 200 MS/s arbitrary waveform generator. You can import arbitrary waveforms from data files or create and modify them using the built-in graphical AWG editor.

#### Spectrum analyzer

With the click of a button, you can open a new window to display a spectrum plot of selected channels up to the full bandwidth of the oscilloscope. The spectrum view




can optionally be displayed together with a time-domain view. A comprehensive range of settings give you control over the number of spectrum bands, window types and display modes.

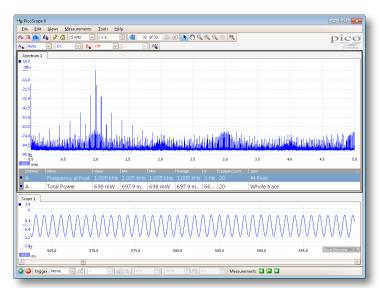


#### Color persistence modes

See old and new data superimposed, with new data in a brighter color or shade. This makes it easy to see glitches and dropouts and to estimate their relative frequency. Choose between analog persistence, digital color or custom display modes.

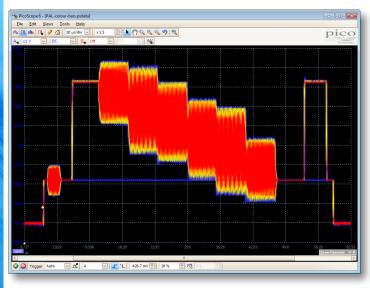

#### Mask limit testing

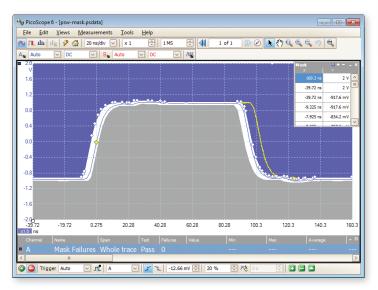

This feature is designed for production and debugging environments. Capture a signal from a known working system, and PicoScope will draw a mask around it with your specified vertical and horizontal tolerances. Connect the system under test, and PicoScope will highlight any parts of the waveform that fall outside the mask area. The highlighted details persist on the display, so the scope can catch intermittent glitches even while your attention is elsewhere. The measurements window counts the number of failures, and can display other measurements and statistics at the same time.

The numerical and graphical mask editors (both shown below) can be used separately


or in combination, allowing you to enter accurate mask specifications or modify existing masks. You can import and export masks as files.

Mask	<b>R+-</b> ->
X	Y
160.3 ns	2 V 🔼
-39.72 ns	2 V 💻
 -39.72 ns	-917.6 mV
-9.325 ns	-917.6 mV
-7.925 ns	-834.2 mV
 7 7 7 7	

#### High-speed data acquisition

The drivers and software development kit supplied allow you to write your own software or interface to popular third-party software packages. If the 2 GS buffer memory of the PicoScope 6404D isn't enough, the drivers support data streaming, a mode that captures gap-free continuous data over the USB 3.0 port directly to the PC's RAM at over 150 MS/s and to solid-state disk at up to 78 MS/s. Rates are subject to PC specifications and application loading.

#### Serial data decoding

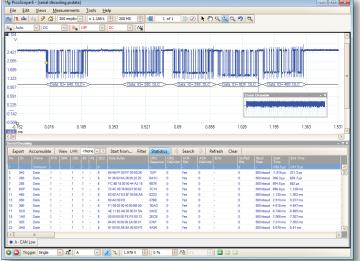

The PicoScope 6000 Series oscilloscopes are well-suited to serial decoding, with a deep memory buffer that allows them to collect long, uninterrupted sequences of data. This allows the capture of thousands of frames or packets of data over several seconds. The scopes can decode up to four buses simultaneously with independent protocol selection for each input channel.

Serial protocols
UART (RS-232)
SPI
l <sup>2</sup> C
I <sup>2</sup> S
CAN
LIN
FlexRay

PicoScope displays the decoded data in the format of your choice: **in view**, **in window**, or both at once.


- In view format shows the decoded data beneath the waveform on a common time axis, with error frames marked in red. You can zoom in on these frames to look for noise or distortion on the waveform.
- In window format shows a list of the decoded frames, including the data and all flags and identifiers. You can set up filtering conditions to display only the frames you are interested in, search for frames with specified properties, or define a start pattern that the program will wait for before it lists the data.

#### Analog and digital low-pass filtering

Each input channel has its own digital low-pass filter with independently adjustable cut-off frequency from 1 Hz to the full

scope bandwidth. This enables you to reject noise on selected channels while viewing highbandwidth signals on the others.

An additional selectable analog bandwidth limiter on each input channel can be used to reject high frequencies that would otherwise cause aliasing.

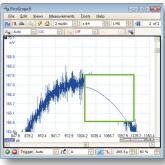

#### Digital triggering

Most digital oscilloscopes sold today still use an analog trigger architecture based on comparators. This can cause time and amplitude errors that cannot always be calibrated out. The use of comparators often limits the trigger sensitivity at high bandwidths.

In 1991 Pico pioneered the use of fully digital triggering using the actual digitized data. This technique reduces trigger errors and allows our oscilloscopes to trigger on the smallest signals, even at the full bandwidth. Trigger levels and hysteresis can be set with high precision and resolution.

Digital triggering also reduces re-arm delay and this, combined with the segmented memory, allows the triggering and capture of events that happen in rapid sequence. At the fastest timebase you can use rapid triggering to collect 10,000 waveforms in under 10 milliseconds. The mask limit testing function can then scan through these waveforms to highlight any failed waveforms for viewing in the waveform buffer.

#### Advanced triggers


As well as the standard range of triggers found on most oscilloscopes, the PicoScope 6000 Series has a built-in set of advanced triggers to help you capture the data you need.

Simple Edge Advanced Edge	Source Pulse Direction	A Negative Pulse	V	Threshold	0 V	1
Pulse Width	Condition	Greater than	$\mathbf{\mathbf{v}}$	Hysteresis	1.50 %	\$.5
Window Pulse Width				Time	0 s	÷
uindow Dropout ∬Runt ⊆ Logic	Timer when t	the pulse is longer t	han the			
				(	Help	Close

All triggering is digital, resulting in high threshold resolution with programmable hysteresis and optimal waveform stability.

#### Maths channels

With PicoScope 6 you can perform a variety of mathematical calculations on your input signals. You can calculate the sum, difference, product or inverse, or create your own custom function using standard arithmetic, exponential and trigonometric functions.

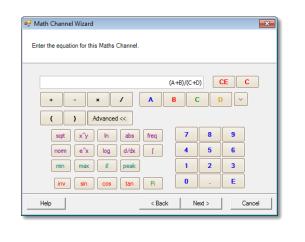


#### Automatic measurements

PicoScope allows you to automatically display a table of calculated measurements for troubleshooting and analysis.


Using the built-in measurement statistics you can see the average, standard deviation, maximum and minimum of each measurement as well as the live value.

You can add as many measurements as you need on each view. Each measurement includes statistical parameters showing its variability. For information on the measurements available in scope and spectrum modes, see **Automatic Measurements** in the **Specifications** table.

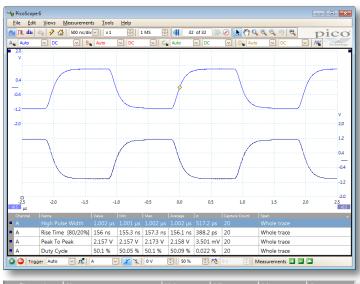

Channel	Name	Value	Min	Max	Average
	High Pulse Width	1.002 µs	1.001 µs	1.002 µs	1.002 µs
Α	Rise Time [80/20%]	156 ns	155.3 ns	157.3 ns	156.1 ns
Α	Peak To Peak	2.157 V	2.157 V	2.173 V	2.158 V
Α	Duty Cycle	50.1 %	50.05 %	50.1 %	50.09 %



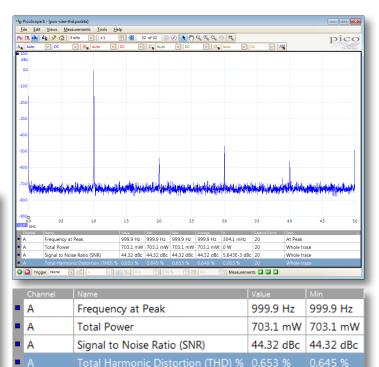


11 spectrum mode measurements

#### High signal integrity

Most oscilloscopes are built down to a price; ours are built up to a specification.

Our engineers use careful front-end design and shielding to reduce noise, crosstalk and harmonic distortion. With decades of oscilloscope experience, we know how to design for optimal pulse response and bandwidth flatness.

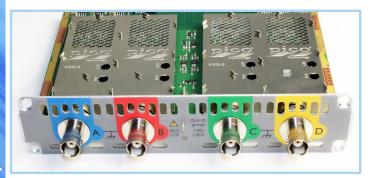

#### Hardware acceleration

On some oscilloscopes, enabling deep memory has a penalty: the screen update rate slows down and the controls become unresponsive as the processor struggles to cope with the amount of data. Thanks to the hardware acceleration inside PicoScope deep-memory oscilloscopes, you can collect waveforms containing hundreds of millions of samples while keeping fast screen update rates and a responsive user interface. Dedicated hardware inside

> the oscilloscope processes multiple streams of data in parallel to construct the waveform that will be displayed on the screen. This is done far faster than any PC processor could manage, and together with USB 3.0 SuperSpeed data transfer eliminates any bottlenecks between the oscilloscope and the PC.

For example, the scope may be set to capture 100 000 000 samples but the PicoScope display window may be only 1000 pixels wide. In this case, the scope intelligently compresses the data into 1000 blocks of 100 000 samples each. Unlike simple decimation, which throws away most of the data, PicoScope hardware acceleration guarantees that you see any high-frequency details such as narrow glitches, even when the display is zoomed out.

#### High-end features as standard

Buying a scope from some companies is a bit like buying a car. By the time you have added all the optional extras you need, the price has gone up considerably. With the PicoScope 6000 Series, high-end features such as mask limit testing, serial decoding, advanced triggering, measurements, math, XY mode, digital filtering, segmented memory and even a signal generator are all included in the price.

To protect your investment, both the PC software and firmware inside the unit can be updated. We have a long history of providing new features for free as software downloads. Other companies make vague promises about future enhancements but we deliver on our promises year after year. Users of our products reward us by becoming lifelong customers, frequently recommending us to their colleagues.

#### Probes included

Your PicoScope 6000 Series scope is supplied complete with four wideband, high-impedance probes. These probes have been designed for use with individual models of the PicoScope 6000 Series and are factory-compensated to match each scope's input characteristics. Each high-quality probe is supplied with a range of accessories for convenient and accurate high-frequency measurements.

A comprehensive range of alternative probes is also available.



Probe specifications	TA150	TA133		
Attenuation	10	D:1		
Resistance at probe tip	10 MΩ			
Capacitance at probe tip	9.5 pF			
Scope input impedance	11	ΜΩ		
Compatibility	PicoScope 6402C/D, PicoScope 6403C/D	PicoScope 6404C/D		
Bandwidth (3 dB)	350 MHz	500 MHz		
Rise time (10% to 90%)	1 ns	700 ps		
Compensation range	10 to	25 pF		
Safety standard	IEC/EN 6	61010-031		
Cable length	1.3	3 m		

#### Probe accessories included

#### TA133 and TA150

- Instruction manual
- Solid tip 0.5 mm
- Coding rings, 3 x 4 colors
- Ground lead 15 cm
- Ground spring 2.5 mm
- Trim tool
- Insulating cap 2.5 mm
- Sprung hook 2.5 mm

#### TA133 only

- Spring tip 0.5 mm
- Ground blade 2.5 mm
- 2 self-adhesive copper pads
- Protection cap 2.5 mm
- IC caps 0.5 to 1.27 mm pitch
- PCB adapter kit 2.5 mm





PicoScope: The display can be as simple or as complex as you need. Begin with a single view of one channel, and then expand the display to include any number of live channels, math channels and reference waveforms.

Tools > Serial decoding: Decode multiple serial data signals and display the data alongside the physical signal or as a detailed table.

Tools > Reference channels: Store waveforms in memory or on disk and display them alongside live inputs. Ideal for diagnostics and production testing.

Tools > Masks: Automatically generate a test mask from a waveform or draw one by hand. PicoScope highlights any parts of the waveform that fall outside the mask and shows error statistics.

Channel options: Filtering, offset, scaling, resolution enhancement, custom probes and bandwidth limiter.

> Auto setup button: Configures the timebase and voltage ranges for stable display of signals.

> > Trigger marker: Drag to adjust trigger level and pre-trigger time.

Oscilloscope controls: Controls such as voltage range, scope resolution, channel enable, timebase and memory depth are placed on the toolbar for quick access, leaving the main display area clear for waveforms.

Signal generator: Generates standard signals or (on selected scopes) arbitrary waveforms. Includes frequency sweep mode.

Waveform replay tools: PicoScope automatically records up to 10 000 of the most recent waveforms. You can quickly scan through to look for intermittent events, or use the Buffer **Navigator** to search visually.

Zoom and pan tools: PicoScope allows a zoom factor of several million, which is necessary when working with the deep memory of the 6000 Series scopes. Either use the zoom-in, zoom-out and pan tools, or click and drag in the zoom overview window for fast navigation.

Math channels: Combine input channels and reference waveforms using simple arithmetic, or create custom equations with trigonometric and other functions.

**Views:** PicoScope is carefully designed to make the best use of the display area. You can add new scope and spectrum views with automatic or custom layouts.

Rulers: Each axis has two rulers that can be dragged across the screen to make quick measurements of amplitude, time and frequency.

> Ruler legend: Absolute and differential ruler measurements are listed here.



axes can be dragged up and down. This feature is particularly useful when one waveform is obscuring another. There's also an Auto Arrange Axes command.

Ouick access to main controls, with advanced triggers in a pop-up window.

Display calculated measurements for troubleshooting and analysis. You can add as many measurements as you need on each view. Each measurement includes statistical parameters showing its variability.

Zoom overview: Click and drag for quick navigation in zoomed views.

Spectrum view: View FFT data alongside scope view or independently.

	PicoScope 6402C	PicoScope 6402D	PicoScope 6403C	PicoScope 6403D	PicoScope 6404C	PicoScope 6404D	
VERTICAL							
Input channels				ors, single-ended			
Analog bandwidth (-3 dB)*		MHz ±50 mV range)		MHz ±50 mV range)	500	MHz	
Bandwidth limiting		switchable	· ·	switchable	25 MHz.	switchable	
Rise time (10% to 90%, calculated)		range 1.8 ns)	,	/ range 1.4 ns)	,	Il ranges)	
Input ranges (full scale)		· · · · ·	•	), $\pm 50$ mV to $\pm 5$ V,	· ·	- · ·	
Input sensitivity	10 mV/div	to 4 V/div at x1 z	coom (1 MΩ input)	, 10 mV/div to 1 V	//div at x1 zoom (	50 Ω input)	
Input coupling				), 50 Ω (DC only)			
Input characteristics	. 50		F, or 50 $\Omega$ ±2%			<del>,</del> or 50 Ω ±2%	
Analog offset range		/ " / " V "	+2.5 V +2.5 V +2.5 V +20 V (50 +20 V +20 V	) Ω: ±0.5 V)	$\begin{array}{c} \pm 2 \ V \\ \pm 10 \ V \ (50 \ \Omega; \pm 5 \ V) \\ \pm 10 \ V \ (50 \ \Omega; \pm 4.5 \ V) \\ \pm 10 \ V \ (50 \ \Omega; \pm 3.5 \ V) \\ \pm 35 \ V \ (50 \ \Omega; \pm 0.5 \ V) \\ \pm 30 \ V \\ \pm 20 \ V \end{array}$		
DC accuracy		. 400.14		full scale			
Overvoltage protection	an at PNIC when I			uts), 5.5 V RMS (5	0 Ω inputs)		
* Stated bandwidth is with supplied probes DYNAMIC PERFORMANCE	s or at BINC when !	impedance se					
Noise		200 µV RMS	(50 mV range)		320 µV RMS	(50 mV range)	
THD			B typical			b typical	
SFDR		60 dB	typical		55 dB	typical	
Crosstalk			ical at 20 MHz at full bandwidth			al at 20 MHz t full bandwidth	
HORIZONTAL (TIMEBASE)							
Timebase ranges		1 n 50 pc/div	$r_{\rm s}/div$ to 5000 s/d	iv (real-time sampli uivalent-time sampl	ling)		
Timebase accuracy		50 ps/ div		ppm	ling / ETS)		
Timebase ageing				per year			
ACQUISITION				,			
ADC resolution		8 bits (up to	o 12 bits using soft	ware resolution en	hancement)		
Maximum real-time sampling rate			1 channel 2 channels 4 channels	5 GS/s 2.5 GS/s** 1.25 GS/s	·		
Maximum ETS rate			50 GS/s (any nu	mber of channels)			
Maximum streaming data rate (PicoScope 6)				MS/s			
Maximum streaming data rate (SDK)		(USB 3.0,	, PC-dependent, su	ming to SSD hard o bject to application	loadings)		
Buffer size (shared between active channels)	256 MS	512 MS	512 MS	1 GS	1 GS	2 GS	
Buffer size (streaming mode) Max. buffer segments (using PicoScope 6)	ľ	00 MIS IN PICOSCOP		available PC memo 000	bry when using SD	κ.	
Max. buffer segments (using FICOSCOPE 6)	250 000	500 000	500 000	1 000 000	1 000 000	2 000 000	
** To achieve 2.5 GS/s sampling rate in 2-				1000000	1000000	2000000	
TRIGGERING	,						
Sources				to D, AUX			
Trigger modes	<b>F</b> 1 <b>1 1</b>			pid (segmented me			
Advanced trigger types (real-time mode) Trigger types (ETS mode)	Edge, pulse width,	window, window		ut, window dropou , falling edge	t, ievel, interval, log	gic level, runt pulse	
Trigger sensitivity		119		full bandwidth of sc	ope		
Trigger level				of selected voltage			
Maximum pre-trigger capture			100% of c	apture size			
Maximum post-trigger delay				samples			
Re-arm time				n fastest timebase	net		
Maximum trigger rate Trigger timing resolution		U		orms in a 10 ms bu e period	rst		
			r sampi	e period			
AUX TRIGGER INPUT AUX trigger connector type		Rear p	anel BNC shared	with reference cloc	k input		
Trigger types				ropout, interval, log			
Input characteristics				DC coupled			
Bandwidth				MHz			
Threshold range				V			
Overvoltage protection			±5 V (DC	+ AC peak)			
REFERENCE CLOCK INPUT (SDK ONLY)							
Clock input characteristics				V, DC coupled			
Frequency range				z, user-selectable			
Connector Level		Ke		red with AUX trigg reshold, ±1 V	ger		
Overvoltage protection				5 V			
			1.				

	PicoScope 6402C	PicoScope 6402D	PicoScope 6403C	PicoScope 6403D	PicoScope 6404C	PicoScope 6404D
FUNCTION GENERATOR						
Standard signal frequency			DC to 2	20 MHz		
Standard output signals All models				, triangle, DC		
D models only		Ramp,		If-sine, white noise	, PRBS	
Output frequency accuracy			· · ·	mebase accuracy		
Output frequency resolution				)5 Hz		
Output voltage adjustment		Offset ad	e adjustment: justment: 1 combined outpu	±1 V	(4 V max. p-p) /	
DC accuracy			±1% of	full scale		
Connector type			Rear pa	nel BNC		
Output impedance			50	Ω		
Overvoltage protection			±5	5 V		
Sweep modes		Up, down, or dual	, with selectable st	tart/stop frequenc	ies and increment	S
Signal generator triggering		be, manual, or AUX				
ARBITRARY WAVEFORM GENERATOR (A		, ,	1 /1 0	/		
Buffer size	(VVG)	64 kS		64 kS		64 kS
		200 MS/s		200 MS/s		-
Sample rate	-	· · ·	-	· · · ·	-	200 MS/s
Resolution		12 bits		12 bits		12 bits
Bandwidth		20 MHz		20 MHz		20 MHz
PROBE COMPENSATION OUTPUT						
Impedance			60	0 Ω		
Frequency			1 kHz sq	uare wave		
Level			2 V	pk-pk		
Overvoltage protection			±5 V (DC	+ AC peak)		
SPECTRUM ANALYZER			,	, ,		
		50 MHz		50 MHz		500 MHz
Frequency range	DC 10 2	50 MHZ			DC to .	
Display modes	Dester		-	rage, peak hold	Llenensin – Llene	flat to 2
Windowing functions	Rectan	gular, Gaussian, tri	•			nat-top
Number of FFT points		Selec	table power of 2	from 128 to 1 048	3 5/6	
MATH CHANNELS						
Functions	-x, x	x+y, x−y, x*y, x/y,	x^y, sqrt, exp, In	, log, abs, norm, si	gn, sin, cos, tan, a	rcsin,
On survey de	arccos,	arctan, sinh, cosh,				ak, delay
Operands		input ch	annels A to D, ref	erence waveforms	, time, π	
AUTOMATIC MEASUREMENTS						
Scope mode	AC RMS, tru	ie RMS, cycle time	, DC average, duty	y cycle, falling rate,	fall time, frequen	cy, high pulse
	Widtr	n, low pulse width,				ig rate
Spectrum mode		total power, THI	) %. THD dB. TH	peak, average amp D+N, SFDR, SINA	D, SNR and IMD	
Statistics				age, and standard		
SERIAL BUS DECODING			, ,	0,		
		CAN			D	
Data formats		CAN,	LIN, 1 <sup>2</sup> C, 1 <sup>2</sup> S, UAI	RT/RS-232, SPI, FI	ехкау	
MASK LIMIT TESTING						
Statistics			Pass/fail, failure	count, total count		
DISPLAY						
Interpolation			Linear or	$r \sin(x)/x$		
Persistence modes		Digit		ensity, custom, or	none	
		Digit	ar color, analog me		none	
GENERAL						
PC connectivity	_			2.0 compatible)		
Export data formats	Comma-sep	arated values (CS)	· · · ·	· ·		ormat (MAT)
Power requirement				daptor and cable su		
Dimensions (inc. connectors & end caps)			5 x 40 mm			5 x 40 mm
Weight		1 kg (appro	,		• • • • •	ox. 2 lb 14 oz)
Temperature range	Operatin	g: 0 °C to 40 °C (2	20 °C to 30 °C for	r stated accuracy).	Storage: -20 °C t	o +60 °C.
Humidity range	Opera	ating: 5% to 80% F	H non-condensing	g. Storage: 5% to 9	5% RH non-cond	ensing.
Compliance		EU: EMC, L	VD, RoHS, WEEE	. USA: FCC Part 1	5 Subpart B	
Safety approvals				V 61010-1:2010		
PC requirements	Microso	oft Windows XP, V	0		lows 8 (not Wind	ows RT)
Software included				DK and example pr		,
	Chinese (Simplifi	ed), Chinese (Trad	•		0	, German, Greek
	Compine	,,	, cloci, De			
Languages supported (software)	Hungarian, Italia	n, Japanese, Korea	n, Norwegian, Pol	lish, Portuguese, R	omanian, Spanisn,	Swedish, Iurkish

#### Model selector

Model	Bandwidth	Buffer size	Signal generator	Arbitrary waveform generator
PicoScope 6402C	250 MIL	256 MS	✓	
PicoScope 6402D	250 MHz	512 MS	✓	✓
PicoScope 6403C	250 MIL	512 MS	✓	
PicoScope 6403D	350 MHz	1 GS	✓	✓
PicoScope 6404C	500 MIL	1 GS	✓	
PicoScope 6404D	500 MHz	2 GS	✓	✓

# Have you seen the PicoScope 6407 Digitizer?

The PicoScope 6407 Digitizer has four 1 GHz inputs and a maximum sampling rate of 5 GS/s.

➔ PicoScope 6407 Digitizer



### Product pack contents

- PicoScope 6000 Series oscilloscope
- Four factory-compensated probes
- USB cable
- Universal mains (AC) power supply
- Mains lead (power cord)
- Installation Guide
- Software and Reference CD
- Carrying case



## Need more bandwidth?

For repetitive signals such as serial data streams, and characterization of cables and backplanes, the PicoScope 9000 Series Sampling Oscilloscopes deliver high specifications at low prices. Choose between the 12 GHz PicoScope 9200 Series and the 20 GHz PicoScope 9300 Series. TDR/TDT and optical models are also available.

➔ PicoScope 9000 Series



# **Ordering information**

Description
PP884 PicoScope 6402C 250 MHz Oscilloscope with probes
PP885 PicoScope 6402D 250 MHz Oscilloscope with AWG and probes
PP886 PicoScope 6403C 350 MHz Oscilloscope with probes
PP887 PicoScope 6403D 350 MHz Oscilloscope with AWG and probes
PP888 PicoScope 6404C 500 MHz Oscilloscope with probes
PP889 PicoScope 6404D 500 MHz Oscilloscope with AWG and probes
TA150 Replacement x10 probe for PicoScope 6402C/D & 6403C/D
TA133 Replacement x10 probe for PicoScope 6404C/D
TA065, TA066 and TA067 accessory packs for TA150 and TA133 probes

Headquarters:

Pico Technology James House Colmworth Business Park St. Neots Cambridgeshire PE19 8YP United Kingdom

- +44(0) 1480 396395
- ➡ +44 (0) 1480 396296

sales@picotech.com

USA Branch Office: Pico Technology 320 N Glenwood Blvd Tyler Texas 75702 United States

+1 800 591 2796

- sales@picotech.com

Errors and omissions excepted. Windows is a registered trade mark of Microsoft Corporation in the United States and other countries. *Pico Technology* and *PicoScope* are internationally registered trade marks of Pico Technology Ltd. MM050-2. Copyright © 2011-2013 Pico Technology Ltd. All rights reserved.



www.picotech.com

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Benchtop Oscilloscopes category:

Click to view products by Pico manufacturer:

Other Similar products are found below :

 WSXS-RACK
 WSXS-MOUSE
 WSXS-KYBD
 UPO2102CS
 AX-DS1100CFM
 TT-HV250
 TT-LF212
 TT-LF 312-2-6
 DSO3064-KIT-IV

 DSO5102P
 DSO5202B
 RT-ZP03
 MSO5062D
 CC-650
 FLUKE PM9082/001
 TOS-2020CT
 PK007-003
 PK007-019
 PK007-022
 PK007-024

 PK007-026
 PK106-5
 PK116-3
 PK1-5MM-102
 PK1-5MM-104
 PK1-5MM-105
 PK1-5MM-111
 PK1-5MM-112
 PK1-5MM-112

 113
 PK1-5MM-120
 TA041
 GDS-1052-U
 GDS-1072A-U
 GDS-102A-U
 GDS-2072A
 GDS-2202E
 GDS-2204E
 U3400A-1CM
 PP-150
 PP 

 80
 HO720
 TT-MF312
 TT-HF212RA
 TT-HF212
 2555
 2557
 2566