

GaP blue light detector with integrated amplifier

GENERAL FEATURES





Properties of the TOCON_BLUE8

- GaP detector for blue light radiation in TO5 housing
- detection of incoherent blue light according to guideline 2006/25/EG
- o... 5 V voltage output, peak wavelength at 445 nm
- max. radiation (saturation limit) at peak is 430 mW/cm², minimum radiation (resolution limit) is 42 μW/cm²
- · Applications: measurement of high blue light irradiation, occupational safety

What is a TOCON?

A TOCON is a 5 Volt powered UV photodetector with integrated amplifier converting UV radiation into a o...5V voltage output. The V_{out} pin of the TOCON can be directly connected to a controller, a voltmeter or any other data analyzing device with voltage input. Highly modern electronic components and a hermetically sealed metal housing with UV glass window eliminates noise caused by parasitic resistance paths inside the package or EMI. A TOCON is a perfect solution for each industrial UV sensing application starting from flame detection at pW/cm² level up to UV curing lamp control at W/cm² level. This thirteen orders of magnitude range is covered by ten different TOCONs that differ by their sensitivity. The TOCONs are produced as UV broadband sensors or with filters for selective measurement.

NOMENCLATURE

| TOCON_ | ABC, A, B, C, blue or GaP | 1 10 |
|--------|---|--|
| | Spectral response | Irradiance limits ($V_{supply}=5V$, $\lambda=\lambda_{peak}$) |
| | ABC = broadband | 1 = 1,8 pW/cm ² 1,8 nW/cm ² |
| | $\lambda_{\text{max}} = 290 \text{ nm} \lambda_{\text{S10\%}} = 227 \text{ nm} \dots 360 \text{ nm}$ | 2 = 18 pW/cm ² 180 nW/cm ² |
| | A = UVA $\lambda_{\text{max}} = 331 \text{nm} \lambda_{\text{510\%}} = 309 \text{nm} \dots 367 \text{nm}$ | 3 = 180 pW/cm ² 1,8 μW/cm ² |
| | B = UVB | $4 = 1.8 \text{ nW/cm}^2 \dots 18 \mu\text{W/cm}^2$ |
| | $\lambda_{\text{max}} = 280 \text{ nm}$ $\lambda_{\text{S10\%}} = 243 \text{ nm} \dots 303 \text{ nm}$ | 5 = 18 nW/cm ² 18ο μW/cm ² |
| | C = UVC $\lambda_{\text{max}} = 275 \text{ nm} \lambda_{\text{S}_{10}\%} = 225 \text{ nm} \dots 287 \text{ nm}$ | 6 = 180 nW/cm ² 1,8 mW/cm ² |
| | | 7 = 1,8 μW/cm ² 18 mW/cm ² |
| | Blue $\lambda_{\text{max}} = 445 \text{ nm} \lambda_{\text{S10\%}} = 390 \text{ nm} \dots 515 \text{ nm}$ | 8 = 18 μW/cm ² 180 mW/cm ² |
| | Gap | 9 = 180 μW/cm ² 1,8 W/cm ² |
| | $\lambda_{\text{max}} = 445 \text{ nm} \lambda_{\text{S10\%}} = 190 \text{ nm} \dots 570 \text{ nm}$ | 10 = 1,8 mW/cm ² 18 W/cm ² |
| | E = UV-Index spectral response according to CIEo87 | 2 = 0 UVI 30 UVI |

sglux GmbH | Max-Planck-Str. 3 | D-12489 Berlin | Tel. +49 30 5301 5211 | welcome@sglux.de | www.sglux.de




GaP blue light detector with integrated amplifier

SPECIFICATIONS

2/4

| Parameter | Symbol | Value | Unit |
|--|------------------------|--------------------------|-----------|
| Spectral Characteristics | | | |
| Typical Responsivity at Peak Wavelength | S_{max} | 12 | mV/mW/cm² |
| Wavelength of max. Spectral Responsivity | λ_{max} | 445 | nm |
| Responsivity Range (S=0,1*S _{max}) | - | 390 515 | nm |
| General Characteristics (T=25°C, _{Vsupply} =+5 V) | | | |
| Supply Voltage | V_{Supply} | 2,5 5 | V |
| Saturation Voltage | V_{Sat} | V _{Supply} - 5% | V |
| Dark Offset Voltage | V_{Offset} | 50 | μV |
| Temperature Coefficient at Peak | T_c | < -0,5 | %/K |
| Current Consumption | 1 | 150 | μΑ |
| Bandwidth (-3 dB) | В | 15 | Hz |
| Risetime (10-90%) | t_{rise} | 0,071 | S |
| (other risetimes on request) | | | |
| Maximum Ratings | | | |
| Operating Temperature | T_{opt} | −25 +85 | °C |
| Storage Temperature | T_{stor} | -40 +100 | °C |
| Soldering Temperature (3s) | T_{sold} | 300 | °C |

NORMALIZED SPECTRAL RESPONSIVITY

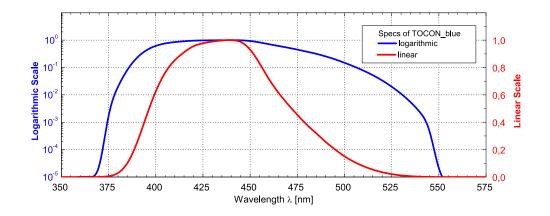


GaP blue light detector with integrated amplifier



FIELD OF VIEW

3/4

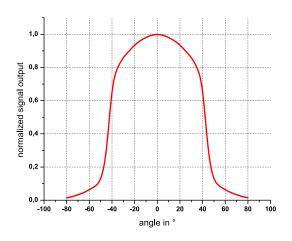


Measurement Setup:


lamp aperture diameter: 10 mm distance lamp aperture to second aperture: 17 mm second aperture diameter: 10 mm

distance second aperture to detector: 93 mm

pivot level = top surface of the detector window

DRAWING

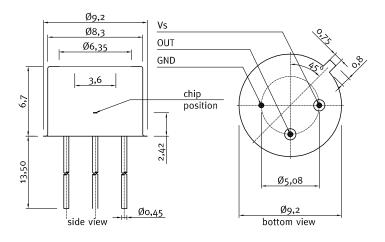

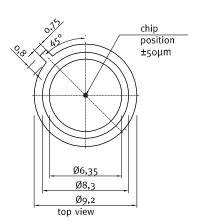



GaP blue light detector with integrated amplifier


APPLICATION NOTE FOR TOCONS



The TOCONs need a supply voltage of $V_{\text{supply}}=2.5...5V_{DC}$ and can be directly connected to a controller or voltmeter. Please note that the theoretic maximum signal output is always a little less (approx. 5%) than the supply voltage. To learn more about perfect use of the TOCONs please refer to the TOCON FAQ list published at www.sglux.com.

CAUTION! Wrong wiring leads to destruction of the device.

For easy setup of the device please ask for a TOCON starter kit.

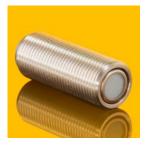

Miniature steel housing with M12x1 thread for the TOCON series

- Optional feature for all TOCON detectors
- Robust stainless steel M12x1 thread body, length 32 mm
- Integrated sensor connector (Binder 5-Pin plug) with 2m connector cable
- Easy to mount and to connect



Miniature PTFE housing with M12x1 thread for the TOCON series

- Optional feature for all TOCON detectors without concentrator lens
- Teflon (PTFE) M12x1 thread body, length 31 mm
- Wide field of view, dirt-repellant, water proof at wet side (IP 68)
- Integrated sensor connector (Binder 5-Pin plug) with 2m connector cable
- Easy to mount and connect, cleanable

The PTFE housing reduces the signal output by approx. 95%. Please consider this while selecting the TOCON's sensitivity range.



Plastic probes

- Optional feature for all TOCON detectors
- UV probes in small plastic housings with a TOCON inside
- Customized housings available
- Easy to mount and to connect
- Integrated sensor connector (Binder 5-Pin plug)
- Cable available



Water pressure proof TOCON housing

- Optional feature for all TOCON detectors without concentrator lens
- G1/4" thread, 10 bar water pressure proof
- Customized housings available
- Easy to mount and to connect
- Integrated sensor connector (Binder 5-Pin plug)
- Cable available

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for sglux manufacturer:

Other Similar products are found below:

SG01L-18