

## 3M<sup>™</sup> 9312 Valved Dust / Mist Respirator

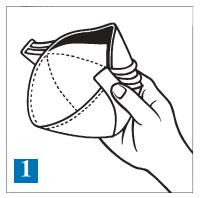

1. Noseclip is located in top panel. Preform noseclip by gently bending at centre
Hold respirator in hand and pull out bottom panel to form cup.

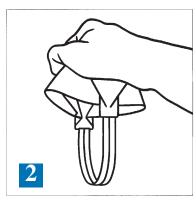

2. Turn respirator over to expose headbands.



3. Cup respirator under chin. Ensure the two straps are seperated and pull the straps over the head.



4. Locate the lower strap below the ears and the upper strap accross the crown of the head. Adjust top and bottom panels for a comfortable fit.



5. Using both hands, mould noseclip to the shape of the lower part of the nose.

DO NOT pinch the nosepiece using only one hand as this may result in less effective respirator performance.



If you cannot achieve a proper fit do not enter contaminated area. See your supervisor. **6.** The seal of the respirator on the face should be fit-checked prior to wearing in the work area.

To check the fit of a

valved respirator:
a) Cover the front of the respirator with both hands being careful not to disturb the position of the respirator.

b) Inhale sharply. If air flows around the nose, readjust the nosepiece as described in step 5. If air leaks at the respirator edges, work the straps back along the sides of the head.



3M<sup>™</sup> 9312 Valved Dust / Mist Respirator





## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for 3M manufacturer:

Other Similar products are found below:

951240-2520-AR-PR 8225-8003 961216-5500-AR-PR 966218-2000-AR-PR 953214-2000-AR-PR 3659-60 8R37-N001 951106-2530-AR-PR 961224-5500-AR-PR 7630810583 951244-2520-AR-PR 151230-8422-RB 80-0012-6467-2 929836-01-10-RK 951109-2530-AR-PR 929647-02-02-I 929647-09-01-I 961107-6404-AR 953230-2000-AR-PR 929665-01-02-I 961120-6404-AR 961114-6404-AR 929835-01-05-RK 961214-6404-AR H-33-BOX 929835-01-07-RK 961103-6804-AR 929834-01-15-RK 929665-01-06-I 929834-01-04-RK 961110-6404-AR 929647-03-03-I 929647-09-03-I 929700-01-06-RK CT6BK30-M 961208-6404-AR 929665-02-04-I 6A11-A0121-007.0-0 FDV14-187C 8124/14 812510-100 8125/17 813216 8204-3LFM 8425-8 8444-21B1-RK-TP MNG14BCX FP-301 1 BLUE 100 FV14-6C 923660-20