

date 08/05/2022

page 1 of 8

# SERIES: AMT10 | DESCRIPTION: MODULAR INCREMENTAL ENCODER

## **FEATURES**

- patented capacitive ASIC technology
- low power consumption
- CMOS outputs
- 16 DIP switch selectable resolutions
- · index pulse
- modular package design
- straight (radial) and right-angle (axial) versions
- 9 mounting hole options for radial version
- 8 mounting hole options for axial version
- -40~100°C operating temperature





## **ELECTRICAL**

parameter	conditions/description	min	typ	max	units
power supply	VDD	3.6	5	5.5	V
current consumption	with unloaded output		6		mA
output high level		VDD-0.8			V
output low level				0.4	V
output current	CMOS sink/source per channel			2	mA
rise/fall time			30		ns

## INCREMENTAL CHARACTERISTICS

parameter	conditions/description	min	typ	max	units
channels	quadrature A, B, and X index				
waveform	CMOS voltage square wave				
phase difference	A leads B for CCW rotation (viewed from front)		90		degrees
quadrature resolutions <sup>1</sup>	48, 96, 100, 125, 192, 200, 250, 256, 384, 400, 500, 512, 800, 1000, 1024, 2048				PPR
index <sup>2</sup>	one pulse per 360 degree rotation				
accuracy			0.25		degrees
quadrature duty cycle (at each resolution)	256, 512, 1024, 2048 48, 96, 100, 125, 192, 200, 250, 384, 400, 500 800, 1000	49 47 43	50 50 50	51 53 56	% %

Notes:

<sup>1.</sup> Resolution selected via adjustable DIP switch, pre-set to 2048 PPR. All resolutions are listed as pre-quadrature, meaning the final number of counts is PPR x 4. 2. Some stepper motors may leak a magnetic field causing the AMT index pulse to not function properly (non-magnetic version available with 8 pulses per revolution).

## **MECHANICAL**

parameter	conditions/description	min	typ	max	units
motor shaft length		9			mm
motor shaft tolerance		NOM +0/-0.015			mm
weight	AMT102 AMT103		20.5 14.0		g
axial play				±0.3	mm
rotational speed (at each	192, 384, 400, 500, 800, 1000, 1024, 2048			7500	RPM
resolution)	48, 96, 100, 125, 200, 250, 256, 512			15000	RPM

## **ENVIRONMENTAL**


parameter	conditions/description	min	typ	max	units
operating temperature <sup>1</sup>	-40		100	°C	
humidity	non-condensing			95	%
vibration	20~500 Hz, 1 hour on each XYZ			10	G
shock	11 ms, ±XYZ direction			50	G
RoHS	yes				

Note: 1. Encoders with operating temperature of -40~125°C are available as a custom order

## **WAVEFORMS**

Figure 1

Quadrature signals with index showing counter-clockwise rotation

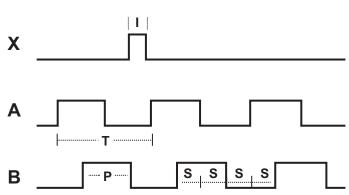


The following parameters are defined by the resolution selected for each encoder. The encoders resolution is listed as Pulses Per Revolution (PPR), which is the number of periods (or high pulses) over the encoders revolution.

Parameter	Description	Expression	Units	Notes
PPR	resolution		Pulses Per Revolution	This is the user selected value and the format all resolutions are listed in
CPR	counts	PPR x 4	Counts Per Revolution	This is the number of quadrature counts the encoder has
Т	period	360/R	mechanical degrees	
Р	pulse width	T/2	mechanical degrees	
S	A/B state width	T/4	mechanical degrees	This is the width of a quadrature state
I	index width	T/4	mechanical degrees	The width of a once per turn index is the state width for A & B lines

Note: For more information regarding PPR, CPR, or LPR (Lines Per Revolution) view <a href="https://www.cuidevices.com/blog/what-is-encoder-ppr-cpr-and-lpr">https://www.cuidevices.com/blog/what-is-encoder-ppr-cpr-and-lpr</a>

## **PART NUMBER KEY**

For customers that prefer a specific AMT10 configuration, please reference the custom configuration key below.

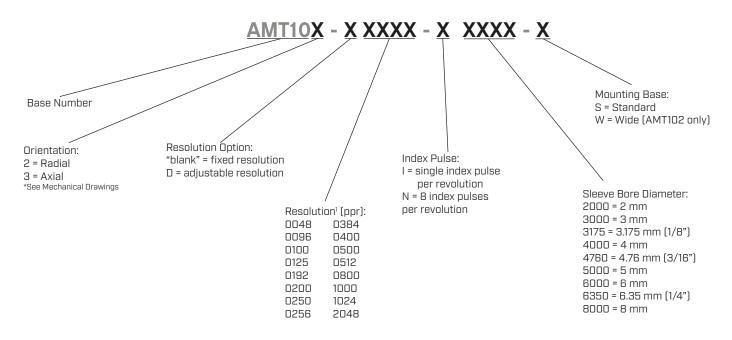


Note:

1. Fixed resolutions are permanently set at this value; adjustable resolutions are preset via DIP switch to this value upon shipment.

## **AMT10-V KITS**

In order to provide maximum flexibility for our customers, the AMT10 series is provided in kit form standard. This allows the user to implement the encoder into a range of applications using one sku#, reducing engineering and inventory costs.

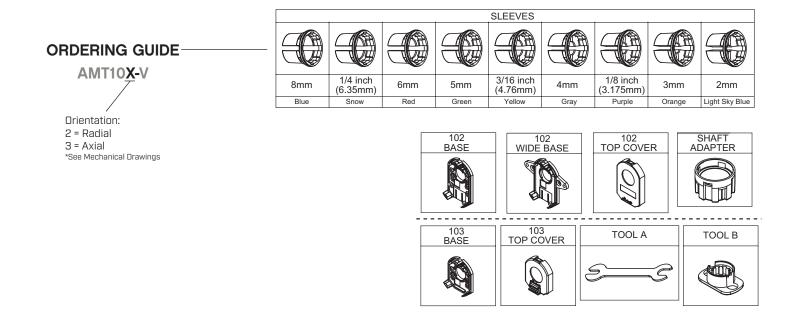


# **RESOLUTION SETTINGS**

1 = On, 0 = Off

Resolution (PPR)	Maximum RPM	1	2	3	4
2048	7500	0	0	0	0
1024	7500	0	0	1	0
1000	7500	1	0	0	0
800	7500	0	1	0	0
512	15000	0	0	0	1
500	7500	1	0	1	0
400	7500	0	1	1	0
384	7500	1	1	0	0
256	15000	0	0	1	1
250	15000	1	0	0	1
200	15000	0	1	0	1
192	7500	1	1	1	0
125	15000	1	0	1	1
100	15000	0	1	1	1
96	15000	1	1	0	1
48	15000	1	1	1	1


## **DIP** switch:

Example setting: 500 PPR



## **ENCODER INTERFACE**

PINOUT CONNECTOR						
	Function					
#	AMT102	AMT103				
В	B CHANNEL	B CHANNEL				
5V	+5 V	+5 V				
А	A CHANNEL	A CHANNEL				
Х	INDEX CHANNEL	INDEX CHANNEL				
G	GND	GND				
Т	UNUSED	N/A				

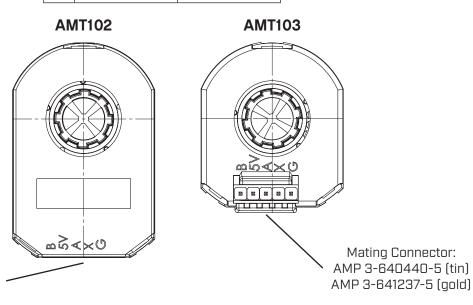



Mating Connector: Molex 50-57-9405 Housing Molex 16-02-0086 Terminals

## **MECHANICAL DRAWING**

## **AMT102**


units: mm[inch] tolerance: ±0.1mm

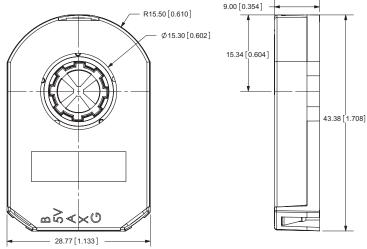


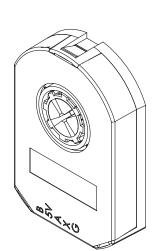


## **AMT102 WIDE BASE**

units: mm[inch] tolerance: ±0.1mm

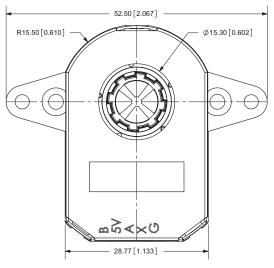


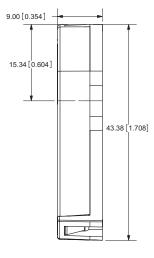


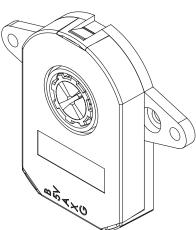


## **AMT103**

units: mm[inch] tolerance: ±0.1mm

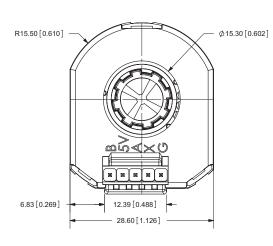

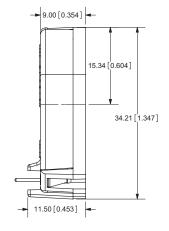

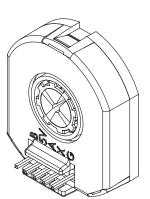


# **MECHANICAL DRAWING (CONTINUED)**

## **MOUNTING HOLE PATTERNS**


## **AMT102**

units: mm[inch] tolerance: ±0.1mm

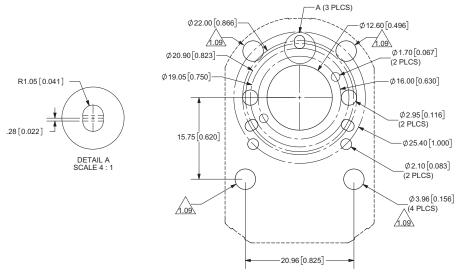


## **AMT102 WIDE BASE**

units: mm[inch] tolerance: ±0.1mm

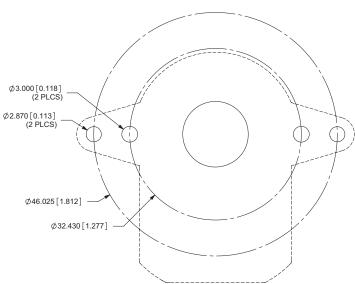

## **AMT103**


units: mm[inch] tolerance: ±0.1mm

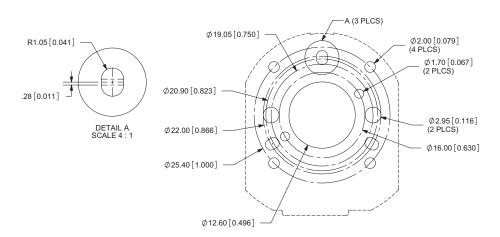


## **ASSEMBLY PROCEDURE**

# STEP 1


- 1. Insert Tool A as a spacer that defines the distance to the mounting surface.
- 2. Slide appropriate sized Sleeve over shaft all the way down to Tool A.
- 3. Slide Shaft Adaptor over Sleeve.
- **4**. Use Tool B to press Shaft Adaptor over Sleeve until flush with Tool A.

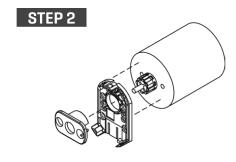


- 1. Remove Tools A and B.
- 2. Place Base on motor, with Tool B used as a centering tool.

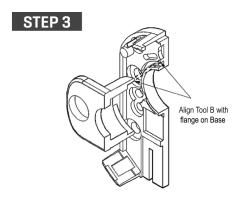

- 1. Align Tool B with flange on Base.
- 2. Slide Base and Tool B onto motor, centering onto the Shaft Adapter.

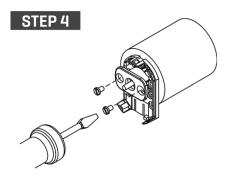

- ${f 1}.$  Fasten the Base on the motor.
- 2. Remove Tool B.

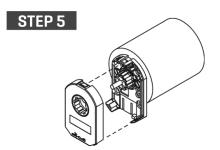

- Slide the Top Cover onto the Base, carefully observing that the teeth of the Shaft Adaptor align with the grooves in the hub.\*
- \* We recommend no more than three cycles of mounting and removal of the AMT top cover base. Multiple cycles of mounting and removing the top cover can cause base fatigue over time and affect encoder performance.





- **1**. Make sure the snaps are fully engaged and the Top Cover is flush with the Base.
- When assembly is finished, the Shaft Adaptor should be about flush with the front of the Encoder and the Motor Shaft should rotate freely.

## **REVISION HISTORY**

rev.	description	date
1.0	initial release	05/04/2011
1.01	updated electrical specifications	07/11/2011
1.02	updated electrical specifications	09/16/2011
1.03	updated resolution table and electrical specifications	10/18/2012
1.04	updated part number key	11/20/2012
1.05	updated spec, updated DIP switch table	07/26/2013
1.06	updated spec	01/03/2014
1.07	updated part number key	04/14/2014
1.08	updated spec	07/18/2014
1.09	mounting holes increased to Ø3.96 mm through all, Ø5.79 x 1.02 mm counter-sink	09/04/2015
1.10	added high operating temperature range option	12/18/2017
1.11	updated spec	10/10/2018
1.12	brand update	11/21/2019
1.13	added motor shaft tolerance details	08/04/2021
1.14	logo, datasheet style update	08/05/2022

The revision history provided is for informational purposes only and is believed to be accurate.



CUI Devices offers a one (1) year limited warranty. Complete warranty information is listed on our website.

CUI Devices reserves the right to make changes to the product at any time without notice. Information provided by CUI Devices is believed to be accurate and reliable. However, no responsibility is assumed by CUI Devices for its use, nor for any infringements of patents or other rights of third parties which may result from its use.

CUI Devices products are not authorized or warranted for use as critical components in equipment that requires an extremely high level of reliability. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Encoders category:

Click to view products by CUI Devices manufacturer:

Other Similar products are found below:

6-1393048-0 6-1393048-5 62AG22-H5-P 700-09-36 1393047-3 ECW1J-C36-SE0/077L 2-1393047-2 25LB22-G-Z T101-5C3-111-M1
385001M0439 385001M0216 V23401H1409B101 V23401T8002B802 V23401U6019B609 62B11-LPP-040C 62HS22-H0-040S 700-16-16
700-24-24 V23401D1001B102 3-1393048-1 288T220R161A2 1-1879391-5 GH65C11-N-SO 1393047-1 702-01-24 703-20-00 62V22-02-P
62D15-02-140S 61K128-075 EC21C1520402 62AG18-L5-020C E6F-AG5C 720 2M 62B22-SPP-030C 60016-005 31215-003 01039-2677
ACZ11BR2E-20FD1-20CZ-0546 DXM510-2000S002 01002-2133 01002-9375 01002-9572 01026-476 01039-1102 01039-1981 010701315 01072-513 01080-056 01084-089 01094-017 01102-031