

- adhesive can be adhered to the bottom of the heel. 3 Remove perforated section by lifting the paper backing from the middle
- 3. Remove perforated section by lifting the paper backing from the middle as shown.
- 4. Press adhesive part of the foot grounder to the heel of the shoe. Do not allow adhesive to come in contact with any part of the shoe except for the heel. The adhesive may leave a residue.
- 5. Step in to shoe. Disposable heel grounder is to be installed on both shoes and used with ESD flooring.
- 6. Test each worn foot grounder with a Personal Grounding Tester

Electrical Properties:

Unless otherwise noted, tolerance ± 10%

Dimensions: $1/2" \times 12"$ **Resistance to Ground (Rtg):** $\ge 5 \times 10^4 < 8 \times 10^5$ ohms


ITEM	DESCRIPTION	LENGTH	PKG.
<u>17155</u>	Disposable Heel Grounder	12"	100



Specifications and procedures subject to change without notice.

Heel Grounder, High Visibility, Disposable

DESCO WEST: 3651 WALNUT AVE., CHINO, CA 91710 WEB SITE: Desco.com PHONE (909) 627-8178 DESCO EAST: ONE COLGATE WAY, CANTON, MA 02021-1407 PHONE (781) 821-8370	DRAWING NUMBER 17155	DATE: September 2014
---	----------------------------	----------------------------

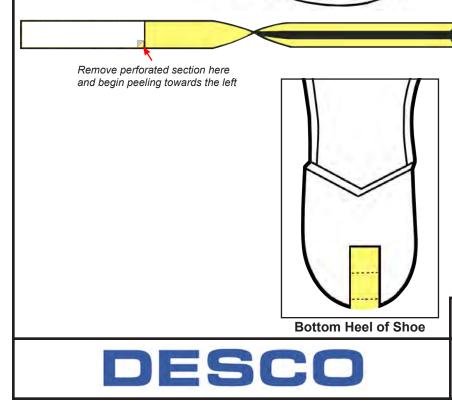

© 2014 DESCO INDUSTRIES INC. Employee Owned

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Antistatic Control Products category:

Click to view products by Desco manufacturer:

Other Similar products are found below :

 13505
 13870
 14404
 20-053-0017
 2229
 2231
 3039
 37061
 39792
 42470
 XON-ASB4X30
 XON-ASB6X30
 09813
 09857

 XON-ASB8X10
 XON-ASB6X10
 19695
 09037
 68101
 68103
 73741
 13515
 13869
 13868
 13457
 13245
 13332
 13205
 13135
 91070

 8031
 8523
 13080
 13215
 157 ROLL BEIGE 1.0
 VERAX1R-300R
 17260
 66051
 12550
 19863
 09121
 73831
 13340
 13338
 04541
 19696

 16104
 SPI-20686
 66051
 12550
 19863
 09121
 73831
 13340
 13338
 04541
 19696