

EMOSAFE EN-10

Network Isolators with Protected Connector

Product Datasheet

December 2015



1 FEATURES AND ADVANTAGES

- Robust socket
- Touch protection and strain relief *
- Protection class IP67 attainable *
- Gigabit Ethernet⁺
- Conforms to IEC 60601-1 (3rd Edition)
- UL Recognized Component
- RoHS conformant
- 4 kV AC dielectric strength
- 5.6 kV DC dielectric strength
- 100% quality control testing

2 GENERAL DESCRIPTION

The EMOSAFE EN-10 Network Isolator disconnects every electrically conducting connection (specifically the data and shield conductors) between devices connected together via a copper-based Ethernet network. The Network Isolator prevents current flow resulting from differences in electrical potentials, and also protects connected devices and their users from stray external voltages and power surges which may be directly or inductively coupled onto the network lines by causes such as installation errors, lightning, switching operations, and electrostatic discharge.

Built into a medical electrical (ME) product, the EMOSAFE EN-10 Network Isolator facilitates the safe Ethernet connection of this ME product within the patient environment. The EN-10 satisfies all construction requirements of IEC 60601-1 (3rd Edition) in the formation of two means of patient protection

PD1081-V40



© 2015 EMO Systems GmbH

Page 1 of 16

^{*} With accessory Z-1

⁺ Only EN-10HG and EN-10VG. EN-10V and EN-10H transmit a maximum of 100 Mbit/s



(MOPP) within the network interface, thereby practically eliminating the risk of electrical shocks arising from such stray external voltages at the network connection.

The EN-10 possesses an extremely robust waterproof and dustproof connector. When build into a suitably protected housing, and when used in combination with the optionally available IP67 Plug Housing Z-1, the EN-10 reaches the protection class IP67. Additionally, the IP67 Plug Housing Z-1 offers an additional strain relief. The EMOSAFE EN-10 is thereby also suitable for application in devices used outdoors, as well as in environments where exceptional mechanical loads and strains are placed upon the connector or cable.



Figure 1. Z-1 and EN-10

Furthermore, the isolated construction of Z-1 offers an effective touch guard, so that a medical electrical appliance fitted with an EN-10 will pass inspection when tested with a test finger in accordance with the standard IEC 60601-1, even when a network cable is connected.

The isolated IP67 Plug Housing Z-1 also prevents conducting metal parts from being touched during the connection process. This is especially important for devices which have their interface connection within the patient environment, and where it cannot be ruled out that the operator may be in electrical contact with the patient, through bodily contact or otherwise, during the processes of connection and disconnection.

The application of the IP67 Plug Housing Z-1 is optional. Alternatively, a market-standard RJ45 patch cable may be used, as shown in Figure 2.



Figure 2. EN-10 and patch cable

With the help of the IP67 Dust Cap Z-2, unused network connections may be closed and sealed against dust and water, as indicated in Figure 3.







Figure 3. EN-10 and Z-2

Network Isolators of the EMOSAFE EN-10 series support data transmission rates of 10 Mbit/s, 100 Mbit/s, and 1000 Mbit/s^{*}, and have the distinction of an especially minimal insertion loss. With their UL approval, they are also suitable for devices destined for export to the North American markets. The EN-10 is available in either of two mechanical forms: the rear termination being either straight, or at 90°.

Low-frequency signal components are strongly attenuated, so that connected devices may, for example, be protected against ground loops.

EMOSAFE Network Isolators transmit high-frequency signals through the principle of electromagnetic induction. Because of this, they do not require their own power supplies. There are no software drivers to be installed.

3 APPLICATIONS

3.1 PATIENT PROTECTION

Electrical separation of Ethernet interfaces of medical electrical (ME) devices and systems, where patients must be protected from dangerous leakage currents, in conformity with applicable standards.

3.2 EQUIPMENT PROTECTION

Applications, in which valuable devices or those requiring special protection need to be protected against ripple, mains hum, and surge voltages from the network periphery.

3.3 MEASUREMENT TECHNOLOGY

Electrical measuring and monitoring equipment, which needs to be protected against external and interference voltages arising from the Ethernet periphery.

3.4 POTENTIAL DIFFERENCES (TECHNICAL BUILDING SYSTEMS)

Computer systems, which are electrically connected with each other over significant distances via Ethernet cabling, where current flows caused by potential differences must be prevented.

3.5 AUDIO

Audio applications, in which the transmission of low frequency alternating current voltages (mains hum) over the network connection is to be reduced to an imperceptible level.

PD1081-V40

© 2015 EMO Systems GmbH

Page 3 of 16

^{*} 1000 Mbit/s transfer rates only available on EN-10HG and EN-10VG



SUMMARY OF VARIANTS 4

EN-10 Network Isolators for inclu- sion in devices	Model and Article Number	Special features	AC dielectric strength (kV)	Gigabit-Ethernet	Typical Return Loss (dB) @ Limiting Frequency	Typical Insertion Loss (dB) @ Limiting Frequency	Configuration
Straight	<u>EN-10H</u> A10009	Robust socket con- nection IP67 protection*	4	×	12 @ 16 MHz	0.5 @ 16 MHz	
	EN-10HG A10005	Touch protection* Straight internal jack socket	4 🗸 15 @ 100 MH	_	0.8 @ 100 MHz		
Right Angled	<u>EN-10V</u> A10008	Robust socket con- nection IP67 protection*	4	×	12 @ 16 MHz	0.5 @ 16 MHz	
	<u>EN-10VG</u> A10004	Touch protection [*] Right angled internal jack socket	4	\checkmark	15 @ 100 MHz	0.8 @ 100 MHz	



© 2015 EMO Systems GmbH

^{*} When used in conjunction with accessories Z-1 or Z-2. Refer to section 6 ACCESSORIES



5 DRAWINGS

All dimensions in millimetres.

5.1 EN-10HG AND EN-10H


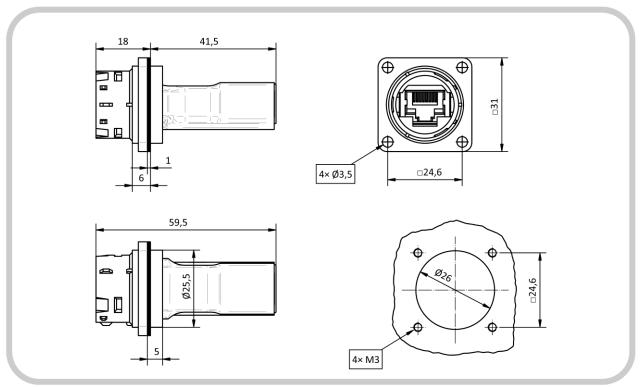


Figure 4. Physical dimensions of EN-10HG and EN-10H

5.2 EN-10VG AND EN-10V



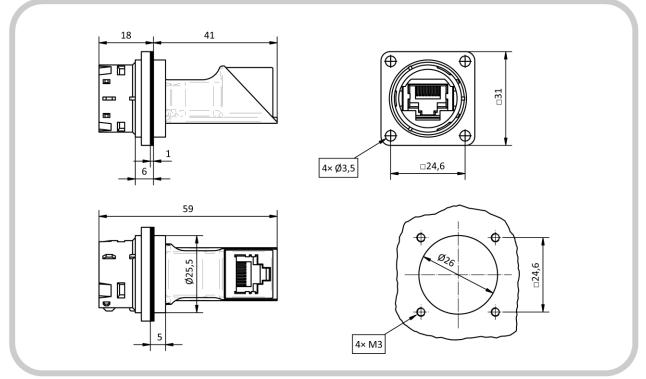

6 ACCESSORIES

6.1 OVERVIEW

	Model and Article Number	Special features
IP67 Plug Housing	<mark>Z-1</mark> A10012	 Simple retrofitting of an existing patch cable * Protects against water and dust in accordance with IP67 Touch protection Mechanical protection of the mating connection Material: fibreglass-reinforced plastic, black
IP67 Dust Cap	<u>Z-2</u> A10013	 Protects against water and dust in accordance with IP67 Mechanical protection of the mating connection Material: fibreglass-reinforced plastic, black
19" Patch Panel	<u>Z-EN10-RP</u> A10039	 Provides mounting locations for 12 × EN-10 Network Isolators Material: steel Coating: matt black powder coated

6.2 IP67 PLUG HOUSING Z-1

PD1081-V40

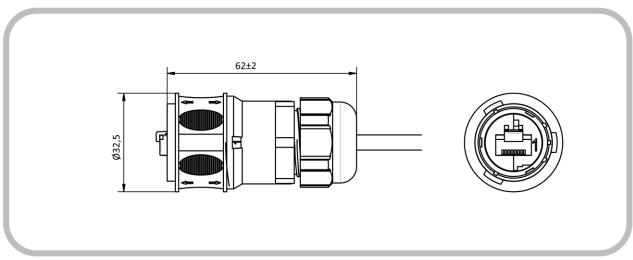


Figure 6. Dimensions of accessory Z-1, assembled. All dimensions in millimetres.



© 2015 EMO Systems GmbH

* Refer to the advice at the end of section 6.2 IP67 Plug Housing Z-1

Page 6 of 16

emo_{systems}

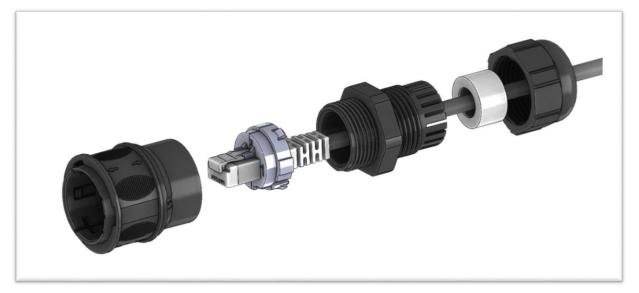


Figure 7. Assembly of accessory Z-1 onto a patch cable.


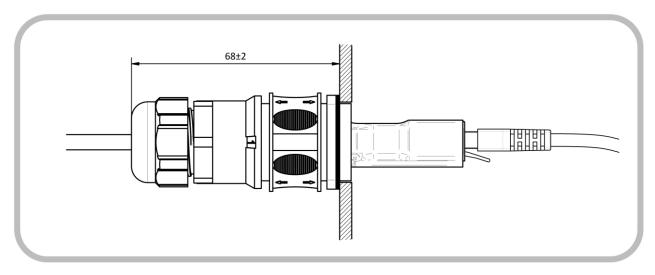


Figure 8. Final assembly height of EN-10HG with accessory Z-1. All dimensions in millimetres.



ADVICE: The IP67 Plug Housing accessory Z-1 cannot be combined with every available patch cable. We are happy to help in the selection of suitable patch cables. The figure above serves as an indication



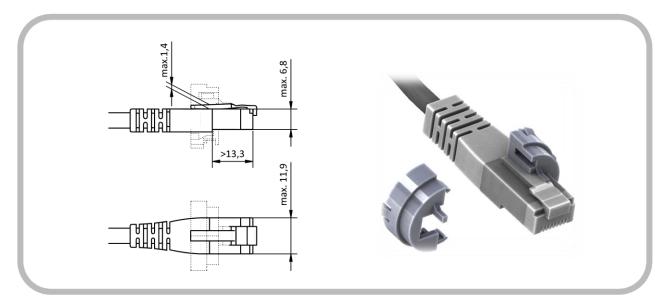

6.3 IP67 DUST CAP Z-2

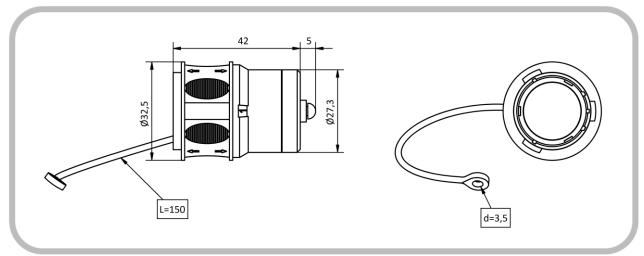


Figure 9. Dimensions of accessory Z-2, unassembled. All dimensions in millimetres.

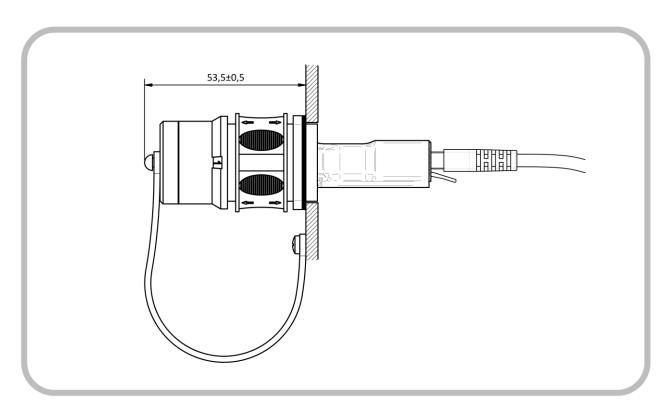


Figure 10. Final assembly height of EN-10HG with Z-2. All dimensions in millimetres.



systems

7 ASSEMBLY INSTRUCTIONS

7.1 ASSEMBLY DRAWING



Figure 11. Assembly of EN-10HG into a housing panel opening

7.2 **GENERAL**

EN-10HG and EN-10VG Network Isolators are designed for data transmission in the frequency range of 300 kHz to 100 MHz (non-gigabit Network Isolators only up to 16 MHz). Lower frequencies are strongly attenuated. For this reason, it is generally not possible to transmit the signals from nurse call systems, telephone systems or analogue audio / video signals over a Network Isolator.

EN-10 Network Isolators can be used in a Power over Ethernet (PoE) network without restriction (however PoE devices downstream of the electrical isolation are not supplied with power).

7.3 **INSTALLATION**

EN-10 Network Isolators interrupt the shield connection. If the cable shield of the incoming data cable is to be connected with the room or equipment potential, such a connection must be carried out separately before the Network Isolator.

SAFETY NOTICE 8

During assembly, attention should be paid (when applicable) to ensure that the clearance and creepage distances required by IEC 60601-1 are met. The isolating effect of the Network Isolator must not be compromised by neighbouring conductive components. If, for example, the installation of the Network Isolator is to be within a metal plate, this plate must be connected to the ground potential (earth conductor).

As a matter of principle, Network Isolators should be mounted as close as possible to the equipment requiring protection.

Damaged Network Isolators, and Network Isolators which are contaminated by dust or liquids, are to be replaced.

© 2015 EMO Systems GmbH



9 FUNCTION AND SAFETY INSPECTIONS

9.1 FUNCTION AND COMPLIANCE TESTS

A cable run equipped with an EN-10HG or EN-10VG Network Isolator can be checked with regard to its transmission characteristics using cable certification devices which are suitable for testing an electrically isolated cable run. To be able to conduct such an inspection, the test equipment must be configured in an AC wire-map mode. With the installed Network Isolator, the entire cable run can be approved according to EIA/TIA-568 Cat.5e or ISO 11801 Class C. Testing of the cable shielding and the individual conductor resistance is not possible in such an AC test mode.

9.2 SAFETY INSPECTIONS

Regular safety inspections and post-repair inspections are not prescribed for network isolators in medical use, as network isolators themselves are not classified as medical electrical (ME) devices. However, together with a connected medical device, network isolators form an ME system, which altogether may be subject to inspection. The test interval, as well as the requirements to be met for both regular safety inspections and post-repair inspections will be specified by the responsible organisation (as defined in IEC 60601-1), and based upon the applicable standards for the entire ME system.

To simplify implementation, the system components (in this case, the network isolator) can be individually tested. The responsible organisation provides the test parameters and test interval. Such an assessment may, depending upon requirements, include the following checks:

9.2.1 VISUAL INSPECTION

Check for evidence of external damage and ingress of substances; dust or liquids for example.

9.2.2 LEAKAGE CURRENT TEST

It is to be checked if the measured leakage current is still within the prescribed limits. For this purpose, test equipment which can perform equipment leakage current measurements in accordance with IEC 62353 may be used. To perform a leakage current test, all conductors on the input side must be short-circuited together, and all the conductors on the output side must also be short-circuited together. The AC test voltage specified by the responsible organisation is then applied across these two connections. Input and output sides are interchangeable. The expected current flow can be found in section *10 SPECI-FICATIONS*.

9.2.3 HIPOT TEST

To ensure that the device under test is not damaged, it is recommended that a DC voltage source is used in place of the AC voltage source, and that the DC voltage is 1½ times that of the required AC voltage. The test setup is essentially the same as that of the Leakage Current Test above. The expected dielectric strength can be found in section *10 SPECIFICATIONS*.

9.2.4 FUNCTIONAL TEST

After conducting the tests above, and reconnecting the Network Isolator into the network, it is meaningful to examine whether the signal transmission is still performing correctly. Such a functional test can be performed, for example, with a suitable Ethernet cable certification device.





10 SPECIFICATIONS

10.1 GENERAL

Category	Standards or Test Criteria	Properties		
Designation		EMOSAFE EN-10	()	
Housing colour		Black		
Housing Material		Plastic		
Construction		Panel Mount		
Mounting Arrangement		Screws		
Input Interface		RJ45 Jack, straigh	it	
Output Interface		_	nt (EN-10H, EN-10HG) I (EN-10V, EN-10VG)	
Weight		approximately 25 g		
Protection rating	EN 60529	IP20, or up to IP67 when assembled and used in combination with Z-1 or Z-2		
Mating cycles	RJ45 plug mating and discon- necting from RJ45 socket	> 250 cycles		
	SN 29500 Standard Temperature: 25°C	EN-10H/V:	6,950 years	
Mean Time To Failure (MTTF)	Duty cycle: 100% (24 hours, 7 days)	EN-10HG/VG:	4,590 years	
	SN 29500 Standard Temperature: 40°C	EN-10H/V:	6,560 years	
	Duty cycle: 100% (24 hours, 7 days)	EN-10HG/VG:	4,260 years	

10.2 ETHERNET PERFORMANCE

Category	Standards or Test Criteria	EN-10H/V	EN-10HG/VG
Transmission	10 Mbit/s, 10Base-T (IEEE802.3 Cl.14)	\checkmark	\checkmark
Speeds and Supported Net-	100 Mbit/s, 100Base-Tx (IEEE802.3 Cl.25)	\checkmark	\checkmark
work Protocols	1000 Mbit/s, 1000Base-T (IEEE802.3 Cl.40)	×	✓ *
Performance Category	ISO 11801, Permanent Link (PL)	Class C	Class C
Insertion Loss	Typical:	0.5 dB @ 16 MHz	0.8 dB @ 100 MHz
(absolute)	Maximum:	0.8 dB @ 16 MHz	1.5 dB @ 100 MHz
Return Loss	Typical:	12.0 dB @ 16 MHz	15.0 dB @ 100 MHz
(absolute)	Minimum:	9.0 dB @ 16 MHz	12.0 dB @ 100 MHz

^{*} Transmission speeds of 1 Gbit/s are generally easily achievable with high-quality cabling and modern Ethernet network cards. For standard-compliant signal paths at 1 Gbit/s, or for critical applications, we recommend utilising Network Isolators that satisfy the requirements of ISO 11801 Permanent Link Class D.





10.3 ELECTRICAL

Category	Standards or Test Cri	teria	EN-10H/V	EN-10HG/VG
AC Dielectric Strength	at 50 Hz, for 60 seco	at 50 Hz, for 60 seconds 4.0 kV		4.0 kV
DC Dielectric Strength	for 60 seconds		5.6 kV	5.6 kV
Reinforced Isolation	Isolation IEC 60601-1		\checkmark	\checkmark
Coupling Capacitance per Channel			15 pF max.	37.5 pF ±25%
Total Coupling Capacitance			30 pF max.	150 pF ±25%
Tatal Laskage Current	275 V AC at 50 Hz	Typical:	2.0 μΑ	12.0 μA
Total Leakage Current	275 V AC 81 50 HZ	Maximum:		16.0 μA

10.4 OPERATING CONDITIONS

Category	Standards or Test Criteria		EN-10H/V	EN-10HG/VG
Pollution Degree	IEC 61010		2 *	2 *
Overvoltage Category	IEC 60664-1		III	III
Maximum Working Voltage [†]	Maximum mains voltage o devices, in accordance wit		250 V AC 300 V DC	250 V AC 300 V DC
Townsonations		Minimum:	-10°C	-10°C
Temperature		Maximum:	+70°C	+70°C
Airthumiditu		Minimum:	10%	10%
Air Humidity	Iumidity Non-condensing		90%	90%
Ain Durantum		Minimum:	700 hPa	700 hPa
Air Pressure		Maximum:	1,060 hPa	1,060 hPa
Altitude		Maximum:	3,200 m	3,200 m

10.5 ENVIRONMENTAL CONDITIONS

PD1081-V40

Category	Standards or Test Criteria		EN-10H/V	EN-10HG/VG
Tomporature		Minimum:	-25°C	-25°C
Temperature		Maximum:	+85°C	+85°C
	Non condensing	Minimum:	10%	10%
Air Humidity	Non-condensing	Maximum:	90%	90%
Ain Duossiums		Minimum:	500 hPa	500 hPa
Air Pressure		Maximum:	1,060 hPa	1,060 hPa

[†] The Network Isolator can be permanently exposed to this voltage level.



© 2015 EMO Systems GmbH

^{*} Normally only nonconductive pollution occurs. Temporary conductivity caused by condensation is to be expected.



10.6 CERTIFICATIONS

All Network Isolators from EMO Systems GmbH are additionally registered by UL International as Recognized Components, under the file numbers E249126 and E362969. They are therefore suitable for application in American and Canadian markets.

Furthermore, the compliance of our Network Isolators with the standard specifications IEC 60601-1 (3rd Ed.), ANSI/AAMI ES 60601-1 and CAN/CSA-C22.2 No. 60601-1 has been confirmed by an independent, accredited laboratory. To view a copy of these certificates, please visit the UL Online Directory or contact us directly.

The certification of our products to the requirements of the IEC 60601-1-2 has also been confirmed by an external laboratory. The test report can be obtained upon request.


Our Declaration of Conformity can be found on our website, which confirms the compliance of our products with the requirements of the Low Voltage Directive, Electromagnetic Compatibility Directive, and the Restriction of Hazardous Substances Directive (RoHS).

Category	Standards or Test Criteria	EN-10H/V	EN-10HG/VG
UL Recognized Component		\checkmark	\checkmark
UL File No.		E246126 E362969	E246126 E362969
IEC 60601-1	Complies with the requirements of a galvanic sepa- rator in accordance with IEC 60601-1 (Ed. 3.1)	\checkmark	\checkmark
IEC 60601-1-2	Complies with the requirements of IEC 60601-1-2	\checkmark	\checkmark
ANSI/AAMI ES 60601-1	Complies with the requirements of ANSI/AAMI ES60601-1	\checkmark	\checkmark
CAN/CSA-C22.2 No. 60601-1	Complies with the requirements of CAN/CSA-C22.2 No. 60601-1	\checkmark	~
Low Voltage Directive	Complies with the requirements of the directive 2014/35/EU	\checkmark	\checkmark
EMC Directive	Complies with the requirements of the directive 2004/108/EU	\checkmark	\checkmark
RoHS Directive	Complies with the requirements of the directive 2011/65/EU	\checkmark	~
Lead-free	Contains no lead-containing substances, and is manufactured with lead-free solder	\checkmark	~





10.7 ISOLATION DIAGRAM

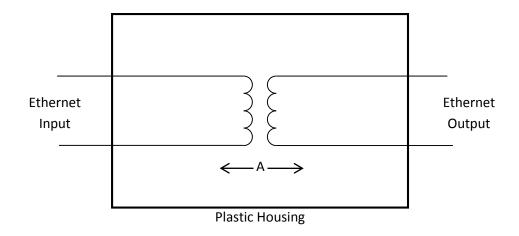



Area	Number and type of Means of Protection	Material Group (from CTI)	Ope	ximum erating oltage V _{peak}	Required creepage distance (mm)	Required clearance distance (mm)	Measured creepage distance (mm)	Measured clearance distance (mm)
А	2 MOPP *	IIIb ⁺	250	353	8.0	5.0	≥ 9.0	≥ 9.0

10.8 FREQUENCY RESPONSE

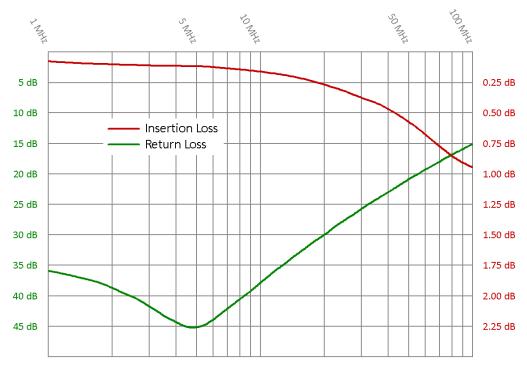


Figure 13. Typical frequency response for Insertion Loss and Return Loss of an EMOSAFE EN-10HG Network Isolator.

⁺ Materials in the Material Group IIIb have a Comparative Tracking Index (CTI) value between 100 and 175.



PD1081-V40 Page 14 of 16 © 2015 EMO Systems GmbH

EMO Systems GmbH • Rungestr. 19 • 10179 Berlin • Germany • Phone: +49-30-4000-475-80 • Fax: +49-30-4000-475-90 • www.emosystems.de/en

^{*} MOPP = Means of Patient Protection

11 SCHEMATIC DIAGRAMS

11.1 EN-10HG AND EN-10VG

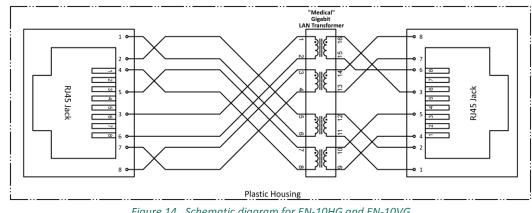


Figure 14. Schematic diagram for EN-10HG and EN-10VG

11.2 EN-10H AND EN-10V

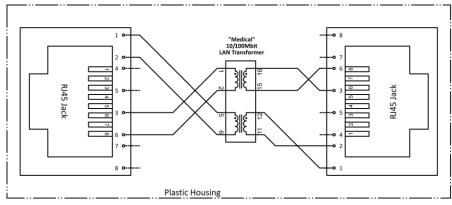


Figure 15. Schematic diagram for EN-10H and EN-10V

12 **PRODUCT MARKINGS**

CE	Through this mark, the conformity of the product with all applicable EU Directives is confirmed.
c FN [®] us E249126	Designates the product as a UL "Recognised Component"; File № E249126 and E362969.
	The product may not be disposed of in domestic rubbish.
Po	This product contains no substances containing lead and is manufactured using lead- free solder.
RoHS	This product meets the requirements of EU Directive concerning the limitation of the use of certain hazardous substances in electric and electronic equipment.





13 SCHEDULED MAINTENANCE

When used as directed, EMOSAFE Network Isolators are maintenance-free.

14 ENVIRONMENTAL PROTECTION INFORMATION

This device contains electronic components. At the end of its service life it is to be returned to the manufacturer for disposal.

15 PACKAGING

Contents:

- Network Isolator. One of: EN-10H, EN-10HG, EN-10V, EN-10VG
- Installation Guide

A packaging label provides the following information:

- Article Description
- Quantity
- Date of Manufacture
- Serial Number (SN)
- The Serial Number is printed as both a linear (Code 128) and a 2-D Barcode (Data Matrix)

16 QUALITY

EMO Systems operates a certified quality management system for development and production in accordance with ISO 9001 and ISO 13485. Prior to delivery, each Network Isolator is subjected to a comprehensive quality inspection. This inspection ensures, among other factors, that the attained values for leakage currents, dielectric withstand strengths, insertion losses, return losses, and near end crosstalk values all meet the specified requirements.

17 CONTACT AND SUPPORT

Please find our up-to-date contact details on our website:

http://www.emosystems.de/en/contact support@emosystems.de

Or send us an email at the following address:

18 LEGAL NOTICE

The information provided in this datasheet has been compiled with all due care, and is believed to be accurate and reliable. However, we cannot guarantee that the information contained is completely free of errors.

The end user is responsible and liable for the proper use of this product; EMO Systems assumes no liability. We reserve the right to make changes to this datasheet without notice.



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Modular Connectors / Ethernet Connectors category:

Click to view products by EMO Systems manufacturer:

Other Similar products are found below :

8949-H88/06BLKA/SN 74441-0010/BKN MP1010RX-1000 MP44RX-1000 PHJ-4P4C-1-V-4 PHP-6P6C-5 GAX-3-66 GAX-8-62 GDCX-PA-66-50 GDCX-PN-64 GDCX-PN-66 GDCX-PN-66-50 GDLX-A-66 GDLX-N-66 GDLX-S-66 GDLX-S-88K GDLX-SMT-S-88 GDTX-S-88-50 GDX-PA-1010 GLX-N-1010M-BLK GLX-S-88M-BLK GMX-N-1010 GMX-S-1010 GMX-S-66 GMX-SMT4-N-88 GPX-2-64 GSGX-N-2-88 GSGX-N-4-88 GSX-NS2-88-3.05 GSX-NS2-88-3.05-50 GSX-NS-88-3.05-50 PT-108A-8C-UL PT-J951-8C PTS-J531-8CS-50UL 1-1775629-2 A-2014-0-4 GWLX-S-88-GR GWLX-S9-88-YG DC-1021-8-WH-6 1300530003 1324640-4 RJ11FTVC2G RJ11FTVC2N RJFTVX2SA1G 132764-001 1413235 MP88X-1000 MPS88RX-5000 E5288-S000K3-L E5908-15A242-L