



Data Sheet ASX11504-SW-R

PUI Audio's **ASX11504-SW-R** silent subwoofer exciter, also referred to as a tactile transducer, is purpose-built to recreate ultra-low frequencies from 500 Hz all the way down to 5 Hz! It delivers all the bass, without much space, and with nearly none of the sound. Perfect for surround sound systems and gaming!

Instead of using a cone or diaphragm to move air, the electro-mechanical motor is designed to directly couple to a surface (such as the frame of a chair or sofa) to transmit vibrational energy from the motor into the mounting surface, exciting deep tissue muscles (kinesthetic senses), skeletal nerve endings (haptic senses), and transmitting sound through bone conduction.

Tactile transducers can also be used to replace vibrational motors in industrial and medical applications where multi-frequency haptics are required.


Features:

- Installs in minutes with spring-loaded push terminals and mounting holes
- 4 ohm impedance and high 50W continuous power rating
- Creates bass without sound, perfect for home theater, industrial, and medical applications
- Able to create almost 90 Newtons of force

Specifications

Parameters	Values	Units
Rated Input Power	50	Watts
Max Input Power	100	Watts
Impedance	4 ± 15%	Ohms
Resonant Frequency	35± 20%	Hz
Frequency Range	5 ~ 500	Hz
Housing Material	Aluminum	-
Magnet Material	NdFeB	-
Weight	780	Grams
Operating Temperature	-20 ~ +60	°C


Impedance Response

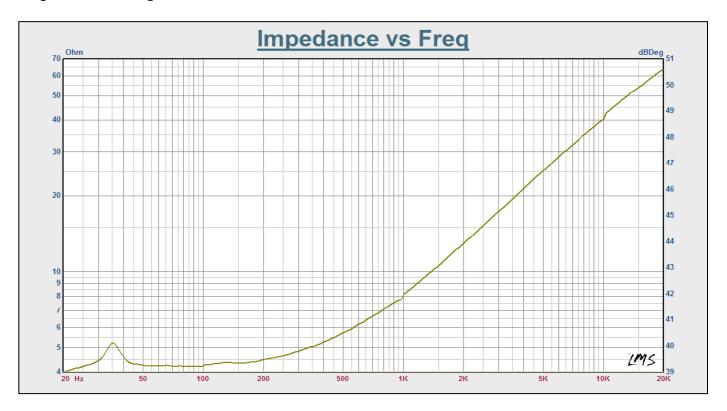


Reliability Testing

Test Specifications
24 hours at +60°C ± 2°C followed by three hours in normal room temperature
1 hour at -10°C ± 3°C followed by 2 hours at -20°C ± 3°C
48 hours at +40°C ± 2°C with relative humidity at 93% followed by 6 hours in normal room temperature
600mm ±25mm at 60°±5°
IEC 268-5 14.14V for 8 hours

Dimensions (Red terminal is positive)

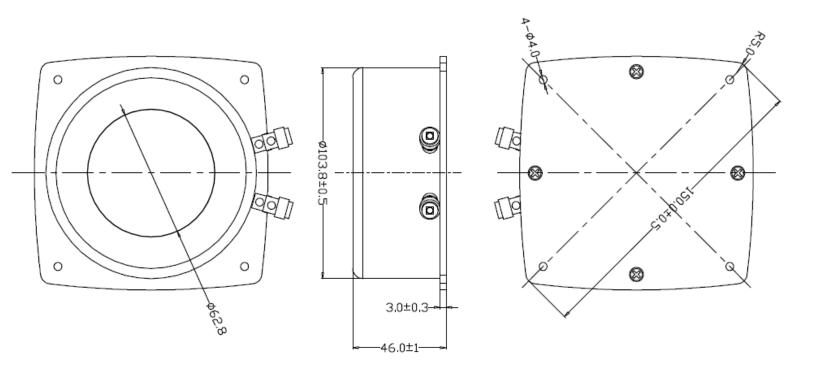

Cutaway View

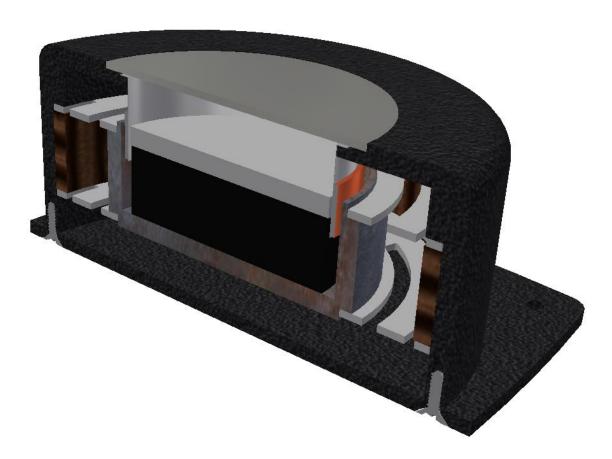

PUI Audio, Inc., 3541 Stop Eight Road, Dayton, OH 45414 Tel: (937) 415-5901 Fax: (937) 415-5925


Using Silent Subwoofer eXciters

Placement

Using a PUI Audio Silent Subwoofer eXciter is straightforward. Simply mount the flat base of the eXciter to the bottom of a chair or couch. For best performance, one eXciter should be used per seating location, with placement directly under the user's spine and the eXciter attached directly to the frame of the chair or couch.



ASX11504-SW-R attached to an office chair for gaming applications

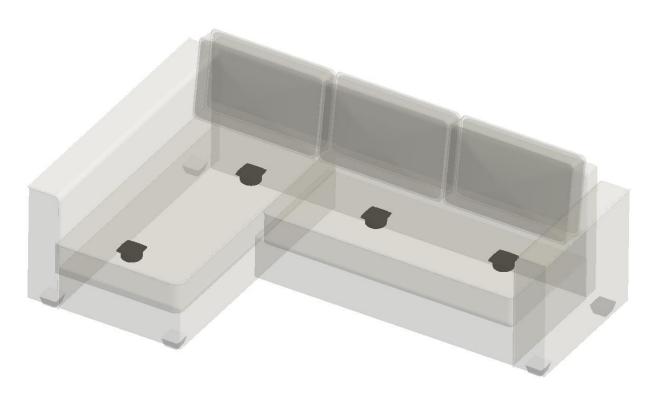


ASX11504-SW-R attached to a sofa for home theater applications

In some applications, the e**X**citer may transmit sound through the furniture it is installed on. If this occurs, place rubber bumpers under each foot on the piece of furniture for mechanical isolation.

Wiring and Amplifier Connection

Ideally it is best to power each e**X**citer with a dedicated amplifier. If that is not possible, and only one amplifier is available, we recommend ensuring the amplifier can provide adequate power for the total number of e**X**citers being used.

In the sofa example above, four e**X**citers would need between 200 and 400 total watts. To maintain a 4-ohm impedance to the amplifier, wire the e**X**citers series-parallel as shown below. For best performance, the amplifier input should be connected to the LFE or subwoofer channel of your receiver, PC, or signal source.

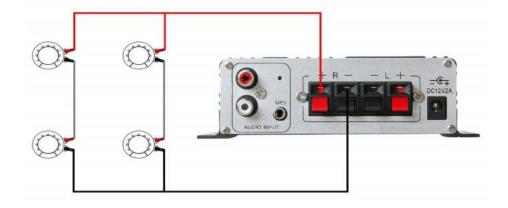

This document contains data proprietary to PUI Audio Inc. Any use or reproduction, in any form, without prior written permission of PUI Audio Inc. is prohibited.

©2018, PUI Audio Inc.

Specifications Revisions

Revision	Description	Date
-	Released from Engineering	12/20/2018

Note:

- 1. Unless otherwise specified:
 - A. All dimensions are in millimeters.
 - B. Default tolerances are ± 0.5 mm and angles are $\pm 3^{\circ}$.
- 2. Specifications subject to change or withdrawal without notice.
- 3. This part is RoHS 2011/65/EU Compliant.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Speakers & Transducers category:

Click to view products by PUI Audio manufacturer:

Other Similar products are found below:

FC-30814-P127 AS02832MR-2-R PB-1220PE PB-2015PQ 900-00001 AB2025B-LW50-R SWFK-31736-000 PT-2065FW PT-4175W AT-2830-TW-LW35-R ED-30761-000 CI-30120-A42 SMT-0440-T-2-R PB-0927PQ BF-7083-000 BF-9778-000 SMS2020-08H4.5 LF BDT1717-08H6.5W56MLF 02094 02097 GSPK1003PN-8R0.2W-L100 GSPK151103TN-8R0.2W GSPK2014035PN-8R0.5W-L100 FS5353DS0830-H19.3 TE082703-8 XMLP040BD21F AS03608MR-LW100-R 24520 SMT-0540-S-2-R 1450069 9091653 9091661 IPS-G6000-5 9090231 FS50MS0820-H9.7 FS4014-4-2W PBM4-13.B31R.A115.0663 PBM4-13.B33R.A115.0663 PBM4-13.B35R.A115.0663 A-10-6-BG360-HD1Z-GA-M4Z-ZW A-10-6-BG410-HD1Z-AA-AGZ-ZW A-10-6-BG410-HD1Z-AA-M4Z-ZW A-10-6-BG410-HD1Z-AA-M4Z-ZW A-10-6-BG310-HD1Z-AA-M4Z-ZW A-10-6-BG310-HD1Z-AA-M4Z-ZW A-10-6-BG310-HD1Z-AA-AGZ-ZW A-10-6-BG315-HD1Z-AA-AGZ-ZW A-10-6-BG315-HD1Z-AA-AGZ-ZW A-10-6-BG325-HD1Z-AA-AGZ-ZW A-10-6-BG325-HD1Z-AA-AGZ-ZW A-10-6-BG316-HD1Z-AA-AGZ-ZW A-10-6-BG325-HD1Z-AA-AGZ-ZW A-10-6-BG325-HD1Z-AA-AGZ-ZW A-10-6-BG316-HD1Z-AA-AGZ-ZW A-10-6-BG325-HD1Z-AA-AGZ-ZW A-10-6-BG316-HD1Z-AA-AGZ-ZW A-10-6-BG325-HD1Z-AA-AGZ-ZW A-10-6-BG316-HD1Z-AA-AGZ-ZW A-10-6-BG325-HD1Z-AA-AGZ-ZW A-10-6-BG316-HD1Z-AA-AGZ-ZW A-10-6-BG325-HD1Z-AA-AGZ-ZW A-10-6-BG316-HD1Z-AA-AGZ-ZW A-10-6-BG325-HD1Z-AA-AGZ-ZW