

# Methane click<sup>¬</sup>

#### 1. Introduction



Methane click<sup>™</sup> is a simple solution for adding a high sensitivity methane  $(CH_4)$ sensor to your design. It's suitable for designing gas leakage equipment. The board features an MQ-4 sensor, a calibration potentiometer, a mikroBUS<sup>™</sup> host socket, two jumpers and a power indicator LED. Methane click<sup>™</sup> communicates with the target board through mikroBUS<sup>™</sup> AN (OUT) line. Methane click<sup>™</sup> is designed to use a 5V power supply only.

#### 2. Soldering the headers

Before using your click<sup>™</sup> board, make sure to solder 1x8 male headers to both left and right side of the board. Two 1x8 male headers are included with the board in the package.

2





Turn the board upward again. Make sure to align the headers so that they are perpendicular to the board, then solder the pins carefully.



#### 4. Essential features

Methane click<sup>™</sup> can detect methane levels in concentrations from 200 to 10000ppm. The MQ-4 methane sensor has a sensor layer made of Tin dioxide (SnO<sub>2</sub>), an inorganic compound which has lower conductivity in clean air. The conductivity increases as the levels of methane rise. Methane click<sup>™</sup> also contains a potentiometer that lets you adjust the sensor for the environment you'll be using it in. For precise calibration the sensor needs to preheat (once powered up, it takes 24h to reach the right temperature.)

**click**<sup>m</sup>

BOAR

www.mikroe.com

Methane click Manual

ver 1.00



Turn the board upside down so that

the bottom side is facing you upwards.


Place shorter pins of the header into the

appropriate soldering pads.

### 3. Plugging the board in

Once you have soldered the headers your board is ready to be placed into the desired mikroBUS<sup>TM</sup> socket. Make sure to align the cut in the lower-right part of the board with the markings on the silkscreen at the mikroBUS<sup>TM</sup> socket. If all the pins are aligned correctly, push the board all the way into the socket.

#### 5. Methane click<sup>TM</sup> board schematic

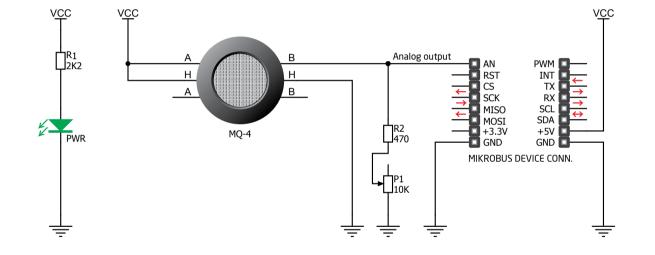

#### 6. Calibration potentiometer



To calibrate Methane click<sup>™</sup> for optimum performance, use the on-board potentiometer to adjust the load resistance of the sensor circuit.

#### 7. Code examples

Once you have done all the necessary preparations, it's time to get your click<sup>™</sup> board up and running. We have provided examples for mikroC<sup>™</sup>, mikroBasic<sup>™</sup> and mikroPascal<sup>™</sup> compilers on our **Libstock** website. Just download them and you are ready to start.



#### 8. Support

MikroElektronika offers **free tech support** (www.mikroe.com/support) until the end of the product's lifetime, so if something goes wrong, we're ready and willing to help!



MikroElektronika assumes no responsibility or liability for any errors or inaccuracies that may appear in the present document. Specification and information contained in the present schematic are subject to change at any time without notice. Copyright © 2014 MikroElektronika. All rights reserved.

## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Multiple Function Sensor Development Tools category:

Click to view products by MikroElektronika manufacturer:

Other Similar products are found below :

MAXWSNENV# STEVAL-MKIT01V1 KT-O2-25%-TB200A-E KT-TVOC-200-TB200A KT-NmHc-200-TB200A SEN0344 PIM520 PIM518 PIM519 PIM502 EVAL-AD7746HDZ AS7022-EVALKIT ALTEHTG2SMIP OB1203SD-U-EVK MIKROE-4265 ARG-LDKT EV\_ICG-20660L GX-F12A-P GX-F15A GX-F6A-P GX-F8B GX-H12A-P GX-H15AI-P GX-H6A-P 1093 MIKROE-2455 MIKROE-2458 MIKROE-2507 MIKROE-2508 MIKROE-2516 MIKROE-2529 1458 MIKROE-1628 176 189 1893 2106 ATQT4-XPRO GX-F12AI-P GX-F15A-P GX-F8A-P GX-FL15B-P GX-H15A-P GX-H6AI-P GX-H8A GX-H8AI-P GX-H8A-P GX-F15AI-P GX-FL15A-P GX-H15A-P