

# **AS5055A**

# **Low Power 12-Bit Magnetic Position Sensor**

## **General Description**

The AS5055A is a single-chip on-axis magnetic rotary position sensor with low voltage and low power features.

It includes an integrated Hall element array, a high resolution ADC and a smart power management controller.

The angle position, alarm bits and magnetic field information are transmitted over a 3-wire or 4-wire SPI interface to the microcontroller.

The AS5055A is available in a compact QFN 16-pin 4x4x0.85 mm package and specified over an operating temperature of -40°C to  $85^{\circ}$ C.

Ordering Information and Content Guide appear at end of datasheet.

#### **Key Benefits & Features**

The benefits and features of AS5055A, Low Power 12-Bit Magnetic Position Sensor are listed below:

Figure 1: Added Value of Using AS5055A

Benefits	Features
Precise and reliable absolute angle measurement	12-bit absolute angle position indication
Very low power consumption	3μA current consumption in low power mode
High reliability sensing	Immune to external magnetic stray fields
Synchronization between microcontroller and sensor	Interrupt pin displays availability of new data
Ideal for small and compact designs	QFN-16 4x4 package
Industry-standard interface	3- or 4-wire SPI interface



## **Applications**


This sensor is optimized for a broad range of demanding applications including:

- · Servo motor control
- · Battery operated systems
- Robotics

## **Block Diagram**

The functional blocks of this sensor are shown below:

Figure 2: AS5055A Block Diagram

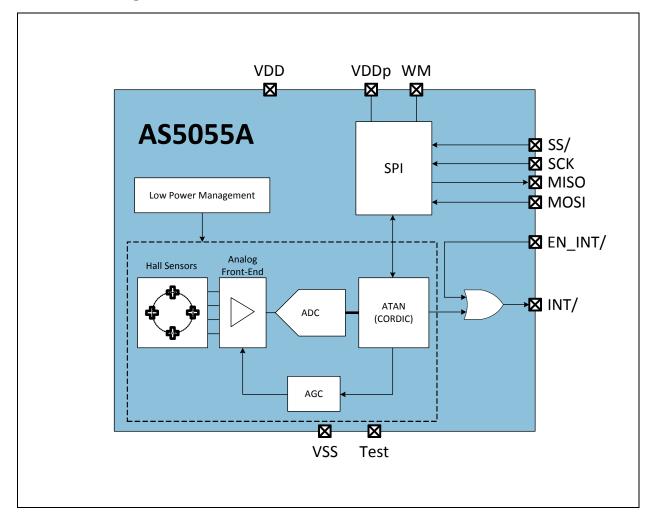

Page 2

Document Feedback

[v2-06] 2014-Oct-14



# **Pin Assignment**

The AS5055A pin assignments are shown below.

Figure 3: Pin Diagram

**Pin Assignments (Top View):** Package drawing is not to scale.

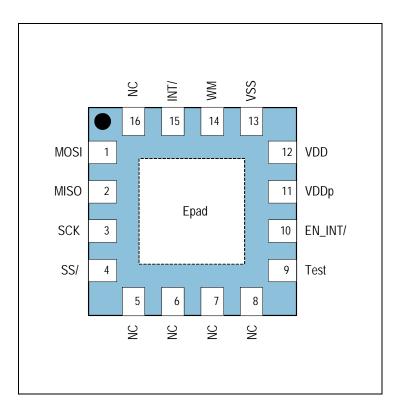


Figure 4: Pin Description

Pin Number	Name	Туре	Description
1	MOSI	Digital input	SPI bus data input
2	MISO	Digital output, tri-state buffer	SPI bus data output
3	SCK	Digital input Schmitt trigger	SPI clock
4	SS/	Digital input	SPI Slave Select, active low
5	NC		
6	NC		Leave unconnected
7	NC	-	Leave unconnected
8	NC		
9	Test	Analog	Test pin, connect to VSS
10	EN_INT/	Digital input	Enable interrupt, active low

**ams Datasheet** [v2-06] 2014-Oct-14



Pin Number	Name	Туре	Description
11	VDDp		Peripheral power supply, 1.8V to VDD
12	VDD	Supply	Analog and digital power supply, 3.0V to 3.6V
13	VSS		Ground
14	WM	Digital I/O	Low: 3-wire mode High: 4-wire mode
15	INT/	Digital output, tri-state buffer	Interrupt output. Active LOW, when conversion is finished
16	NC	-	Leave unconnected
Epad	-	-	Exposed pad, leave unconnected

Page 4
Document Feedback
[v2-06] 2014-Oct-14



## **Absolute Maximum Ratings**

Stresses beyond those listed in "Absolute Maximum Ratings" on page 5 may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in "Electrical Characteristics" on page 6 is not implied. Exposure to absolute maximum rating conditions for periods may affect device reliability.

Figure 5:
Absolute Maximum Ratings

Symbol	Parameter	Min	Max	Units	Comments
		 Electrica	l Il Parameter	s	
VDD	DC supply voltage		5.0	V	
VDDp	Peripheral supply voltage	-0.3	VDD+0.3	V	
Vin	Input pin voltage	-0.3	5.0	V	
I <sub>scr</sub>	Input current (latchup immunity)	-100	100	mA	Norm: JEDEC 78
	E	lectrost	atic Discharg	je	
ESD	Electrostatic discharge	±1	-	kV	Norm: MIL-STD-883 E method 3015
	Cont	tinuous F	Power Dissip	ation	
$\Theta_{JA}$	Package thermal resistance - 33.5		°C/W	Velocity=0, Multi Layer PCB; JEDEC Standard Testboard	
P <sub>t</sub>	Total power dissipation		36	mW	
	Temperatur	e Range	s and Storag	e Conditi	ons
T <sub>strg</sub>	Storage temperature	-55	125	°C	
Тводу	Package body temperature		260	°C	The reflow peak soldering temperature (body temperature) specified is in accordance with IPC/JEDEC J-STD-020 "Moisture/Reflow Sensitivity Classification for Non-Hermetic Solid State Surface Mount Devices".  The lead finish for Pb-free leaded packages is matte tin (100% Sn).
	Humidity non-condensing	5	85	%	
MSL	Moisture Sensitive Level		3		Represents a maximum floor life time of 168h

ams Datasheet Page 5
[v2-06] 2014-Oct-14
Document Feedback



## **Electrical Characteristics**

# **Operating Conditions**

Figure 6: Operating Conditions

Symbol	Parameter	Conditions	Min	Max	Units
VDD	DC supply voltage		3.0	3.6	V
VDDp	Peripheral supply voltage		1.8	VDD	V
Vin	Input pin voltage		-0.3	VDDp +0.3	V
T <sub>amb</sub>	Ambient operating temperature		-40	85	°C
		Power supply filter, pin VDD	2.2	4.7	μF
	External components	(see "Power Supply Filter" on page 10)	15	33	Ω
		Ceramic capacitor, pin VDDp to VSS	100		nF

## **System Parameters**

Figure 7: System Parameters

Symbol	Parameter	Conditions	Min	Тур	Max	Units
I <sub>ON</sub>	Current consumption	Normal operating mode			8.5	mA
l <sub>OFF</sub>	Current consumption	Low power mode with activated POR (POR_OFF = 0x00) – default setting			33	μΑ
		Low power mode with deactivated POR (POR_OFF = 0x5A)			3	μΑ
t <sub>readout</sub>	Readout rate	Time between READ ANGLE command and INTERRUPT			500	μs
t <sub>PwrUp</sub>	Power up time	Minimum time after power up before the sensor is operational			580	μs
R <sub>d</sub>	Lateral displacement range	Misalignment of the center of the magnet to the center of the die			±0.5	mm
B <sub>Z</sub>	Magnetic input field		30		90	mT
B <sub>Z00</sub>	Magnetic input field range	Gain = 00	58		90	mT

Page 6
Document Feedback
[v2-06] 2014-Oct-14



Symbol	Parameter	Conditions	Min	Тур	Max	Units
B <sub>Z01</sub>	Magnetic input field range	Gain = 01	51		80	mT
B <sub>Z10</sub>	Magnetic input field range	Gain = 10	39		62	mT
B <sub>Z11</sub>	Magnetic input field range	Gain = 11	30		47	mT
N <sub>00</sub>	Noise (rms)	Within B <sub>z00</sub> magnetic input field range and Gain = 00			0.128	deg <sub>rms</sub>
N <sub>01</sub>	Noise (rms)	Within B <sub>z01</sub> magnetic input field range and Gain = 01			0.149	deg <sub>rms</sub>
N <sub>10</sub>	Noise (rms)	Within $B_{z10}$ magnetic input field range and Gain = 10			0.192	deg <sub>rms</sub>
N <sub>11</sub>	Noise (rms)	Within B <sub>z11</sub> magnetic input field range and Gain = 11			0.256	deg <sub>rms</sub>
INL	Integral Non Linearity	Using Bomatec 6x2.5 mm NdFeB magnet with a maximum x/y-displacement radius of 250 µm from package center	-1.41		1.41	deg
R <sub>PU/PD</sub>	Recommended pull-up or pull-down resistor	Applicable for daisy chain configuration	10k		50k	Ω

## **DC/AC Characteristics**

Digital pads: MISO, MOSI, SCK, SS/, EN\_INT/, INT/, WM

Figure 8: DC/AC Characteristics

Symbol	Parameter	Conditions	Min	Max	Units
V <sub>IH</sub>	High level input voltage		0.7 * VDDp		V
V <sub>IL</sub>	Low level input voltage	VDDp > 2.7V		0.3 * VDDp	V
V <sub>IL</sub>	Low level input voltage	VDDp < 2.7V		0.25 * VDDp	V
I <sub>LEAK</sub>	Input leakage current			1	μΑ
V <sub>OH</sub>	High level output voltage		VDDp - 0.5		V
V <sub>OL</sub>	Low level output voltage			VSS + 0.4	V
C <sub>L</sub>	Capacitive load			35	pF

ams Datasheet Page 7
[v2-06] 2014-Oct-14 Document Feedback




# **Detailed Description**

#### **Noise Performance**

This figure shows the Worst Case Noise Performance of the AS5055A at different gain settings which can be set in the System Configuration Register 1.

Figure 9: Worst Case Noise Performance of the AS5055A

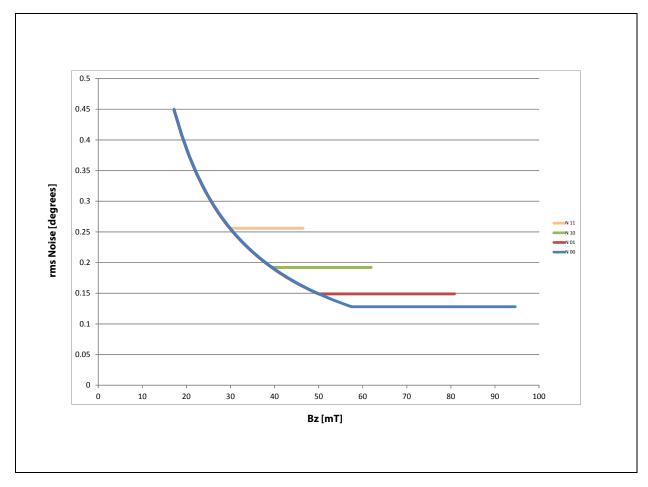

Page 8
Document Feedback
[v2-06] 2014-Oct-14



#### **Typical Application**

The AS5055A uses on-chip Hall elements to convert the magnetic field component perpendicular to the surface of the chip into a voltage.

The signals from the Hall elements are amplified and filtered by the analog front-end (AFE) before being converted by the analog-to-digital converter (ADC). The output of the ADC is processed by the hardwired CORDIC (coordinate rotating digital computer) block to compute the angle and magnitude of the magnetic vector. The intensity of the magnetic field (magnitude) is used by the automatic gain control (AGC) to adjust the amplification level for compensation of temperature and magnetic field variations.

The internal 12-bit resolution is available by reading a register through the SPI interface. The IC settings in the AS5055A can be programmed through the SPI interface without any dedicated programmer.

Figure 10:
Typical Application Using SPI 4-Wire Mode and INT/ Output

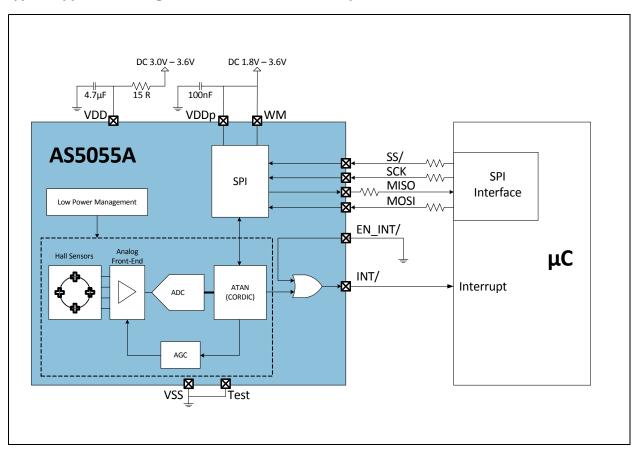


Figure 10 shows how the AS5055A can be connected to a microcontroller. The SPI interface is a slave interface for accessing the on-chip registers. The INT/ output is an active-low interrupt for informing the host microcontroller when a new result is available.

ams Datasheet Page 9
[v2-06] 2014-Oct-14 Document Feedback



#### **Power Supply Filter**

Due to the sequential internal sampling of the Hall sensors, fluctuations on the analog power supply (pin#12: VDD) may cause additional jitter of the measured angle. This jitter can be avoided by providing a stable VDD supply.

The easiest way to achieve that is to add a RC filter:  $15\Omega$  in series and  $4.7\mu$ F to ground as shown in Figure 10.

Alternatively, a filter:  $33\Omega + 2.2\mu F$  may be used. However with this configuration, the minimum supply voltage is 3.15V.

#### Reading an Angle

Sending a READ ANGLE command through the SPI interface automatically powers up the chip, drives INT/ high and starts another angle measurement. The completion of the angle measurement is indicated by driving the INT/ output low and clearing the WOW flag in the error status register. The microcontroller can respond to the interrupt by reading the angle value from the AS5055A over the SPI interface. (See Figure 11).

A READ ANGLE command must not be sent while a measurement is being performed as indicated by INT/ driven high or WOW = 1.

#### Reducing the Angle Jitter

The chip only performs a single angle measurement after a READ ANGLE command is received, after which it returns to low-power mode, so it is in normal operating mode for only a very short time  $(t_{PwrUp})$ .

The angle jitter can be reduced by averaging several angle measurements in the microcontroller. For example, an averaging of four samples reduces the jitter by 6dB (50%).

#### **Operating Modes**

After a READ ANGLE command is sent, the angle is measured and internal calculations are started. During this time (normal operating mode) the INT/output is high until the device finishes the calculations and a second READ ANGLE command may not be sent.

After the INT/ output is driven low the device goes into low-power mode. If the microcontroller doesn't monitor the INT/ output a minimum guard time (t<sub>readout</sub>) must be inserted before the next READ ANGLE command can be sent.

After startup the AS5055A has higher power consumption than during low-power mode. When the POR cell is deactivated the chip uses less current during low-power mode (see POR OFF Register).


Page 10

Document Feedback

[v2-06] 2014-Oct-14



Figure 11: **Operating Modes** 

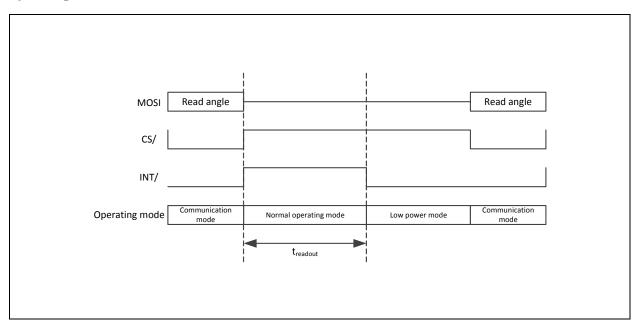

#### Note(s) and/or Footnote(s):

1. Even in low power mode, the power supply must be capable of supporting the active current  $(I_{on})$  at least for maximum  $t_{readout}$ until the AS5055A is suspended to low power mode.

#### **Daisy Chain**

The AS5055A allows a Daisy Chain configuration as shown in Figure 21.

In this configuration the microcontroller can read multiple AS5055A chips using only 5 wires.

ams Datasheet Page 11 **Document Feedback** 




## **SPI Interface**

The 16-bit SPI interface provides read/write access to the on-chip registers. The interface only supports slave operation mode. It communicates at clock rates up to 10 MHz.

The AS5055A SPI uses mode=1 (CPOL=0, CPHA=1) to exchange data. As shown in Figure 12, a data transfer starts with the falling edge of CSn (SCL is low). The AS5055A samples the MOSI input on the falling edge of SCL. SPI commands are executed at the end of the frame (rising edge of CSn). The bit order is MSB first. Data is protected by parity.

#### **SPI Timing**

Figure 12: SPI Timing Diagram

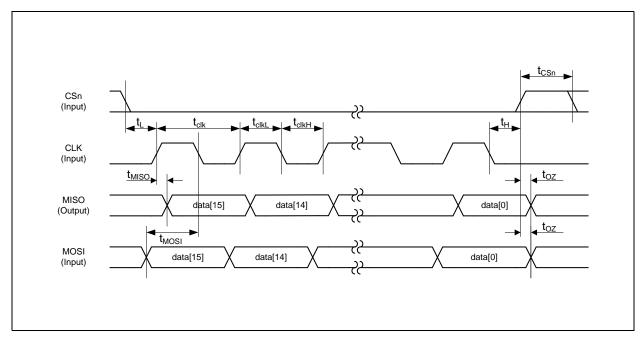

Page 12

Document Feedback

[v2-06] 2014-Oct-14



# Figure 13: SPI Timing

Parameter	Description	Min	Max	Unit
t <sub>L</sub>	Time between CSn falling edge and CLK rising edge	50		ns
t <sub>clk</sub>	Serial clock period	100		ns
t <sub>clkL</sub>	Low period of serial clock	50		ns
t <sub>clkH</sub>	High period of serial clock	50		ns
t <sub>H</sub>	Time between last falling edge of CLK and rising edge of CSn	50		ns
t <sub>CSn</sub>	High time of CSn between two transmissions (1)	50		ns
t <sub>MOSI</sub>	Data input valid to falling clock edge	20		ns
t <sub>MISO</sub>	CLK edge to data output valid		35	ns
t <sub>OZ</sub>	Release bus time after CS rising edge.		50	ns

#### Note(s) and/or Footnote(s):

1. If the previous command was a READ ANGLE command (0x3FFF) a minimum time of readout has to be waited before sending a next READ ANGLE command. (see "Operating Modes" on page 10)

## **SPI Wire Mode Selection**

The SPI interface can be set in two different modes: 3-wire mode or 4-wire mode.

Figure 14: Wire Mode Selection

WM (Pin 14)	Connection option
0	3-wire mode
1	4-wire-mode

ams Datasheet Page 13
[v2-06] 2014-Oct-14 Document Feedback



#### **SPI Transaction**

An SPI transaction consists of a 16-bit command frame followed by a 16-bit data frame. Figure 15 shows the structure of the command frame.

#### **SPI Command Frame**

Figure 15: SPI Command Frame

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	R/W						Α	ddress	14:1							PAR

Bit	Name	Description
15	R/W	0=Write, 1=Read
14:1	Address	14 bit address to read or write
0	PAR	Parity bit (even) calculated on the upper 15 bits

To increase the reliability of communication over the SPI, an even parity bit (PAR) must be generated and sent. A wrong setting of the parity bit causes the PARITY bit in the error status register of the AS5055A to be set. The parity bit is calculated from the upper 15-bits of the command frame. The 16-bit command specifies the address and whether the transaction is a read or a write.

Page 14

Document Feedback [v2-06] 2014-Oct-14



#### **SPI Read Data Frame**


Figure 16: SPI Read Data Frame

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
						D	ata 15	:2							EF	PAR

Bit	Name	Description
15:2	Data	14 bit read data
1	EF	0 = no command frame error occurred, 1 = error occurred
0	PAR	Parity bit (even) calculated on the upper 15 bits

The data is sent from the AS5055A to the microcontroller on the MISO output. The parity bit PAR is calculated for the upper 15 bits. If an error is detected in the previous SPI command frame, the EF bit is set. The addressed register is sampled on the rising edge of CSn and the data is transmitted on MISO with the next read command, as shown in Figure 17.

Figure 17: SPI Read

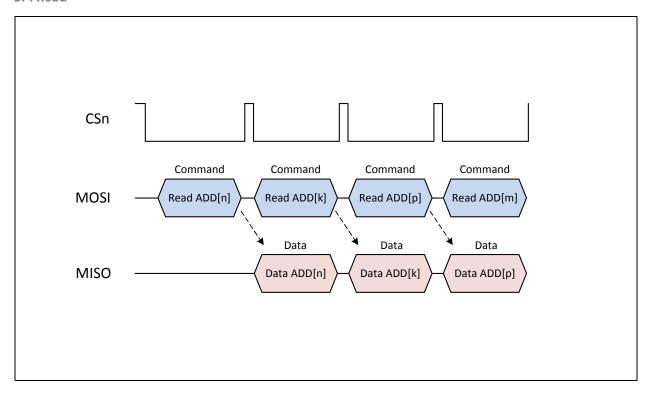

ams Datasheet Page 15
[v2-06] 2014-Oct-14 Document Feedback



#### **SPI Write Data Frame**

Figure 18: SPI Write Data Frame


Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
						D	ata 15	:2							DC	PAR

Bit	Name	Description
15:2	Data	14 bit write data
1	DC	Don't Care
0	PAR	Parity bit (even) calculated on the upper 15 bits

The parity bit PAR is calculated for the upper 15 bits.

In a SPI write transaction, the write command frame (e.g. Write ADD[n]) is followed by a data frame (e.g. DATA [x]). In addition to writing an address in the AS5055A, a write command frame causes the old contents of the addressed register (e.g. DATA [y]) to be sent on MISO in the following frame. This is followed by the new contents of the addressed register (DATA [x]) as shown in Figure 19.

Figure 19: SPI Write Transaction

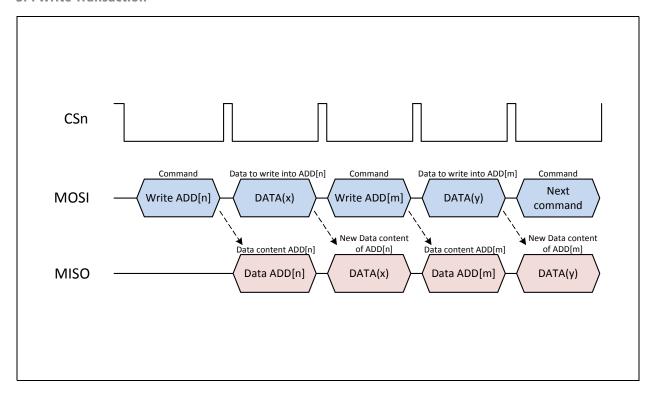


Page 16
Document Feedback
[v2-06] 2014-Oct-14



#### SPI Connection to the microcontroller


Figure 20: Single Slave Mode

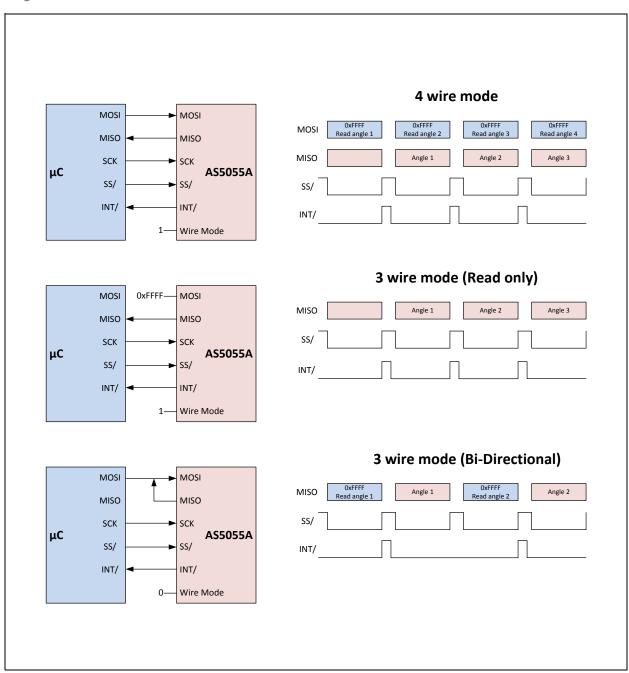



## Daisy Chain, 4 Wire

Figure 21: Daisy Chain, 4 Wire

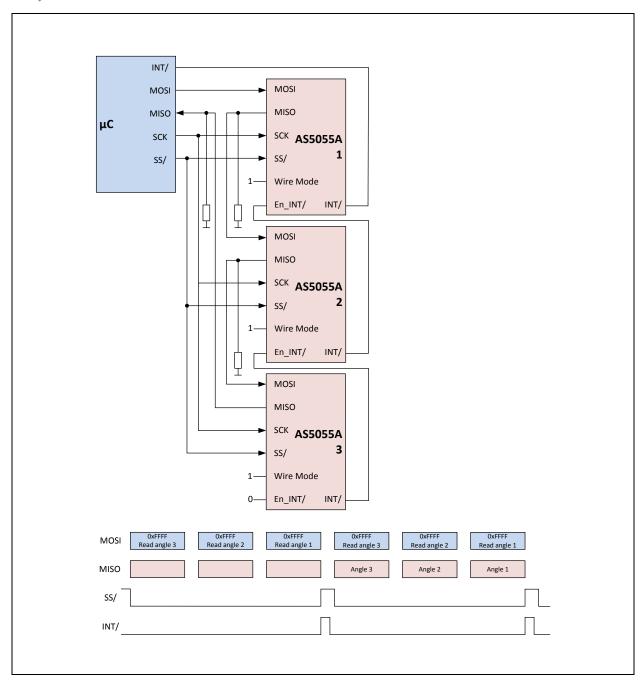

Page 18ams DatasheetDocument Feedback[v2-06] 2014-Oct-14



## Registers

The on-chip registers are shown in Figure 22.

Figure 22: Registers

Name	Address	Bits	Mod	Default	Description
POR OFF	0x3F22	7:0	R/W	0x0000	Power On Reset OFF
Software Reset	0x3C00	13:0	W	0x0000	Software Reset
Master Reset	0x33A5	13:0	W	0x0000	Master Reset
Clear EF	0x3380	13:0	R	0x0000	Clear Error Flag
NOP	0x0000	13:0	W	0x0000	No Operation
AGC	0x3FF8	5:0	R/W	0x0020	Automatic Gain Control
Angular Data	0x3FFF	13:0	R	0x0000	Measured Angle
Error Status	0x335A	13:0	R	0x0000	Error Status Register
System Config	0x3F20	9:13	R/W	0x000	System Configuration Register 1

#### POR OFF (0x3F22)

Writing the value 0x5A to the POR OFF Register (0x3F22) deactivates the POR cell and reduces the current consumption in low power mode ( $I_{OFF}$ ).

#### Software Reset (0x3C00)

Writing to the Software Reset Register initiates a Software Reset. With the RES SPI bit of the Data Package set to 1 it is possible to reset the SPI registers. After a software reset a new angle conversion is started; this is needed to set the AS5055A into an initial state. This angle is not readable by the microcontroller.

The AS5055A is ready as soon as INT/ is driven low or a minimum time  $(t_{readout})$  has elapsed.

Figure 23: Software Reset Command

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Content	0	1	1	1	1	0	0	0	0	0	0	0	0	0	0	PAR

ams Datasheet Page 19
[v2-06] 2014-Oct-14 Document Feedback



Figure 24: Data Package

E	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
								DC							RES SPI	DC	PAR

Bit	Name	Description
15:3	DC	Don't Care
2	RES SPI	If set to 1 the SPI registers are reset as well
1	DC	Don't Care
0	PAR	Parity bit (even) calculated on the upper 15 bits

### Master Reset (0x33A5)

Writing to the Master Reset Register initiates a Master Reset. This is similar to the Software Reset with the difference that no data package is needed.

Figure 25: Master Reset Command

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Content	0	1	1	0	0	1	1	1	0	1	0	0	1	0	1	PAR

#### Clear Error Flag (0x3380)

Reading from the Clear Error Flag Register clears the Error Flag which is contained in every Read Data Frame. The Read data is 0x0000 which indicates a successful clear command.

Figure 26: Clear Error Flag Command

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Content	1	1	1	0	0	1	1	1	0	0	0	0	0	0	0	PAR

Page 20ams DatasheetDocument Feedback[v2-06] 2014-Oct-14



Possible Conditions which force the Error Flag to be set:

- Wrong parity
- · Wrong command
- Wrong number of clocks

**Note(s):** If the error flag is set to 1 because of a communication problem the flag remains set until a Clear Error Flag Command is executed.

#### No Operation (0x0000)

The No Operation (NOP) command represents a dummy write to the AS5055A. If no error happens the chip responds with 0x0000.

Figure 27: NOP Command

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Content	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	PAR

#### AGC - Automatic Gain Control (0x3FF8)

Writing a value different than zero to this register, stops the AGC loop and keeps a constant AGC value.

Figure 28: AGC

Name	Read/Write	Bit Position	Description
AGC	R/W	5:0	Automatic Gain Control value

## Angular Data (0x3FFF)

Figure 29: Angular Data

Name	Read/Write	Bit Position	Description
Alarm Lo	R	13	Alarm flag, which indicates a too weak magnetic field
Alarm Hi	R	12	Alarm flag, which indicates a too strong magnetic field
Angle Value	R	11:0	Angular value in 12 bit binary code

ams Datasheet Page 21
[v2-06] 2014-Oct-14
Document Feedback



#### **Alarm Bits**

Figure 30: Alarm Bits

Alarm Hi	Alarm Lo	Description
0	0	AGC level is higher than the minimum value and lower than the maximum value.
0	1	AGC level is higher than the maximum level. The magnetic field is too weak.
1	0	AGC level is lower than the minimum level. The magnetic field is too strong.
1	1	Indicates if a major system error has occurred during the last READ ANGLE command or if the WOW flag is active. During active WOW a READ ANGLE command must not be sent. Error flags can be read out with the error status register.

#### Error Status (0x335A)

For detailed information of the Error Status Register please refer to "Error Monitoring" on page 22.

#### System Configuration Register 1 (0x3F20)

The gain setting can be configured in system configuration register 1. This register contains factory settings. To change the gain setting, read out the register, modify the gain setting and write the new configuration. The factory settings must not be changed.

Figure 31: System Configuration Register

Name	Read/Write	Bit Position	Description
Resolution	R	13:12	00 indicates 12 bit resolution
Chip ID	R	11:9	Silicon version 010
Factory Setting	R/W	8:5	Don't change
Gain	R/W	4:3	Sets gain setting
Factory Setting	R/W	2:0	Don't change

## **Error Monitoring**

The correct operation and communication of the AS5055A is ensured by several error flags. Every read access is supported by a communication error flag (EF) to indicate a transmission error in a previous host transmission.

For additional information on the Error Status, please refer to the application note *AN5000\_ErrorMonitoring*.

Page 22

Document Feedback

[v2-06] 2014-Oct-14



# **Error Status Register**

Figure 32: **Error Status Register and Description** 

D:	T	Parada (inc		
Bit	Туре	Description		
	Error Status DSP			
13	Reserved			
12	FIELD_ALARM_LO	AGC level is equal or even higher than the maximum level. Magnetic field is too weak.		
11	FIELD_ALARM_HI	AGC level is equal or even lower than the minimum level. Magnetic field is too strong.		
10	RANGE	The RANGE flag signals that the Hall bias circuit has reached the head room limit. This might occur at the combination of low supply voltage, high temperature and low magnetic field. In this case, manually reducing the AGC setting (Figure 28) can be used to recover a valid Hall biasing condition.		
9	CORDICOV	The CORDIC calculates the angle. An error occurs when the input signals of the CORDIC are too large. The internal algorithm fails.		
8	ADCOV	The ADCOV bit occurs if the magnetic input field strength is too large for at least one Hall element. This can be the case if the magnet is displaced. Second reason could be that the offset compensation after power up is not finished yet. If this happens some dummy READ ANGLE commands may be sent to settle the offset loop.		
		Error Status System		
7	Reserved			
6	Reserved			
5	Reserved			
4	wow	When a READ ANGLE command is in progress, the WOW flag is set to 1. At the end of the measurement the WOW flag is cleared to 0. Only in case of deadlock the WOW flag is stuck high; in which case a MASTER RESET must be sent to clear the deadlock.		
	Error Status SPI			
3	Reserved			
2	ADDMON	Set to high when non existing address is used.		
1	CLKMON	Set to high when the amount of clock cycles is not correct.		
0	PARITY	Set to high when the transmitted parity bit does not match to calculated parity bit.		


Page 23 ams Datasheet Document Feedback



## **Package Drawings & Markings**

The device is available in a 16-pin QFN (4x4x0.9 mm) package. The axis of the magnet must be aligned over the center of the package.

Figure 33:
Package FN – Dual Flat No-Lead Packaging Configuration

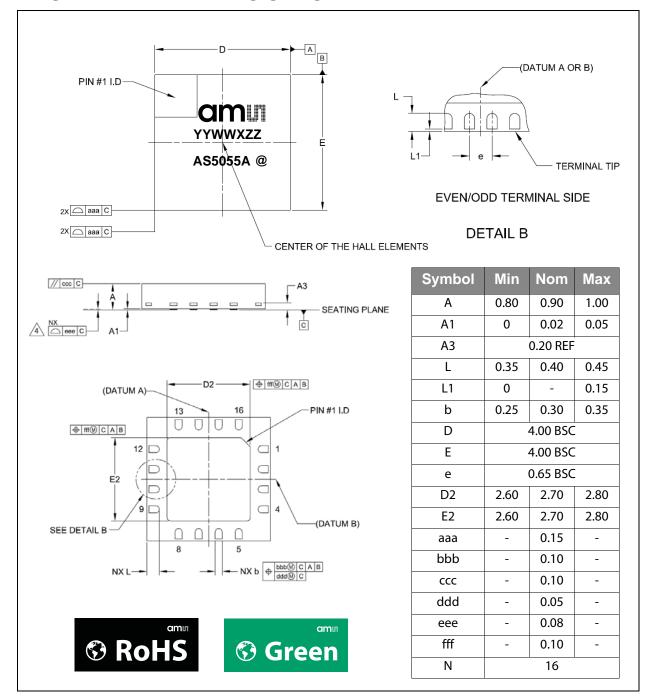

#### Note(s) and/or Footnote(s):

- 1. Dimensions and tolerancing conform to ASME Y14.5M-1994.
- 2. All dimensions are in millimeters. Angles are in degrees.
- 3. Dimension b applies to metallized terminal and is measured between 0.25mm and 0.30mm from terminal tip. Dimension L1 represents terminal full back from package edge up to 0.15mm is acceptable.
- 4. Coplanarity applies to the exposed heat slug as well as the terminal.
- 5. Radius on terminal is optional.
- 6. N is the total number of terminals.

Page 24

Document Feedback

[v2-06] 2014-Oct-14

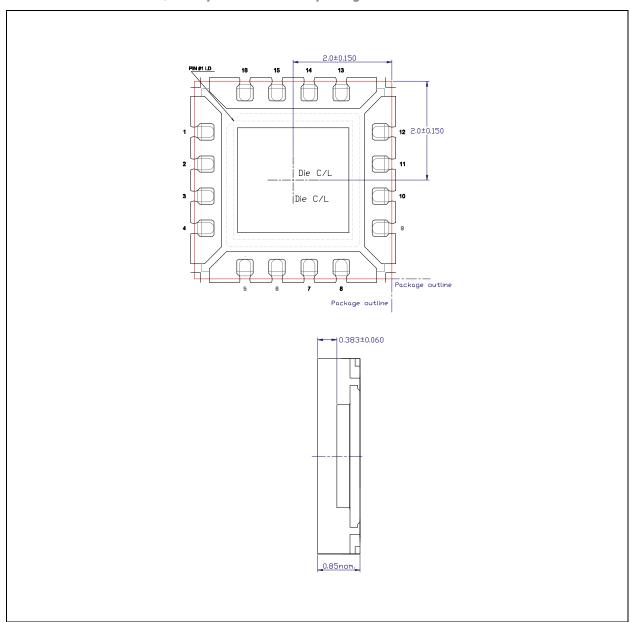


Figure 34:

Marking: YYWWXZZ

YY	ww	Х	ZZ
Year (i.e. 04 for 2004)	Week	Assembly plant identifier	Assembly traceability code

Figure 35: Vertical Cross Section of QFN 16-pin 4x4x0.85 mm package



#### Note(s) and/or Footnote(s):

- 1. All dimensions in mm.
- 2. Die thickness  $0.254 \pm 0.013$
- 3. Adhesive thickness 0.010  $\pm$  10, +0.01, -0.0025
- 4. Lead frame thickness 0.203 typ.

ams Datasheet Page 25
[v2-06] 2014-Oct-14
Document Feedback



## **Ordering & Contact Information**

Figure 36: Ordering Information

Ordering Code	Package	Marking	Delivery Form	Delivery Quantity
AS5055A-BQFT	16-pin QFN	AS5055A	13" Tape & Reel in dry pack	6000
AS5055A-BQFM	16-pin QFN	AS5055A	7" Tape & Reel in dry pack	500

Buy our products or get free samples online at:

www.ams.com/ICdirect

Technical Support is available at: www.ams.com/Technical-Support

Provide feedback about this document at:

www.ams.com/Document-Feedback

For further information and requests, e-mail us at:

ams\_sales@ams.com

 $For \ sales \ of fices, \ distributors \ and \ representatives, \ please \ visit:$ 

www.ams.com/contact

#### Headquarters

ams AG Tobelbaderstrasse 30 8141 Unterpremstaetten Austria, Europe

Tel: +43 (0) 3136 500 0 Website: www.ams.com

Page 26
Document Feedback
[v2-06] 2014-Oct-14



## **RoHS Compliant & ams Green Statement**

**RoHS:** The term RoHS compliant means that ams AG products fully comply with current RoHS directives. Our semiconductor products do not contain any chemicals for all 6 substance categories, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, RoHS compliant products are suitable for use in specified lead-free processes.

ams Green (RoHS compliant and no Sb/Br): ams Green defines that in addition to RoHS compliance, our products are free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material).

Important Information: The information provided in this statement represents ams AG knowledge and belief as of the date that it is provided. ams AG bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. ams AG has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. ams AG and ams AG suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

ams Datasheet Page 27 **Document Feedback** 



#### **Copyrights & Disclaimer**

Copyright ams AG, Tobelbader Strasse 30, 8141 Unterpremstaetten, Austria-Europe. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Devices sold by ams AG are covered by the warranty and patent indemnification provisions appearing in its General Terms of Trade. ams AG makes no warranty, express, statutory, implied, or by description regarding the information set forth herein. ams AG reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with ams AG for current information. This product is intended for use in commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or life-sustaining equipment are specifically not recommended without additional processing by ams AG for each application. This product is provided by ams AG "AS IS" and any express or implied warranties, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose are disclaimed.

ams AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of ams AG rendering of technical or other services.

Page 28

Document Feedback

[v2-06] 2014-Oct-14



## **Document Status**

Document Status	Product Status	Definition
Product Preview	Pre-Development	Information in this datasheet is based on product ideas in the planning phase of development. All specifications are design goals without any warranty and are subject to change without notice
Preliminary Datasheet	Pre-Production	Information in this datasheet is based on products in the design, validation or qualification phase of development. The performance and parameters shown in this document are preliminary without any warranty and are subject to change without notice
Datasheet	Production	Information in this datasheet is based on products in ramp-up to full production or full production which conform to specifications in accordance with the terms of ams AG standard warranty as given in the General Terms of Trade
Datasheet (discontinued)	Discontinued	Information in this datasheet is based on products which conform to specifications in accordance with the terms of ams AG standard warranty as given in the General Terms of Trade, but these products have been superseded and should not be used for new designs

ams Datasheet Page 29 Document Feedback



## **Revision Information**

Changes from 2-05 (2014-Sep-24) to current revision 2-06 (2014-Oct-14)	Page
Updated Figure 22	19
Updated Figure 23	19
Updated Figure 29	21
Updated figure 30	22

#### Note(s) and/or Footnote(s):

- 1. Page and figure numbers for the previous version may differ from page and figure numbers in the current revision.
- 2. Correction of typographical errors is not explicitly mentioned.

Page 30 ams Datasheet
Document Feedback [v2-06] 2014-Oct-14



#### **Content Guide**

- 1 General Description
- 1 Key Benefits & Features
- 2 Applications
- 2 Block Diagram
- 3 Pin Assignment
- 5 Absolute Maximum Ratings
- **6 Electrical Characteristics**
- 6 Operating Conditions
- 6 System Parameters
- 7 DC/AC Characteristics

#### **8** Detailed Description

- 8 Noise Performance
- 9 Typical Application
- 10 Power Supply Filter
- 10 Reading an Angle
- 10 Reducing the Angle Jitter
- 10 Operating Modes
- 11 Daisy Chain

#### 12 SPI Interface

- 12 SPI Timing
- 13 SPI Wire Mode Selection
- 14 SPI Transaction
- 14 SPI Command Frame
- 15 SPI Read Data Frame
- 16 SPI Write Data Frame
- 17 SPI Connection to the microcontroller
- 18 Daisy Chain, 4 Wire

#### 19 Registers

- 19 POR OFF (0x3F22)
- 19 Software Reset (0x3C00)
- 20 Master Reset (0x33A5)
- 20 Clear Error Flag (0x3380)
- 21 No Operation (0x0000)
- 21 AGC Automatic Gain Control (0x3FF8)
- 21 Angular Data (0x3FFF)
- 22 Alarm Bits
- 22 Error Status (0x335A)
- 22 System Configuration Register 1 (0x3F20)

#### 22 Error Monitoring

- 23 Error Status Register
- 24 Package Drawings & Markings
- 26 Ordering & Contact Information
- 27 RoHS Compliant & ams Green Statement
- 28 Copyrights & Disclaimer
- 29 Document Status
- 30 Revision Information

ams Datasheet Page 31 [v2-06] 2014-Oct-14 Document Feedback

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Position Sensor Development Tools category:

Click to view products by ams manufacturer:

Other Similar products are found below:

AS5115 PB AS5215 AB STEVAL-MKI043V1 EVB90340-LDC-200-Rev1.0 STEVAL-STWINMAV1 1032 178 DPP401Z000 EVAL-ADXRS453Z-M EVAL-ADXRS453Z-V 1007214-3 STEVAL-MKI045V1 STEVAL-MKI042V1 STEVAL-MKI037V1 IMX-070 164 EVAL-KIT DMU381ZA-400 OpenIMU300RI EVK OpenIMU330BI EVK 3595 AS5200L-MF\_EK\_AB AS5215 DB AS5600L-SO\_EK\_AB AS5600L-WL\_EK\_AB AS5715-TS\_EK\_AB AS5X47D-TO\_EK\_ST TRK-1T02-E ADIS16265/PCBZ ADIS16260/PCBZ ADIS16477-1/PCBZ ADIS16477-3/PCBZ EVAL-ADXRS450Z-S EVAL-ADXRS450Z-S EVAL-ADXRS453Z EVAL-ADXRS453Z-S EVAL-ADXRS646Z EVAL-ADXRS800Z-EY EVAL-ADXRS800Z-M EVAL-ADXRS800Z-RG EVAL-CN0341-SDPZ ATBNO055-XPRO DFR0027 DFR0053 DPP401A000 EVB90365-Rev1.0 EVB90371-GDC-100-Rev1.0 EVB90371-GDC-200-Rev1.0 EVB90371-GDC-300-Rev1.0 EVB90371-GGO-100-Rev1.0 EVB90371-GDC-200-Rev1.0 EVB90371-GDC-300-Rev1.0