Data sheet

BMG250 Low noise, low power triaxial gyroscope

Bosch Sensortec





BMG250 - Data sheet

Document revision	1.3
Document release date	October 2019
Document number	BST-BMG250-DS000-03
Technical reference code(s)	0 273 142 064
Notes	Data and descriptions in this document are subject to change without notice. Product photos and pictures are for illustration purposes only and may differ from the real product appearance.



BMG250 Data sheet

BMG250

Low noise, low power triaxial gyroscope

The BMG250 is a low noise, low power three axial gyroscope that provides a precise angular rate (gyroscopic) measurement at market leading low power consumption.

The BMG250 is a 16 bit digital, triaxial gyroscope sensor.

Key features

- High performance low noise and low offset gyroscope
- Very low power consumption: typ. 850 µA (gyroscope in full operation)
- Very small 2.5 x 3.0 mm² footprint, height 0.83 mm
- Secondary high speed interface for OIS application
 - Optimized for low latency and high Output Data Rate
- Parallel use for OIS and standard UI applications
 - UI → Primary Interface (I^2C)
 - OIS \rightarrow Secondary Interface (SPI)
- Built-in power management unit (PMU) for advanced power management
- · Power saving with fast start-up mode of gyroscope
- Wide power supply range: 1.71V ... 3.6V
- Allocatable FIFO buffer of 1024 bytes
- Hardware sensor time-stamps for accurate sensor data fusion
- Flexible digital interface to connect to host over I²C or SPI
- Extended I²C mode with clock frequencies up to 1 MHz

Typical applications

- Optical Image Stabilization
- Electronic Image Stabilization
- Optical/Electronic Video Stabilization
- Augmented Reality
- Indoor navigation
- 3D scanning / indoor mapping
- Advanced gesture recognition
- Immersive gaming
- 3-axis motion detection, e.g. Air mouse applications and pointers
- Advanced system power management for mobile applications
- warranty logging

Target Devices

- Smart phones, tablet and transformer PCs
- Camera modules for Smartphones
- Digital Still Cameras / Digital Video Cameras
- · Game controllers, remote controls and pointing devices
- Head tracking devices
- · Wearable devices, e.g. smart watches or augmented reality glasses
- Sport and fitness devices
- Toys, e.g. toy helicopters

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



General Description

The BMG250 is a three axial gyroscope consisting of a state-of-the-art low power 3-axis gyroscope. It has been designed for low power, high precision multi-axis applications in mobile phones, tablets, wearable devices, remote controls, game controllers, head-mounted devices and toys. The BMG250 is available in a compact $2.5 \times 3.0 \times 0.83$ mm³ LGA package. When the gyroscope is in full operation mode, power consumption is typically 850 µA, enabling always-on applications in battery driven devices. The BMG250 offers a wide V_{DD} voltage range from 1.71V to 3.6V and a V_{DDIO} range from 1.2V to 3.6V, allowing the BMG250 to be powered at 1.8V for both V_{DD} and V_{DDIO}.

The BMG250 provides high precision sensor data together with the accurate timing of the corresponding data. The timestamps have a resolution of up to $39 \ \mu s$.

The integrated 1024 byte FIFO buffer supports low power applications and prevents data loss in non-real-time systems. The intelligent FIFO architecture allows dynamic reallocation of FIFO space. For typical applications, this is sufficient for approx. 1.4s of data capture at an output data rate of 100Hz in FIFO mode with data header.

The smart built-in power management unit (PMU) can be configured, for example, to further lower the power consumption by automatically sending the gyroscope temporarily into fast start-up mode and waking it up again by externally triggering this function from the host device's logical unit.

Besides the flexible primary interface (I²C or SPI) that is used to connect to the host, BMG250 provides an additional secondary interface. This secondary interface can be used in SPI mode for OIS (optical image stabilization) applications in conjunction with camera modules, or in advanced gaming use cases.



Index of Contents

1. Contents

 2. SPECIFICATION 2.1 ELECTRICAL SPECIFICATION 2.2 ELECTRICAL AND PHYSICAL CHARACTERISTICS, MEASUREMENT PERFORMANCE 2.3 ABSOLUTE MAXIMUM RATINGS 3.4 BSOLUTE MAXIMUM RATINGS 3.1 BLOCK DIAGRAM 3.2 POWER MODES 3.2.1 SUSPEND MODE 3.2.2 FAST START-UP MODE 3.2.3 TRANSITIONS BETWEEN POWER MODES 3.2.4 PMU (POWER MANAGEMENT UNIT) 	
 2.2 ELECTRICAL AND PHYSICAL CHARACTERISTICS, MEASUREMENT PERFORMANCE	7
 2.3 Absolute maximum ratings 3. FUNCTIONAL DESCRIPTION. 3.1 Block diagram 3.2 Power Modes 3.2.1 Suspend mode 3.2.2 Fast start-up mode 3.2.3 Transitions between power modes 3.2.4 PMU (Power Management Unit) 	7
 3. FUNCTIONAL DESCRIPTION	8
3.1 BLOCK DIAGRAM	10
3.2 POWER MODES	11
 3.2.1 SUSPEND MODE 3.2.2 FAST START-UP MODE 3.2.3 TRANSITIONS BETWEEN POWER MODES 3.2.4 PMU (POWER MANAGEMENT UNIT) 	11
3.2.2 Fast start-up mode 3.2.3 Transitions between power modes 3.2.4 PMU (Power Management Unit)	12
	12 13
3.3 SENSOR TIMING AND DATA SYNCHRONIZATION	14
3.3.1 Sensor Time	14
3.4 DATA PROCESSING	15
3.4.1 DATA PROCESSING	15
3.5 FIFO	16
3.5.1 FIFO FRAMES	
3.6 INTERRUPT CONTROLLER	21
3.6.1 DATA READY DETECTION 3.6.2 PMU TRIGGER (GYRO) 3.6.3 FIFO INTERRUPTS	21
3.7 DEVICE SELF TEST	22
3.8 OFFSET COMPENSATION	23
3.8.1 Fast offset compensation 3.8.2 Manual offset compensation 3.8.3 Inline calibration	23
3.9 Non-Volatile Memory	24
3.10 Register Map	25
3.10.1 REGISTER (0x00) CHIPID 3.10.2 REGISTER (0x02) ERR_REG 3.10.3 REGISTER (0x03) PMU_STATUS 3.10.4 REGISTER (0x12-0x17) DATA 3.10.5 REGISTER (0x18-0x1A) SENSORTIME 3.10.6 REGISTER (0x1B) STATUS 3.10.7 REGISTER (0x1D) INT_STATUS_1	27 28 29 30 31

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



	3.10.8 REGISTER (0x20-0x21) TEMPERATURE	
	3.10.9 REGISTER (0x22-0x23) FIFO_LENGTH	
	3.10.10 REGISTER (0x24) FIFO_DATA 3.10.11 REGISTER (0x42) GYR_CONF	
	3.10.12 REGISTER (0x42) GTR_CONT	
	3.10.13 REGISTER (0x45) FIFO DOWNS	. 37
	3.10.14 REGISTER (0x46-0x47) FIFO_CONFIG	
	3.10.15 REGISTER (0x51) INT_EN 3.10.16 REGISTER (0x53) INT_OUT_CTRL	. 39
	3.10.16 REGISTER (0x53) INT_OUT_CTRL	
	3.10.18 REGISTER (0x56) INT_MAP	
	3.10.19 REGISTER (0x6A) CONF	. 42
	3.10.20 REGISTER (0x6B) IF_CONF	
	3.10.21 REGISTER (0x6C) PMU_TRIGGER 3.10.22 REGISTER (0x6D) SELF TEST	
	3.10.22 REGISTER (0.70) SELF_TEST	45
	3.10.24 REGISTER (0x74-0x77) OFFSET	
	3.10.25 REGISTER (0x7E) CMD	
Δ	DIGITAL INTERFACES	50
	4.1 INTERFACE	
	4.1.1 INTERFACE I ² C/SPI PROTOCOL SELECTION	
	4.1.2 SPT INTERFACE	
	4.1.4 SPI AND I ² C ACCESS RESTRICTIONS	
-		~ 4
	PIN-OUT AND CONNECTION DIAGRAMS	
	5.1 PIN-OUT BMG250	
	5.2 CONNECTION DIAGRAMS	
	5.2.1 I ² C INTERFACE	
	5.2.2 SPI 3-WIRE INTERFACE	
	PACKAGE	
	6.1 OUTLINE DIMENSIONS	65
	6.2 SENSING AXES ORIENTATION	66
	6.3 Landing pattern recommendation	67
	6.4 Marking	68
	6.4.1 MASS PRODUCTION MARKING	
	6.4.2 ENGINEERING SAMPLES	. 68
	6.5 SOLDERING GUIDELINES	69
	6.6 HANDLING INSTRUCTIONS	70
	6.7 TAPE AND REEL SPECIFICATION	71
	6.7.1 ORIENTATION WITHIN THE REEL	. 71
	6.7.1 ORIENTATION WITHIN THE REEL 6.8 ENVIRONMENTAL SAFETY	

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



6.8.2 MULTIPLE SOURCING	
7. LEGAL DISCLAIMER	73
7.1 ENGINEERING SAMPLES	73
7.2 PRODUCT USE	73
7.3 APPLICATION EXAMPLES AND HINTS	73
8. DOCUMENT HISTORY AND MODIFICATIONS	74

Bosch Sensortec



2. Specification

If not stated otherwise, the given values are over lifetime and full performance temperature and voltage ranges, minimum/maximum values are $\pm 3\sigma$.

2.1 Electrical specification

VDD and VDDIO can be ramped in arbitrary order without causing the device to consume significant currents. The values of the voltage at VDD and the VDDIO pins can be chosen arbitrarily within their respective limits. The device only operates within specifications if the both voltages at VDD and VDDIO pins are within the specified range. The voltage levels at the digital input pins must not fall below GNDIO-0.3V or go above VDDIO+0.3V to prevent excessive current flowing into the respective input pin. BMG250 contains a brownout detector, which ensures integrity of data in the non-volatile memory under all operating conditions.

OPERATING CONDITIONS BMG250 Parameter Symbol Condition Min Typ Max Un						Unit
Supply Voltage	Symbol	Condition		Тур	IVIAX	Unit
Internal Domains	V _{DD}		1.71	3.0	3.6	V
Supply Voltage I/O Domain	Vddio		1.2	2.4	3.6	V
Voltage Input Low Level	$V_{\text{IL},a}$	SPI			0.3V _{DDIO}	-
Voltage Input High Level	V _{IH,a}	SPI	0.7VDDIO			-
Voltage Output	Va	V _{DDIO} =1.62V, I _{OL} =3mA, SPI			0.2VDDIO	-
Low Level	$V_{OL,a}$	VDDIO=1.2V, IOL=3mA, SPI			0.23VDDIO	-
Voltage Output	Maria	VDDIO=1.62V, IOH=3mA, SPI	0.8VDDIO			-
High Level	V _{OH,a}	V _{DDIO} =1.2V, I _{OH} =3mA, SPI	0.62VDDIO			-
Operating Temperature	T _A		-40		+85	°C
NVM write-cycles	n _{NVM}	Non-volatile memory	14			Cycles
	Current IDD	Gyro in fast start-up, T _A =25°C		500		
Current consumption		Gyro full operation mode T _A =25°C		850		μA
concemption		Gyro in suspend mode, T _A =25°C		3		

Table 4 Electrical .

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



BMG250 Data sheet

2.2 Electrical and physical characteristics, measurement performance

Table 3: Electrical characteristics gyroscope

OPERATING CONDITIONS GYROSCOPE						
Parameter	Symbol	Condition	Min	Тур	Max	Unit
	R _{FS125}			125		°/s
	RFS250			250		°/s
Range	R _{FS500}	Selectable via serial digital interface		500		°/s
	R _{FS1000}			1,000		°/s
	RFS2000			2,000		°/s
Range (Secondary interface)	R _{FSOIS}	Fixed range setting		2,000		°/s
Start-un timo	t _{G,su}	Suspend to normal mode ODR _G =1600Hz		55	80	ms
Start-up time	t _{G,FS}	Fast start-up to normal mode		10	15	ms

OUTPUT SIGNAL GYROSCOPE						
	R _{FSOIS}	Ta=25°C	15.9	16.4	16.9	LSB/°/s
	R _{FS2000}	Ta=25°C	15.9	16.4	16.9	LSB/°/s
Sensitivity	R _{FS1000}	Ta=25°C	31.8	32.8	33.8	LSB/°/s
Sensitivity	R _{FS500}	Ta=25°C	63.6	65.6	67.6	LSB/°/s
	R _{FS250}	Ta=25°C	127.2	131.2	135.2	LSB/°/s
	R _{FS125}	Ta=25°C	254.5	262.4	270.3	LSB/°/s
Sensitivity change over temperature	TCSG	R _{FS2000} , Nominal V _{DD} supplies best fit straight line		±0.02		%/K
Nonlinearity	NLG	Best fit straight line RFS1000, RFS2000		0.1		%FS
g- Sensitivity		Sensitivity to acceleration stimuli in all three axis (frequency <20kHz)			0.1	°/s/g
Zero-rate offset	$\begin{array}{c} \text{Off}\ \Omega_{x} \\ \Omega_{y \text{ and }} \Omega_{z} \end{array}$	T _A =25°C, fast offset compensation off		±3		°/s
Zero-Rate offset Over temperature	$\begin{array}{c} \text{Off } \Omega_{\text{X, oT}} \\ \Omega_{\text{y, oT and}} \\ \Omega_{\text{z,oT}} \end{array}$	-40°C \leqslant T _A \leqslant +85°C		±3		°/s
Zero-rate offset change over temperature	TCO _G	-40°C \leqslant T _A \leqslant +85°C, best fit straight line		0.05		°/s/K

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.

BOSCH	BMG250 Data sheet					ge 9
Output Noise	n _{G,nD}	@10 Hz		0.007		°/s/√ Hz
Output Noise	n G,rms	Filter setting 74.6Hz, ODR 200 Hz		0.07		°/s rms
Bias stability	BS _G			10		°/h
Output Data Rate (set of x,y,z rate)	ODR _G		25		3200	Hz
Output Data Rate (set of x,y,z rate)	ODRois	Fixed setting		6400		Hz
Output Data rate accuracy (set of x,y,z rate)	AODR _G	Over whole operating temperature range		±1		%
Cross Axis Sensitivity	X _{G,S}	Sensitivity to stimuli in non-sense-direction			2	%

Table 4: Electrical characteristics temperature sensor

OPERATING CONDITIONS AND OUTPUT SIGNAL OF TEMPERATURE SENSOR						
Parameter	Symbol	Condition	Min	Тур	Max	Unit
Temperature Sensor Measurement Range	Ts		-40		85	°C
Temperature Sensor Slope	dT_{S}			0.002		K/LSB
Temperature Sensor Offset	OTs			±2		К
Output Data Data		gyro in fast start-up		0.8		Hz
Output Data Rate	ODRT	Gyro active		100		Hz
Destrict		gyro in fast start-up		8		bit
Resolution	n _T	Gyro active		16		Bit

Bosch Sensortec



2.3 Absolute maximum ratings

		-		
Parameter	Condition	Min	Мах	Units
	V _{DD} Pin	-0.3	4.25	V
Voltage at Supply Pin	V _{DDIO} Pin	-0.3	4.25	V
Voltage at any Logic Pin	Non-Supply Pin	-0.3	V _{DDIO} +0.3	V
Passive Storage Temp. Range	≤65% rel. H.	-50	+150	°C
None-volatile memory (NVM) Data Retention	T = 85°C, after 15 cycles	10		У
	Duration 200 µs, half sine		10,000	g
Mechanical Shock	Duration 1.0 ms, half sine		2,000	g
	Free fall onto hard surfaces		1.8	m
	HBM, at any Pin		2	kV
ESD	CDM		500	V
	MM		200	V

Table 5: Absolute maximum ratings

Note: Stress above these limits may cause damage to the device. Exceeding the specified electrical limits may affect the device reliability or cause malfunction.



3. Functional Description

3.1 Block diagram

The figure below depicts the dataflow in BMG250:

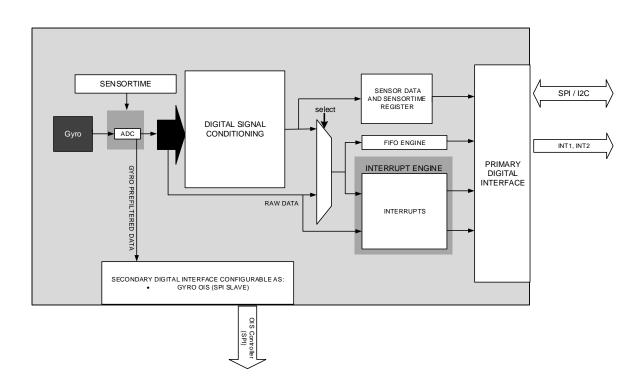


Figure 1: Block diagram of data flow

The pre-filtered input data may be already temperature compensated or other low level correction operations may be applied to them.

The data from the sensor are always sampled with a data rate of 6400 Hz. The data are low pass filtered at an output data rate as configured in the Register (0x42) GYR_CONF. In addition further down sampling for the interrupt engines and the FIFO is possible and configured in the Register (0x45) FIFO_DOWNS. This down sampling discards data frames.

The sensor time is synchronized with the update of the data register.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.2 Power modes

By default the BMG250 is in suspend mode after powering up the device. From there, the device will start-up to normal mode within 50ms typically. Alternatively, the device may be also held in Fast Start-up mode. The device is powering up from Fast Start-up mode in less than 10ms.

Three power modes are supported:

Gyroscope

- Normal mode: full chip operation
- **Suspend mode**: No sampling takes place, all data is retained, and delays between subsequent I²C operations are allowed. FIFO data readout is not supported in suspend mode.
- Fast start-up mode: start-up delay time to normal mode ≤10 ms. FIFO data readout is supported in fast start-up mode, although the data will only be generated during normal mode. This means data generated in normal mode can be read after the BMG250 has been switched to fast start-up mode. After the end of valid data is reached only values of 0x8000 can be read, which should be interpreted as "FIFO empty". If the measured rate would be 0x8000 in reality, a 0x8001 is generated.

Table 6: Power modes of BMG250

Normal mode
Fast Start-up mode
Suspend mode

Suspend and fast start-up modes are *sleep modes*. Switching between normal and fast start-up mode will stop sampling of data. No valid data can be sampled in fast start-up mode. However, previously collected data in normal mode can still be read. The system can be switched from fast start-up mode to normal mode within 10ms to again sample data.

3.2.1 Suspend mode

In suspend mode, the MEMS sensor is powered off but the digital circuitry is still active.

Note:

When the sensor is in suspend or fast start-up mode, burst writes are not supported, normal writes need wait times after the write command is issued (~400 μ s), and burst reads are not supported on Register (0x24) FIFO_DATA.

3.2.2 Fast start-up mode

In **fast start-up mode** the sensing analog part is powered down, while the drive and the digital part remains largely operational. No data acquisition is performed. The latest rate data and the content of all configuration registers are kept. The fast start-up mode allows a fast transition (≤ 10 ms) into normal mode while keeping power consumption significantly lower than in normal mode.



3.2.3 Transitions between power modes

With regard to the below diagram, transitions are allowed between any power mode.

Table 7: Typical total current consumption in µA according to the gyroscope's modes

		Current consumption in µA
Gyroscope Mode	Suspend	3
	Fast Start-up	500
Moue	Normal	850

The power mode setting can be configured independently from the output data rate set. The main difference between normal and Fast Start-up mode is the power consumption which is in the Fast Start-up mode determined by the drive circuitry and the IO communication.

3.2.4 PMU (Power Management Unit)

The integrated PMU (Power Management Unit) allows advanced power management features by combining power management features of the sensor and externally available wake-up devices. See chapter 3.6.2 PMU Trigger (Gyro).

3.2.4.1 Automatic gyroscope power mode changes

To further lower the power consumption, the gyroscope may be configured to be temporarily put into sleep mode, which is in BMG250 configurable as suspend or fast-start-up mode. To configure this feature Register (0x6C) PMU_TRIGGER is used.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.3 Sensor Timing and Data synchronization

3.3.1 Sensor Time

The Register (0x18-0x1A) SENSORTIME is a free running counter, which increments with a resolution of 39 μ s. All sensor events e.g. updates of data registers are synchronous to this register as defined in the table below. With every update of the data register or the FIFO, a bit *m* in the Register (0x18-0x1A) SENSORTIME toggles where *m* depends on the output data rate for the data register and the output data rate and the FIFO down sampling rate for the FIFO. The table below shows which bit toggles for which update rate of data register and FIFO. The time stamps in Register (0x18-0x1A) SENSORTIME are available independent of the power mode the device is in.

Bit <i>m</i> in sensor_time	Resolution [ms]	Update rate [Hz]
0	0.039	25641
1	0.078	12820
2	0.156	6400
3	0.3125	3200
4	0.625	1600
5	1.25	800
6	2.5	400
7	5	200
8	10	100
9	20	50
10	40	25
11	80	12.5
12	160	6.25
13	320	3.125
14	640	1.56
15	1280	0.78
16	2560	0.39
17	5120	0.20
18	10240	0.10
19	20480	0.049
20	40960	0.024
21	81920	0.012
22	163840	0.0061
23	327680	0.0031

		-	
Tahla	11.	Sensor	timo
Iavic	TT .	361301	แบบ

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



3.4 Data Processing

The digital filter can be configured through the parameters: *gyr_bwp* and *gyr_odr*. There is no undersampling parameter for the gyroscope.

Note:

Illegal settings in configuration registers will result in an error code in the Register (0x02) ERR_REG. The content of the data register is undefined, and if the FIFO is used, it may contain no value.

3.4.1 Data Processing

The gyroscope data can only be processed in normal power mode.

There are three data processing modes defined by gyr_bwp. Normal mode, OSR2, OSR4. For details see chapter 3.4.1.1.

3.4.1.1 Gyroscope data processing for normal power mode

When the filter mode is set to normal (gyr_bwp=0b010), the gyroscope data is sampled at equidistant points in the time, defined by the gyroscope output data rate parameter (gyr_odr). The output data rate can be configured in one of eight different valid ODR configurations going from 25Hz up to 3200Hz.

Note: Lower ODR values than 25Hz are not allowed. If they are used they result in an error code in Register (0x02) ERR_REG.

The filter bandwidth as configured by gyr-odr shows a 3db cutoff frequency shown in the following table:

Gyroscope ODR [Hz]	25	50	100	200	400	800	1600	3200
3dB Cutoff frequency [Hz]	10.7	20.8	39.9	74.6	136.6	254.6	523.9	890

When the filter mode is set to **OSR2** (gyr_bwp=0b001), both stages of the digital filter are used and the data is oversampled with an oversampling rate of 2. That means that for a certain filter configuration, the ODR has to be 2 times higher than in the normal filter mode. Conversely, for a certain filter configuration, the filter bandwidth will be the approximately half of the bandwidth achieved for the same ODR in the normal filter mode. For example, for ODR=50Hz we will have a 3dB cutoff frequency of 10.7Hz.

When the filter mode is set to **OSR4** (gyr_bwp=0b000), both stages of the digital filter are used and the data is oversampled with an oversampling rate of 4. That means that for a certain filter configuration, the ODR has to be 4 times higher than in the normal filter mode. Conversely, for a certain filter configuration, the filter bandwidth will be approximately 4 times smaller than the bandwidth achieved for the same ODR in the normal filter mode. For example, for ODR=100Hz we will have a 3dB cutoff frequency of 10.7Hz.

There is no undersampling mode for the gyroscope data processing.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.5 FIFO

A FIFO is integrated in BMG250 to support low power applications and prevent data loss in nonreal-time systems. The FIFO has a size of 1024 bytes. The FIFO architecture supports to dynamically allocate FIFO space. For typical applications, this is sufficient for approx. 1.4s of data capture (ODR=100Hz). If a lower ODR is used, the FIFO size will be sufficient for capturing data longer, increasing ODR will reduce available capturing time. The FIFO features a FIFO full and watermark interrupt. Details can be found in chapter 3.6.3.

A schematic of the data path when the FIFO is used is shown in the figure below.

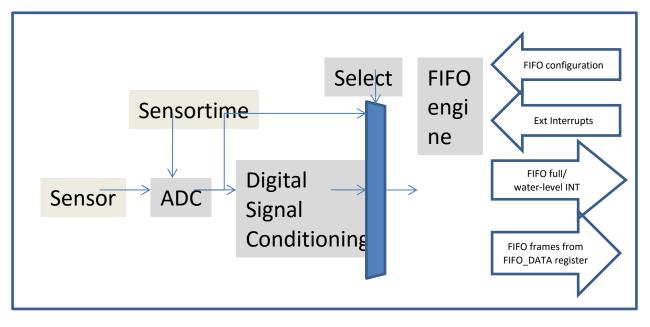


Figure 3: Block diagram of FIFO data path

3.5.1 FIFO Frames

When using the FIFO, the stored data can be read out by performing a burst read on the register (0x24) FIFO_DATA. The data is stored in units called frames.

3.5.1.1 Frame rates

The frame rate for the FIFO is defined by the maximum output data rate of the sensor via the Register (0x46-0x47) FIFO_CONFIG. If pre-filtered data are selected in Register (0x45) FIFO_DOWNS, a data rate of 6400 Hz is used.

The frame rate can be reduced further via downsampling (Register (0x45) FIFO_DOWNS). This can be done independently for each sensor. Downsampling just drops sensor data; no data processing or filtering is performed.

3.5.1.2 Frame format

When using the FIFO, the stored data can be read out by performing a burst read on the register (0x24) FIFO_DATA. The data will be stored in frames. The frame format is configurable.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019



The FIFO can be configured to store data in either header mode or in headerless mode (see figure below). The headerless mode is usually used when the structure of data does not change during data acquisition. In this case, the number of storable frames can be maximized. In contrast, the header mode is intended for situations where flexibility in the data structure is required, e.g. when the sensor runs at different ODRs or when switching the sensor on or off during operation.

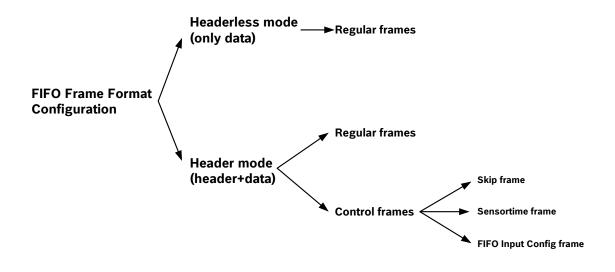


Figure 4: FIFO frame configurations

In **headerless mode** no header byte is used and the frames consist only of data bytes. The data bytes will always be sensor data. This mode has the advantage of an easy frame format and an optimized usage of the 1024 bytes of FIFO storage. It can be selected by disabling fifo_header in Register (0x46-0x47) FIFO_CONFIG. In case of overreading the FIFO, non-valid frames always contain the fixed expression (magic number) 0x80 in the data frame.

In **header mode** every frame consists of a header byte followed by one or more data bytes. The header defines the frame type and contains parameters for the frame. The data bytes may be sensor data or control data. Header mode supports different ODRs for the gyroscope data and external interrupt flags. It is activated by enabling fifo_header in Register (0x46-0x47) FIFO_CONFIG.

3.5.1.3 Header byte format The header format is shown below:

Bit	7	6	5	4
Content	fh_mode		fh_parm<3:2>	
Bit	3	2	1	0

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec

The <i>fh_mode</i> , <i>fh_opt</i> and <i>fh_ext</i> fields are defined	ned as
---	--------

fh_mode<1:0>	Definition	fh_parm <3:0>	fh_ext<1:0>
0b10	Regular	Frame content	Tag of INT2 and INT1
0b01	Control	Control Opcode	
0b00	Reserved	Na	
0b11	Reserved	Na	

f_parm=0b0000 is invalid for regular mode, a header of 0x80 indicates an uninitialized frame.

3.5.1.4 Data bytes Format

🗈 BOSCH

When the FIFO is set to "headerless mode", only sensor data will be saved into the FIFO (in the same order as in the data register). External interrupt tags are not supported in headerless mode.

When the FIFO is set to "header mode", the data byte format is different depending on the type of frame. There are two basic frame types, control frames and regular data frames. Each different type of control frame has its own data byte format. It can contain skipped frames, sensortime data or FIFO configuration information as explained in the following chapters. If the frame type is a regular frame (sensor data), the data byte section of the frame depend on how the data is being transmitted in this frame (as specified in the header byte section).

The **data byte** part for regular data frames is identical to the format defined for the Register (0x12-0x17) DATA.

Control frame (fh_mode=0b01):

Control frames, which are only available in header mode, are used for special or exceptional information. All control frames contribute to the *fifo_byte _counter* in Register (0x22-0x23) FIFO_LENGTH. In detail, there are three types of control frame, which can be distinguished by the *fh_parm* field:

Skip frame (fh_parm=0b000):

In case of a FIFO overflow, a skip frame is prepended to the FIFO content when the next readout is performed. A skip frame indicates the number of skipped frames since the last readout.

In the header byte of a skip frame, fh_mode equals 0b01 (since it is a control frame) and the fh_param equals 0b000 (indicating skip frame). The data byte part of a skip frame consists of one byte and contains the number of skipped frames. When more than 0xFF frames have been skipped, 0xFF is returned.

Sensortime frame (fh_parm=0b001):

If the sensortime frame functionality is activated (see description of Register (0x46-0x47) FIFO_CONFIG) and the FIFO is overread, the last data frame is followed by a sensortime frame. This frame contains the BMG250 timestamp content corresponding to the time at which the last data frame was read.

In the header byte of a sensortime frame, fh_mode = 0b01 (since is a control frame) and fh_param = 0b001 (indicating sensortime frame). The data byte part of a sensortime frame



consists of 3 bytes and contains the 24-bit sensortime. A sensortime frame does not consume memory in the FIFO.

FIFO_input_config frame (fh_parm=0b010):

Whenever the configuration of the FIFO input data sources changes, a FIFO input config frame is inserted into the FIFO in front of the data to which the configuration change is applied.

In the header byte of a config frame, fh_mode = 0b01 (since it is a control frame) and fh_param = 0b010 (indicating FIFO_input_config frame). The data byte part of a FIFO_Input_Config Frame consists of one byte and contains data corresponding to the following table:

Bit	7	6	5	4	
Content		reser	rved		
Bit	3	2	1	0	
Read/Write	gyr_range_ch	gyr_conf_ch		reserved	

gyr_range_ch: gyr_conf_ch: A change in Register (0x43) GYR_RANGE becomes active. A change in Register (0x42) GYR CONF or gvr fifo filt data or

gyr_fifo_downsampling in Register (0x45) FIFO_DOWNS becomes active.

3.5.2 FIFO conditions and details

3.5.2.1 Overflows

In the case of overflows the FIFO will overwrite the oldest data. A skip frame will be prepended at the next FIFO readout if the available FIFO space falls below the maximum size frame.

3.5.2.2 Overreads

If more data bytes are read from the FIFO than valid data bytes are available, '0x80' is returned. Since a header '0x80' indicates an invalid frame, the SW can recognize the end of valid data. After the invalid header the data is undefined. This is valid in both headerless and header mode. In addition, if header mode and the sensortime frame are enabled, the last data frame is followed by a sensortime frame. After this frame, a 0x80 header will be returned that indicates the end of valid data.

3.5.2.3 Partial frame reads

When a frame is only partially read through, it will be repeated within the next reading operation (including the header).

3.5.2.4 FIFO synchronization with external events

External events can be synchronized with the FIFO data by connecting the event source to one of the BMG250 interrupt pins (which needs to be configured as an input interrupt pin). External events can be generated e.g. by a camera module. Each frame contains the value of the interrupt input pin at the time of the external event.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



The fh_ext<1:0> field is set when an external interrupt is triggered. External interrupt tags are configured using *int*<*x*>_output_en in Register (0x53) INT_OUT_CTRL.

3.5.2.5 FIFO Reset

A reset of the BMG250 is triggered by writing the opcode 0xB0 "fifo_flush" to the Register (0x7E) CMD. This will clear all data in the FIFO while keeping the FIFO settings unchanged.

Automatic resets are only done in two exceptional cases where the data would not be usable without a reset:

- a sensor is enabled or disabled in headerless mode, or
- a transition between headerless and header mode occurred.

3.5.2.6 Error Handling

In case of a configuration error in Register (0x46-0x47) FIFO_CONFIG, no data will be written into the FIFO and the error is reported in Register (0x02) ERR_REG.

Bosch Sensortec



3.6 Interrupt Controller

There are 2 interrupt output pins, to which 3 different interrupt signals can be mapped independently via user programmable parameters.

Available interrupts in normal mode are:

- Data ready ("new-data") for synchronizing sensor data read-out with the MCU / host controller
- FIFO full / FIFO watermark allows FIFO fill level and overflow handling.

All Interrupts are available only in normal (low-noise) mode, but not in suspend mode.

Input Interrupt Pins: For special applications (e.g. PMU Trigger, FIFO Tag) interrupt pins can be configured as input pins. For all other cases (standard interrupts), the pin must be configured as an output.

Note: The direction of the interrupt pins is controlled with $int < x > output_en$ and $int_x_input_en$ in Register (0x53) INT_OUT_CTRL and Register (0x54) INT_IN_CTRL. If both are enabled, the input (e.g. marking fifo) is driven by the interrupt output.

3.6.1 Data Ready Detection

This interrupt is enabled whenever a new data sample is complete. This allows a low latency data readout.

The data update detection monitors the *data_update* signals for all axes. It generates an interrupt as soon as the values for all axes which are required for the configured output data rates have been updated.

The interrupt is cleared automatically when the update for the next sample starts or the data is read out from the data register.

3.6.2 PMU Trigger (Gyro)

Whenever a PMU (power management unit) trigger (either wakeup or sleep) is issued, *wakeup_int* in Register (0x6C) PMU_TRIGGER configures if an interrupt is send to the application processor. If the AP wants to trigger sleeps itself for the gyro, the gyr_wakeup_trigger is configured accordingly and no wakeup triggers are issued.

3.6.3 FIFO Interrupts

The FIFO supports two interrupts, a FIFO full interrupt and a watermark interrupt. The FIFO full interrupt is issued when the FIFO is full and the next full data sample would cause a FIFO overflow, which may lead to samples being deleted. Technically, that means that a FIFO full interrupt is issued, whenever less space than two maximum size frames is left in the FIFO. The FIFO watermark interrupt is fired, when the FIFO fill level in *fifo_byte_counter* in Register (0x22-0x23) FIFO_LENGTH is above a pre-configured watermark, defined in *fifo_watermark* in Register (0x46-0x47) FIFO CONFIG.

Note: The unit of *fifo_watermark* is 4 bytes whereas the unit of *fifo_byte_counter* is single bytes.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



3.7 Device self test

This feature permits to check the sensor functionality via a built-in self-test (BIST).

The BIST can be triggered during normal operation mode. It checks the sensors drive amplitude, its frequency and the stability of the drive control loop. Hence, disturbances of the movement by particles, mechanical damage or pressure loss can be detected.

The self-test for the gyroscope will be started by writing a '1' to gyr_self_test_enable in Register (0x6D) SELF_TEST. The result will be in gyr_self_test_ok in Register (0x1B) STATUS.

In addition, any particles or damages can be easily identified in a "Manual Performance Check". Due to the outstanding offset and noise performance the measured values at zero-rate fit the specified performance.



3.8 Offset Compensation

BMG250 offers fast and manual compensation as well as inline calibration.

Fast offset compensation is performed with pre-filtered data, and the offset is then applied to both, pre-filtered and filtered data. If necessary the result of this computation is saturated to prevent any overflow errors (the smallest or biggest possible value is set, depending on the sign).

The public offset compensation Register (0x74-0x77) OFFSET are images of the corresponding registers in the NVM. With each image update the contents of the NVM registers are written to the public registers. The public registers can be overwritten by the user at any time. Offset compensation needs to be enabled through *gyr_off_en* (Register 0x77).

3.8.1 Fast offset compensation

Fast offset compensation (FOC) is a one-shot process that compensates offset errors by setting the offset compensation registers to the negated offset error. This is best suited for "end-of-line trimming" with the customers device positioned in a well-defined orientation. The Gyroscope target value is always 0 dps at rest.

FOC is triggered by issuing a *start_foc* command to Register (0x7E) CMD. Once triggered, the status of the fast correction process is reflected in the status bit *foc rdy* in

Register (0x1B) STATUS. *foc_rdy* is '0' while the measurement is in progress. Preset filter settings apply. This will take a maximum time of 250 ms.

The negated measured values are written to Register (0x74-0x77) OFFSET automatically (overwriting previous offset register values), cancelling out offset errors.

Fast compensation can only be used in normal mode.

The fast offset compensation does not automatically clear the data ready bit in Register (0x1B) STATUS. It is recommended to read the Register (0x12-0x17) DATA after FOC completes, to remove a stall data ready bit from before the FOC. In this way the data ready bit can be made functional again to indicate that the next sample is available for reading, while using data from the FOC mechanism.

3.8.2 Manual offset compensation

The contents of the public compensation Register (0x74-0x77) OFFSET may be set manually via the digital interface. After modifying the Register (0x74-0x77) OFFSET the next data sample is not valid.

Writing to the offset compensation registers is not allowed while the fast compensation procedure is running.

3.8.3 Inline calibration

For certain applications, it is often desirable to calibrate the offset once and to store the compensation values permanently. This can be achieved by using fast or manual offset compensation to determine the proper compensation values and then storing these values permanently in the NVM.

Each time the device is reset, the compensation values are loaded from the non-volatile memory into the image registers and used for offset compensation.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019



3.9 Non-Volatile Memory

The memory of the BMG250 consists of volatile and non-volatile registers. Part of it can be both read and written by the user. Access to non-volatile memory is only possible through (volatile) image registers.

A maximum number of write cycles to non-volatile memory of equal or less than 14 is supported.

The Register (0x70) NV_CONF and Register (0x74-0x77) OFFSET have NVM backups which are accessible by the user.

The content of the NVM is loaded to the image registers after a reset (either POR or softreset). As long as the image update is in progress, bit nvm_rdy in Register (0x1B) STATUS is '0', otherwise it is '1'.

The image registers can be read and written like any other register.

Writing to the NVM is a four-step procedure: Write "0x11" into CMD (0x7E) register to make sensor enter NORMAL power state. Write the new contents to the image registers. Write '1' to bit *nvm_prog_en in the* Register (0x6A) CONF register in order to unlock the NVM. Write prog_nvm (0xA0) to the Register (0x7E) CMD to trigger the write process.

Writing to the NVM always renews the entire NVM contents. It is possible to check the write status by reading bit nvm_rdy . While $nvm_rdy = '0'$, the write process is still in progress; if $nvm_rdy = '1'$, then writing is completed. As long as the write process is ongoing, no change of power mode and image registers is allowed.

After *nvm_rdy* turns to be '1', user can optionally write "0x10" into CMD (0x7E) register to switch power status back into suspend mode, if needed.



reserved

3.10 Register Map

read/write

This chapter contains register definitions. REG[x] < y > denotes bit y in byte x in register REG. Val(Name) is the value contained in the register interpreted as non-negative binary number. When writing to reserved bits, '0' should be written when not stated different.

read only

Register	Register Name	Defaul	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
Address		t								
0x007D		Value				res	served			
0x007D	-	-					erved			
0x0070	OFFSET_6	0x00	gyr_off_en	reserved	off gy			/ 9 .8	off gy	r_x_9_8
0x0076	OFFSET_5	0x00		gyr_off_en reserved off_gyr_z_9_8 off_gyr_y_9_8 off_gyr_x off_gyr_z_7_0			1_^_0_0			
0x0075	OFFSET_4	0x00	off_gyr_y_7_0							
0x0074	OFFSET_3	0x00		off_gyr_x_7_0						
0x0074 0x0073	-	-		_	_		erved	_	_	_
0x0073 0x0071	-						erved			
0x0071 0x0070	NV_CONF	0x00			reserved	163	Serveu	i2c_wdt_e	i2c_wdt_sel	spi_en
0,0070		0,00			reserved			n	120_wut_301	spi_cn
0x006F	-	-				res	erved			
0x006E	-	-				res	erved			
0x006D	SELF_TEST	0x00		reserved		gyr_self_test_start		res	erved	
0x006C	PMU_TRIGGER	0x10	reserv		gyr_sleep_state	reserved	gyr_wakeup_trigg	reserved		ep_trigger
0x006B	IF_CONF	0x00	reserv	ved	reserved	if_mode		reserved		spi3
0x006A	CONF	0x00			re	served			nvm_prog_en	reserved
0x0069	-	-					erved			
0x0057	-	-		1.14.6	1 14 66 11		served	1.10.6	1 10 11	
0x0056 0x0055	INT_MAP_1	0x00	int1_drdy	int1_fwm	int1_ffull	reserved	int2_drdy	int2_fwm	int2_ffull	reserved
0x0055 0x0054	INT_LATCH	- 0x00	reserv	wod	int2_input_en	int1_input_en	erved	roc	erved	
0x0053	INT_OUT_CTRL	0x00	int2_output_en	int2 od	int2_lvl	int2_edge_ctrl	int1_output_en	int1_od	int1_lvl	int1_edge_ctrl
0x0052	-	-		1112_00	1112_111		erved	intr_ou	<u>.</u>	Intr_cuge_cur
0x0051	INT_EN_1	0x00	reserved	int_fwm_en	int ffull en	int_drdy_en		res	erved	
0x0050	-	-					erved			
0x0048	-	-				res	erved			
0x0047	FIFO_CONFIG_1	0x10	fifo_gyr_en	res	served	fifo_header_en	fifo_tag_int1_e	fifo_tag_int2	fifo_time_en	fifo_stop_on_full
0x0046	FIFO_CONFIG_0	0x80				fifo_wa	ater_mark			
0x0045	FIFO_DOWNS	0x88	reserved gyr_fifo_filt_dat gyr_fifo_downs							
	_			16	.301700				gyr_nro_down	5
0x0044	GYR BANGE	-		Te		res	gyr_fifo_filt_dat served			5
0x0043	GYR_RANGE	- 0x00	resen		reserved			gy	gyr_range	5
0x0043 0x0042	GYR_RANGE GYR_CONF	-	resen		reserved	_bwp	erved	gy		5
0x0043	GYR_CONF	- 0x00 0x28	resen		reserved	_bwp res		gy	gyr_range	5
0x0043 0x0042 0x0041	GYR_CONF -	- 0x00 0x28 -	resen		reserved	_bwp res res	erved erved	l gy	gyr_range	5
0x0043 0x0042 0x0041 0x0025 0x0024 0x0023	GYR_CONF FIFO_DATA FIFO_LENGTH_1	- 0x00 0x28 - - 0x00 0x00	resen		reserved	_bwp res res fifo	erved erved erved o_data		gyr_range	
0x0043 0x0042 0x0041 0x0025 0x0024 0x0023 0x0022	GYR_CONF - FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0	- 0x00 0x28 - 0x00 0x00 0x00 0x00	resen		reserved gyr	bwp res res fifo fifo_byte_	erved erved erved o_data counter_7_0		gyr_range r_odr	
0x0043 0x0042 0x0041 0x0025 0x0024 0x0023 0x0022 0x0021	GYR_CONF - FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1	- 0x00 0x28 - 0x00 0x00 0x00 0x00 0x00 0x80	resen		reserved gyr	_bwp res res fifo _byte_ tempera	erved erved erved o_data counter_7_0 ature_15_8		gyr_range r_odr	
0x0043 0x0042 0x0041 0x0025 0x0024 0x0023 0x0022 0x0021 0x0020	GYR_CONF - FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0	- 0x00 0x28 - 0x00 0x00 0x00 0x00 0x00 0x80 0x00	resen		reserved gyr	_bwp res fifc 	erved erved o_data counter_7_0 ature_15_8 ature_7_0		gyr_range r_odr	
0x0043 0x0042 0x0041 0x0025 0x0024 0x0023 0x0022 0x0021 0x0020 0x001F	GYR_CONF - FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1	- 0x00 0x28 - 0x00 0x00 0x00 0x00 0x00 0x80	resen		reserved gyr	bwp res fifc fifo_byte_ tempera tempera res	erved erved erved o_data counter_7_0 ature_15_8 ature_7_0 erved		gyr_range r_odr	
0x0043 0x0042 0x0041 0x0025 0x0024 0x0023 0x0022 0x0021 0x0020 0x001F 0x001E	GYR_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0	- 0x00 0x28 - - 0x00 0x00 0x00 0x00 0x80 0x00 - -		ved	reserved gyr reserved	bwp res fifo fifo_byte temper temper res res	erved erved o_data counter_7_0 ature_15_8 ature_7_0		gyr_range r_odr fifo_byte_counter_	
0x0043 0x0042 0x0041 0x0025 0x0024 0x0023 0x0022 0x0021 0x0020 0x001F 0x001E 0x001D	GYR_CONF - FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1	- 0x00 0x28 - - 0x00 0x00 0x00 0x00 0x00 0x80 0x00 -	reserved		reserved gyr	bwp res fifo fifo_byte_ temper temper res res drdy_int	erved erved o data counter_7_0 ature_15_8 ature_7_0 erved erved		gyr_range r_odr	
0x0043 0x0042 0x0041 0x0025 0x0024 0x0023 0x0022 0x0021 0x0020 0x001F 0x001E	GYP_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0 INT_STATUS_1	- 0x00 0x28 - - 0x00 0x00 0x00 0x00 0x80 0x00 - - - 0x00		ved	reserved gyr reserved	bwp res fifo fifo_byte_ temper temper res res drdy_int	erved erved erved o_data counter_7_0 ature_15_8 ature_7_0 erved		gyr_range r_odr fifo_byte_counter_	
0x0043 0x0042 0x0041 0x0025 0x0024 0x0023 0x0022 0x0021 0x0020 0x001F 0x001E 0x001D 0x001C	GYP_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0	- 0x00 0x28 - 0x00 0x00 0x00 0x00 0x80 0x00 - - - 0x00 -	reserved	ved	reserved gyr reserved ffull_int	bwp res fifo fifo_byte_ tempera temper res cres drdy_int res nvm_rdy	erved erved o_data counter_7_0 ature_15_8 ature_7_0 erved erved erved	res	gyr_range r_odr fifo_byte_counter_	10_8
0x0043 0x0042 0x0041 0x0025 0x0024 0x0023 0x0022 0x0021 0x0020 0x001F 0x001E 0x001D 0x001C 0x001B 0x001A 0x0019	GYP_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0 INT_STATUS_1 STATUS SENSORTIME_2 SENSORTIME_1	0x00 0x28 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	reserved	ved	reserved gyr reserved ffull_int	bwp res fifo_byte_ fifo_byte_ temper temper res drdy_int res nvm_rdy sensor_t sensor_	erved counter_7_0 ature_15_8 ature_7_0 erved erved erved foc_rdy time_23_16 time_15_8	res	gyr_range r_odr fifo_byte_counter_	10_8
0x0043 0x0042 0x0041 0x0025 0x0024 0x0022 0x0021 0x0020 0x001F 0x001E 0x001D 0x001C 0x001A 0x001A 0x0018	GYF_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0 INT_STATUS_1 SENSORTIME_2 SENSORTIME_1 SENSORTIME_0	0x00 0x28 0x00 0x00 0x00 0x00 0x00 0x00 0x01 0x00 0x0 0x00 0	reserved	ved	reserved gyr reserved ffull_int	bwp res fifc fifo_byte_ temper temper temper res drdy_int res nvm_rdy sensor_ sensor_ sensor	erved counter_7_0 ature_15_8 ature_7_0 erved erved foc_rdy time_13_8 time_15_8 time_7_0	res	gyr_range r_odr fifo_byte_counter_	10_8
0x0043 0x0042 0x0041 0x0025 0x0024 0x0022 0x0021 0x001F 0x001F 0x001D 0x001D 0x001B 0x001A 0x0019 0x0018 0x0017	GYF_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0 INT_STATUS_1 SENSORTIME_2 SENSORTIME_2 SENSORTIME_1 SENSO	0x00 0x28 0x00	reserved	ved	reserved gyr reserved ffull_int	bwp res fifo fifo_byte_ tempera tempera res drdy_int res nvm_rdy sensor_ sensor sensor	erved erved erved o_data counter_7_0 ature_15_8 ature_7_0 erved erved foc_rdy time_23_16 time_15_8 time_7_0 z_15_8	res	gyr_range r_odr fifo_byte_counter_	10_8
0x0043 0x0042 0x0025 0x0024 0x0023 0x0022 0x0021 0x001F 0x001F 0x001E 0x001B 0x001A 0x001B 0x001A 0x0019 0x001A 0x0013 0x0017 0x0016	GYP_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0	0x00 0x28 0x00	reserved	ved	reserved gyr reserved ffull_int	bwp res fifo_byte_ tempera tempera res drdy_int res drdy_int res ensor_ sensor	erved erved counter_7_0 data counter_7_0 ature_15_8 ature_7_0 erved erved foc_rdy time_23_16 time_7_0 z_15_8 z_15_8	res	gyr_range r_odr fifo_byte_counter_	10_8
0x0043 0x0041 0x0025 0x0024 0x0023 0x0022 0x0021 0x001F 0x001F 0x001E 0x001B 0x001B 0x001A 0x0019 0x0018 0x0017 0x0017 0x0016 0x0015	GYP_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0 INT_STATUS_1 STATUS SENSORTIME_2 SENSORTIME_1 SENSORTIME_1 SENSORTIME_1 DATA_19 DATA_17	0x00 0x28 0x00 0x0 0x00 0	reserved	ved	reserved gyr reserved ffull_int	bwp res fifo_byte tempera tempera res drdy_int res nvm_rdy sensor_ sensor sensor gyr gyr	erved erved erved 	res	gyr_range r_odr fifo_byte_counter_	10_8
0x0043 0x0042 0x0041 0x0025 0x0024 0x0022 0x0022 0x0021 0x0020 0x001F 0x001D 0x001C 0x001D 0x001A 0x001A 0x0013 0x0015 0x0014	GYP_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0 INT_STATUS_1 STATUS SENSORTIME_2 SENSORTIME_1 SENSORTIME_0 DATA_19 DATA_18 DATA_17 DATA_16	· 0x00 0x28 · 0x00 0x00 0x00 · 0x00 · 0x00 · 0x00 0x0	reserved	ved	reserved gyr reserved ffull_int	bwp res res fifc byte_ tempera tempera tempera res drdy_int res drdy_int res nvm_rdy sensor_ sensor sensor sensor gyr gyr gyr	erved erved counter_7_0 ature_15_8 ature_7_0 erved erved erved time_15_8 ature_7_0 erved counter_7_0 ature_7_0 z_15_8 z_7_0 y_15_8 y_7_0	res	gyr_range r_odr fifo_byte_counter_	10_8
0x0043 0x0042 0x0041 0x0025 0x0024 0x0022 0x0021 0x0020 0x001F 0x001E 0x001D 0x001D 0x001B 0x001A 0x0013 0x0014 0x0013	GYP_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0 INT_STATUS_1 STATUS SENSORTIME_2 SENSORTIME_1 SENSORTIME_1 SENSORTIME_1 DATA_19 DATA_17	0x00 0x28 0x00 0x00 0x80 0x00	reserved	ved	reserved gyr reserved ffull_int	bwp res fifo fifo_byte_ tempera res res drdy_int res nvm_rdy sensor_ sensor sensor gyr gyr gyr	erved erved erved o_data counter_7_0 ature_15_8 ature_7_0 erved erved foc_rdy time_15_8 time_15_8 time_15_8 z_7_0 y_15_8 y_7_0 x_15_8	res	gyr_range r_odr fifo_byte_counter_	10_8
0x0043 0x0042 0x0025 0x0024 0x0022 0x0022 0x0021 0x001F 0x001E 0x001D 0x001B 0x001A 0x0018 0x001A 0x0016 0x0015 0x0015 0x0016 0x0015 0x0014 0x0013 0x0012	GYT_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0 INT_STATUS_1 STATUS SENSORTIME_2 SENSORTIME_1 SENSORTIME_1 SENSORTIME_1 DATA_18 DATA_17 DATA_16 DATA_15	· 0x00 0x28 · 0x00 0x00 0x00 · 0x00 · 0x00 · 0x00 0x0	reserved	ved	reserved gyr reserved ffull_int	bwp res fifo fifo_byte_ tempera tempera res drdy_int res drdy_int res drdy_int res drdy_int res gres drdy_int res gres gres gres gres gres gres gres	erved erved erved o_data counter_7_0 ature_15_8 ature_7_0 erved erved foc_rdy time_15_8 time_15_8 time_15_8 z_7_0 y_15_8 y_7_0 x_15_8 x_7_0	res	gyr_range r_odr fifo_byte_counter_	10_8
0x0043 0x0042 0x0041 0x0025 0x0024 0x0022 0x0021 0x0020 0x001F 0x001D 0x001D 0x001D 0x001B 0x001B 0x001B 0x001B 0x0013	GYT_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0 INT_STATUS_1 STATUS SENSORTIME_2 SENSORTIME_1 SENSORTIME_1 SENSORTIME_1 DATA_18 DATA_17 DATA_16 DATA_15	· 0x00 0x28 · 0x00 0x00 0x00 0x00 · 0x00 0x0	reserved	ved	reserved gyr reserved ffull_int	bwp res fifo_byte_ fifo_byte_ tempera tempera res drdy_int res drdy_int res drdy_int sensor_ sensor sensor sensor sensor gyr_ gyr_ gyr_ gyr_ gyr_ gyr_	erved erved erved o_data counter_7_0 ature_15_8 ature_7_0 erved erved foc_rdy time_15_8 time_15_8 time_15_8 z_7_0 y_15_8 y_7_0 x_15_8	res	gyr_range r_odr fifo_byte_counter_	10_8
0x0043 0x0041 0x0025 0x0024 0x0023 0x0022 0x0021 0x0012 0x001F 0x001E 0x001B 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001A 0x001B 0x001B 0x001A 0x001B 0x001B 0x001A 0x001B	GYT_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_1 INT_STATUS_1 STATUS SENSORTIME_2 SENSORTIME_1 SENSORTIME_0 DATA_19 DATA_19 DATA_18 DATA_17 DATA_16 DATA_15 DATA_14 PMU_STATUS	· 0x00 0x28 · 0x00	reserved	ved fwm_int drdy_gyr	reserved gyr reserved ffull_int reserved	bwp res fifo_byte_ fifo_byte_ tempera tempera res drdy_int res drdy_int res drdy_int sensor_ sensor sensor sensor gyr_ gyr_ gyr_ gyr_ gyr_ gyr_	erved erved erved counter_7_0 ature_15_8 ature_7_0 erved erved erved foc_rdy time_15_8 time_15_8 time_7_0 z_15_8 z_7_0 y_15_8 y_7_0 x_15_8 x_7_0 erved erved erved foc_rdy	reserved	gyr_range r_odr	10_8
0x0043 0x0042 0x0041 0x0025 0x0024 0x0022 0x0021 0x001F 0x001F 0x001F 0x001D 0x001B 0x001A 0x001B 0x001A 0x0013 0x0013 0x0013 0x0012 0x0014 0x0014 0x0013 0x0012 0x0014 0x0013 0x0012 0x0014 0x0013 0x0012 0x0014 0x0013 0x0012 0x0014 0x0012 0x0014 0x0015 0x0015 0x0015 0x0016 0x0016 0x0016 0x0016 0x0017 0x0016 0x0012 0x00012 0x000	GYT_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_0 INT_STATUS_1 STATUS SENSORTIME_2 SENSORTIME_1 SENSORTIME_1 SENSORTIME_1 DATA_19 DATA_19 DATA_16 DATA_15 DATA_14	· 0x00 0x28 · 0x00 0x00 0x00 0x00 · 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 · ·	reserved reserved	ved fwm_int drdy_gyr	reserved gyr reserved ffull_int reserved	bwp res res fifo_byte_ tempera tempera tempera res drdy_int res drdy_int res arres sensor_ sensor sensor sensor gyr gyr gyr gyr gyr gyr gyr res res res res res res res res res re	erved erved erved counter_7_0 ature_15_8 ature_7_0 erved erved erved time_15_8 time_15_8 time_7_0 z_15_8 z_7_0 y_15_8 y_7_0 x_15_8 x_7_0 erved erved erved erved time_23_16 time_7_0 z_15_8 time_7_0 time_7_0 time_7_0 time_7_0 time_7_0 time_7_0 time_7_0 time_15_8 time_7_0 time_7_0 time_15_8 time_7_0 time_15_8 time_7_0 time_15_8 time_7_0 time_15_8 time_7_0 time_15_8 time_7_0 time_15_8 time_7_0 time_15_8 time_7_0 time_15_8 time_7_0 time_15_8 time_15_8 time_7_0 time_15_8 time_15_8 time_15_8 time_15_8 time_15_8 time_17_0 time_15_8	reserved	gyr_range r_odr	10_8 reserved
0x0043 0x0042 0x0025 0x0024 0x0022 0x0022 0x0021 0x001F 0x001D 0x001D 0x001D 0x001B 0x001A 0x0019 0x0018 0x0017 0x0018 0x0017 0x0018 0x0017 0x0015 0x0014 0x0013 0x0012 0x0014 0x0013 0x0012 0x0014 0x0015 0x0015 0x0014 0x0015 0x0015 0x0015 0x0015 0x0014 0x0015 0x0015 0x0014 0x0015 0x0014 0x0015 0x0015 0x0014 0x0015 0x0014 0x0015 0x0015 0x0014 0x0015 0x0014 0x0015 0x0015 0x0014 0x0015 0x0014 0x0015 0x0015 0x0014 0x0015 0x005 0x05 0x	GYT_CONF FIFO_DATA FIFO_LENGTH_1 FIFO_LENGTH_0 TEMPERATURE_1 TEMPERATURE_1 INT_STATUS_1 STATUS SENSORTIME_2 SENSORTIME_1 SENSORTIME_0 DATA_19 DATA_19 DATA_18 DATA_17 DATA_16 DATA_15 DATA_14 PMU_STATUS	· 0x00 0x28 · 0x00 0x00 0x00 0x00 · 0x01 0x00 0x0	reserved reserved	ved fwm_int drdy_gyr	reserved gyr reserved ffull_int reserved	bwp res fifo_byte_ tempera tempera res drdy_int res drdy_int res drdy_int sensor sens	erved erved erved o_data counter_7_0 ature_15_8 ature_7_0 erved erved foc_rdy time_13_16 time_15_8 time_7_0 z_15_8 z_7_0 y_15_8 y_7_0 x_15_8 y_7_0 x_15_8 x_7_0 erved erved erved erved gyr_pmu_ gyr_pmu_	reserved	gyr_range r_odr	10_8 reserved

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.1 Register (0x00) CHIPID

ADDRESS 0x00 RESET 0xD5 MODE R DESCRIPTION The register contains the chip identification code. DEFINITION

Name		Register (0x00) CH	lipid	
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	1	1	0	1
Content	chip_id<7:4>			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	1	0	1
Content	chip id<3:0>			

Bosch Sensortec



3.10.2 Register (0x02) ERR_REG

ADDRESS 0x02 RESET 0b00000000 MODE RW DESCRIPTION Reports sensor error flags. Flags are reset when read.

DEFINITION

Bit	Acronym	Definition
7	Reserved	
6	drop_cmd_err	Dropped command to Register
5	Reserved	
4:1	error_code	0000: no error 0001: reserved 0010: gyr conf error 0010-1111: reserved The first reported error will be shown in the error code.
0	fatal_err	Chip not operable. The only way to clear the flag is a POR or soft-reset.

The register is meant for debug purposes, not for regular verification if an operation completed successfully.

Error flags (bits 4:1) store error event until they are reset by reading the register.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.3 Register (0x03) PMU_STATUS

ADDRESS 0x03 RESET 0b0000-0000 MODE R DESCRIPTION Shows the current power mode of the sensor. DEFINITION

Name		Register (0x03) PM	IU_STATUS	
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	reserved			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	gyr_pmu_status		reserved	

gyr_pmu_status	Gyro Mode
0b00	Suspend
0b01	Normal
0b10	Reserved
0b11	Fast Start-Up

The register reflects the current power modes of all sensor configured as soon as they are effective. If a sensor is enabled, the new sensor mode is reported as soon as the MEMS is up and before digital filters have settled. The settling time depends on filter settings. The power modes may be changed through the Register (0x7E) CMD. In addition, for the gyroscope through register events may be defined, which change the gyro power mode.

In suspend mode the FIFO is not accessible. For read outs of the FIFO the sensor has to be set to normal mode, after read-out the sensor can be set back suspend or fast start-up mode.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.4 Register (0x12-0x17) DATA

ADDRESS 0x12 (6 bytes)

RESET (BYTEWISE) 0b0000-0000

MODE R

DESCRIPTION Register for gyroscope data. DATA[0-5] are treated as atomic update unit with respect to an I^2C/SPI operation. A read operation on the Register (0x12-0x17) DATA resets the appropriate *_drdy bits in

Register (0x1B) STATUS. E.g. when only [0] is read, only *drdy_gyr* is reset.

DEFINITION

DATA[0-5] contains the latest data for the gyroscope GYR_[X-Z].

If the secondary interface (OIS interface, working in SPI protocol) is connected, the OIS data are accessible through Register (0x012-0x17) for OIS_DATA_[X/Y/Z]_[0/1].

DATA[X]	Acronym
X=0	GYR_X<7:0> (LSB)
X=1	GYR_X<15:8> (MSB)
X=2	GYR_Y<7:0> (LSB)
X=3	GYR_Y<15:8> (MSB)
X=4	GYR_Z<7:0> (LSB)
X=5	GYR_Z<15:8> (MSB)

OIS_DATA[AXIS]_[MSB]	Acronym
AXIS = X, MSB = 0	OIS_DATA_X<7:0> (LSB)
AXIS = X, MSB = 1	OIS_DATA _X<15:8> (MSB)
AXIS = Y, MSB = 0	OIS_DATA _Y<7:0> (LSB)
AXIS = Y, MSB = 1	OIS_DATA _Y<15:8> (MSB)
AXIS = Z , MSB = 0	OIS_DATA _Z<7:0> (LSB)
AXIS = Z, MSB = 1	OIS_DATA _Z<15:8> (MSB)

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



3.10.5 Register (0x18-0x1A) SENSORTIME

ADDRESS 0x18 (3 byte) RESET 0x00_0000 MODE R

DESCRIPTION Sensortime is a 24 bit counter available in suspend, low power, and normal mode. The value of the register is shadowed when it is read in a burst read with the data register at the beginning of the operation and the shadowed value is returned. When the FIFO is read the register is shadowed whenever a new frame is read.

DEFINITION The sensortime increments with 39 μ s. The accuracy of the counter is the same as for the output data rate as described in section 2.2. The sensortime is unique for approx. 10 min and 54 seconds. I.e. the register value starts at 0x000000 and wraps after 0xFFFFF has been reached.

Name		Register (0x18-0x2	1A) SENSORTIME [0]
Bit	7	6	5	4
Read/Write	W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	sensor_time<7:4>			
Bit	3	2	1	0
Read/Write	R/W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	sensor_time<3:0>			

Name		Register (0x18-0x1	LA) SENSORTIME [:	1]
Bit	7	6	5	4
Read/Write	W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	sensor_time<15:11>			
Bit	3	2	1	0
Read/Write	R/W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	sensor_time<10:8>			

Name		Register (0x18-0x1	LA) SENSORTIME [2]
Bit	7	6	5	4
Read/Write	W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	sensor_time<23:19>			
Bit	3	2	1	0
Read/Write	R/W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	sensor_time<19:16	>		

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.6 Register (0x1B) STATUS

ADDRESS 0x1B RESET 0b0000000 MODE RW DESCRIPTION Reports sensor status flags. DEFINITION

Bit	Acronym	Definition
7	reserved	
6	drdy_gyr	Data ready (DRDY) for gyroscope in register
5	reserved	
4	nvm_rdy	NVM controller status
3	foc_rdy	FOC completed
2	reserved	
1	gyr_self_test_ok	'0' when gyroscope self-test is running or failed.'1' when gyroscope self-test completed successfully.
0	por_detected	'0' after read, '1' after software reset or power on

drdy_*: gets reset when one byte of the register for sensor * is read. $r_{1} \rightarrow r_{2} \rightarrow r_{2$

nvm_rdy: status of NVM controller: $0' \rightarrow NVM$ write operation is in progress; $1' \rightarrow NVM$ is ready to accept a new write trigger

foc_rdy: Fast offset compensation completed

3.10.7 Register (0x1D) INT_STATUS_1

ADDRESS 0x1D (1 byte) RESET MODE RW DESCRIPTION The register contains interrupt status flags.

DEFINITION

Each flag is associated with a specific interrupt function. It is set when the associated interrupt triggers. The interrupt function associated with a specific status flag must be enabled.

Register (0x1D) INT_STATUS_1		definition
6	fwm_int	Fifo watermark
5	ffull_int	Fifo full
4	drdy_int	Data ready

'0' interrupt inactive, '1' interrupt active.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.8 Register (0x20-0x21) TEMPERATURE

ADDRESS 0x20 (2 byte) RESET 0x8000 (-128°C) MODE R DESCRIPTION Contains the temperature of the sensor DEFINITION

The output word of the 16-bit temperature sensor is only valid if the gyroscope is in normal mode, i.e. gyr pmu status=0b01. The resolution is typically $1/2^9$ K/LSB.

Value	Temperature
0x7FFF	87 – 1/2 ⁹ °C
0x0000	23 °C
•••	
0x8001	-41 + 1/2 ⁹ °C
0x8000	Invalid

If the gyroscope is in normal mode (see Register (0x03) PMU_STATUS), the temperature is updated every 10 ms (+-12%).

Otherwise, when the gyroscope is in suspend mode and TMP power state is in normal mode, the temperature is updated every 1.28s aligned with bit 15 of the Register (0x20-0x21) TEMPERATURE.

Another configuration is that, when the gyroscope is in fast-power up mode, but TMP power state is set to suspend mode, the temperature measurement will also be executed every 1.28s and Register (0x20-0x21) TEMPERATURE will be updated accordingly.

Comparatively, when both the gyroscope and TMP power states are set to suspend mode, the temperature measurement will be disabled and will not be executed.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.9 Register (0x22-0x23) FIFO_LENGTH

ADDRESS 0x22 (2 byte) RESET 0x0000 MODE R DESCRIPTION FIFO data readout register. DEFINITION The register contains FIFO status flags.

Name		Register (0x22-0x2	23) FIFO_LENGTH [01
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	fifo_byte_counter<7	7:4>		
Bit	3	2	1	0
Read/Write	R	– R	- R	R
Reset Value	0	0	0	0
Content	fifo_byte_counter<3:0>			
Name		Register (0x22-0x2	23) FIFO_LENGTH [11
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	Reserved			
Bit	3	2	1	0
Read/Write	R	– R	- R	R
Reset Value		0	0	0

Content reserved fifo_byte_counter<10:8>

fifo_byte_counter: Current fill level of FIFO buffer. This includes the skip frame for a full FIFO. The FIFO counter also includes the number of skipped frames. E.g. after the FIFO is full, the counter may also reach values larger than what can actually be stored in the FIFO. An empty FIFO corresponds to 0x000. The byte counter may be reset by reading out all frames from the FIFO buffer or when the FIFO is reset through the Register (0x7E) CMD. The byte counter is updated, when a complete frame is read or written.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



3.10.10 Register (0x24) FIFO_DATA

ADDRESS 0x24 RESET 0x00 MODE R DESCRIPTION FIFO data readout register. DEFINITION

The FIFO data are organized in frames as described in chapter 3.5.1. The new data flag is preserved. Read burst access must be used, the address will not increment when the read burst reads at the address of FIFO_DATA. When a frame is only partially read out it will be retransmitted (including the header in header mode) at the next readout. New data will only be present after the complete frame has been read.

Name		Register (0x24) FI	FO_DATA	
Bit	7	6	5	4
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	fifo_data<7:4>			
Bit	3	2	1	0
Read/Write	R	R	R	R
Reset Value	0	0	0	0
Content	fifo_data<3:0>			

fifo_data<7:0>: FIFO data readout; data format depends on the setting of Register (0x46-0x47) FIFO_CONFIG.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.11 Register (0x42) GYR_CONF

ADDRESS 0x42

RESET 0b00101000

MODE RW

DESCRIPTION Sets the output data rate, the bandwidth, and the read mode of the gyroscope in the sensor. DEFINITION

Name		Register (0x42) G	(R_CONF	
Bit	7	6	5	4
Read/Write	R/W	R/W	R/W	R/W
Reset Value	0	0	1	0
Content	reserved		gyr_bwp	
Bit	3	2	1	0
Read/Write	R/W	R/W	R/W	R/W
Decet Value	1	0	0	0
Reset Value	T	U	U	U

gyr_odr: defines the output data rate of the gyro in the sensor. This is independent of the power mode setting for the sensor. Settings below = ODR 25 Hz are illegal. The output data rate in Hz is given by 100/2^{8-val(gyr_odr)}.

gyr_odr	Output data rate in Hz
0b0000	Reserved
0b0001	Reserved
0b0010	Reserved
•••	(all reserved)
0b0101	Reserved
0b0110	25
•••	
0b1000	100
•••	
0b1100	1600
0b1101	3200
0b111x	Reserved

gyr_bwp: the gyroscope bandwidth coefficient defines the 3 dB cutoff frequency of the low pass filter for the sensor data. For details see Section 3.4.1.

Configurations without a bandwidth number are illegal settings and will result in an error code in the Register (0x02) ERR_REG.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.12 Register (0x43) GYR_RANGE

ADDRESS 0x43

RESET 0b0000000

MODE RW

DESCRIPTION Defines the BMG250 angular rate measurement range DEFINITION

A measurement range is selected by setting the range bits as follows:

Name		Register (0x43) GYR_RANGE			
Bit	7	6	5	4	
Read/Write	R/W	R/W	R/W	R/W	
Reset Value	0	0	0	0	
Content	Reserved				
0					
Bit	3	2	1	0	
Read/Write	R/W	R/W	R/W	R/W	
Reset Value	0	0	0	0	
Content	reserved	gyr_range<2:0>			

range[2:0]	Full Scale	Resolution
'000'	±2000°/s	16.4 LSB/°/s ⇔ 61.0 m°/s / LSB
'001'	±1000°/s	32.8 LSB/⁰/s ⇔ 30.5 m°/s / LSB
ʻ010'	±500°/s	65.6 LSB/°/s ⇔ 15.3 m°/s / LSB
ʻ011'	±250°/s	131.2 LSB/º/s ⇔ 7.6 mº/s / LSB
ʻ100'	±125°/s	262.4 LSB/º/s ⇔ 3.8m°/s / LSB
'101', ′110′, ′111′	reserved	

gyr_range<2:0>: Angular Rate Range and Resolution.

reserved: write '0'

Changing the range of the gyroscope does not clear the data ready bit in the Register (0x1B) STATUS. It is recommended to read the Register (0x12-0x17) DATA after the range change to remove a stall data ready bit from before the range change.

Bosch Sensortec



3.10.13 Register (0x45) FIFO_DOWNS

ADDRESS 0x45 (1 byte) RESET 0b0000-0000 MODE RW DESCRIPTION Used to configure the down sampling ratios of the data for FIFO. DEFINITION The downsampling ratio for the data are given by 2^{Val(gyr_fifo_downs)}. [gyr]_*fifo_filt_data=0 (1)* selects pre-filtered (filtered) data for the FIFO, respectively.

Name		Register (0x45) FIFO_DOWNS			
Bit	7	6	5	4	
Read/Write	n/a	n/a	n/a	n/a	
Reset Value	0	0	0	0	
Content	reserved				
Bit	3	2	1	0	
Read/Write	R/W	R/W	R/W	R/W	
Reset Value	1	0	0	0	
Content	gyr_fifo_filt_data	gyr_fifo_downs			



3.10.14 Register (0x46-0x47) FIFO_CONFIG

ADDRESS 0x46 (2 bytes)

RESET 0x80 (FIFO_CONFIG[0]), 0x10 (FIFO_CONFIG[1]) MODE RW

DESCRIPTION The Register (0x46-0x47) FIFO_CONFIG is a read/write register and can be used for reading or setting the current FIFO watermark level. This register can also be used for setting the different modes of operation of the FIFO, e.g. which data is going to be stored in it and which format is going to be used (header or headerless mode).

DEFINITION

Name		Register (0x46-0x47) FIFO_CONFIG [0]			
Bit	7	6	5	4	
Read/Write	R/W	R/W	R/W	R/W	
Reset Value	1	0	0	0	
Content	fifo_water_mark <7	fifo_water_mark <7:4>			
Bit	3	2	1	0	
Read/Write	R/W	R/W	R/W	R/W	
Reset Value	0	0	0	0	
Content	fifo water mark <3:0>				

fifo_water_mark <7:0>: *fifo_water_mark* defines the FIFO watermark level. An interrupt will be generated, when the number of entries in the FIFO exceeds *fifo_water_mark*. The unit of *fifo_water_mark* are 4 bytes.

Name		Register (0x4	Register (0x46-0x47) FIFO_CONFIG [1]				
Bit	7	4	3	2	1	0	
Read/W rite	R/W	R/W	R/W	R/W	R/W	R/W	
Reset Value	0	1	0	0	0	0	
Content	fifo_gyr_en	fifo_header _en	fifo_tag_int1 _en	fifo_tag_int2 _en	fifo_time_en	fifo_stop_on _full	

When all the sensors are disabled, the FIFO is disabled and no headers are written. The sensors can be disabled via *fifo_gyr_en* respectively.

fifo_gyr_en: '0' no gyro data are stored in FIFO, '1' gyro data are stored in FIFO (all 3 axes) fifo_header_en: If '1' each frame contains a header as defined in section 3.5.1. If '0' the frame format will be headerless.

fifo_tag_int1_en: 1' ('0') enables (disables) FIFO tag (interrupt)

fifo_tag_int2_en: 1' ('0') enables (disables) FIFO tag (interrupt)

fifo_time_en: '1'('0') returns (does not return) a sensortime frame after the last valid frame when more data are read than valid frames are in the FIFO.

fifo_stop_on_full: stop writing samples into FIFO when FIFO is full.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



Bosch Sensortec

3.10.15 Register (0x51) INT_EN

ADDRESS 0x51 (1 byte) RESET 0b0000-0000 MODE RW DESCRIPTION Controls which interrupt engines are enabled. DEFINITION

Register (0x51) INT_EN [1]	acronym	definition
7		Reserved
6	int_fwm_en	FIFO watermark
5	int_ffull_en	FIFO full
4	int_drdy_en	Data ready

BST-BMG250-DS000-03 | Revision 1.2 | October 2019



3.10.16 Register (0x53) INT_OUT_CTRL

ADDRESS 0x53 RESET 0b0000-0000 MODE RW DESCRIPTION Contains

DESCRIPTION Contains the behavioral configuration (electrical definition of the interrupt pins. DEFINITION

Register (0x53) INT_OUT_CTRL	Acronym	definition
7	int2_output_en	Output enable for INT2 pin, select '0' \rightarrow output disabled, or '1' \rightarrow output enabled
6	int2_od	select '0' \rightarrow push-pull, or '1' \rightarrow open drain behavior for INT2 pin. Only valid if int2_output_en=1.
5	int2_lvl	'0'→active low, or '1'→active high level for INT2 pin. If int2_output_en=1 this applies for interrupt outputs, if int2_output_en=0 this applies to trigger PMU configured in Register (0x6C) PMU_TRIGGER. For tagging a frame in FIFO through fifo_tag_int2_en in Register (0x46-0x47) FIFO_CONFIG the setting of int2_lvl is not relevant.
4	int2_edge_crtl	'1' ('0') is edge (level) triggered for INT2 pin
3	int1_output_en	Output enable for INT1 pin, select '0' \rightarrow output disabled, or '1' \rightarrow output enabled
2	int1_od	select '0' \rightarrow push-pull, or '1' \rightarrow open drain behavior for INT1 pin. Only valid if int1_output_en=1
1	int1_lvl	select '0'→active low, or'1'→active high level for INT1 pin. If int1_output_en=1 this applies for interrupt outputs, if int1_output_en=0 this applies to trigger PMU configured in Register (0x6C) PMU_TRIGGER.
		For tagging in FIFO through fifo_tag_int2_en in Register (0x46-0x47) FIFO_CONFIG the setting of int2_lvl is not relevant.
		For tagging a frame in FIFO through fifo_tag_int1_en in Register (0x46-0x47) FIFO_CONFIG the setting of int1_lvl is not relevant.
0	int1_edge_crtl	'1' ('0') is edge (level) triggered for INT1 pin

int<x>_edge_crtl is only relevant for int<x>_output_en ='1'

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.17 Register (0x54) INT_IN_CTRL

ADDRESS 0x54 RESET 0b0000-0000 MODE RW DESCRIPTION Contains the interrupt input mode selection. DEFINITION Not applied to new data

Register (0x54) INT_IN_CTRL	MODE	Definition
<7:6>	n/a	Reserved
5	RW	Input enable for INT2 pin, select '0' \rightarrow input disabled, or '1' \rightarrow input enabled
4	RW	Input enable for INT1 pin, select '0' \rightarrow input disabled, or '1' \rightarrow input enabled
<3:0>	RW	Reserved

3.10.18 Register (0x56) INT_MAP

ADDRESS 0x56 (1 byte) RESET 0b0000-0000 MODE RW DESCRIPTION Controls which interrupt signals are mapped to the INT1 and INT2 pin. DEFINITION The tables show bit number of a register and meaning of the interrupt pin.

Register (0x56) INT_MAP [1]<7:4>	Interrupt mapped to pin INT1
7	Data ready
6	FIFO watermark
5	FIFO full
4	reserved

Register (0x56) INT_MAP [1]<3:0>	Interrupt mapped to pin INT2
3	Data ready
2	FIFO watermark
1	FIFO full
0	reserved

'1' means mapping is active, '0' means mapping is inactive.

When the external interrupt is mapped to an interrupt pin, all other interrupt mappings are disabled for this interrupt. When an external interrupt is mapped to an interrupt pin, no other interrupts may be enabled.



3.10.19 Register (0x6A) CONF

ADDRESS 0x6A RESET 0b0000000 MODE RW DESCRIPTION Configuration of the sensor DEFINITION

Register (0x6A) CONF Bit	Acronym	Definition
7	Reserved	
6	Reserved	
5	Reserved	
4	Reserved	
3	Reserved	
2	Reserved	
1	nvm_prog_en	Enable NVM programming
0	Reserved	

nvm_prog_en: '1'('0') enables (disables) that the NVM may be programmed

3.10.20 Register (0x6B) IF_CONF

ADDRESS 0x6B RESET 0x00 MODE RW DESCRIPTION Contains settings for the digital interface. DEFINITION

Name		Register (0x6B) IF	CONF	
Bit	7	6	5	4
Read/Write	R/W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	Reserved		if_mode	
Bit	3	2	1	0
Read/Write	R/W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	Reserved			spi3

reserved:	write '0'
spi3:	select '0' \rightarrow 4-wire SPI, or '1' \rightarrow 3-wire SPI mode
if_mode:	00: primary interface: autoconfig / secondary interface: off
	01: Primary interface: I2C / secondary interface:OIS
	10: reserved
	11: reserved

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



3.10.21 Register (0x6C) PMU_TRIGGER

ADDRESS 0x6C RESET 0b0001-0000 MODE RW DESCRIPTION Used to set the trigger conditions to change the gyro power modes DEFINITION The *pmu gyr mode* in Register (0x03) PMU STATUS is updated with each transition triggered.

Name		Register (0x6C) PMU_TRIGGER			
Bit	7	6	5	4	
Read/Write	RW	RW	RW	RW	
Reset Value	0	0	0	0	
Content	Reserved	wakeup_int	gyr_sleep_state	Reserved	
Bit	3	2	1	0	
Read/Write	RW	RW	RW	RW	
Reset Value	0	0	0	0	
Content	gyr_wakeup_trigg er<0>	Reserved	gyr_sleep_trigger		

gyr_wakeup_trigger: when both trigger conditions are enabled, both conditions must be active to trigger the transition.

gyr_wakeup_trigger	INT1 pin
0b0	no
0b1	yes

gyr_sleep_trigger: when more than one trigger condition is enabled, one is sufficient to trigger the transition.

gyr_sleep_trigger	Not INT1 pin	INT2 pin
0b00	no	no
0b01	no	yes
0b10	yes	no
0b11	yes	yes

If gyr_sleep_trigger and gyr_wakeup_trigger are active at the same time, the gyr_wakeup_trigger wins.

The INTx pin takes into account the edge/level triggered setting in the Register (0x53) INT_OUT_CTRL.

gyr_sleep_state:'1'('0') transitions to suspend (fast start-up) statewakeup_int:'1'('0') triggers an interrupt, when a gyro wakeup is triggered

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.22 Register (0x6D) SELF_TEST

ADDRESS 0x6D RESET 0b0000-0000 MODE RW DESCRIPTION Contains the settings for the sensor self-test configuration and trigger. DEFINITION

Name	Register (0x6D) SELF_TEST			
Bit	7	6	5	4
Read/Write	R/W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	Reserved			gyr_self_test_ enable
Bit	3	2	1	0
Read/Write	R/W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	Reserved	Reserved	Reserved	Reserved

reserved: write '0x0'

gyr_self_test_enable: starts self-test of the gyroscope. The result can be obtained from Register (0x1B) STATUS.



3.10.23 Register (0x70) NV_CONF

ADDRESS 0x70 RESET 0x00 MODE RW DESCRIPTION Contains settings for the digital interface. DEFINITION

This register is backed by NVM and loaded from NVM during boot-up.

Name		Register (0x70) NV_CONF			
Bit	7	6	5	4	
Read/Write	R/W	R/W	R/W	R/W	
Reset Value	0	0	0	0	
Content	Reserved				
Bit	3	2	1	0	
Read/Write	R/W	R/W	R/W	R/W	
Reset Value	0	0	0	0	
Content	reserved	i2c_wdt_en	i2c_wdt_sel	spi_en	
reserved: i2c wdt en:	write '0' if I²C interface	mode is selected th	en '1' \rightarrow enable, o	r '0' \rightarrow disables the	

watchdog at the SDI pin (= SDA for I²C)

i2c_wdt_sel:select an I²C watchdog timer period of '0' \rightarrow 1 ms, or '1' \rightarrow 50 msspi_en:disable the I²C and only enable SPI for the interface, when it is in autoconfig
if_mode.

Bosch Sensortec



3.10.24 Register (0x74-0x77) OFFSET

ADDRESS 0x74 (4 byte) RESET Reads from NVM

MODE RW

DESCRIPTION Contains the offset compensation values for the gyroscope DEFINITION

Offset values, which are added to the internal filtered and pre-filtered data for the sensor if the function is enabled with gyr_off_en in the register; the offset values are represented with two's complement notation; the content of the register may be written to the NVM; it is automatically restored from the NVM after each power-on or soft reset; offset values may be written directly by the user; it is generated automatically after triggering the fast offset compensation procedure.

[3]	off_gyr_x<7:0>
[4]	off_gyr_y<7:0>
[5]	off_gyr_z<7:0>

Name		Register (0x77) OFFSET [6]		
Bit	7		5	4
Read/Write	R/W		R/W	R/W
Reset Value	0		0	0
Content	gyr_off_en		off_gyr_z<9:8>	

Bit	3	2	1	0
Read/Write	R/W	R/W	R/W	R/W
Reset Value	0	0	0	0
Content	off_gyr_y<9:8>		off_gyr_x<9:8>	

The offset of the gyroscope off_gyr_[xyz] is a two-complement number in units of 0.12 deg/s* $2^{Val(gyr_range_off)}$, i.e. the resolution may be configured from 0.12 to 0.98 deg/s and the range from 31.25 to 250 deg/s. The configuration is done in the Register (0x70) NV_CONF.

The MSBs for the gyro offset setting are also contained in OFFSET[6]. Aside from this, the register also contains the two bits gyr_off_en, which can be set to 1 in order to enable gyro offset compensation.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



3.10.25 Register (0x7E) CMD

Register (0x7E) CMD ADDRESS 0x7E RESET 0x00 MODE W DESCRIPTION Command register triggers operations like *softreset*, NVM programming, etc. DEFINITION

Name				
Bit	7	6	5	4
Read/Write	W	W	W	W
Reset Value	0	0	0	0
Content	cmd<7:4>		-	
Bit	3	2	1	0
Read/Write	W	W	W	W
Reset Value	0	0	0	0
Content	cmd<3:0>			

During the time a command is executed, it occupies the Register (0x7E) CMD. All new writes to this register are dropped during this time with the exception of the softreset command. If a write to the Register (0x7E) CMD is dropped, drop_cmd_err in Register (0x02) ERR_REG is set.

Table 24: Typical and max. execution times for which the CMD register is occupied

Description	Command code	Typ. time in ms	Max. time in ms
Set PMU mode of gyroscope to normal or fast start-up from suspend mode	0x15; 0x17	55	80

The time it takes to perform a soft reset in conjunction with re-starting a sensor is essentially given by the corresponding PMU command execution time in Table 24 (to be more exact, a system start-up time of 300 μ s has to be added to the times given for PMU switching).

cmd:

start_foc: 0x03

Starts Fast Offset Calibration as configured in Register (0x69) FOC_CONF and stores the result into the Register (0x74-0x77) OFFSET register.

gyr_set_pmu_mode: 0b0001 01nn

Sets the PMU mode for the gyroscope. The encoding for 'nn' is identical to gyr_pmu_status in Register (0x03) PMU_STATUS

<u>0x10</u>	tmp_susp	Sets the PMU mode to suspend.
<u>0x11</u>	tmp_norm	Sets the PMU mode to normal. This command is necessary if user want to program NVM.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



<u>0x14</u>	gyr_susp	Sets the PMU mode for the Gyroscope to suspend.
<u>0x15</u>	gyr_norm	Sets the PMU mode for the Gyroscope to normal.
<u>0x16</u>	gyr_res	Reserved
<u>0x17</u>	gyr_fsup	Sets the PMU mode for the Gyroscope to fast start-up.

prog_nvm: 0xA0

Writes the NVM backed registers into NVM.

fifo_flush: 0xB0

clears all data in the FIFO, does not change the Register (0x46-0x47) FIFO_CONFIG and Register (0x45) FIFO_DOWNS registers.

softreset: 0xB6

triggers a reset including a reboot. Other values are ignored. Following a delay, all user configuration settings are overwritten with their default state or the setting stored in the NVM, wherever applicable. This register is functional in all operation modes.

Bosch Sensortec




4. Digital interfaces

4.1 Interface

Beside the standard primary interface (I²C and SPI configurable), where the sensor acts as a slave to the application processor, BMG250 supports a secondary OIS-Interface (SPI).

In this mode, the secondary interface can be used as an OIS-Interface to be connected to an external OIS-Control unit, where the OIS controller will act as a master and the BMG250 as a slave.

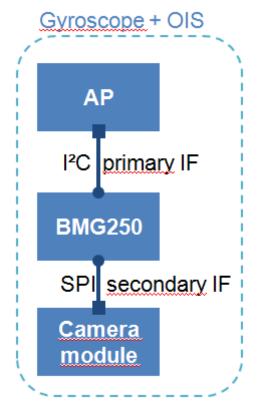

By default, the BMG250 operates in I²C mode. The BMG250 interface can also be configured to operate in a SPI 4-wire configuration. It can be re-configured by software to work in 3-wire mode instead of 4-wire mode.



The mapping for the interface of the BMG250 is given in the following table:

				(Connect	to
Pin#	Name	I/O Type	Description	in SPI4W	in SPI3 W	in I²C
1	SDO	Digital I/O	Serial data output in SPI Address select in I ² C mode	MISO	DNC (float)	SA0 (GND for default addr.)
4	INT1	Digital I/O	Interrupt pin 1 *)	INT1	INT1	INT1
9	INT2	Digital I/O	Interrupt pin 2 *)	INT2	INT2	INT2
12	CSB	Digital in	Chip select for SPI mode / Protocol selection pin	CSB	CSB	VDDIO
13	SCx	Digital in	SCK for SPI serial clock SCL for I ² C serial clock	SCK	SCK	SCL
14	SDx	Digital I/O	SDA serial data I/O in I ² C SDI serial data input in SPI 4W SDA serial data I/O in SPI 3W	MOSI	SISO	SDA

Table 25: Mapping of the interface pins

The following table shows the electrical specifications of the interface pins:

Parameter	Symbol	Condition	Min	Тур	Max	Units
Pull-up Resistance, CSB pin	R_{up}	Internal Pull-up Resistance to VDDIO	75	100	150	kΩ
Input Capacitance	Cin				5	pF
l²C Bus Load Capacitance (max. drive capability)	CI2C_Load				400	pF

4.1.1 Interface I²C/SPI Protocol Selection

The protocol is automatically selected based on the chip select CSB pin behavior after power-up. At reset / power-up, BMG250 is in I²C mode. If CSB is connected to V_{DDIO} during power-up and not changed the sensor interface works in I²C mode. For using I²C, it is recommended to hardwire the CSB line to V_{DDIO} . Since power-on-reset is only executed when, both V_{DD} and V_{DDIO} are established, there is no risk of incorrect protocol detection due to power-up sequence.

If CSB sees a rising edge after power-up, the BMG250 interface switches to SPI until a reset or the next power-up occurs. Therefore, a CSB rising edge is needed before starting the SPI

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



communication. Hence, it is recommended to perform a SPI single read access to the ADDRESS 0x7F before the actual communication is started in order to use the SPI interface.

If toggling of the CSB bit is not possible without data communication, there is in addition the *spi_en* bit in Register (0x70) NV_CONF, which can be used to permanently set the interface to SPI without the need to toggle the CSB pin at every power-up or reset.

4.1.2 SPI Interface

The timing specification for SPI of the BMG250 is given in the following table:

Parameter	Symbol	Condition	Min	Max	Units
Clock Frequency	f _{SPI}	Max. Load on SDI or SDO = $25pF, V_{DDIO} \ge 1.71 V$		10	MHz
		$V_{DDIO} < 1.71V$		7.5	MHz
SCK Low Pulse	t _{SCKL}		48		ns
SCK High Pulse	t _{scкн}		48		ns
SDI Setup Time	t _{SDI_setup}		20		ns
SDI Hold Time	$t_{\text{SDI}_{hold}}$		20		ns
		Load = 30pF, $V_{DDIO} \ge 1.62V$	45		ns
		Load = 25pF, V_{DDIO} < 1.62V	52		ns
SDO Output Delay	t _{sdo_od}	Load = 250pF, $V_{DDIO} > 2.4V$	45		ns
CSB Setup Time	t _{CSB_setup}		20		ns
CSB Hold Time	$t_{CSB_{hold}}$		40		ns
Idle time between write accesses, normal mode	$t_{IDLE_wacc_nm}$		2		μs
Idle time between write accesses, suspend mode	t _{IDLE_wacc_sum}		450		μs


Table 27: SPI timing, valid at $V_{DDIO} \ge 1.71V$, if not stated otherwise


BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



The following figure shows the definition of the SPI timings:

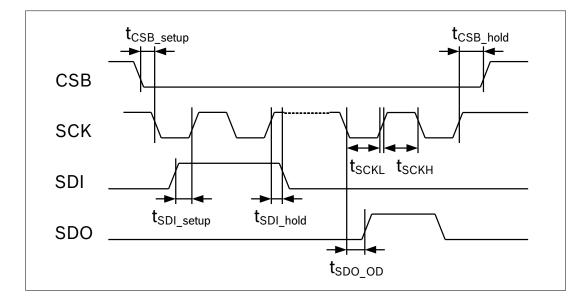



The SPI interface of the BMG250 is compatible with two modes, '00' [CPOL = '0' and CPHA = '0'] and '11' [CPOL = '1' and CPHA = '1']. The automatic selection between '00' and '11' is controlled based on the value of SCK after a falling edge of CSB.

Two configurations of the SPI interface are supported by the BMG250: 4-wire and 3-wire. The same protocol is used by both configurations. The device operates in 4-wire configuration by default. It can be switched to 3-wire configuration by writing '1' to Register (0x6B) IF_CONF *spi3*. Pin SDI is used as the common data pin in 3-wire configuration.

For single byte read as well as write operations, 16-bit protocols are used. The BMG250 also supports multiple-byte read and write operations.

In SPI 4-wire configuration CSB (chip select low active), SCK (serial clock), SDI (serial data input), and SDO (serial data output) pins are used. The communication starts when the CSB is pulled low by the SPI master and stops when CSB is pulled high. SCK is also controlled by SPI master. SDI and SDO are driven at the falling edge of SCK and should be captured at the rising edge of SCK.

The basic write operation waveform for 4-wire configuration is depicted in the following figure. During the entire write cycle SDO remains in high-impedance state.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.

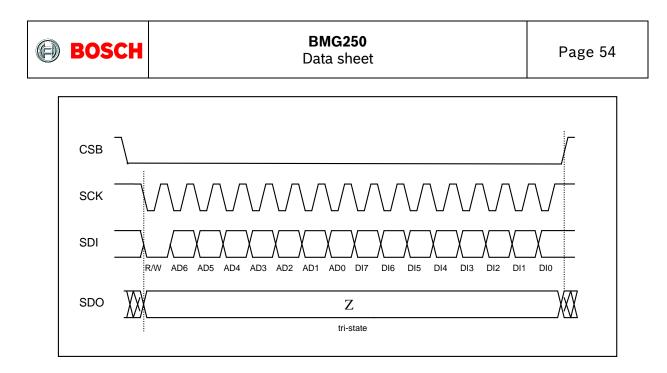


Figure 23: 4-wire basic SPI write sequence (mode '11')

The basic read operation waveform for 4-wire configuration is depicted in the figure below:

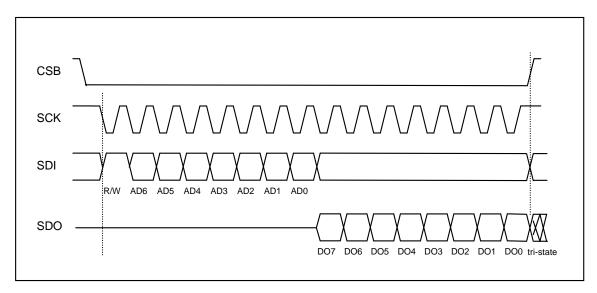


Figure 24: 4-wire basic SPI read sequence (mode '11')

The data bits are used as follows:

Bit0: Read/Write bit. When 0, the data SDI is written into the chip. When 1, the data SDO from the chip is read.

Bit1-7: Address AD(6:0).

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



Bit8-15: when in write mode, these are the data SDI, which will be written into the address. When in read mode, these are the data SDO, which are read from the address.

Multiple read operations are possible by keeping CSB low and continuing the data transfer. Only the first register address has to be written. Addresses are automatically incremented after each read access as long as CSB stays active low.

The principle of multiple read is shown in figure below:

		Control byte	Data byte	Data byte	Data byte				
Start	RW	Register adress (02h)	Data register - adress 02h	Data register - adress 03h	Data register - adress 04h	Stop			
CSB = 0	1					CSB = 1			

Figure 25: SPI multiple read

In SPI 3-wire configuration CSB (chip select low active), SCK (serial clock), and SDI (serial data input and output) pins are used. While SCK is high, the communication starts when the CSB is pulled low by the SPI master and stops when CSB is pulled high. SCK is also controlled by SPI master. SDI is driven (when used as input of the device) at the falling edge of SCK and should be captured (when used as the output of the device) at the rising edge of SCK.

The protocol as such is the same in 3-wire configuration as it is in 4-wire configuration. The basic operation wave-form (read or write access) for 3-wire configuration is depicted in the figure below:

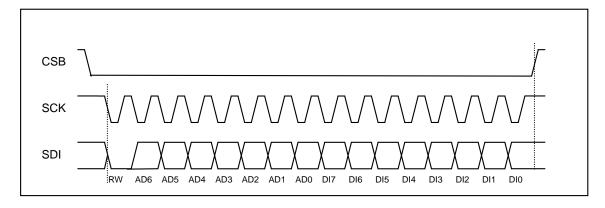


Figure 26: 3-wire basic SPI read or write sequence (mode '11')

4.1.3 I²C Interface

The I²C bus uses SCL (= SCx pin, serial clock) and SDA (= SDx pin, serial data input and output) signal lines. Both lines are connected to V_{DDIO} externally via pull-up resistors so that they are pulled high when the bus is free.

The I²C addresses are identical to BMG160. The default I²C address of the device is 0b1101000 (0x68). It is used if the SDO pin is pulled to 'GND'. The alternative address 0b1101001 (0x69) is selected by pulling the SDO pin to 'VDDIO'.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



The I²C interface of the BMG250 is compatible with the I²C Specification UM10204 Rev. 03 (19 June 2007), available at http://www.nxp.com. The BMG250 supports I²C standard mode and fast mode, only 7-bit address mode is supported. For V_{DDIO} = 1.2V to 1.62 V the guaranteed voltage output levels are slightly relaxed as described in Table 1 of the electrical specification section.

BMG250 also supports an **extended I²C mode** that allows using clock frequencies up to 1 MHz. In this mode all timings of the fast mode apply and it additionally supports clock frequencies up to 1MHz.

The timing specification for I²C of the BMG250 is given in the following table:

Parameter	Symbol	Condition	Min	Max	Units
Clock Frequency	f _{SCL}			1000	kHz
SCL Low Period	t _{LOW}		1.3		
SCL High Period	t HIGH		0.6		
SDA Setup Time	t sudat		0.1		
SDA Hold Time	t _{hddat}		0.0		
Setup Time for a repeated Start Condition	t _{susta}		0.6		
Hold Time for a Start Condition	t hdsta		0.6		
Setup Time for a Stop Condition	t _{susto}		0.6		μs
Time before a new		suspend mode	400		·
Transmission can start	t BUF	normal mode	1.3		
Idle time between		suspend mode	400		
write accesses, normal mode, suspend mode	t _{IDLE_wacc_n} m	normal mode	1.3		
Idle time between write accesses, suspend mode, suspend mode	t _{IDLE_wacc_s} um		400		

Table 28: I²C timings

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec



The figure below shows the definition of the I²C timings given in Table 28:

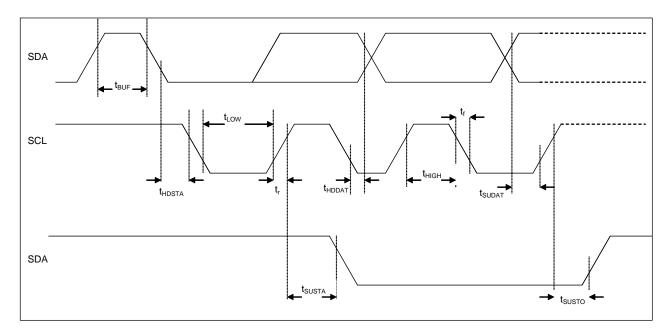


Figure 27: I²C timing diagram

The I²C protocol works as follows:

START: Data transmission on the bus begins with a high to low transition on the SDA line while SCL is held high (start condition (S) indicated by I²C bus master). Once the START signal is transferred by the master, the bus is considered busy.

STOP: Each data transfer should be terminated by a Stop signal (P) generated by master. The STOP condition is a low to HIGH transition on SDA line while SCL is held high.

ACKS: Each byte of data transferred must be acknowledged. It is indicated by an acknowledge bit sent by the receiver. The transmitter must release the SDA line (no pull down) during the acknowledge pulse while the receiver must then pull the SDA line low so that it remains stable low during the high period of the acknowledge clock cycle.

In the following diagrams these abbreviations are used:

S	Start
Р	Stop
ACKS	Acknowledge by slave
ACKM	Acknowledge by master
NACKM	Not acknowledge by master
RW	Read / Write

A START immediately followed by a STOP (without SCL toggling from 'VDDIO' to 'GND') is not supported. If such a combination occurs, the STOP is not recognized by the device.

BST-BMG250-DS000-03 | Revision 1.2 | October 2019



I²C write access:

I²C write access can be used to write a data byte in one sequence.

The sequence begins with start condition generated by the master, followed by 7 bits slave address and a write bit (RW = 0). The slave sends an acknowledge bit (ACKS = 0) and releases the bus. Then the master sends the one byte register address. The slave again acknowledges the transmission and waits for the 8 bits of data which shall be written to the specified register address. After the slave acknowledges the data byte, the master generates a stop signal and terminates the writing protocol.

Example of an I²C write access:



Figure 28: I²C write

I²C read access:

I²C read access also can be used to read one or multiple data bytes in one sequence.

A read sequence consists of a one-byte I^2C write phase followed by the I^2C read phase. The two parts of the transmission must be separated by a repeated start condition (S). The I^2C write phase addresses the slave and sends the register address to be read. After slave acknowledges the transmission, the master generates again a start condition and sends the slave address together with a read bit (RW = 1). Then the master releases the bus and waits for the data bytes to be read out from slave. After each data byte the master has to generate an acknowledge bit (ACKS = 0) to enable further data transfer. A NACKM (ACKS = 1) from the master stops the data being transferred from the slave. The slave releases the bus so that the master can generate a STOP condition and terminate the transmission.

The register address is automatically incremented and, therefore, more than one byte can be sequentially read out. Once a new data read transmission starts, the start address will be set to the register address specified since the latest I²C write command. By default the start address is set at 0x00. In this way repetitive multi-bytes reads from the same starting address are possible.

In order to prevent the I²C slave of the device to lock-up the I²C bus, a watchdog timer (WDT) is implemented. The WDT observes internal I²C signals and resets the I²C interface if the bus is locked-up by the BMG250. The activity and the timer period of the WDT can be configured through the bits $i2c_wdt_en$ and $i2c_wdt_sel$ at Register (0x70) NV_CONF.

Writing '1' ('0') to Register (0x70) NV_CONF *i*2*c*_*wdt*_*en* activates (de-activates) the WDT. Writing '0' ('1') to Register (0x70) NV_CONF *i*2*c*_*wdt*_*en* selects a timer period of 1 ms (50 ms).

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



Example of an I²C read access (reading gyro data):

													Contro	ol byte	9			
Start		Slave Adress						RW	ACKS	dummy		Re	egister	adres	ss (0x0)2)		ACKS
s	1	1	0	1	0	0	0	0		х	0	0	0	1	1	0	0	

												Data byte							Data byte										
Start			SI	ave A	٨dre	ess			RW	ACKS		Read Data (0x02)				ACKM	M Read Data (0x03)							АСКМ					
Sr	1	 1	0	1		0	0	0	 		x	х	X	x	х	х	х	Х		х	x	х	x	x	х	x	x		
											Data byte								Data	byte				I					
											Read Data (0x04)				ACKM			Re	ead Da	ata (0x	(05)			АСКМ					
											х	х	X X	x	х	х	х	х		х	x	х	x	x	x	x	X X		
										1				Data	byte				1				Data	byte				<u> </u>	
											Read Data (0x06)				АСКМ			Re	ead Da	ata (0x	(07)			NACK	Sto				
											х	х	x	X X	х	х	x	х		х	x	х	×	X X	х	×	×		Ρ

Figure 29: I²C multiple read

4.1.4 SPI and I²C Access Restrictions

In order to allow for the correct internal synchronization of data written to the BMG250, certain access restrictions apply for consecutive write accesses or a write/read sequence through the SPI as well as I^2C interface. The required waiting period depends on whether the device is operating in normal mode or other modes.

As illustrated in the figure below, an interface idle time of at least 2 μ s is required following a write operation when the device operates in normal mode. In suspend mode an interface idle time of least 450 μ s is required¹.




Figure 30: Post-Write Access Timing Constraints

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

¹ The times are preliminary and need to be verified.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



4.2 Secondary Interface

OIS Interface (SPI) for connecting to a OIS control unit:

Secondary interface for OIS application can be enabled by writing '01' to Register (0x6B) IF_CONF *if_mode*.

In this case the secondary interface is used as a SPI interface where an external control unit is connected as a master to BMG250. The external control unit can be e.g. an OIS controller.

If secondary interface is used, primary interface is limited to I²C mode.

The mapping for the secondary interface of the BMG250 is given in the following table:

Pin#	Name	l/O Type	Description	Connect	to (second	lary IF)
				in SPI4W	in SPI3W	in l²C
10	OSCB	Digital I/O	Secondary OIS interface	CSB	CSB	DNC
11	OSDO	Digital I/O	Secondary OIS interface	MISO	DNC	DNC

Table 29: Mapping of the secondary interface pins

4.2.1 Camera module connected to secondary interface for OIS

BMG250 supports specific optical image stabilization (OIS) applications with a dedicated interface. This interface is used for direct access to pre-filtered gyroscope data with minimum latency. Pre-filtered gyroscope data is available at output data rate (ODR) of 6.4 kHz and can be read out via OIS SPI interface at 10MHz maximum speed.

The OIS SPI interface supports 3-wire SPI as well as 4-wire SPI.

The timings of the secondary SPI interface are the same as for the primary SPI interface, see chapter 4.1.2. The connection diagrams are depicted in chapter.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



5. Pin-out and Connection diagrams

5.1 Pin-out BMG250

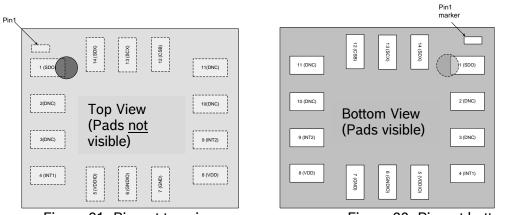


Figure 31: Pin-out top view

Figure 32: Pin-out bottom view

Table 30: BMG250 Pin-out and pin connections are described in the table below

Pin#	Name	l/O Type	Description
1	SDO	Digital I/O	Serial data output in SPI Address select in I ² C mode
2	ASDx	Digital I/O	MOSI serial data input in SPI 4W 2 ^{ndary} Interface SISO serial data I/O in SPI 3W 2 ^{ndary} Interface Other configuration: Do not connect (or GND)
3	ASCx	Digital in	SPI serial clock for 2 ^{ndary} Interface Other configuration: Do not connect (or GND)
4	INT1	Digital I/O	Interrupt pin 1 *)
5	VDDIO	Supply	Digital I/O supply voltage (1.2 3.6V)
6	GNDIO	Ground	Ground for I/O
7	GND	Ground	Ground for digital & analog
8	VDD	Supply	Power supply analog & digital domain (1.62V – 3.6V)
9	INT2	Digital I/O	Interrupt pin 2 *)
10	OSCB	Digital I/O	CSB in SPI as 2 ^{ndary} Interface Other configuration: Do not connect (or GND)
11	OSCO	Digital I/O	MISO in SPI 4W 2 ^{ndary} Interface Other configuration: Do not connect (or GND)
12	CSB	Digital in	Chip select for SPI mode / Protocol selection pin
13	SCx	Digital in	SCK for SPI serial clock SCL for I ² C serial clock
14	SDx	Digital I/O	SDA serial data I/O in I ² C MOSI serial data input in SPI 4W (without 2 ^{ndary} Interface) SISO serial data I/O in SPI 3W (without 2 ^{ndary} Interface)

*) If INT1 and/or INT2 are not used, please do not connect them (DNC)

NOTE: all pins must be soldered to the PCB even if they are electrically not connected


BST-BMG250-DS000-03 | Revision 1.2 | October 2019


Bosch Sensortec



5.2 Connection diagrams

5.2.1 I²C interface without using secondary OIS interface

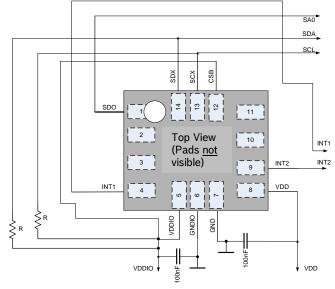



5.2.2 SPI 3-wire interface without using secondary OIS interface

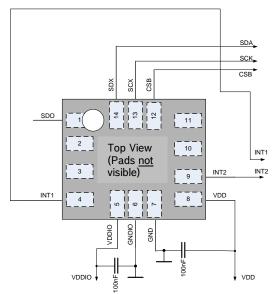


Figure 34: Only SPI 3-wire as interface

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



5.2.3 SPI 4-wire interface without using secondary OIS interface


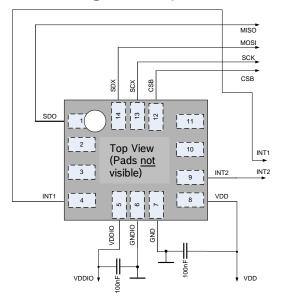


Figure 35: Only SPI 4-wire as interface

5.2.4 Primary I²C and secondary 4-wire SPI as OIS interface



[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.

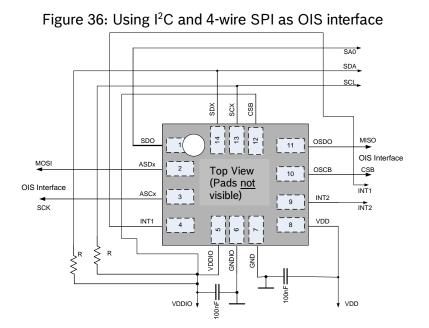

5.2.5 Primary I²C and secondary 3-wire SPI as OIS interface

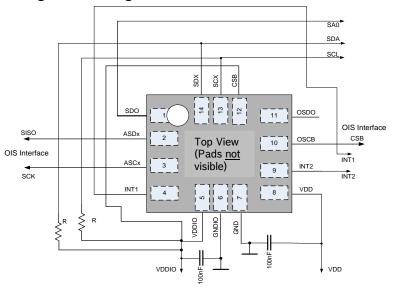


Figure 37: Using I²C and 3-wire SPI as OIS interface

Bosch Sensortec




6. Package

6.1 Outline Dimensions

The package dimension is LGA 2.5mm x 3.0mm x 0.83mm.

Unit of the following drawing is mm. Note: Unless otherwise specified tolerance = decimal ± 0.05 mm.

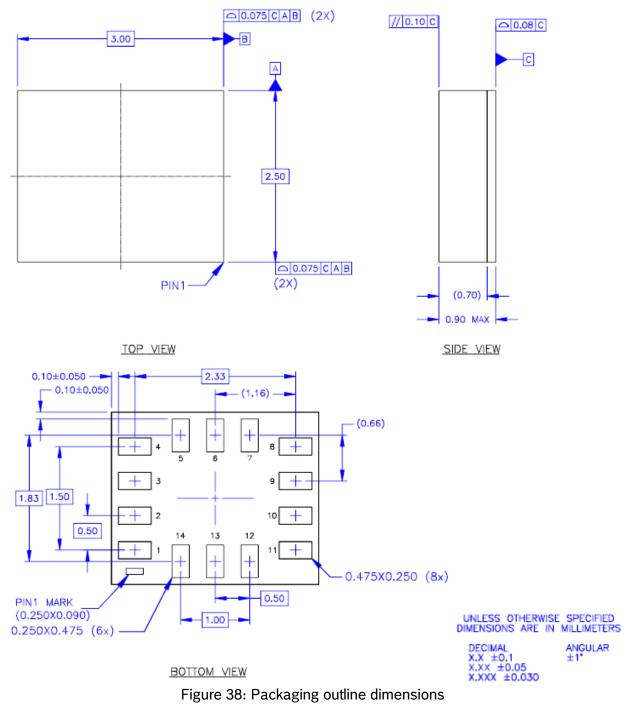



Note: Pin1 marker is internally connected to Pin1. It must not be connected to a different signal than Pin1.

6.2 Sensing axes orientation

If the sensor is rotated in the indicated directions, the corresponding channels of the device will deliver a positive yaw rate signal. If the sensor is at rest without any rotation the output of the corresponding gyroscope channel will be "zero" (static acceleration).

Example: If the sensor would be placed on a seconds hand of a watch with the arrows of the following Fig. pointing towards the watch's dial, the output signals are:

- + 6°/sec for the Ω_X GYR channel
- + 6°/sec for the Ω_Y GYR channel
- + 6°/sec for the Ω_Z GYR channel


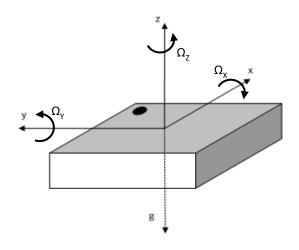


Figure 39: definition of sensing axes orientation

For reference the figure below shows the Android device orientation with an integrated BMG250.

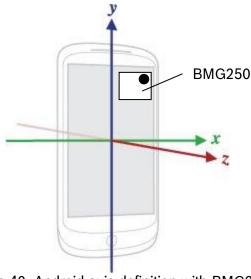

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



6.3 Landing pattern recommendation

The following landing pad recommendation is given for maximum stability of the solder connections.

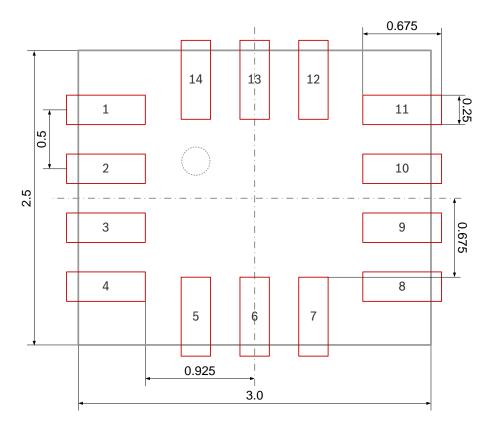


Figure 41: Landing pattern recommendation for BMG250

Note: Pin1 marker is internally connected to Pin1. It must not be connected to a different signal than Pin1.

The size of the landing pads may be further reduced in order to minimize solder-stress induced effects if sufficient control over the soldering process is given. Please contact your sales representative for further details.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



6.4 Marking

6.4.1 Mass production marking

Table 31: Marking of mass samples

La	beling	Name	Symbol	Remark
		Counter ID	ССС	3 alphanumeric digits, variable to generate trace-code
	CCC	First letter of second row	W	Product identifier W, denoting BMG250
	Wx	Second letter of second row	x	Internal use – various digits possible
	•	Pin 1 identifier	•	

6.4.2 Engineering samples

Table 32: Marking	of	engineering samples	5
-------------------	----	---------------------	---

Labeling		Name	Symbol	Remark
	VLE CC	Internal ID	VLE	Various digits – internal "E" denotes engineering status
		Second row	СС	CC - internal revision ID
	•	Pin 1 identifier	•	

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



6.5 Soldering guidelines

The moisture sensitivity level of the BMG250 sensors corresponds to JEDEC Level 1, see also

- IPC/JEDEC J-STD-020C "Joint Industry Standard: Moisture/Reflow Sensitivity Classification for non-hermetic Solid State Surface Mount Devices"
- IPC/JEDEC J-STD-033A "Joint Industry Standard: Handling, Packing, Shipping and Use of Moisture/Reflow Sensitive Surface Mount Devices"

The sensor fulfils the lead-free soldering requirements of the above-mentioned IPC/JEDEC standard, i.e. reflow soldering with a peak temperature up to 260°C.

Profile Feature	Pb-Free Assembly		
Average Ramp-Up Rate (Ts _{max} to Tp)	3° C/second max.		
Preheat – Temperature Min (Ts _{min}) – Temperature Max (Ts _{max}) – Time (ts _{min} to ts _{max})	150 °C 200 °C 60-180 seconds		
Time maintained above: – Temperature (T _L) – Time (t _L)	217 °C 60-150 seconds		
Peak/Classification Temperature (Tp)	260 °C		
Time within 5 °C of actual Peak Temperature (tp)	20-40 seconds		
Ramp-Down Rate	6 °C/second max.		
Time 25 °C to Peak Temperature	8 minutes max.		

Note 1: All temperatures refer to topside of the package, measured on the package body surface.

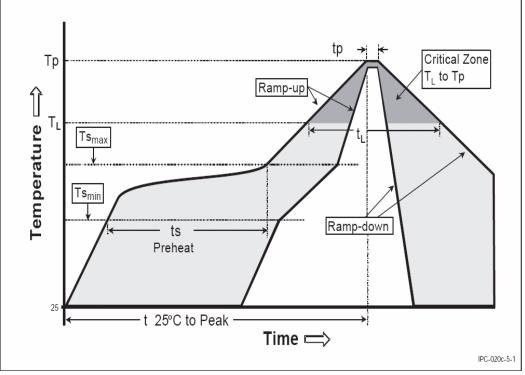


Figure 42: Soldering profile

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



6.6 Handling instructions

Micromechanical sensors are designed to sense rotations with high accuracy even at low turn rates and contain highly sensitive structures inside the sensor element. The MEMS sensor can tolerate mechanical shocks up to several thousand g's. However, these limits might be exceeded in conditions with extreme shock loads such as e.g. hammer blow on or next to the sensor, dropping of the sensor onto hard surfaces etc.


We recommend to avoid g-forces beyond the specified limits during transport, handling and mounting of the sensors in a defined and qualified installation process.

This device has built-in protections against high electrostatic discharges or electric fields (e.g. 2kV HBM); however, anti-static precautions should be taken as for any other CMOS component. Unless otherwise specified, proper operation can only occur when all terminal voltages are kept within the supply voltage range. Unused inputs must always be tied to a defined logic voltage level.



6.7 Tape and reel specification

The BMG250 is shipped in a standard cardboard box. The box dimension for 1 reel is: $L \times W \times H = 35$ cm $\times 35$ cm $\times 6$ cm. BMG250 quantity: 5,000pcs per reel, please handle with care.

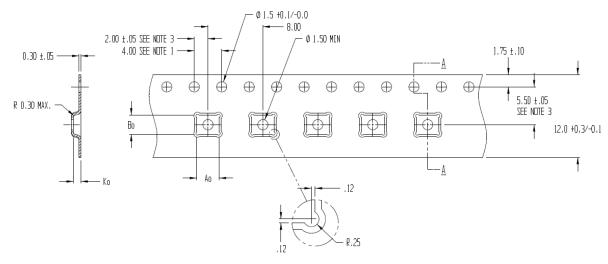

A₀ = 3.30, B₀ = 2.80, K₀ = 1.10

Note:

- Tolerances unless noted: ±0.1
- Sprocket hole pitch cumulative tolerance ±0.1
- Camber in compliance with EIA481
- Pocket position relative to sprocket hole measured as true position of pocket, not pocket hole
- A0 and B0 are calculated on a plane at a distance "R" above the bottom of the pocket

Figure 43: Tape and reel dimensions in mm

6.7.1 Orientation within the reel

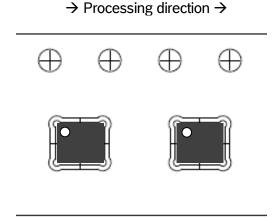


Figure 44: Orientation of the BMG250 devices relative to the tape

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



6.8 Environmental safety

The BMG250 sensor meets the requirements of the EC restriction of hazardous substances (RoHS) directive, see also:

Directive 2002/95/EC of the European Parliament and of the Council of 27 January 2003 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

6.8.1 Halogen content

The BMG250 is halogen-free. For more details on the analysis results please contact your Bosch Sensortec representative.

6.8.2 Multiple sourcing

Within the scope of Bosch Sensortec's ambition to improve its products and secure the mass product supply, Bosch Sensortec employs multiple sources in the supply chain.

While Bosch Sensortec takes care that all of technical parameters are described above are 100% identical for all sources, there can be differences in device marking and bar code labeling.

However, as secured by the extensive product qualification process of Bosch Sensortec, this has no impact to the usage or to the quality of the product.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.



7. Legal disclaimer

7.1 Engineering samples

Engineering Samples are marked with an asterisk (*) or (e). Samples may vary from the valid technical specifications of the product series contained in this data sheet. They are therefore not intended or fit for resale to third parties or for use in end products. Their sole purpose is internal client testing. The testing of an engineering sample may in no way replace the testing of a product series. Bosch Sensortec assumes no liability for the use of engineering samples. The Purchaser shall indemnify Bosch Sensortec from all claims arising from the use of engineering samples.

7.2 Product use

Bosch Sensortec products are developed for the consumer goods industry. They may only be used within the parameters of this product data sheet. They are not fit for use in life-sustaining or safety-critical systems. Safety-critical systems are those for which a malfunction is expected to lead to bodily harm, death or severe property damage. In addition, they shall not be used directly or indirectly for military purposes (including but not limited to nuclear, chemical or biological proliferation of weapons or development of missile technology), nuclear power, deep sea or space applications (including but not limited to satellite technology).

The resale and/or use of Bosch Sensortec products are at the purchaser's own risk and his own responsibility. The examination of fitness for the intended use is the sole responsibility of the purchaser.

The purchaser shall indemnify Bosch Sensortec from all third party claims arising from any product use not covered by the parameters of this product data sheet or not approved by Bosch Sensortec and reimburse Bosch Sensortec for all costs in connection with such claims.

The purchaser accepts the responsibility to monitor the market for the purchased products, particularly with regard to product safety, and to inform Bosch Sensortec without delay of all safety-critical incidents.

7.3 Application examples and hints

With respect to any examples or hints given herein, any typical values stated herein and/or any information regarding the application of the device, Bosch Sensortec hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights or copyrights of any third party. The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics. They are provided for illustrative purposes only and no evaluation regarding infringement of intellectual property rights or regarding functionality, performance or error has been made.

[©] Bosch Sensortec GmbH reserves all rights even in the event of industrial property rights. We reserve all rights of disposal such as copying and passing on to third parties. BOSCH and the symbol are registered trademarks of Robert Bosch GmbH, Germany. Note: Specifications within this document are preliminary and subject to change without notice.

8. Document history and modifications

Rev. No	ev. No Chapter Description of modification/changes		Date
1.0		Initial release	Sept 2015
1.1		Update secondary Interface	May 2016
1.2		Final Release	July 2016
1.3	7	Update of legal disclaimer	Oct 2019

Bosch Sensortec GmbH Gerhard-Kindler-Straße 9 72770 Reutlingen / Germany

contact@bosch-sensortec.com www.bosch-sensortec.com

Modifications reserved | Printed in Germany Preliminary - specifications subject to change without notice Document number: BST-BMG250-DS000-03 Revision_1.3_102019

BST-BMG250-DS000-03 | Revision 1.2 | October 2019

Bosch Sensortec

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Gyroscopes category:

Click to view products by Bosch manufacturer:

Other Similar products are found below :

ICG-1020S LY510ALHTR LPY530AL ADIS16136AMLZ ADIS16260BCCZ ADIS16265BCCZ ADXRS290BCEZ ADXRS450BEYZ ADXRS620BBGZ ADXRS623BBGZ ADXRS623BBGZ-RL ADXRS646BBGZ ADXRS646TBGZ-EP ADXRS649BBGZ ADXRS652BBGZ ADXRS800WBRGZ SCC1300-D02-05 SCC1300-D04-05 ADXRS620BBGZ-RL L20G20ISTR ISZ-2510 I3G4250DTR L2G2ISTR LPR4150AL LPY510AL GYPR02300 GYPR02300LD GYPR03300 IAM-20380