## Evaluates: MAX17544 in 5V Output-Voltage Application

#### **General Description**

The MAX17544 5V output evaluation kit (EV kit) provides a proven design to evaluate the MAX17544 high-voltage, high-efficiency, synchronous step-down DC-DC converter. The EV kit is preset for 5V output at load currents up to 3.5A and features a 500kHz switching frequency for optimum efficiency and component size. The EV kit features adjustable input undervoltage lockout, adjustable soft-start, open-drain RESET signal, and external frequency synchronization.

Ordering Information appears at end of data sheet.

#### **Features**

- Operates from a 7.5V to 42V Input Supply
- 5V Output Voltage
- Up to 3.5A Output Current
- 500kHz Switching Frequency
- Enable/UVLO Input, Resistor-Programmable UVLO Threshold
- Adjustable Soft-Start Time
- MODE Pin to Select Among PWM, PFM, or DCM Modes
- Open-Drain RESET Output
- External Frequency Synchronization
- Overcurrent and Overtemperature Protection
- Proven PCB Layout
- Fully Assembled and Tested

DESIGNATION	QTY	DESCRIPTION	
L1	1	10µH, 5.5A inductor TDK SLF12575T-100M5R4-H Taiyo Yuden NS10165T100MNA	
R1	1	3.32MΩ ±1% resistor (0402)	
R2	1	604kΩ ±1% resistor (0402)	
R3	1	100kΩ ±1% resistor (0402)	
R4	1	22.1kΩ ±1% resistor (0402)	
R5	0	Not installed, resistor (0402)	
R6	1	10kΩ ±1% resistor (0402)	
TP1, TP2	2	Test pads	
U1	1	Buck converter (20 TQFN-EP*) Maxim MAX17544ATP+	
	3	Shunts (JU1–JU3)	
	1	PCB: MAX17544 – 5V OUTPUT EVKIT	

#### \*EP = Exposed pad.

**Note:** C7, R1, and R2 are optional components; R1 and R2 are not needed if the EN/UVLO pin is permanently connected to VIN. The electrolytic capacitor (C7) is required only when the VIN power supply is situated far from the MAX17544-based circuit. When R5 is open, the device switches at 500kHz switching frequency. The SLF12575 inductor has been used to prepare the EV kit test report.



### **Component List**

DESIGNATION	QTY	DESCRIPTION
C1, C8	2	2.2µF ±10%, 50V X7R ceramic capacitors (1210) TDK C3225X7R1H225K
C2	1	2.2µF ±10%, 10V X7R ceramic capacitor (0603) Murata GRM188R71A225K
C3	1	12000pF ±10%, 16V X7R ceramic capacitor (0402) Murata GRM155R71C123K
C4, C9	2	22µF ±10%, 10V X7R ceramic capacitors (1210) Murata GRM32ER71A226K
C5	1	0.1µF ±10%, 16V X7R ceramic capacitor (0402) Murata GRM155R71C104K
C6	0	Not installed, ceramic capacitor (0402)
C7	1	47μF, 50V aluminum electrolytic capacitor (D = 10mm) Panasonic EEEFK1H470XP
JU1–JU3	3	3-pin headers

## Evaluates: MAX17544 in 5V Output-Voltage Application

### **Component Suppliers**

SUPPLIER	PHONE	WEBSITE
Murata Americas	800-241-6574	www.murataamericas.com
Panasonic Corp.	800-344-2112	www.panasonic.com
Taiyo Yuden	800-348-2496	www.t-yuden.com
TDK Corporation	847-699-2299	www.tdk.com

Note: Indicate that you are using the MAX17544 when contacting these component suppliers.

### **Quick Start**

#### **Recommended Equipment**

- MAX17544 5V output EV kit
- 7.5V to 42V, 7A DC input power supply
- Load capable of sinking 3.5A
- Digital voltmeter (DVM)

#### Procedure

The EV kit is fully assembled and tested. Follow the steps below to verify the board operation. **Caution: Do not turn on power supply until all connections are completed.** 

- 1) Set the power supply at a voltage between 7.5V and 42V. Disable the power supply.
- 2) Connect the positive terminal of the power supply to the VIN PCB pad and the negative terminal to the nearest PGND PCB pad. Connect the positive terminal of the 3.5A load to the VOUT PCB pad and the negative terminal to the nearest PGND PCB pad.
- Connect the DVM across the VOUT PCB pad and the nearest PGND PCB pad.
- 4) Verify that shunts are installed across pins 1-2 on jumper JU1 and pins 2-3 on jumper JU3 (see <u>Tables 1</u> and <u>3</u> for details).
- 5) Select the shunt position on jumper JU2 according to the intended mode of operation (see <u>Table 2</u> for details).
- 6) Turn on the DC power supply.
- 7) Enable the load.
- 8) Verify that the DVM displays 5V.

### **Detailed Description**

The MAX17544 5V output EV kit provides a proven design to evaluate the MAX17544 high-voltage, highefficiency, synchronous step-down DC-DC converter. The EV kit is preset for 5V output from 7.5V to 42V input at load currents up to 3.5A and features a 500kHz switching frequency for optimum efficiency and component size.

The EV kit includes an EN/UVLO PCB pad and jumper JU1 to enable the output at a desired input voltage. The SYNC PCB pad and jumper JU3 allow an external clock to synchronize the device. Jumper JU2 allows the selection of a particular mode of operation based on light-load performance requirements. An additional RESET PCB pad is available for monitoring whether the converter output is in regulation.

#### Soft-Start Input (SS)

The device utilizes an adjustable soft-start function to limit inrush current during startup. The soft-start time is adjusted by the value of C3, the external capacitor from SS to GND. The selected output capacitance ( $C_{SEL}$ ) and the output voltage ( $V_{OUT}$ ) determine the minimum value of C3, as shown by the following equation:

#### $C3 \ge 28 \times 10^{-6} \times C_{SEL} \times V_{OUT}$

The soft-start time  $\left(t_{SS}\right)$  is related to C3 by the following equation:

#### $t_{SS} = C3/(5.55 \times 10^{-6})$

For example, to program a 2.2mS soft-start time, C3 should be 12nF.

## Evaluates: MAX17544 in 5V Output-Voltage Application

#### Regulator Enable/Undervoltage-Lockout Level (EN/UVLO)

The device offers an adjustable input undervoltagelockout level. For normal operation, a shunt should be installed across pins 1-2 on jumper JU1. To disable the output, install a shunt across pins 2-3 on JU1 and the EN/ UVLO pin is pulled to GND. See <u>Table 1</u> for JU1 settings.

Set the voltage at which the device turns on with the resistive voltage-divider R1/R2 connected from VIN\_ to SGND. Connect the center node of the divider to EN/UVLO.

Choose R1 to be  $3.32 M\Omega$  and then calculate R2 as follows:

$$R2 = \frac{R1 \times 1.215}{(V_{INU} - 1.215)}$$

where  $V_{\mbox{\rm INU}}$  is the voltage at which the device is required to turn on.

#### **MODE Selection (MODE)**

The device's MODE pin can be used to select among PWM, PFM, or DCM modes of operation. The logic state of the MODE pin is latched when VCC and EN/UVLO voltages exceed the respective UVLO rising thresholds and all internal voltages are ready to allow LX switching. State changes on the MODE pin are ignored during normal operation. Refer to the MAX17544 IC data sheet for more information on PWM, PFM, and DCM modes of operation.

Table 2 shows EV kit jumper settings that can be used to configure the desired mode of operation.

## Table 1. Regulator Enable (EN/UVLO)Description (JU1)

SHUNT POSITION	EN/UVLO PIN	MAX17544_OUTPUT
1-2*	Connected to VIN	Enabled
Not installed	Connected to the center node of resistor-divider R1 and R2	Enabled, UVLO level set through the R1 and R2 resistors
2-3	Connected to SGND	Disabled

#### **External Clock Synchronization (SYNC)**

The internal oscillator of the device can be synchronized to an external clock signal on the SYNC pin. The external synchronization clock frequency must be between  $1.1f_{SW}$  and  $1.4f_{SW}$ , where  $f_{SW}$  is the frequency of operation set by R5. The minimum external clock high pulse width should be greater than 50ns and the minimum external clock low pulse width should be greater than 160ns.

#### Table 2. MODE Description (JU2)

SHUNT POSITION	MODE PIN	MAX17544_MODE
Not installed*	Unconnected	PFM mode of operation
1-2	Connected to SGND	PWM mode of operation
2-3	Connected to VCC	DCM mode of operation

### Table 3. SYNC Description (JU3)

SHUNT POSITION	SYNC PIN	MAX17544_SYNC
1-2	Connected to test loop on PCB	Frequency can be synchronized with an external clock
2-3*	Connected to SGND	SYNC feature unused

## Evaluates: MAX17544 in 5V Output-Voltage Application

### **EV Kit Test Report**

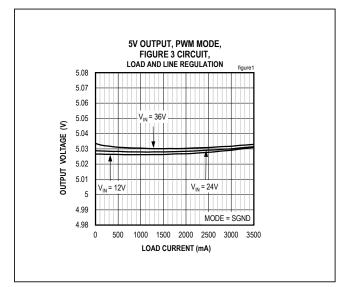


Figure 1. MAX17544 5V Output Load and Line Regulation (PWM Mode)

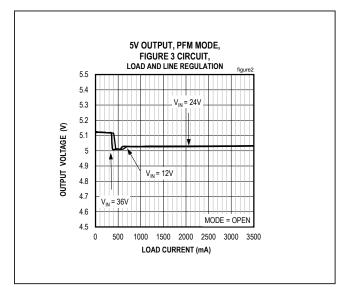


Figure 2. MAX17544 5V Output Load and Line Regulation (PFM Mode)

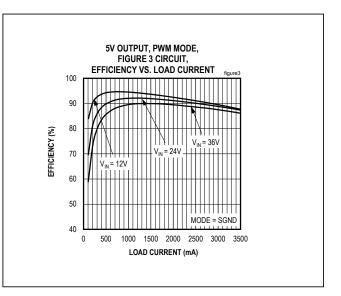


Figure 3. MAX17544 5V Output Efficiency (PWM Mode)

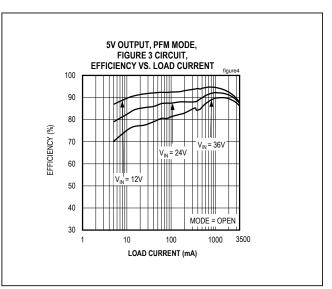


Figure 4. MAX17544 5V Output Efficiency (PFM Mode)

## Evaluates: MAX17544 in 5V Output-Voltage Application

### **EV Kit Test Report (continued)**

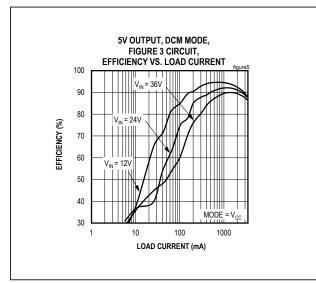


Figure 5. MAX17544 5V Output Efficiency (DCM Mode)

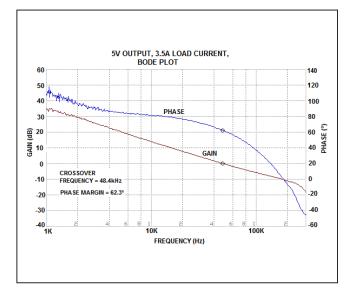


Figure 6. MAX17544 5V Output Full Load Bode Plot (VIN = 24V)

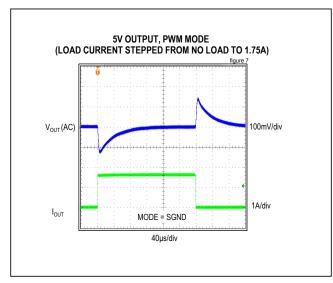


Figure 7. MAX17544 5V Output, No Load to 1.75A Load Transient (PWM Mode)

## Evaluates: MAX17544 in 5V Output-Voltage Application

### **EV Kit Test Report (continued)**

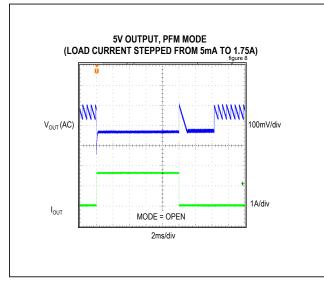


Figure 8. MAX17544 5V Output, 5mA to 1.75A Load Transient (PFM Mode)

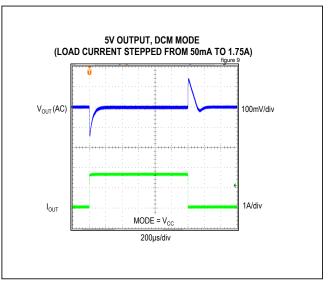


Figure 9. MAX17544 5V Output, 50mA to 1.75A Load Transient (DCM Mode)

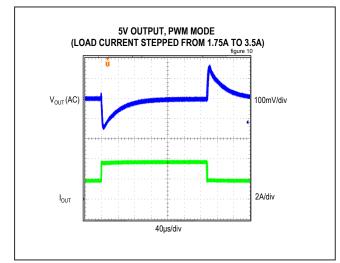


Figure 10. MAX17544 5V Output, 1.75A to 3.5A Load Transient

## Evaluates: MAX17544 in 5V Output-Voltage Application

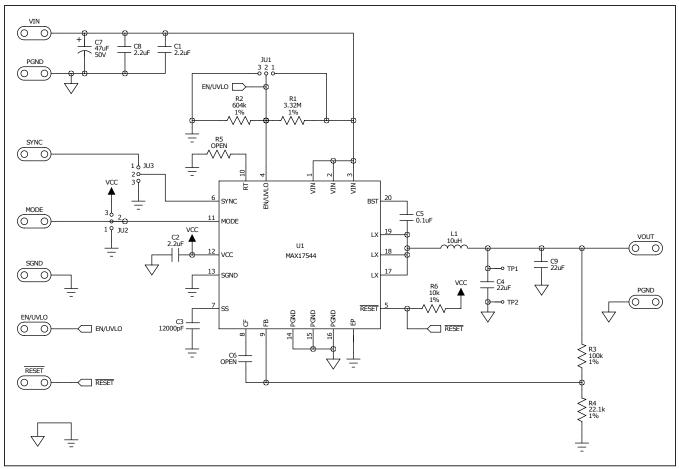


Figure 11. MAX17544 5V Output EV Kit Schematic

## Evaluates: MAX17544 in 5V Output-Voltage Application

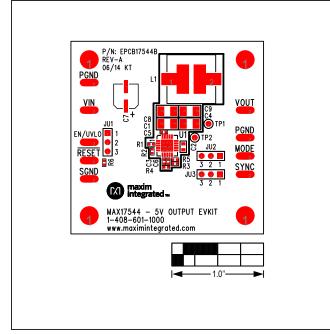


Figure 12. MAX17544 5V Output EV Kit Component Placement Guide—Component Side

	$\bigcirc$	
	× 0	
Į		
	1.0"	

Figure 14. MAX17544 5V Output EV Kit PCB Layout— Inner Layer 1

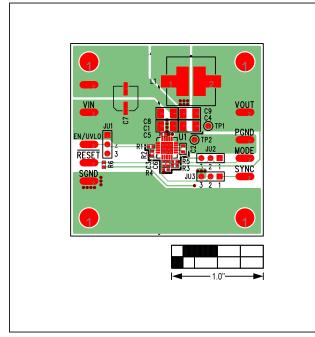


Figure 13. MAX17544 5V Output EV Kit Component Side PCB layout

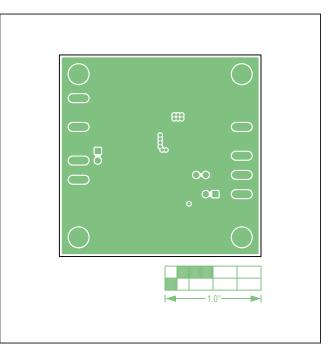


Figure 15. MAX17544 5V Output EV Kit PCB Layout—Inner Layer 2

# Evaluates: MAX17544 in 5V Output-Voltage Application

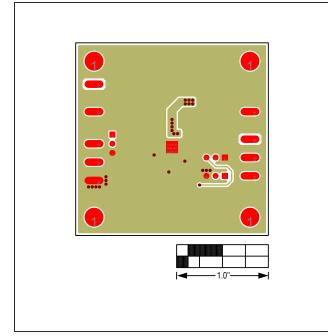


Figure 16. MAX17544 5V Output EV Kit PCB Layout— Solder Side

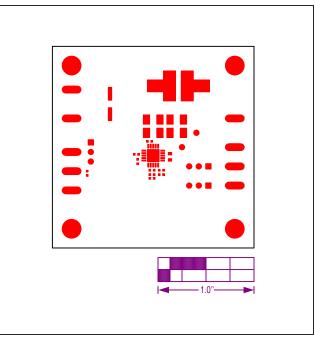


Figure 17. MAX17544 5V Output EV Kit Component Placement Guide—Top Solder Mask

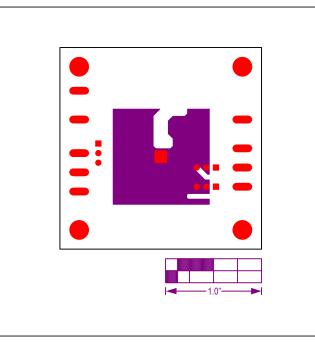


Figure 18. MAX17544 5V Output EV Kit Component Placement Guide—Bottom Solder Mask

## Evaluates: MAX17544 in 5V Output-Voltage Application

### **Ordering Information**

PART	TYPE	
MAX17544EVKITB#	EV Kit	

#Denotes RoHS compliant.

## Evaluates: MAX17544 in 5V Output-Voltage Application

### **Revision History**

REVISION	REVISION	DESCRIPTION	PAGES
NUMBER	DATE		CHANGED
0	9/14	Initial release	—

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Power Management IC Development Tools category:

Click to view products by Maxim manufacturer:

Other Similar products are found below :

EVB-EP5348UI MIC23451-AAAYFL EV MIC5281YMME EV 124352-HMC860LP3E DA9063-EVAL ADP122-3.3-EVALZ ADP130-0.8-EVALZ ADP130-1.8-EVALZ ADP1740-1.5-EVALZ ADP1870-0.3-EVALZ ADP1874-0.3-EVALZ ADP199CB-EVALZ ADP2102-1.25-EVALZ ADP2102-1.875EVALZ ADP2102-1.8-EVALZ ADP2102-2-EVALZ ADP2102-3-EVALZ ADP2102-4-EVALZ AS3606-DB BQ25010EVM BQ3055EVM ISLUSBI2CKIT1Z LP38512TS-1.8EV EVAL-ADM1186-1MBZ EVAL-ADM1186-2MBZ ADP122UJZ-REDYKIT ADP166Z-REDYKIT ADP170-1.8-EVALZ ADP171-EVALZ ADP1853-EVALZ ADP1873-0.3-EVALZ ADP198CP-EVALZ ADP2102-1.0-EVALZ ADP2102-1-EVALZ ADP2107-1.8-EVALZ ADP5020CP-EVALZ CC-ACC-DBMX-51 ATPL230A-EK MIC23250-S4YMT EV MIC26603YJL EV MIC33050-SYHL EV TPS60100EVM-131 TPS65010EVM-230 TPS71933-28EVM-213 TPS72728YFFEVM-407 TPS79318YEQEVM UCC28810EVM-002 XILINXPWR-083 LMR22007YMINI-EVM LP38501ATJ-EV