LASER SENSORS

PHOTOELECTRIC

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY **SENSORS** PARTICUI AR USE SENSORS SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS MEASUREMENT SENSORS

STATIC CONTROL

DEVICES LASER MARKERS

PLC

FNFRGY MANAGEMENT SOLUTIONS

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Guide Safety Light Curtains

Components

SF-C21 SF-C10

MICRO PHOTOELECTRIC SENSORS AREA SENSORS

Exclusive Control Unit for Safety Light Curtain

■ General terms and conditions...... F-3 Related Information ■ SF4B / SF4B-G P.501~ ■ SF4C / SF2BP.577~ / P.603~ ■ Korea's S-mark......P.1602

■ General precautions P.1595











The control category differs depending on the configuration and wiring of the external circuit.

Less setup time for safety circuits

Plug-in type control unit

Quick-connection

Connecting to the safety light curtain is done using plug-in connections, which shortens setup and replacement time.




Easy setup requiring no torque control

A spring method is used for the terminal blocks for connections other than to the safety light curtain. There is no need to control

these terminal blocks.

Uses a spring method!

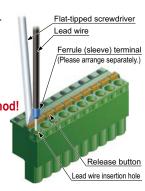

Removable terminal blocks reduce maintenance time


SF-C11 / SF-C14EX(-01)

Removable terminal blocks are used. This reduces the work required for reconnecting wiring during maintenance.



Robust type control unit

22.5 mm 0.886 in thickness, so can be inserted even into narrow spaces inside panels.

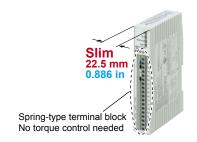

Metal enclosure with a IP65 protective structure The strong metal enclosure has a built-in safety relay. It has an IP65 protective structure, so that it can be set up individually without needing to be inserted into a control

IP65 Metal enclosure

The wiring with the safety light curtain is connector connection.

tightening torques for

Slim type control unit


Slim design


Building of muting control circuits is easy

SF-C14EX(-01)

The method used to build the safety circuit is selectable

It is possible to build muting control circuits using a stand-alone safety light curtain from the SF4B / SF4B-G series. The SF-C14EX(-01) application expansion unit allows the safety light curtain, muting sensors and muting lamps to be connected together directly, so that muting control circuits can be built very easily.

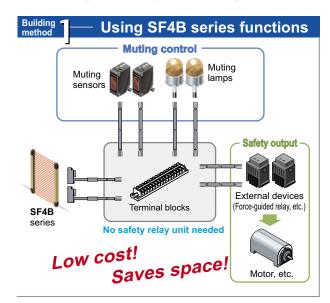

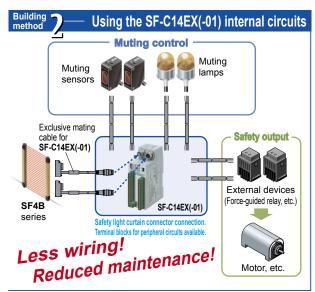


Both safety and productivity can be obtained by stopping only one part of the device SF-C14EX(-01)

Three safety circuit systems packaged into a single unit!


Three safety circuit systems (1) Safety light curtain output circuit, 2 Muting control circuit, and 3 Emergency stop circuit are packaged into a single unit. Functions that require multiple safety relay units and muting control units can be concentrated into a single unit, which results in large space savings, less wiring and less installation work.

High-speed response 14 ms (Including safety light curtain)

High-speed response has been achieved due to the adoption of the semiconductor output. Avoids the response delays that occur when using more than one safety relay unit, and greatly reduces the safety light curtain safety distance and improves ease of working. Of course, it is not necessary to exchange the safety relays within the unit anymore, which contributes to the reduction of running cost.

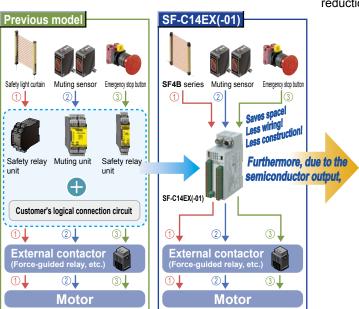

Including safety light curtain response time High response speed of 14 ms! Greatly reduced safety distance! Previous model



Total 14 ms! Relay replacement is not required!

1 Safety light curtain output circuit 2 Muting control circuit

③ Emergency stop circuit

FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY **SENSORS**

PARTICUI AR

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FNFRGY MANAGEMENT SOLUTIONS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING

Selection Guide Safety Light Curtains Safety Components

SF-C21

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

> AREA SENSORS

SAFETY LIGHT CURTAINS SAFETY COMPONENTS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC CONTROL DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY MANAGEMENT SOLUTIONS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection
Guide
Safety Light
Curtains
Safety
Control Units
Safety
Components

SF-C21 SF-C10 Three safety circuit systems can be controlled independently so that equipment can be stopped all together or partially SF-C14EX(-01)

Motors that use muting control and those that do not use it can be controlled independently!

Controls the motors that use muting control (robots) and the motors that do not use muting control (turntables) with a single unit.
When the workpiece comes in, the turntable can be stopped and the robot can keep operating condition, to protect the safety of the operator and to maintain productivity.

Safety circuit ① : Linked to safety light curtain beam received / interrupted status (partial stop)

When the safety light curtain is interrupted (when an workpiece enters or a person intrudes), this circuit switches off (open) the safety output and stops the turntable.


Safety circuit 2: Linked to muting control (partial stop)

If an workpiece enters when the turntable has stopped normally, (muting conditions are achieved), this circuit allows the robot to operate.

If an workpiece enters while the turntable is turning (muting conditions are not achieved), this circuit switches off (open) the safety output and stops the robot.

Safety circuit 3: Linked to emergency stop input (all stop)

When the emergency stop button is pressed, this circuit switches off (open) the safety output and stops all equipment (turntable and robot).

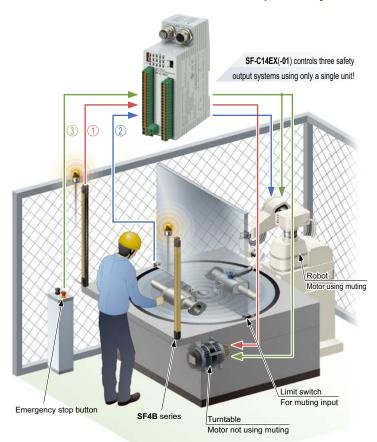


Equipped with blown lamp output for muting lamp

If a lamp in one of the two muting lamps that are connected to the unit blows, a warning is output. It is possible to replace the lamp before both lamps blow and the equipment stops. In addition, auxiliary output that is linked to the muting function, override function and safety light curtain control output is also available.

	Function	Operation
Auxiliary output 1	Muting output	ON when the muting function is invalid
Auxiliary output 2	Override output	ON when the override function is invalid
Auxiliary output 3	Blown lamp output	ON when the muting lamp is normal
Auxiliary output 4	Safety light curtain auxiliary output	ON when the safety light curtain is in light interrupted condition


Equipped with a digital indicator so that error details can be understood at a glance!

If a problem should occur, the same output (OFF signal) as when the object was detected is maintained in order to ensure safety, and the details of the error appear on the digital display.

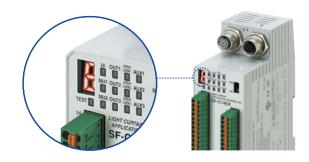

Supports both PNP and NPN polarities

All Models

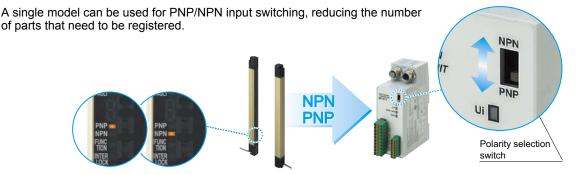

ORDER GUIDE

Designation	Appearance	Model No.	Applicable cable (Note)	Description		
Connector connection type control unit		SF-C11	Safety light curtain connection cable: SFB-CB (For SF4B series) SF2B-CB (For SF2B series) Extension cable: SFB-CCJ10	Use 8-core cable with connector to connect to the safety light curtain. Compatible with up to Control Category 4. Interference prevention wires and muting function cannot be used.		
Robust type control unit		SF-C12	Safety light curtain connection cable: SFB-CB05-MU Extension cable: SFB-CCJ10□-MU	Use 12-core cable with connector to connect to the safety light curtain. Interference prevention wires can be used. Compatible with up to Control Category 4. Muting function cannot be used.		
Slim type control unit		SF-C13	Safety light curtain connection cable: SFB-CCB _□ (-MU) (For SF4B series) SF2B-CCB _□ (For SF2B series) Extension cable: SFB-CC _□ (-MU)	Use a discrete wire cable to connect to the safety light curtain. Muting function and interference prevention wires can be used. Compatible with up to Control Category 4.		
Application expansion unit for		SF-C14EX	Safety light curtain connection cable:	The muting control function and emergency stop input expand the applications of the safety light curtains. Use exclusive cable to connect to the safety light curtain.		
SF4B / SF4B-G series		SF-C14EX-01	Extension cable: SFB-CCJ10 _□	Compatible with up to Control Category 4. The handy-controller SFB-HC (optional) cannot be used with SF-C14EX-01.		

Note: Refer to $\mathbf{SF4B}$ / $\mathbf{SF4B-G}$ series pages (p.512~) and $\mathbf{SF2B}$ series pages (p.608) for the applicable cable.

SF-C12 spare relay set

A set of spare relays (2 safety relays and 1 removal tool) is available for the safety relay that is built into the SF-C12. Model No.: SF-C12-RY

FIBER SENSORS

LASER

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC

AREA SENSORS

SAFETY LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS

> INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC CONTROL DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY MANAGEMENT SOLUTIONS

FA COMPONENTS

> MACHINE VISION SYSTEMS

JV CURING SYSTEMS

Selection Guide

Safety Control Units Safety

SF-C21

LASER SENSORS PHOTO-ELECTRIC SENSORS MICRO PHOTO-

AREA SENSORS

COMPONENTS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC CONTROL DEVICES

LASER MARKERS

PLC
HUMAN
MACHINE
INTERFACES

ENERGY MANAGEMENT SOLUTIONS

MACHINE VISION SYSTEMS

SYSTEMS UV CURING SYSTEMS

STOTEING

Selection Guide Safety Light Curtains Safety Control Units Safety Components

SF-C21 SF-C10


SPECIFICATIONS

Item	Model No.	SF-C11	SF-C12	SF-C13							
	nectable safety light curtains	SF4D / SF4B / SF4B-G / SF2B series	SF4B / SF4B-G series	Safety light curtain manufactured by Panasonic Industrial Devices SUNX							
Appli	icable standards	EN 61496-1 (Type 4), EN 55011, EN ISO 13849-1 (Category 4, PLe), IEC 61496-1 (Type 4), ISO 13849-1 (Category 4, PLe), JIS B 9704-1 (Type 4), JIS B 9705-1 (Category 4), ANSI/UL 61496-1 (Type 4), UL 1998 (Class 2) (Note 2)									
CE m	narking directive compliance	Machinery Directive, Low Voltage (SF-C11/C13 only) Directive, EMC Directive, RoHS Directive									
Cont	rol category	ISO 13849-1 (EN ISO 13849-1, JIS B 9705-1) compliance up to Category 4, PLe standards									
Suppl	y voltage / Current consumption	24 V DC ±10 % Ripple P-P 10 % or less / 100 mA or less (without safety light curtain)									
Fuse	rating	Built-in electronic fu	use, Triggering current: 0.5 A or more, Rese	et after power down							
Safe	ty output	NO contact × 3 (13-14, 23-24, 33-34)	NO contact × 2 (13-14, 23-24)	NO contact × 3 (13-14, 23-24, 33-34)							
	Utilization		AC-15, DC-13 (IEC 60947-5-1)								
	Rated operation voltage (Ue) / Rated operation current (le)	30 V DC / 6 A, 230 V AC / 6 A, resistive load (For inductive load, during contact protection) Min. applicable load: 10 mA (at 24 V DC) (Note 3)	(For inductive load, during contact protection)	30 V DC / 4 A, 230 V AC / 4 A, resistive load (For inductive load, during contact protection) Min. applicable load: 10 mA (at 24 V DC) (Note 3)							
	Contact material / contacts	AgSnO, self cleaning, positively driven	AgNiO + 0.2 μm 0.008 mil Au plating, self cleaning, positively driven	AgSnO, self cleaning, positively driven							
	Contact resistance	100 mΩ or less (initial value)	50 m Ω or less (initial value)	100 m Ω or less (initial value)							
	Contact protection fuse rating	6 A (slow blow)	3 A (slow blow)	4 A (slow blow)							
	Mechanical lifetime	10,000,000 time	s or more (open/close frequency of 180 time	es/min) (Note 4)							
	Electrical lifetime	100,000 times or more (open/clos	se frequency of 20 times/min, 230 V AC, 3	A, using resistance load) (Note 4)							
Pick-u	p delay (Auto reset/Manual reset)	80 ms or less / 90 ms or less	30 ms or less / 30 ms or less	80 ms or less / 90 ms or less							
Resp	oonse time	10 ms or less	14 ms or less	10 ms or less							
Auxil	iary output	Safety relay contact (NC contact) ×1 (41-42) (Related to enabling path)	Safety relay contact (NC contact) × 1 (31-32) (Related to enabling path)	Safety relay contact (NC contact) \times 1 (41-42) (Related to enabling path)							
	Rated operation voltage/current	24 V DC / 2 A, Min. applicable load: 10 mA (at 24 V DC)	30 V DC / 3 A, Min. applicable load: 15 mA (at 24 V DC)	24 V DC / 2 A, Min. applicable load: 10 mA (at 24 V DC)							
	Contact protection fuse rating	2 A (slow blow)	3 A (slow blow)	2 A (slow blow)							
Semiconductor auxiliary output (AUX)		Minus ground (Setting for NPN) PNP open-collector transistor		PNP open-collector transistor • Max. source current: 60 mA • Applied voltage: same as supply voltage (between the semiconductor auxiliary output and +V) • Residual voltage: 2.3 V or less (at source current 60 mA) • Leakage current: 2 mA or less							
	Output operation	Related to auxiliary output of safety light curtain		On when the safety light curtain is interrupted							
Exce	ss voltage category	II	III	II							
	Power supply (Ui)	Green LED (lights up when the power is ON)									
ors	Safety output [OUT (Note 5)]	Gre	en LED (lights up when safety output is clos	sed)							
Indicators	Interlock (INTER_LOCK)	Yellow LED (lights up when safety output is opened)		Yellow LED (lights up when enabling contacts are opened)							
드	Fault (FAULT)	Yellow LED (blinks when fault occurs)	Orange LED (lights up when two safety light curtain input polarity selection switch settings are different)	Yellow LED (blinks when fault occurs)							
Exte	rnal relay monitor function	Incorporated	Incorporated (Note 6)	Incorporated							
Traili	ng edge function		Incorporated								
	rity selection ion (Note 7)	Incorporated (Sliding switch allows selection of plus/minus ground) Minus ground: Correspond to PNP output safety light curtain Plus ground: Correspond to NPN output safety light curtain Minus ground: Correspond to NPN output safety light curtain Plus ground: Correspond to NPN output safety light curtain									
	tion degree		2								
Pollu	<u> </u>		IP65	Enclosure: IP40, Terminal: IP20							
	Protection	Enclosure: IP40, Terminal: IP20		o dew condensation or icing allowed), Storage: –25 to +70 °C –13 to +158 °F							
		·	dew condensation or icing allowed), Stora	ge: –25 to +70 °C –13 to +158 °F							
	Protection	·	o dew condensation or icing allowed), Stora 35 to 85 % RH, Storage: 35 to 85 % RH	ge: -25 to +70 °C -13 to +158 °F 30 to 85 % RH, Storage: 30 to 95 % RH							
Environmental	Protection Ambient temperature	-10 to +55 °C +14 to +131 °F (No	35 to 85 % RH, Storage: 35 to 85 % RH Resistance 10 to 55 Hz frequency, 0.75 mm 0.030 in	30 to 85 % RH, Storage: 30 to 95 % RH							
Environmental resistance	Protection Ambient temperature Ambient humidity	-10 to +55 °C +14 to +131 °F (No 30 to 85 % RH, Storage: 30 to 95 % RH Resistance / malfunction 10 to 55 Hz frequency, 0.35 mm 0.014 in	35 to 85 % RH, Storage: 35 to 85 % RH Resistance 10 to 55 Hz frequency, 0.75 mm 0.030 in	30 to 85 % RH, Storage: 30 to 95 % RH Resistance / malfunction 10 to 55 Hz frequency, 0.35 mm 0.014 in							
S Environmental resistance	Protection Ambient temperature Ambient humidity Vibration resistance	-10 to +55 °C +14 to +131 °F (No 30 to 85 % RH, Storage: 30 to 95 % RH Resistance / malfunction 10 to 55 Hz frequency, 0.35 mm 0.014 in amplitude in X, Y, and Z directions for twenty times each	35 to 85 % RH, Storage: 35 to 85 % RH Resistance 10 to 55 Hz frequency, 0.75 mm 0.030 in amplitude in X, Y, and Z directions for two hours each	30 to 85 % RH, Storage: 30 to 95 % RH Resistance / malfunction 10 to 55 Hz frequency, 0.35 mm 0.014 in amplitude in X, Y, and Z directions for twenty times each							


Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

- 2) SF-C11 and SF-C13 comply with UL 1998 (Class 2).
- 3) If several SF-C11 or SF-C13 units are being used in line together, leave a space of 5 mm 0.197 in or more between each unit. If the units are touching each other, reduce the rated operating current for safety output in accordance with the ambient operating temperature as shown in the graphs at right.
- 4) The life expectancy of the relay varies depending on the type of load, open / close frequency, ambient conditions and others.
- 5) The operation indicator is marked as "Enabling" on the unit for SF-C12.
- 6) Terminals for utilizing the functions of the **SF4B** / **SF4B-G** series are available.
- 7) Please switch the sliding switch to the PNP side for minus ground and to the NPN side for plus ground.

Dilating when SF-C11 units are mounted close together



Dilating when SF-C13 units are mounted close together



SPECIFICATIONS

Item	Model No.	SF-C14EX(-01) (Note 2)							
	ectable safety light curtains	SF4B / SF4B-G series							
Appli	icable standards	IEC 61496-1 (Type 4), EN 55011, EN ISO 13849-1 (Category 4, PLe), IEC 61496 (Type 4), ISO 13849-1 (Category 4, PLe), JIS B 9704-1 (Type 4), JIS B 9705-1 (Category 4, PLe), ANSI/UL 61496-1 (Type 4), UL 1998 (Class 2)							
CE m	narking directive compliance	Machinery Directive, EMC Directive, RoHS Directive							
Cont	rol category	ISO 13849-1 (EN ISO 13849-1, JIS B 9705-1) compliance up to Category 4, PLe standards							
Supp	oly voltage	24 V DC ±10 % Ripple P-P 10 % or less							
Curre	ent consumption	0.2 A or less (Excluding safety light curtain and other external connecting device)							
Safety outputs (Safety output 1 Safety output 2 Safety output 3)		PNP open-collector transistor 2 outputs × 3 or NPN open-collector transistor 2 outputs × 3 (selectable using a slider switch) When PNP output is selected> Maximum source current: 200 mA Applied voltage: same as supply voltage (between the safety output and +V) Residual voltage: 2 V or less (at 200 mA source current) * When NPN output is selected> Maximum sink current: 200 mA Applied voltage: same as supply voltage (between the safety output and 0 V) * Residual voltage: 2 V or less (at 200 mA sink current)							
	Operation mode (Output operation)	Safety output 1: ON when the safety light curtain is in light receiving condition, OFF when the safety light curtain is in light interrupted condition (Note 3) Safety output 2: ON when the safety light curtain is in light receiving condition or the muting function is valid OFF when the safety light curtain is in light interrupted condition and the muting function is invalid (Note 3) Safety output 3: ON when the emergency stop is invalid, OFF when the emergency stop is valid							
	Protection circuit (Short-circuit protection)	Incorporated							
	Response time	OFF response: 14 ms or less (Safety output 1 and 2: including the response time of the safety light curtain) ON response: 90 ms or less (auto-reset) / 140 ms or less (manual reset) (Note 4)							
Au Au Au	iary outputs uxiliary output 1 uxiliary output 2 uxiliary output 3 uxiliary output 4 (Note 5)	PNP open-collector transistor × 3 or NPN open-collector transistor × 3 (selectable using a slider switch) or NPN output is selected> or NPN output is selected> or NPN output is selected> 							

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

2) The handy-controller SFB-HC (optional) cannot be used with SF-C14EX-01.

- 3) Both safety output 1 and 2 are OFF when the emergency stop is valid regardless of whether the safety light curtain is in the light receiving or light interrupted condition.

 4) The auto-reset cannot be used with safety output 3.
- 5) The auxiliary output incorporated in the SF4B / SF4B-G series is output.
- 6) PFHD: Probability of dangerous failure per hour, MTTFD: Mean time to dangerous failure (in years)

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS

STATIC CONTROL DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY MANAGEMENT SOLUTIONS FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

SF-C21

LASER SENSORS PHOTO-

AREA SENSORS PRESSURE / SENSORS

PARTICULAR SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE MENT CONTROL DEVICES

LASER MARKERS PLC

· In the above diagram, set

the safety light

polarity selection

side and ground

curtain input

the + side.

HUMAN MACHINE INTERFACES

FA COMPONENTS MACHINE VISION SYSTEMS

CURING SYSTEMS


SF-C21

SAFETY LIGHT CURTAIN WIRING DIAGRAMS

Wiring diagram of SF-C11 and SF4B / SF4B-G series or SF2B series (Control Category 4 or 2)

For PNP output (minus ground)

 Set the safety light curtain input polarity selection switch to the PNP side and ground the 0 V line.

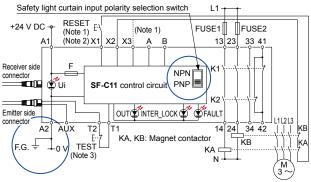

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.


- 2) Use a momentary-type switch as the reset (RESET) button.
- 3) Emission halt occurs when the test (TEST) button is open, and emission occurs when the test (TEST) button is short-circuited. If not using the test (TEST) button, short-circuit T1 and T2. However, in case of SF2B series, use a test rod or similar to interrupt the light in order to carry out self-diagnosis separately.

Safety light curtain input For NPN output (plus ground) polarity selection switch +24 V DC -RESETE F.G. - A1 X2 Receiver side connector NPN PNP switch to the NPN SF-C11 control circuit Emitter sig OUT TINTER_LOCK TO FAULT A2 AUX T2 TEST ∔n v

Wiring diagram of SF-C12 and SF4B / SF4B-G series (Control Category 4)

For PNP output (minus ground)

 Set the two safety light curtain input polarity selection switches to the PNP side and connect the F.G. terminal to the 0 V line.

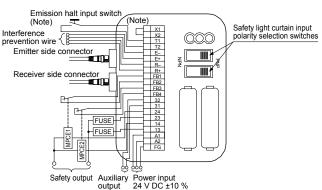


Note: The above diagram is when using manual reset. If automatic reset is used, connect a normal close-type pushbutton switch between T1 and T2 and leave between X1 and X2 open.

For NPN output (plus ground)

• In the above diagram, set the two safety light curtain input polarity selection switches to the NPN side and connect the F.G. terminal to the + side.

When connecting the SF-C11 to the safety light curtains, make sure to use the 8-core connection cable with a connector. Refer to the SF4B / SF4B-G series and SF2B series pages for details. SFB-CB□, SF2B-CB□, SFB-CCJ10□

Terminal arrangement diagram



Terminal	Function
A1	+24 V DC
A2	0 V
13-14, 23-24, 33-34	Safety output (NO contact × 3)
41-42	Auxiliary output (NC contact × 1)
X1	Reset output terminal
X2	Reset input terminal (Manual)
X3	Reset input terminal (Automatic)
A	Netwood
В	Not used
T1	Test output terminal
T2	Test input terminal
AUX	Semiconductor auxiliary output

Pin layout for safety light curtain connectors



Connector pin No.	Emitter side connector	Receiver side connector		
1	Interlock (Note)	OSSD2		
2	+24 V DC	+24 V DC		
3	Emission halt	OSSD1		
4	Auxiliary output	EDM (External relay monitor)		
5	Synchronization wire +	Synchronization wire +		
6	Synchronization wire -	Synchronization wire –		
7	0 V	0 V		
8	Shielded wire	Shielded wire		

Note: It is not used with the SF2B series.

When connecting the SF-C12 to the safety light curtains, make sure to use the 12-core connection cable with a connector. Refer to the SF4B / SF4B-G series pages for details. SFB-CB05-MU (Cable length: 0.5 m 1.640 ft) SFB-CCJ10E-MU (Extension cable for emitter, cable length: 10 m 32.808 ft) SFB-CCJ10D-MU (Extension cable for receiver, cable length: 10 m 32.808 ft)

Terminal arrangement diagram

×	Ŋ	11	T2	Ē	ф	삼	R+	FB1	FB2	FB3	FB4	32	31	24	23	14	13	A1	A2	FG

Terminal	Function
FG	Frame ground (F.G.) terminal
A2	0 V
A1	+24 V DC
13-14, 23-24	
31-32	Auxiliary output (NC contact × 1)
FB4	External relay monitor
FB3	terminal 2
FB2	External relay monitor
FB1	terminal 1

Terminal	Function
R+	Interference prevention wire - (Receiver side
R-	Interference prevention wire + (Receiver side
E+	Interference prevention wire - (Emitter side)
E-	Interference prevention wire + (Emitter side
T2	Emission halt input
T1	terminal
X2	Automatic reset/manual reset selection terminal
X1	Manual reset: X1 – X2 short-circuited

Pin layout for safety light curtain connectors



Note: Input and output for pin Nos (1) and (12) are not used by this product


Connector pin No.	Emitter side connector	Receiver side connector		
1	Interlock	OSSD2		
2	+24 V DC	+24 V DC		
3	Emission halt	OSSD1		
4	Auxiliary output	EDM (External relay monitor)		
(5)	Synchronization wire +	Synchronization wire +		
6	Synchronization wire -	Synchronization wire -		
7	0 V	0 V		
8	Shielded wire	Shielded wire		
9	Interference prevention wire +	Interference prevention wire +		
10	Interference prevention wire -	Interference prevention wire -		
11)	(Override input)	(Muting input 1)		
(12)	(Muting lamp output)	(Muting input 2)		

SAFETY LIGHT CURTAIN WIRING DIAGRAMS

Wiring diagram of SF-C13 and SF4B / SF4B-G series or SF2B series (Control Category 4 or 2)

For PNP output (minus ground)

 Connect the safety light curtain control outputs OSSD1 and OSSD2 to S1 and S2 respectively.

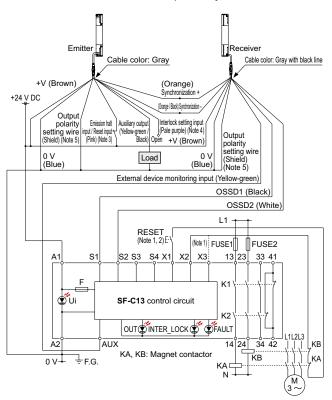

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.

- 2) Use a momentary-type switch as the reset (RESET) button.
- 3) This is a test input (pink) for the **SF2B** series.
- 4) This is not equipped on the SF2B series.
- 5) This is a shield for the **SF2B** series.


Terminal arrangement diagram

10 A1	Terminal	Function
월⊚ A2 월⊚ S1	A1	+24 V DC
10 S2 10 S3	A2	0 V
10 S4 10 AUX	S1 to S4	Safety light curtain control output (OSSD) input terminal
∐⊚ X1 ∐⊚ X2	AUX	Semiconductor auxiliary output
10 X3	X1	Reset output terminal
14	X2	Reset input terminal (Manual)
23 24	Х3	Reset input terminal (Automatic)
33 34 10 41 10 42	13-14, 23-24, 33-34	Safety output (NO contact × 3)
<u> </u>	41-42	Auxiliary output (NC contact × 1)

Use a separate terminal block to carry out wiring for safety light curtains that cannot be connected to the **SF-C13**.

For NPN output (plus ground)

 Connect the safety light curtain control outputs OSSD1 and OSSD2 to S4 and S2 respectively and ground the + side.

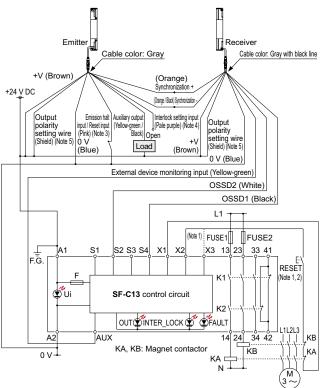

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.

- 2) Use a momentary-type switch as the reset (RESET) button.
- 3) This is a test input (pink) for the SF2B series.
- 4) This is not equipped on the SF2B series.
- 5) This is a shield for the SF2B series.

When connecting the SF-C13 to the safety light curtains, make sure to use a discrete wire connection cable. Refer to the SF4B / SF4B-G series and SF2B series pages for details. SFB-CCB_□(-MU), SF2B-CCB_□, SFB-CC_□(-MU)

Selection

Safety Control Units Safety Components

SF-C21

SF-C10

FIBER SENSORS

LASER SENSORS PHOTO-

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE

WIRE-SAVING UNITS

MEASURE-MENT SENSORS

STATIC CONTROL DEVICES LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY MANAGEMENT SOLUTIONS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS FIBER SENSORS LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-

AREA SENSORS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC CONTROL DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY MANAGEMENT SOLUTIONS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Safety Light
Curtains
Safety
Control Units
Safety
Components


SF-C21 SF-C10

SAFETY LIGHT CURTAIN WIRING DIAGRAMS

Wiring diagram of SF-C14EX(-01) and SF4B / SF4B-G series (Control Category 4)

For PNP output (minus ground)

• Set the output polarity selection switch to the PNP side and ground the 0 V line.

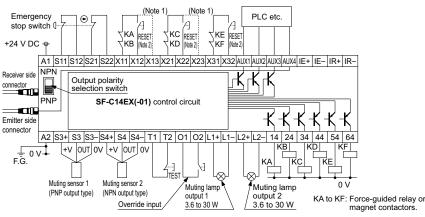

 When connecting the SF-C14EX to the safety light curtains, make sure to use the following connecting cable.
 SFB-CB05-EX (Cable length: 0.5 m 1.640 ft)
 SFB-CB5-EX (Cable length: 5 m 16.404 ft)
 SFB-CB10-EX (Cable length: 10 m 32.808 ft)

 If the NO (Normally Open) contact switch is used as a muting sensor, wire it as shown in the figure below.




 If the emergency stop switch is not used, short-circuit between the terminals S11 to S12 and S21 to S22 directly.

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X12 and X22, and connect them to X13 and X23 as shown by the dotted lines. In this case, a reset (RESET) button is not needed. Terminals X31 to X32 are for manual reset only.

2) Use a momentary-type switch for the reset (RESET) button.

For NPN output (plus ground)

• Set the output polarity selection switch to the NPN side and ground the + side of the power supply input.

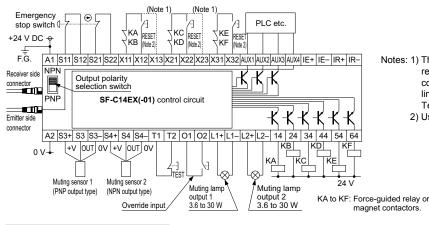

Function

Notes: 1) The left diagram is when using manual reset. If automatic reset is used, disconnect the lead from X12 and X22, and connect them to X13 and X23 as shown by the dotted lines. In this case, a reset (RESET) button is not needed. Terminals X31 to X32 are for manual reset only.

2) Use a momentary-type switch for the reset (RESET) button.

Terminal arrangement diagram

Terminal

A2 0 V

14 10000	LIGHT CURTAIN
	APPLICATION EXPANSION UNIT
24 Q <u>I</u>	SF-C14EX
34 QI D	
44 (OLD	S11 OID
54 OTD	S12 (0)11
64 (OT D	S21 (O)Th
s. Off	S22 (A)Th
s lõiti	X11
S ATT	X12
s4 100mi	X13 ATT
s4 Min	X21 XIII
XIIX	X22 X
_ ™ Q <u>II</u> D	X23 QI D
	X31 QI D
o OID	X32 QID
□ 02 [O][D	AUX1 OTD
LI OTO	AUX2 OTO
	AUX3
	AUX4
□2 lÕffi	ı E+ İ Öİİİ
A1 (**)	
A2 ()	
~ 🖳	
<u> </u>	

14	Safety output 1, Light received / Light interrupted output of	S11	Emergency stop contact input 2 NC input Between S11 and S12 Between S21 and S22
24	the safety light curtain	S12	
34	Safety output 2, Safety light curtain output including the muting function	S21	
44		S22	
54	Safety output 3 Emergency stop output	X11	Safety output 1 reset input X11 - X12: Manual reset X11 - X13: Auto-reset
64		X12	
S3+	Muting sensor input 1 (PNP output type) S3+, S3-: Power supply	X13	
S3		X21	Safety output 2 reset input X21 - X22: Manual reset X21 - X23: Auto-reset
S3-	S3: Sensor output	X22	
S4+	Muting sensor input 2 (NPN output type) S4+, S4–: Power supply S4: Sensor output	X23	
S4		X31	Safety output 3 reset input X31 - X32: Manual reset
S4-		X32	
T1	Test input terminal Open: Test mode Short-circuit: Normal operation	AUX1	Auxiliary output 1, Muting output
T2		AUX2	Auxiliary output 2, Override output
01	Override input terminal Open: Invalid Short-circuit: Valid	AUX3	Auxiliary output 3, Blown lamp output
02		AUX4	Auxiliary output 4, Safety light curtain auxiliary output
L1+	Muting lamp output 1	IE+	Interference prevention terminal, Emitter side +
L1-		Ε	Interference prevention terminal, Emitter side –
L2+	M. din n lanna autout O	IR+	Interference prevention terminal, Receiver side +
L2-	- Muting lamp output 2		Interference prevention terminal, Receiver side –
A1	+24 V DC		

Terminal

Function

Pin layout for safety light curtain connectors




Connector pin No.	Emitter side connector	Receiver side connector
①	Interference prevention wire +	Interference prevention wire +
2	+24 V DC	+24 V DC
3	Interference prevention wire –	Interference prevention wire –
4	Auxiliary output	Not used
5	Synchronization wire +	Synchronization wire +
6	Synchronization wire –	Synchronization wire –
①	0 V	0 V
8	Shielded wire	Shielded wire

PRECAUTIONS FOR PROPER USE

Refer to p.1595 for general precautions.

Part description and function [SF-C14EX(-01)]

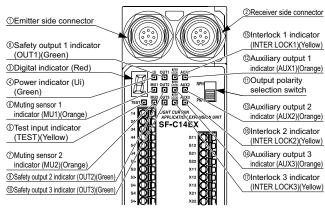

No.	Description	Function
1	Emitter side connector	The emitter of SF4B / SF4B-G series is connected.
2	Receiver side connector	The receiver of SF4B / SF4B-G series is connected.
3	Digital indicator (Red)	Lights up or blinks when there is a problem. Lights up when blanking function is enabled.
4	Power indicator (Ui) (Green)	Lights up when the power is ON.
5	Test input indicator (TEST) (Yellow)	Lights up when test input is enabled. Blinks while communication with SFB-HC (optional) handy-controller is in progress. (Excluding SF-C14EX-01)
6	Muting sensor 1 indicator (MU1) (Orange)	Lights up when muting sensor 1 is ON.
7	Muting sensor 2 indicator (MU2) (Orange)	Lights up when muting sensor 2 is ON.
8	Safety output 1 indicator (OUT1) (Green)	Lights up when safety output 1 is ON.
9	Safety output 2 indicator (OUT2) (Green)	Lights up when safety output 2 is ON.
10	Safety output 3 indicator (OUT3) (Green)	Lights up when safety output 3 is ON.
111	Output polarity selection switch	PNP (minus ground) or NPN (plus ground) can be selected. The factory setting is PNP (minus ground).
12	Auxiliary output 1 indicator (AUX1) (Orange)	Lights up when auxiliary output 1 is ON.
(13)	Auxiliary output 2 indicator (AUX2) (Orange)	Lights up when auxiliary output 2 is ON.
14)	Auxiliary output 3 indicator (AUX3) (Orange)	Lights up when auxiliary output 3 is ON.
(15)	Interlock 1 indicator (INTER LOCK1) (Yellow)	Lights up when interlock 1 is ON.
16	Interlock 2 indicator (INTER LOCK2) (Yellow)	Lights up when interlock 2 is ON.
17)	Interlock 3 indicator (INTER LOCK3) (Yellow)	Lights up when interlock 3 is ON.

Wiring

• The following solid wire and twisted wires (lead wire) are recommended.

SF-C11

Power supply and output line connector: 0.2 to 2.5 mm² (AWG24 to 12) Signal line connector: 0.2 to 1.5 mm² (AWG24 to 16)

SF-C13

Single wire: Ø0.4 to Ø1.2 mm Ø0.016 to Ø0.047 in

(AWG26 to 16)

Twisted wire (lead wire): 0.3 to 1.25 mm² (AWG22 to 16)

SF-C14EX(-01)

Power supply line connector (A1, A2): 0.2 to 2.5 mm² (AWG24 to 12)

Other connectors: 0.2 to 1.5 mm² (AWG24 to 16)

Output waveform (Safety output ON) [SF-C14EX(-01)]

· When safety output is ON, self-diagnosis of the output circuit is carried out, so that the output transistor will periodically turn OFF. (OFF pulse width: 100 µs or less) When the OFF signal is fed back, the receiver judges the output circuit as normal. When the OFF signal is not fed back, the receiver judges either the output circuit or wiring as error, and the safety output maintains OFF status.




Since the OFF signal of SF-C14EX(-01) might cause malfunction, perform the connecting paying attention to the input response time of the machine to be connected to SF-C14EX(-01).

Time chart [SF-C14EX(-01)]

Normal operation

 The diagram shows operation with safety outputs 1 and 2 in manual-reset mode.

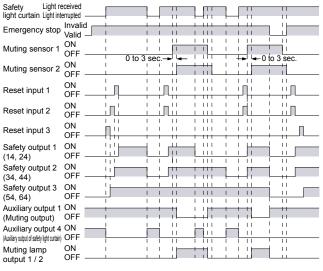

- The diagram above is the timing chart of **SF-C14EX(-01)** in normal operation.
- · In normal operation, auxiliary output 2 (override output) is maintained in the ON state.
- In normal operation, auxiliary output 3 (muting lamp output) is maintained in the ON state.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR

USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

CONTROL DEVICES LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

SOLUTIONS FA COMPONENTS

> MACHINE VISION SYSTEMS

UV CURING SYSTEMS

SF-C21 SF-C10 MEASURE-MENT SENSORS STATIC CONTROL DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY MANAGEMENT SOLUTIONS

MACHINE VISION SYSTEMS

CURING SYSTEMS

Selection Guide Safety Light Curtains Safety Control Units Safety Components

SF-C21 SF-C10


PRECAUTIONS FOR PROPER USE

Refer to p.1595 for general precautions.

Time chart [SF-C14EX(-01)]

Test input, Override input

 The diagram shows operation with safety outputs 1 and 2 in auto-reset mode.

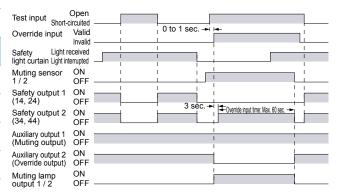


- Safety outputs 1 and 2 are OFF during test input.
- The override function becomes valid when all the conditions listed below are satisfied:
 - An incandescent lamp with 3.6 to 30 W is at least connected to either muting lamp output 1 or 2.
 - The signal is input to either muting sensor 1 or 2.
 - The override input terminal O1 and O2 is short-circuited and the test input terminal T1 / T2 is opened within 1 sec. (3 sec. continuously)

If one of the three conditions above becomes invalid or the timing exceeds 60 sec., the override function becomes invalid.

Blown lamp output

 The diagram shows operation with safety outputs 1 and 2 in auto-reset mode.

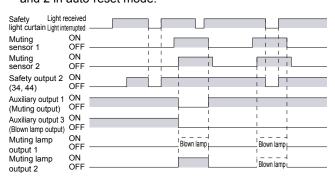

 The lamps are monitored during muting state, and if either of them breaks, auxiliary output 3 is turned OFF.
 If only one lamp breaks, the muting state is maintained, however, if both lamps break, the muting state is canceled immediately.

Others

- This device has been developed / produced for industrial use only.
- When connecting this product to a product other than the connectable input device, the system does not conform to the control category 4 based on ISO 13849-1 (EN ISO 13849-1, JIS B 9705-1).
- The power supply unit of **SF-C10** series uses the electronic fuse which does not require any replacement.
- When the electronic fuse trips, turn off the power supply and eliminate the cause for the overcurrent. After that, turn the power back on.

- The electronic fuse is not meant to be used for equipment that is operated continuously. Note that the specification may not be satisfied by continuous operation.
- Make sure to carry out the wiring in the power supply off condition.
- Wrong wiring will damage the product.
- Verify that the supply voltage variation is within the rating. Note that if a voltage exceeding the rated range is applied, or if an AC power supply is directly connected, the unit may get burnt or damaged.
- The DC power supply unit must satisfy the conditions given below:
- 1) Power supply unit authorized in the region where this device is to be used.
- 2) Power supply unit conforming to EMC Directive and Low-voltage Directive (In case CE conformity is required.)
- 3) Power supply unit conforming to the Low-voltage Directive and with an output of 100 VA or less.
- 4) The frame ground (F.G.) terminal must be connected to ground when using a commercially available switching regulator.
- 5) Power supply unit with an output holding time of 20 ms or more.
- 6) Use an isolation transformer for the DC power supply unit.
- If surges are likely to occur, take countermeasures such as connecting a surge absorber to the origin of the surge.
- 8) Power supply unit corresponding to CLASS 2 (In case UL/c-UL conformity is required.)

<Additional information>

As provided in IEC 60536 (CLASS: Protection against Electric Shook), this power supply should require no ground earth and satisfy the insulation distance by double insulation or reinforced insulation.

If the power supply conforms to Low-voltage Directive and has an output of 100 VA or less, it can be used as a suitable product.

- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.
- This product is not dust-proof / splash proof. Be sure to put this product into a control box having IP54 construction. (Excluding SF-C12)
- · Avoid dust, dirt and steam.
- Take care that the product does not come in direct contact with oil, grease, or organic solvents, such as, thinner, etc.
- Note that this equipment is applicable only in the control circuit grounded in accordance with IEC 60204-1 and JIS B 9960-1, or in the control circuit in which the insulation monitor unit (ground fault detection unit) is included.
- This unit is suitable for indoor use only.
- The seal as shown in the drawing on the below is stuck to the engagement point of unit. If the seal is peeled off or broken, SF-C10 series will not be certified as "Safety equipment" and will not be covered by our guarantee.


Do not open!

If this seal is removed or damaged, the units are not recognized as safety product.

DIMENSIONS (Unit: mm in)

The CAD data can be downloaded from our website.

SF-C11 Control unit 23 **4** 35 Receiver side 25 0.98 48.8 67.3 ± 2.650 Emitter side 130 5.11° 6 = 18 0.709 6 connector 6 0.23 _10 6.5 100 3.937 Suitable for 35 mm 1.378 in width DIN rail

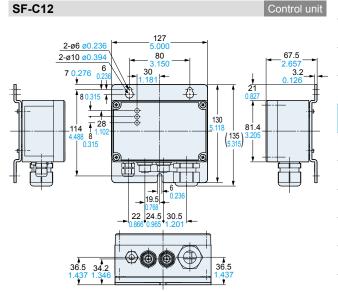

SF-C13

Control unit

6.75

0.266
0.197

0.236

34.5

1.368

3 × 5 = 15


3 × 0.197 = 0.591

91.6
3.606

3.150
0.256
3.150
0.256
3.181

0.512
22.5
0.197
0.886

Suitable for 35 mm 1.378 in width DIN rail

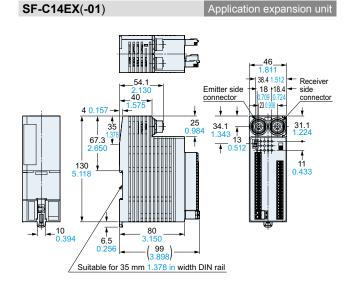

FIBER SENSORS

LASER SENSORS

> PHOTO-ELECTRIC SENSORS WICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE WIDE SAVING

UNITS
WIRE-SAVING
SYSTEMS

MEASURE-MENT SENSORS

STATIC CONTROL DEVICES

LASER MARKERS

HUMAN MACHINE INTERFACES

ENERGY MANAGEMENT SOLUTIONS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

> Selection Guide Safety Light

Safety Control Units Safety Components

SF-C21

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Safety Light Curtains category:

Click to view products by Panasonic manufacturer:

Other Similar products are found below:

F39EJR SFB-HC F39GCN4D F39JG10BL 405250010 406500050 70230-1180 SFB-CCB7 F39-LJ1 F39-LJ2 40552-0100 40553-0150
F39-GWUM F39-PTJ F3SJ-E0465P25 MS-SFD-3-6 SFD-CCB7-MU SF4D-H8 FF-SPS47TRG 120257-0039 120257-0036 120257-0034
120257-0030 120257-0041 120257-0038 120257-0037 120257-0035 120257-0033 120257-0031 120257-0026 120257-0029 120257-0024
120257-0022 120257-0025 120257-0023 120257-0020 120257-0021 120257-0019 120257-0018 120257-0017 120257-0016 120255-0038
120255-0039 120255-0037 120255-0040 F39-JD7A-D 42370 NA1-PK3 MS-SFC-1 SF4C-H20