A handy tool for testing the stability of voltage regulators

# Richtek Load Transient Tool User Manual


December 2016

www.richtek.com






## Load Transient Tool **User Manual**

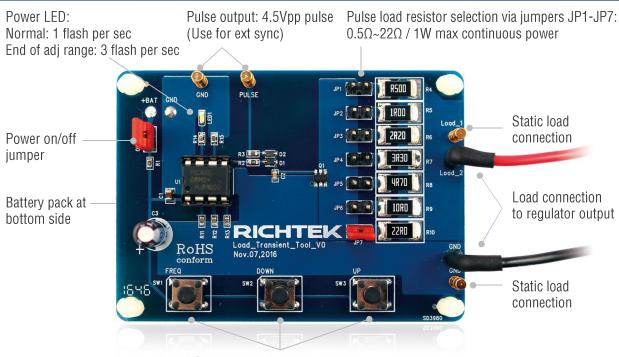

Press UP or DOWN button: Duty-cycle adjust 0.1% ~ 50% Press FREQ + UP or DOWN button: Frequency adjust 15Hz / 61Hz / 244Hz / 976Hz

### Figure 1: Richtek Load Transient Tool connections and functions


The Richtek Load Transient Tool contains a micro controller that switches a MOSFET on and off with a certain duty-cycle. When connected to a voltage regulator output, the MOSFET switches a load resistor on and off, thereby creating a fast changing pulse load. The tool can generate very fast load steps (~500nsec rise/fall times), and can be applied to any voltage regulator output in your system. My measuring the regulator output voltage during the fast load step, the regulator control loop behaviour can be observed.

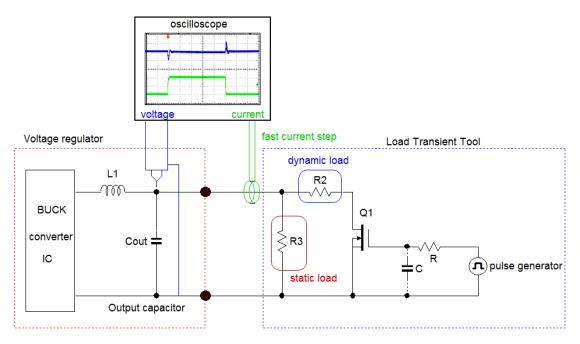



Copyright © 2016 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation RD0004-01 00 December 2016



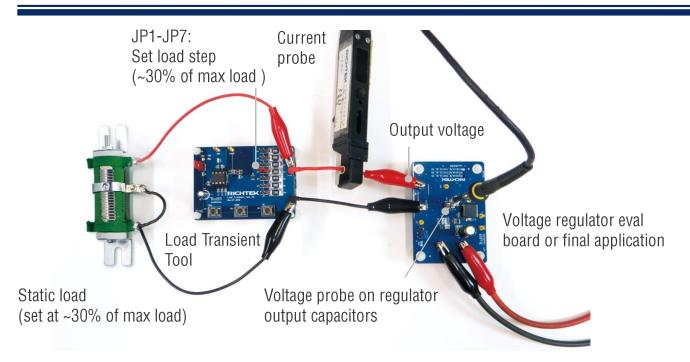

### Figure 3: Practical Load Transient Tool measurement setup

A fast load step will excite the system control loop over a wide frequency range. Control loop instability or under damped response can be seen as output voltage ringing. This is only valid for CCM (continuous current mode) operation, so PSM-CCM transitions should be avoided. Always adjust the static load for CCM operation range during the load step.

Figure 4 shows an example of a poor and a good load step response of a 3.3V / 3A converter. The example on the left side shows that the regulator output voltage has severe ringing after a load transient, indicating that the control loop has marginal stability. In most cases this is related to the converter feedback loop compensation in combination with the output capacitor value.


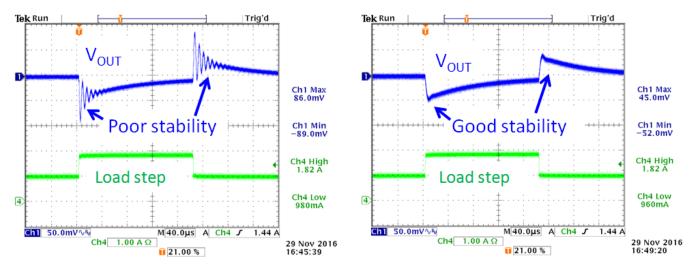


Figure 4: example of poor and good load step response

## RICHTEK your power partner.

Besides control loop stability issues, other resonance effects due to layout parasitic trace inductance, input supply ringing etc. can also be quickly identified with the fast load transient tool.

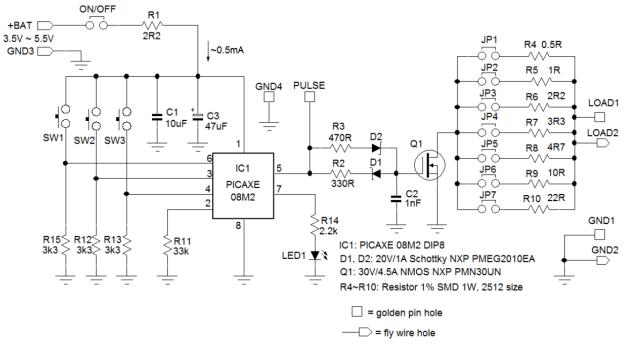

#### Figure 5: Load Transient Tool schematic

The schematic in figure 5 shows the the micro controller which drives the MOSFET switch. The MOSFET gate drive is designed to generate equal switching speeds with ~500nsec rise/fall times. Reducing or removing C2 can increase the switching speed, but the actual load current transient speed will be mostly determined by the wiring inductance between the tool and the application. Especially when testing low voltage supplies (< 2V), it may be necessary to use short, thick wires between the tool and the application to minimize inductance, see figure 6.

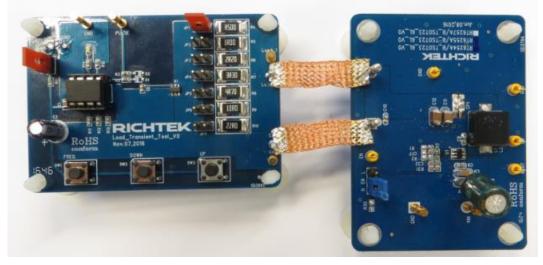


Figure 6: Reducing wire inductance between transient tool and application for faster load step speed.

Copyright © 2016 Richtek Technology Corporation. All rights reserved. RICHTEK is a registered trademark of Richtek Technology Corporation

The tool consists of a load transient board, an adjustable power resistor for setting static load and battery pack, see figure 7.

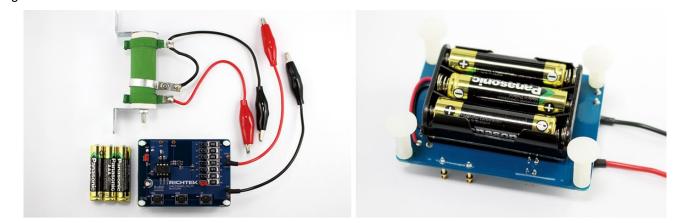


Figure 7: Richtek Fast Load Transient Tool kit.

## Guidelines for use:

- 1. Insert 3x1.5V AAA batteries in the battery holder. Please note the correct polarity.
- 2. Connect the power jumper: Power LED lights for 1 second, and then flashes once per second. (Default start-up frequency is 244Hz with 5% pulse load duty-cycle).
- 3. Connect the Load\_2 & GND connection to regulator output.
- 4. Connect the adjustable 10Ω power resistor to the static load pins. Adjust the slider for low level load current to be in CCM mode (or ~30% of regulator max load).
- Insert the jumper to JP1~JP7 for desired pulse load resistor (suggestion for stability check: V<sub>OUT</sub>/R<sub>LOAD</sub> ≈ 30% of maximum converter load)
- 6. Measure the pulse load current in the load wire and observe voltage regulator output during load transient. Ringing in the voltage waveform can point to insufficient stability.
- 7. The PULSE output can be connected to scope ext sync. Note that doing this can create ground loops and the regulator output voltage reading may be affected.
- 8. The pulse load duty-cycle can be adjusted by pressing UP and DOWN buttons. The adjustment range is 0.1% ~ 50%. The power LED will flash quickly when end of adjustment range is reached. Note that the power dissipation in the pulse load resistors increases when duty-cycle is increased. Do not exceed 1W average power!
- 9. The pulse load frequency can be changed by pressing FREQ + UP or DOWN buttons together. The frequency adjustment range has 4 steps: 15Hz, 61Hz, 244Hz (default) and 976Hz. The power LED will flash quickly when end of adjustment range is reached. Duty-cycle is maintained when changing frequency.
- 10. Remove the power jumper to stop the pulse load generator. Static load will remain.
- 11. Re-insert power jumper will reset pulse load duty-cycle to 5% and frequency to 244Hz.

For more information on converter loop stability and load transient testing, please read the application note AN038 "DC/DC converter testing with Fast Load Transient"

## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Richtek manufacturer:

Other Similar products are found below :

EVB\_RT5047GSP\_EVB\_RT7275GQW\_EVB\_RT7297CHZSP\_RT9080N-08GJ5\_EVB\_RT5047AGSP\_EVB\_RT7243GQW EVB\_RT7272BGSP\_RT8097AHGE\_EVB\_RT7247CHGSP\_EVB\_RT7276GQW\_EVB\_RT8293AHZSP\_EVB\_RT6200GE EVB\_RT7235GQW\_EVB\_RT7237AHGSP\_EVB\_RT7251AZQW\_RT5047AGSP\_EVB\_RT7272AGSP\_EVB\_RT7237CHGSP EVB\_RT7247AHGSP\_EVB\_RT7252BZSP\_EVB\_RT7280GQW\_EVB\_RT8292AHZSP\_EVB\_RT8297BZQW\_EVB\_RT7231GQW EVB\_RT7232GQW\_EVB\_RT7236GQW\_EVB\_RT7250BZSP\_EVB\_RT7251BZQW\_EVB\_RT7279GQW\_EVB\_RT8008GB\_RT8207MZQW RT8296AHZSP\_RT9011-JGPJ6\_RT8258GE\_RT5711AHGQW\_RT9081AGQZA(2)\_RT6154BGQW\_RT7238BGQUF\_RT5788AGJ8F RT8812AGQW\_RT6278BHGQUF\_RT7270HZSP\_RD0004\_RT5789AGQUF\_RT9076-18GVN\_RT9193-15GU5\_RT3602AJGQW RT8296BHZSP\_RT6214AHGJ6F\_RT9276GQW(Z00)