



Pi Hole Ad Detection Display with PiTFT

Created by Brent Rubell



<https://learn.adafruit.com/pi-hole-ad-pitft-tft-detection-display>

Last updated on 2021-11-15 07:15:34 PM EST

Table of Contents

Overview	3
• What's Pi-hole?	3
• Parts	4
• PiTFT Display	4
• Other Parts	6
Raspberry Pi Setup	7
Install Pi Hole	8
• Pre-Check	8
• Change Hostname	8
• Run Pi Hole Installer	9
• Configuration	11
• Test Admin Page	13
• Test Blocking	13
PiTFT Configuration	14
• Assembly	14
• PiTFT Configuration	16
• Easy Single Command Install	17
Install PADD	18
• Open PADD at Pi Bootup	19
• Turn off the PiTFT at Night	20
• Smaller Pi Displays	22
Using PADD and Pi Hole	22
• Configure and Test Ad Blocking	22
• Router Configuration for Pi-Hole	24
• Updating PADD	25
• Troubleshooting	25

Overview



We already have a guide on using [Pi-Hole with the Raspberry Pi Zero W \(https://adafru.it/BHx\)](https://adafru.it/BHx) to send advertisements on your network into a black hole.

But, the PiOLED is small and we want to monitor more statistics at a glance. While we could open the web console to monitor Pi-hole, we can't show that to friends easily. Plus, who doesn't want more shiny, blinky, networking hardware?

We're going to install [PADD \(https://adafru.it/BHy\)](https://adafru.it/BHy) (Pi-hole Ad Detection Display) and [Pi-hole \(https://adafru.it/yeE\)](https://adafru.it/yeE) on the Adafruit 2.8" or 3.5" PiTFT Plus to display useful and fun statistics such as Amount of Pi-holed Advertisements, and the top offending domain attempting to serve pesky advertisements to your network.

What's Pi-hole?

[Pi-hole \(https://adafru.it/yeE\)](https://adafru.it/yeE) is an open-source project which let's your Pi act as a DNS (Domain Name Server). While you may have an ad-blocker installed on your browser, do you have one on your phone? What about blocking in-application advertisements in your mobile games? On your Smart TV? On your smart fridge?

Pi-hole lets you block ads from any device configured to use it as a Domain Name Server. When an advertisement (i.e: ads.adserver.com) tries to resolve it's IP address,

Pi-hole will return nothing back. You'll never connect to the advertisement server and the ad won't even load. This makes it quicker, faster, and use less data than conventional ad blockers.

Parts

You'll need the following parts to get up-and-running with Pi-hole and PADD

You need a Raspberry Pi with built in wireless. The Raspberry Pi 3 line (3, 3 B, 3 B+) devices are wireless-ready without external configuration:

1 x [Raspberry Pi 3](https://www.adafruit.com/product/3775)

<https://www.adafruit.com/product/3775>

Model B+ - 1.4GHz Cortex-A53 with 1GB RAM

You'll also need a power supply for your Pi and a MicroSD card for holding the Pi's OS and it's applications:

1 x [5V 2.4A Power Supply](https://www.adafruit.com/product/1995)

<https://www.adafruit.com/product/1995>

5V 2.4A Switching Power Supply with 20AWG MicroUSB Cable

1 x [8GB MicroSD Card](https://www.adafruit.com/product/2692)


<https://www.adafruit.com/product/2692>

8GB Class 10 SD/MicroSD Memory Card - SD Adapter Included

PiTFT Display


To use the full version of PADD, you'll need a PiTFT supporting a resolution of at least 480x320.

If you're using a display smaller than 480x320, PADD will boot into a mini mode which displays way less statistics about the network. To view PADD, we suggest using the PiTFT Plus 3.5":

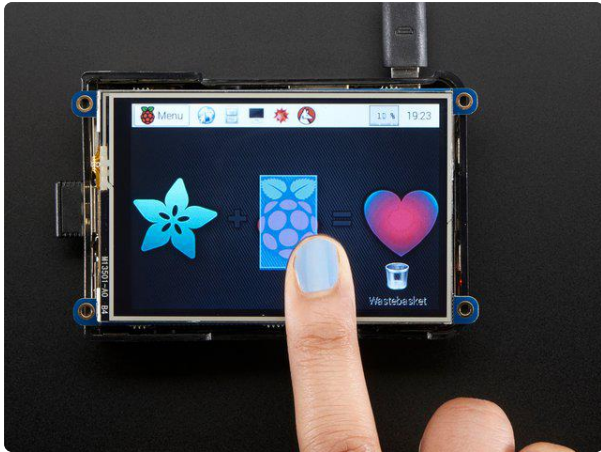


PiTFT Plus 480x320 3.5"
TFT+Touchscreen for Raspberry Pi
Is this not the cutest, little display for the Raspberry Pi? It features a 3.5" display with 480x320 16-bit color pixels and a resistive touch overlay
<https://www.adafruit.com/product/2441>


If you happen to have one of our [2.8" or 2.4" PiTFT \(https://adafru.it/BHE\)](https://adafru.it/BHE)'s, those will work too

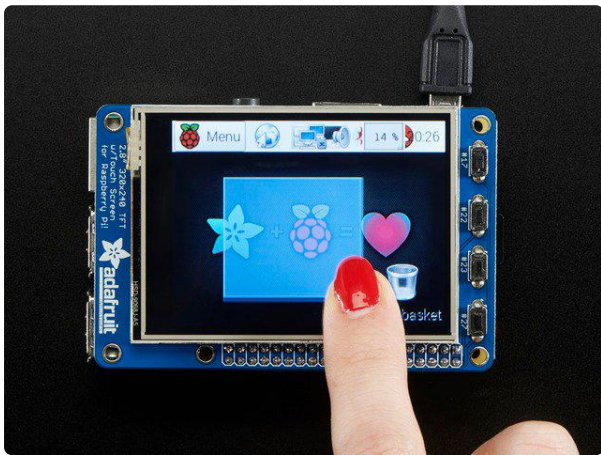

PiTFT Plus Assembled 320x240 2.8" TFT + Resistive Touchscreen
Is this not the cutest little display for the Raspberry Pi? It features a 2.8" display with 320x240 16-bit color pixels and a resistive touch overlay. The plate uses the high...
<https://www.adafruit.com/product/2298>

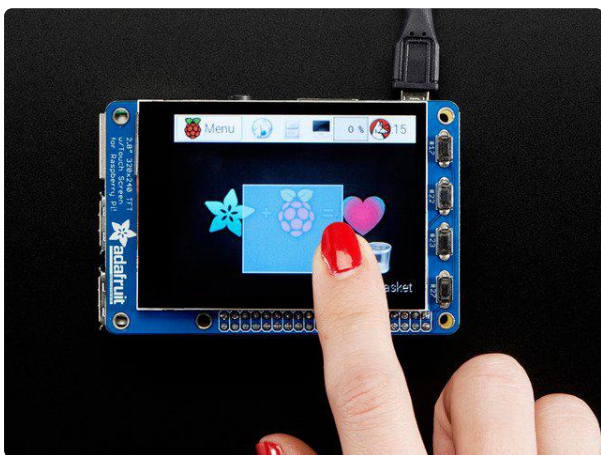

Adafruit PiTFT Plus 320x240 2.8" TFT + Capacitive Touchscreen
Is this not the cutest little display for the Raspberry Pi? It features a 2.8" display with 320x240 16-bit color pixels and a capacitive touch overlay. That's right,...
<https://www.adafruit.com/product/2423>

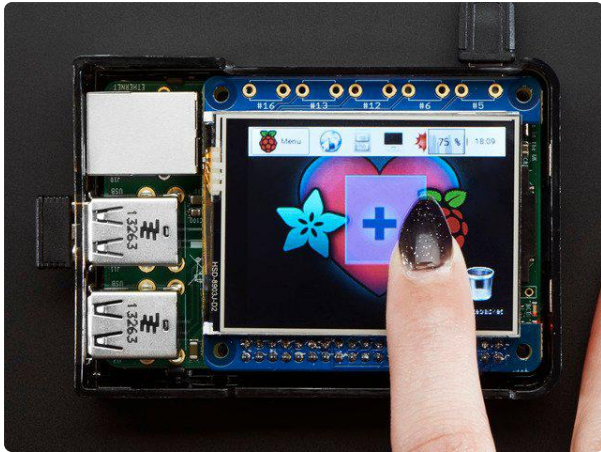

[Adafruit PiTFT 2.4\"/>](https://www.adafruit.com/product/2455)

Is this not the cutest little display for the Raspberry Pi? It features a 2.4\"/>

<https://www.adafruit.com/product/2455>

Other Parts

We used a Pi 3 case to protect our Pi from aesthetics and to protect our Pi against scratches, bumps, and falls. The case also makes the Pi-hole look like a networking appliance.



[Adafruit Raspberry Pi B+ / Pi 2 / Pi 3 Case - Smoke Base](https://www.adafruit.com/product/2258)

It took awhile to perfect - but that's okay since we can now safely say that the Adafruit case for Raspberry Pi Model B+ / Pi 2 / Pi 3 is The...

<https://www.adafruit.com/product/2258>

If you don't have a way to burn the OS image onto a micro sd card from your computer, we suggest picking up a USB MicroSD reader/writer.




[USB MicroSD Card Reader/Writer - microSD / microSDHC / microSDXC](https://www.adafruit.com/product/939)

This is the cutest little microSD card reader/writer - but don't be fooled by its adorableness! It's wicked fast and supports up to 64 GB SDXC cards! Simply slide the card into...

<https://www.adafruit.com/product/939>

Raspberry Pi Setup

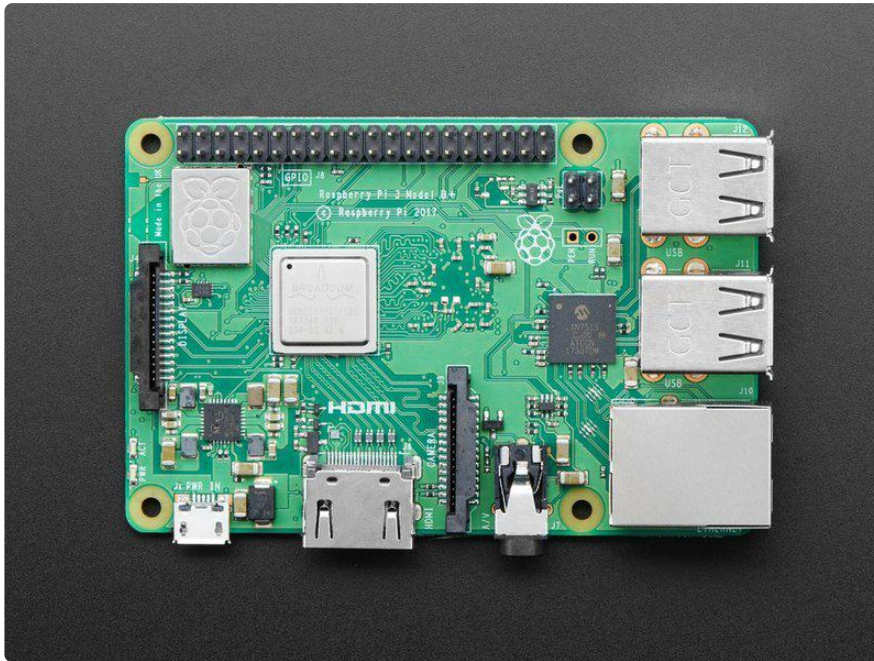

We'll need to set up the Pi with an operating system (OS), WiFi, and secure login (SSH) support before we install Pi Hole.

We have a guide on how to set up your Pi Zero W 'headless' which is how we recommend you get started. The Pi 3 (and up) and the Pi Zero W both have built in WiFi, so our guide can be used for both platforms:

Set up your Pi

<https://adafru.it/BHz>

Make sure you are using Raspbian LITE and not stretch for the OS setup.

Here's the quick-start for people with some experience:

1. Download the [latest 'Lite' Raspbian \(https://adafru.it/fQi\)](https://adafru.it/fQi) to your computer
2. [Burn the Lite Raspbian to your MicroSD card \(https://adafru.it/dDL\)](https://adafru.it/dDL) using your computer
3. [Re-plug the SD card into your computer \(don't use your Pi yet!\) and set up your wifi connection by editing supplicant.conf \(https://adafru.it/yuD\)](https://adafru.it/yuD)
4. [Activate SSH support \(https://adafru.it/yuD\)](https://adafru.it/yuD)
5. Plug the SD card into the Pi 3
6. If you have an HDMI monitor we recommend connecting it so you can see that the Pi is booting OK

7. Plug in power to the Pi 3 - you will see the green LED flicker a little. The Pi 3 will reboot while it sets up so wait a good 10 minutes
 8. [If you are running Windows on your computer, install Bonjour support so you can use .local names, you'll need to reboot Windows after installation \(https://adafru.it/IPE\)](https://adafru.it/IPE)
 9. [You can then ssh into raspberrypi.local \(https://adafru.it/jvB\)](https://adafru.it/jvB)
-


Install Pi Hole

Use the following instructions to install Pi Hole:

<https://github.com/pi-hole/pi-hole/#one-step-automated-install> (<https://adafru.it/PqC>)

Pre-Check

OK once you have set your Pi up and the WiFi is connecting to your home or office network, and you can `ssh` into it, continue with these easy steps! If you cannot connect via `ssh` yet, go back and read some of our guides until you are able to log into your Pi.

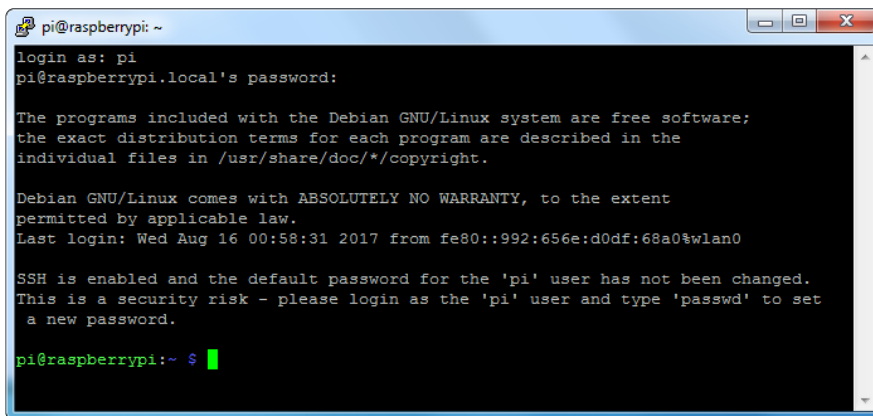

```
pi@raspberrypi: ~
login as: pi
pi@raspberrypi.local's password:

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
Last login: Wed Aug 16 00:58:31 2017 from fe80::992:656e:d0df:68a0%wlan0


SSH is enabled and the default password for the 'pi' user has not been changed.
This is a security risk - please login as the 'pi' user and type 'passwd' to set
a new password.

pi@raspberrypi:~ $
```

Change Hostname


I like to do this first so I don't get confused between all the different Pi's in the house

Edit the hostname with `sudo nano /etc/hostname` and put something else on that first line, like pi-hole

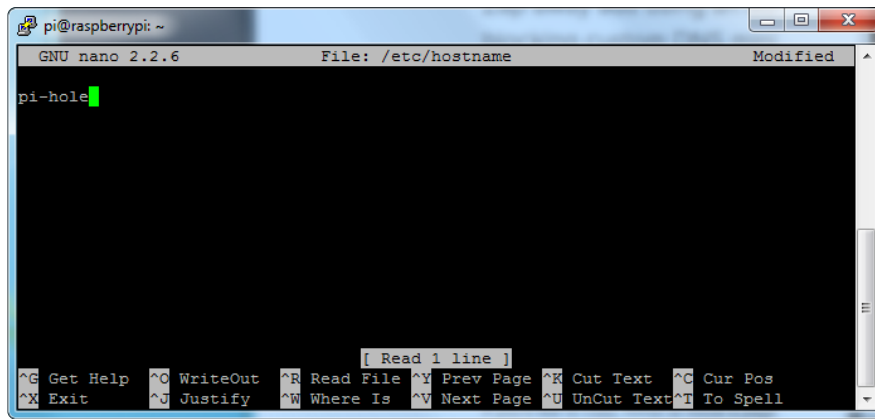

```
pi@raspberrypi: ~
GNU nano 2.2.6 File: /etc/hostname Modified
pi-hole
[ Read 1 line ]
^G Get Help ^O WriteOut ^R Read File ^Y Prev Page ^K Cut Text ^C Cur Pos
^X Exit ^J Justify ^W Where Is ^V Next Page ^U Uncut Text ^T To Spell
```

Also change it in the hosts file with `sudo nano /etc/hosts` to match the same name. It's probably the last line:

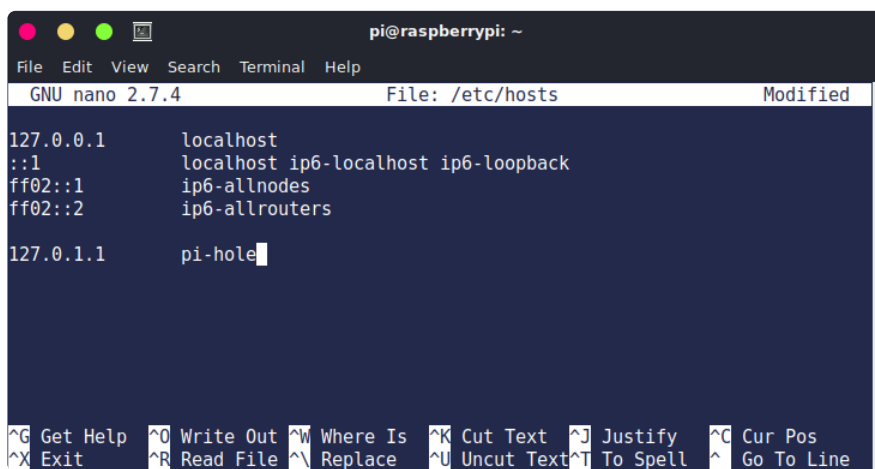

```
pi@raspberrypi: ~
File Edit View Search Terminal Help
GNU nano 2.7.4 File: /etc/hosts Modified
127.0.0.1 localhost
::1 localhost ip6-localhost ip6-loopback
ff02::1 ip6-allnodes
ff02::2 ip6-allrouters
127.0.1.1 pi-hole
^G Get Help ^O Write Out ^W Where Is ^K Cut Text ^J Justify ^C Cur Pos
^X Exit ^R Read File ^N Replace ^U Uncut Text ^T To Spell ^L Go To Line
```

Reboot and when you ssh in again, use `pi-hole.local`

Now's also a good time to change the Pi's password with `passwd`


Run Pi Hole Installer

There's more information on how installation at <https://pi-hole.net/> (<https://adafru.it/yuE>) - as of the writing of this guide, its easier to just run:


```
curl -sSL https://install.pi-hole.net | bash
```

It will take quite a while to install, and may seem to 'hang' at points. Just let it do its thing for about 20 minutes!


Configuration

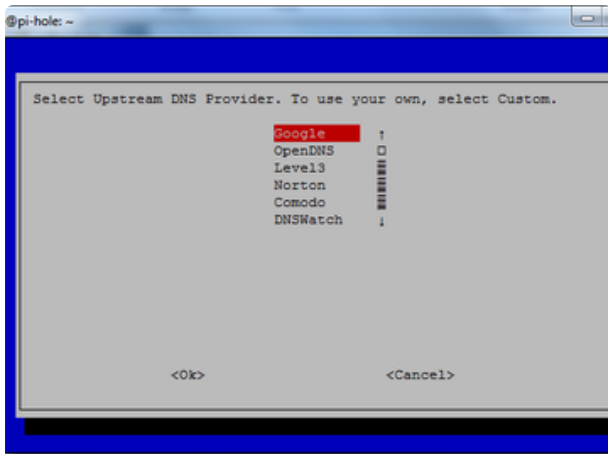


Pick who will be the upstream DNS (for non-ad blocked sites) - Google is fine and will probably be up all the time

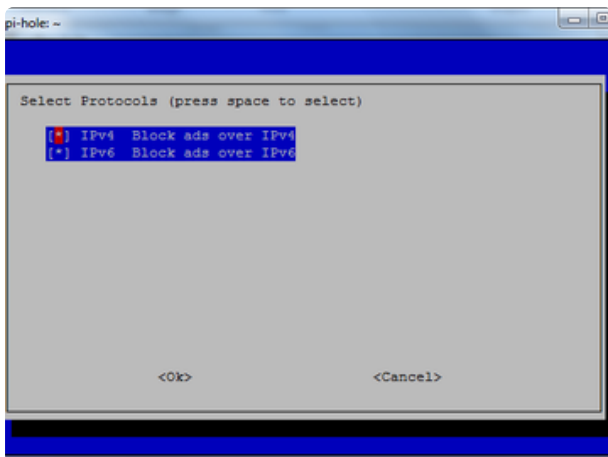

99% of people will use IPv4 - if you need IPv6 you'd know!

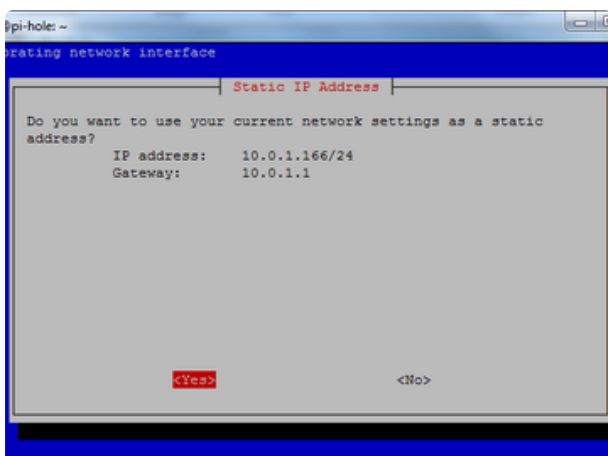


The installer will automatically try to set the dynamic IP address it got from your router to be fixed. This works well enough, if you have an advanced network set up, you can configure a custom IP address

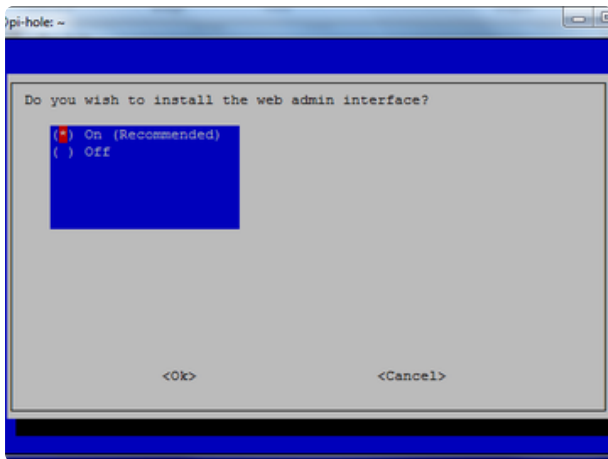


The Web Interface is kinda cool, and is password protected. We'll be showing most of the stats on the little OLED but we still need the API to be running so keep this on

It will keep installing! Just hold tight...

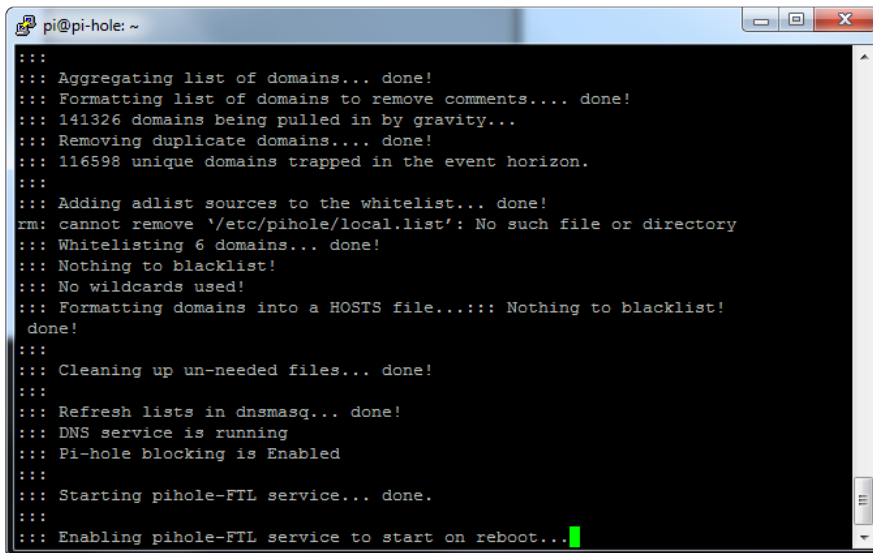


When its done you'll get this final config screen! Copy & paste the password into another window for now

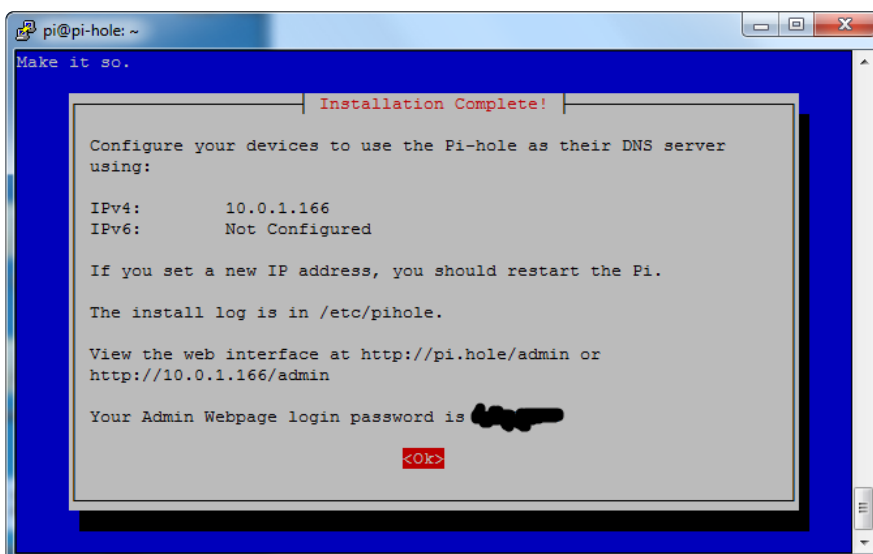


Test Admin Page

On your desktop computer or tablet, visit <http://pi-hole.local/admin/> (<https://adafruit.it/yuF>) And you should see an administration panel!

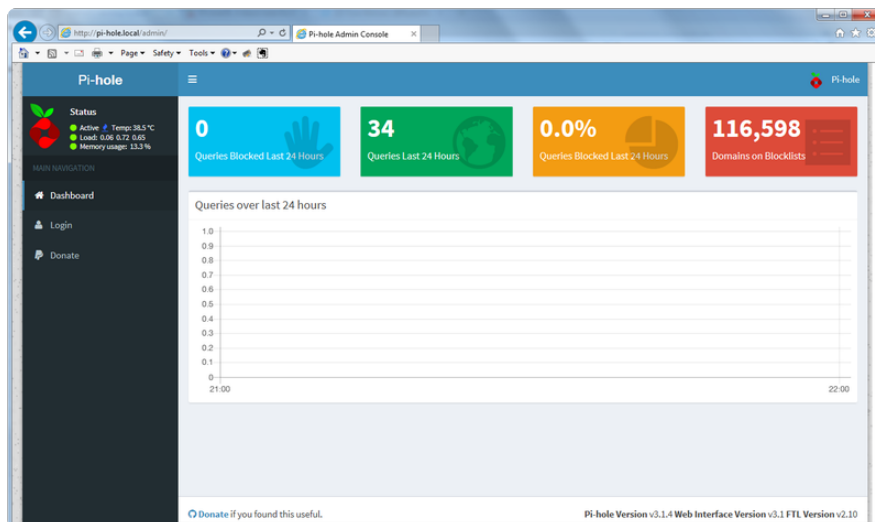

Test Blocking

On your tablet, phone, computer, etc - Set up your DNS server in the network settings to be the IP address of the Pi

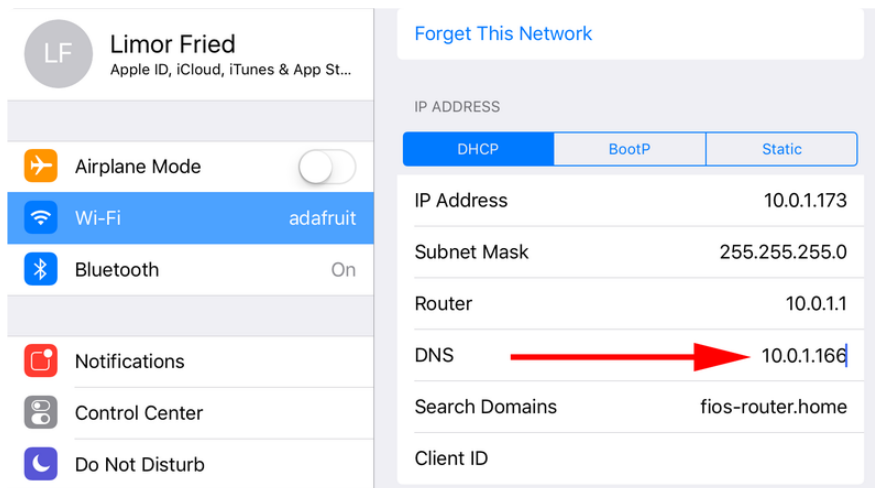

You may need to restart your network or browser to have it kick in, also there may be some cached ads so don't worry if not everything is blocked. Visit your favorite site with ads (not adafruit.com cuz we don't have any! :) and see the difference!

The screenshot shows the EE Times website interface. At the top, there is a Rackspace banner with the text "WITH MORE THAN 250+ DEDICATED EXPERTS." and the Rackspace logo. Below this is the EE Times logo and the tagline "Connecting the Global Electronics Community". A search bar is located to the right of the logo. Navigation links include "Home", "News", "Opinion", "Messages", "Authors", "Video", "Slideshows", "Teardown", "Education", and "EELife". A secondary navigation bar lists various technology categories: "designlines", "Android", "Automotive", "Embedded", "Industrial Control", "Internet of Things", "MCU", "Medical", "Memory", "Open Source", and "PCB". A "BREAKING NEWS" banner is visible, with the headline "NEWS & ANALYSIS: Gen-Z Points to New Memories".

The main content area features a "designlines TEST & MEASUREMENT" section. The primary article is titled "A Current Sensing Tutorial—Part II: Devices" by Pete Semig and Collin Wells, Texas Instruments. It includes a "Design How-To" label, a "NO RATINGS" notice, and social media sharing options (Like, Tweet, Share, 1, G+). The article text discusses the fundamentals of current sensing, accuracy, PCB layout, and various amplifier types (operational, difference, instrumentation, and current shunt monitors). A sub-section titled "Operational amplifiers" explains the limitations of op-amps for current sensing, such as input common-mode voltage and feedback requirements.


To the right of the article is a large blue advertisement for the "EXECUTIVE CONFERENCE" titled "SHIFT: Not the Same Old Shift". The conference is scheduled for October 22-24, 2017, and includes a "Register Today" button and the ECIA logo with the tagline "Connect. Influence. Optimize."

Now that you've got that done, lets continue and install the display!

PiTFT Configuration

Assembly

If you are using a case like the [Adafruit Raspberry Pi Case \(https://adafru.it/ej5\)](https://adafru.it/ej5), snap-fit the Pi into the case:

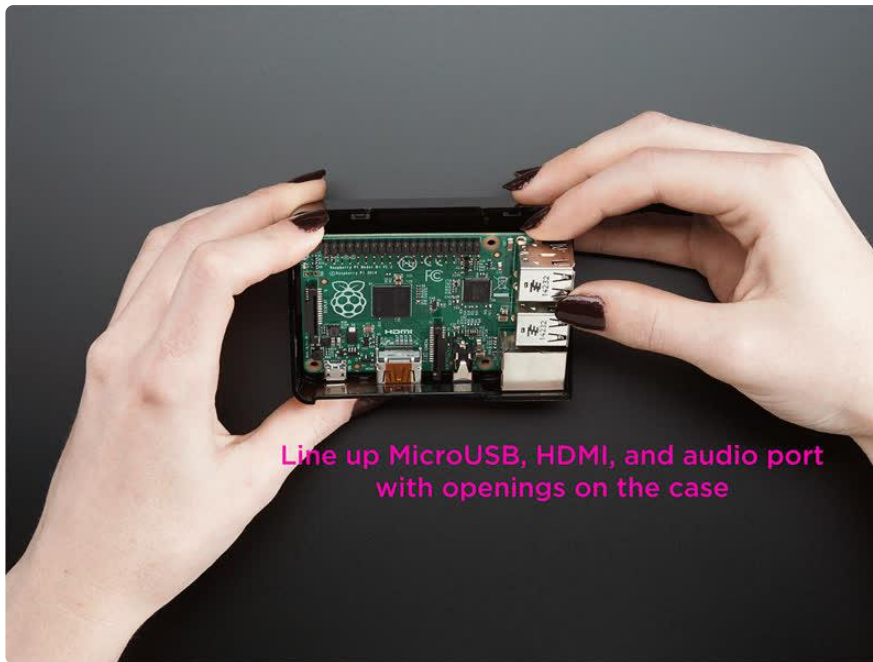


Leave the clear top off, we'll need to access the GPIO header for the PiTFT.

The PiTFT's four mounting ears can be used to attach the display to a bezel. But, we'll be snapping them off with pliers (they're perforated) for a flush-fit with the case/



Position the PiTFT over the 2x20 GPIO connector and press downwards. Make sure the PiTFT's header is flush against the GPIO header.

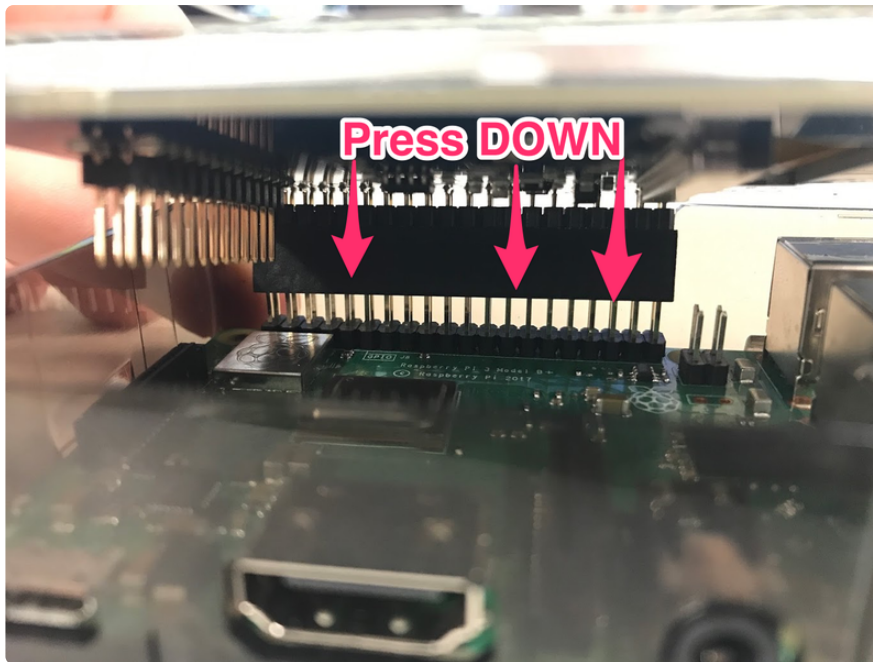

Now that our PiTFT is assembled, let's configure the display to work with our Pi.

PiTFT Configuration



You'll need to perform some configuration to get the PiTFT up and running. We'll do this through the PiTFT installer script.

This script will do all the work for you, and install both device tree overlay support as well as configure rotation and any HDMI mirroring. PiTFT no longer needs any custom kernels or modules, so you can continue to update/upgrade your Pi and it will work with the most recent releases.

To download the script, click the link below and come back to this page when you're done:

Download PiTFT Easy Install

<https://adafru.it/FJ9>

Easy Single Command Install

The latest script allows you to specify all of your options within the command so you can sit back and watch the installation.

For the PiTFT 3.5" Resistive touchscreen with a rotation of 270 degrees (so the PiTFT can sit on your desk while the USB cable is plugged in), use the following command:

```
sudo python3 adafruit-pitft.py --display=35r --rotation=270 --install-type=console
```

If you're not using the 3.5" PiTFT, follow this page to select a command for your display type. Remember to modify the `--rotation` parameter to `--rotation=270`:
<https://learn.adafruit.com/adafruit-pitft-3-dot-5-touch-screen-for-raspberry-pi/easy-install-2#easy-single-command-install-options-3074227-9>

Say Yes to the question `Would you like the console to appear on the PiTFT display`

```
PiTFT python-pip is already the newest version (18.1-5+rpt1).
PiTFT python-spidev is already the newest version (20190221-182651-1).
PiTFT 0 upgraded, 0 newly installed, 0 to remove and 0 not upgraded.
PiTFT Looking in indexes: https://pypi.org/simple, https://www.piwheels.org/simple
PiTFT Requirement already satisfied: evdev in /usr/local/lib/python3.7/dist-packages (1.3.0)
PiTFT Updating /boot/config.txt...
Already have an adafruit-pitft-helper section in /boot/config.txt.
Removing old section...
PiTFT Updating SysFS rules for Touchscreen...
PiTFT Updating TSLib default calibration...
Would you like the console to appear on the PiTFT display? [y/n]
```

Then, reboot the Pi. You'll see the console appear on the Pi. Don't worry if the Pi-hole doesn't display, we're going to configure that next.

Open PADD at Pi Bootup


Next, we're going to set PADD to open automatically on your PiTFT when we start our Pi.

Open `~/.bashrc`:

```
nano ~/.bashrc
```

Navigate to the end of the file (by pressing the down arrow key) and add the following text:

```
# Run PADD
# If we're on the PiTFT screen (ssh is xterm)
if [ "$TERM" == "linux" ] ; then
  while :
  do
    ./padd.sh
    sleep 1
  done
fi
```

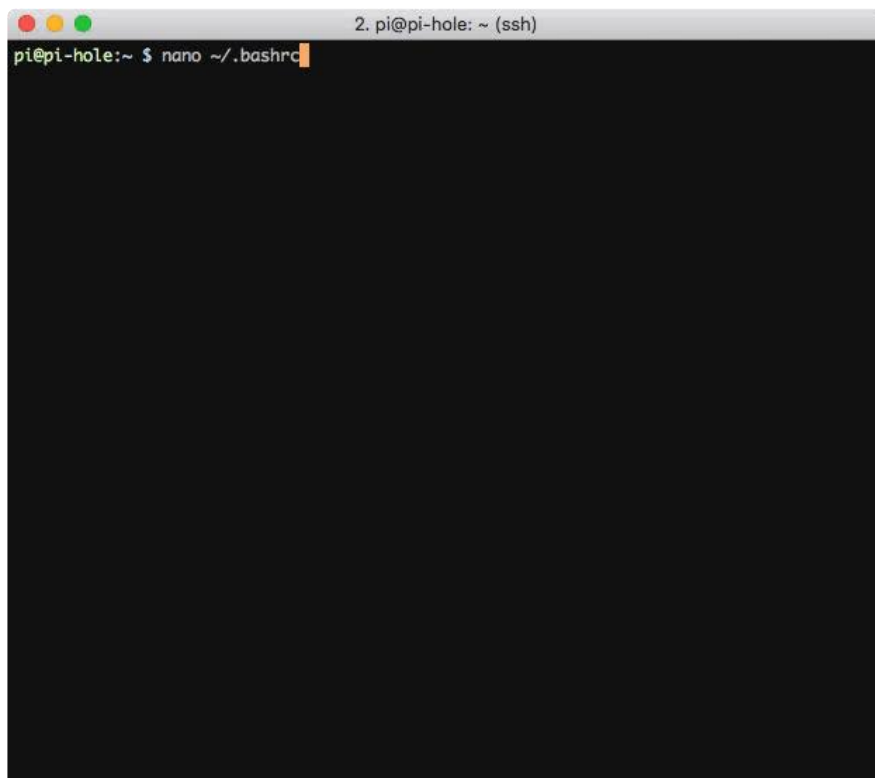

Save (control+O) the configuration and exit (control+X) nano to be brought back to the terminal.

Turn off the PiTFT at Night

The PiTFT is bright and doesn't need to be powered-on at night, so let's put it to sleep until we wake up.

Edit cron as root:

```
sudo crontab -e
```

Select nano as an editor by pressing the 2 key.

```
pi@pi-hole:~ $ sudo crontab -e
no crontab for root - using an empty one

Select an editor. To change later, run 'select-editor'.
 1. /bin/ed
 2. /bin/nano      <---- easiest
 3. /usr/bin/vim.tiny

Choose 1-3 [2]: 2
```

Scroll beneath the commented text (#) and enter the following:

```
# PADD Sleep
# Turn off the PiTFT+ at midnight
00 00 * * * sh -c 'echo "0" &gt; /sys/class/backlight/soc\:backlight/brightness'
# Turn on the PiTFT+ at 8:00 am
00 08 * * * sh -c 'echo "1" &gt; /sys/class/backlight/soc\:backlight/brightness'
```

```
GNU nano 2.7.4      File: /tmp/crontab.CfbmGY/crontab      Modified
#
# For example, you can run a backup of all your user accounts
# at 5 a.m every week with:
# 0 5 * * 1 tar -zcf /var/backups/home.tgz /home/
#
# For more information see the manual pages of crontab(5) and cron(8)
#
# m h dom mon dow   command
# PADD Sleep
# Turn off the PiTFT+ at midnight
00 00 * * * sh -c 'echo "0" > /sys/class/backlight/soc\:backlight/brightness'
# Turn on the PiTFT+ at 8:00 am
00 08 * * * sh -c 'echo "1" > /sys/class/backlight/soc\:backlight/brightness'
```

Save (control+O) the configuration and exit (control+X) nano to be brought back to the terminal.

Reboot the Pi to apply the new changes by running:

```
sudo reboot
```

When your Pi reboots, the TFT should boot into PADD:



After PADD starts, it should go into display mode. If your PADD is displaying statistics about your network, congrats! We're all set up and ready to test our advertisement-blocking-pi.



Smaller Pi Displays


You can also use this guide with smaller displays, like the [PiTFT 2.8"](https://adafru.it/CFo) (<https://adafru.it/CFo>). The full PADD display is unsupported by this screen - but don't worry - it'll automatically display a smaller, mini PADD interface.



Using PADD and Pi Hole

Configure and Test Ad Blocking

PADD will display the Pi-hole's IP address underneath its Network tab:

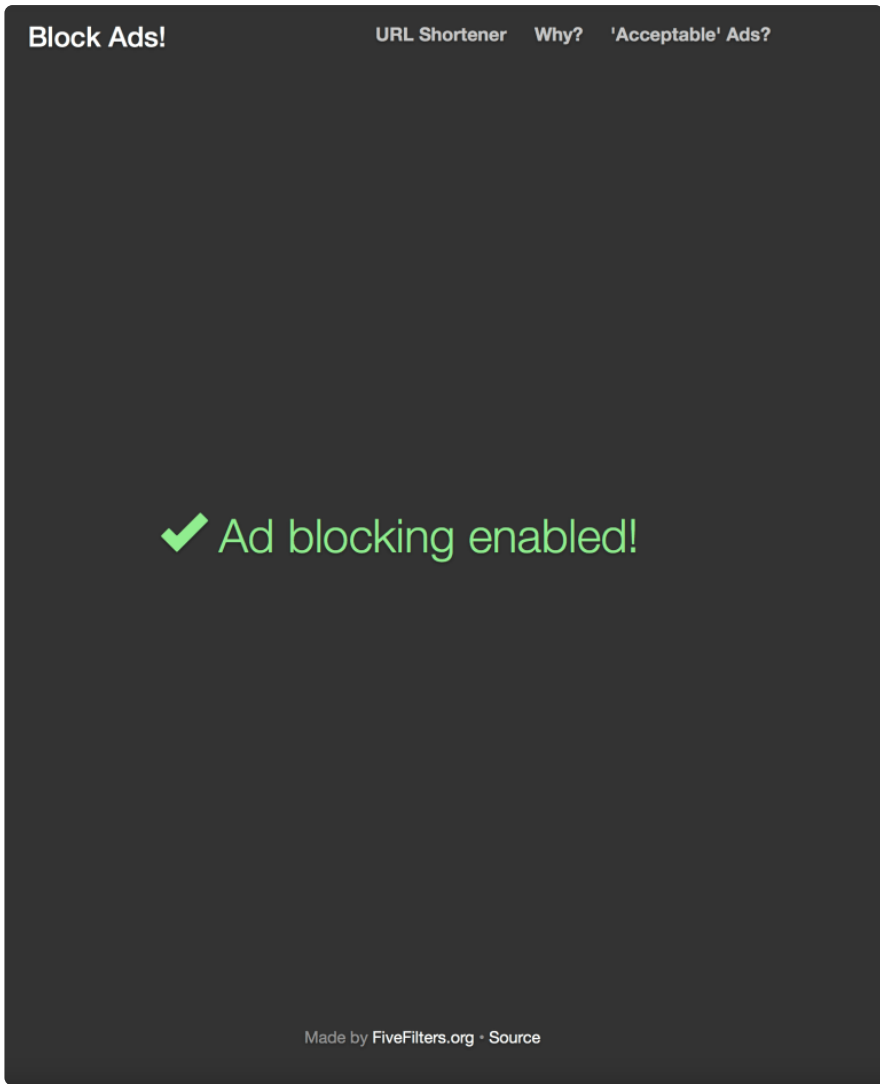

You can also visit some of your favorite sites or load a mobile application which would normally have in-application advertisements to test your Pi-hole.

Router Configuration for Pi-Hole

DHCP Server Setting

Router Name :

DHCP Server: **Enabled** **Disabled**

Start IP Address: . . .

Maximum Number of Users:

IP Address Range: . . . to

Client Lease Time: minutes (0 means one day)

Static DNS 1: . . .

Static DNS 2: . . .

Static DNS 3: . . .

WINS: . . .

Don't want to configure each device on your network separately? Have a device that doesn't allow you to enter DNS settings? [You can configure your router's DHCP options to force clients to use Pi-hole as their DNS server. \(https://adafru.it/BHC\)](https://adafru.it/BHC)

Want to switch back to a terminal? Hit CTRL+C

Updating PADD

If your PADD displays Update avail., you'll need to update it. PADD only uses stable builds of Pi-hole and FTLDNS, so you can rest assured that your internet won't break.

We can do this easily by SSH'ing into our Pi-Hole:

```
ssh pi@pi-hole.local
```

Log in. Then, navigate to our home directory:

```
cd ~
```

And update the version of PADD on your Pi by running:

```
wget -N https://raw.githubusercontent.com/jpmck/PADD/master/padd.sh
```

After the update completes, restart your Pi by running:

```
sudo reboot
```

Once restarted, PADD should display "Pi-hole is up-to-date".

Troubleshooting

My Pi-Hole shows an error: `bash warning: setlocale LC_ALL: cannot change locale (en_US.UTF-8)`

Enter the following in your terminal to launch raspi-config:

```
sudo raspi-config
```

From the menu, select: Localization Options -> Change Locale.

Select Generate en_US.UTF-8 UTF-8 , and walk through the prompts.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Display Development Tools](#) category:

Click to view products by [Adafruit](#) manufacturer:

Other Similar products are found below :

[KIT 60121-3](#) [S5U13U11P00C100](#) [MAX14521EEVKIT](#) [KIT 60145-3](#) [S5U13748P00C100](#) [DFR0413](#) [3248](#) [DLPLCR90EVM](#)
[MAX20069EVKIT#](#) [KIT95000-3](#) [LCD-16396](#) [PIM370](#) [1109](#) [MCIMX-LVDS1](#) [MIKROE-2449](#) [MIKROE-2453](#) [131](#) [DEV-13628](#) [1590](#)
[MIKROE-2269](#) [1601](#) [1770](#) [1947](#) [1983](#) [1987](#) [2050](#) [2218](#) [2219](#) [2260](#) [2345](#) [2418](#) [2423](#) [2454](#) [2455](#) [2478](#) [2674](#) [SK-220RD-PI](#) [FIT0477](#) [333](#)
[1774](#) [334](#) [TE-M321-SDK](#) [DFR0428](#) [cs-epapersk-03](#) [338](#) [DEV-14442](#) [FIT0478](#) [cs-paperino-01](#) [OM-E-OLE](#) [ALTHSMCMIPILCD](#)