

BK PRECISION[®]



Model: 600B

SLA Battery Capacity Analyzer

USER MANUAL

Safety Summary

The following safety precautions apply to both operating and maintenance personnel and must be followed during all phases of operation, service, and repair of this instrument.

WARNING

Before applying power to this instrument:

- Read and understand the safety and operational information in this manual.
- Apply all the listed safety precautions.
- Verify that the voltage selector at the line power cord input is set to the correct line voltage. Operating the instrument at an incorrect line voltage will void the warranty.
- Make all connections to the instrument before applying power.
- Do not operate the instrument in ways not specified by this manual or by B&K Precision.

Failure to comply with these precautions or with warnings elsewhere in this manual violates the safety standards of design, manufacture, and intended use of the instrument. B&K Precision assumes no liability for a customer's failure to comply with these requirements.

Category rating

The IEC 61010 standard defines safety category ratings that specify the amount of electrical energy available and the voltage impulses that may occur on electrical conductors associated with these category ratings. The category rating is a Roman numeral of I, II, III, or IV. This rating is also accompanied

by a maximum voltage of the circuit to be tested, which defines the voltage impulses expected and required insulation clearances. These categories are:

Category I (CAT I): Measurement instruments whose measurement inputs are not intended to be connected to the mains supply. The voltages in the environment are typically derived from a limited-energy transformer or a battery.

Category II (CAT II): Measurement instruments whose measurement inputs are meant to be connected to the mains supply at a standard wall outlet or similar sources. Example measurement environments are portable tools and household appliances.

Category III (CAT III): Measurement instruments whose measurement inputs are meant to be connected to the mains installation of a building. Examples are measurements inside a building's circuit breaker panel or the wiring of permanently-installed motors.

Category IV (CAT IV): Measurement instruments whose measurement inputs are meant to be connected to the primary power entering a building or other outdoor wiring.



Do not use this instrument in an electrical environment with a higher category rating than what is specified in this manual for this instrument.



You must ensure that each accessory you use with this instrument has a category rating equal to or higher than the instrument's category rating to maintain the instrument's category rating. Failure to do so will lower the category rating of the measuring system.

Do not operate in an explosive or flammable atmosphere



Do not operate the instrument in the presence of flammable gases or vapors, fumes, or finely-divided particulates.



The instrument is designed to be used in office-type indoor environments. Do not operate the instrument

- In the presence of noxious, corrosive, or flammable fumes, gases, vapors, chemicals, or finely-divided particulates.
- In relative humidity conditions outside the instrument's specifications.
- In environments where there is a danger of any liquid being spilled on the instrument or where any liquid can condense on the instrument.
- In air temperatures exceeding the specified operating temperatures.
- In atmospheric pressures outside the specified altitude limits or where the surrounding gas is not air.

- In environments with restricted cooling air flow, even if the air temperatures are within specifications.
- In direct sunlight.

CAUTION

This instrument is intended to be used in an indoor pollution degree 2 environment. The operating temperature range is 0 °C to 40 °C and the operating humidity range is $\leq 95\%$ relative humidity with no condensation allowed.

Measurements made by this instrument may be outside specifications if the instrument is used in non-office-type environments. Such environments may include rapid temperature or humidity changes, sunlight, vibration and/or mechanical shocks, acoustic noise, electrical noise, strong electric fields, or strong magnetic fields.

Do not operate instrument if damaged

WARNING

If the instrument is damaged, appears to be damaged, or if any liquid, chemical, or other material gets on or inside the instrument, remove the instrument's power cord, remove the instrument from service, label it as not to be operated, and return the instrument to B&K Precision for repair. Notify B&K Precision of the nature of any contamination of the instrument.

Clean the instrument only as instructed

WARNING

Do not clean the instrument, its switches, or its terminals with contact cleaners, abrasives, lubricants, solvents, acids/bases, or other such chemicals. Clean the instrument only with a clean dry lint-free cloth or as instructed in this manual.

Not for critical applications

⚠ WARNING

This instrument is not authorized for use in contact with the human body or for use as a component in a life-support device or system.

Do not touch live circuits

⚠ WARNING

Instrument covers must not be removed by operating personnel. Component replacement and internal adjustments must be made by qualified service-trained maintenance personnel who are aware of the hazards involved when the instrument's covers and shields are removed. Under certain conditions, even with the power cord removed, dangerous voltages may exist when the covers are removed. To avoid injuries, always disconnect the power cord from the instrument, disconnect all other connections (for example, test leads, computer interface cables, etc.), discharge all circuits, and verify there are no hazardous voltages present on any conductors by measurements with a properly-operating voltage-sensing device before touching any internal parts. Verify the voltage-sensing device is working properly before and after making the measurements by testing with known-operating voltage sources and test for both DC and AC voltages. Do not attempt any service or adjustment unless another person capable of rendering first aid and resuscitation is present.

Do not insert any object into an instrument's ventilation openings or other openings.

Servicing

CAUTION

Do not substitute parts that are not approved by B&K Precision or modify this instrument. Return the instrument to B&K Precision for service and repair to ensure that safety and performance features are maintained.

For continued safe use of the instrument

- Do not place heavy objects on the instrument.
- Do not obstruct cooling air flow to the instrument.
- Do not place a hot soldering iron on the instrument.

Table of Contents

Section 1 General Description	9
1.1 INTRODUCTION.....	9
1.2 APPLICATIONS.....	9
1.3 SPECIFICATIONS	9
Section 2 Operation	10
2.2 OPERATING PROCEDURE	11
Service Information	13
Limited One-Year Warranty	14

Section 1 General Description

1.1 INTRODUCTION

B&K Precision Battery Capacity Analyzer Model 600B measures the % capacity left in a battery. The model 600B supports 12V storage type lead acid batteries with wide range of Ah capacity. No external power (Main or DC) is required. The unit works on BUT (Battery Under Test).

1.2 APPLICATIONS

As the information age develops it is likely that the demand for UPS units will increase for use in hospitals, offices, labs etc. It is expected that the importance of battery maintenance will increase along with increasing demand for UPS.

The 600B can be applicable for Automobile Service Stations, UPS Manufacturing, Maintenance and Field Servicing, QC Department, Battery Systems in Railways, Telecommunications, Ships / Submarine.

1.3 SPECIFICATIONS

TECHNICAL

- 1) Capacity Display Range: 0 % to 100 %
- 2) Max. Input Voltage: 20 V
- 3) No Load Voltage Indication Accuracy: ± 2 counts


Caution: Do not exceed max. input voltage rating. Doing so may cause fatal damage to the unit.

PHYSICAL

- 1) Dimensions (WxHxD): 2.91 x 10.44 x 2.12" (74 x 265.1 x 54 mm)
- 2) Weight: 2.65 lbs. (1.2 Kg.)

NOTE: Specifications and information are subject to change without notice. Please visit www.bkprecision.com for the most current product information.

Section 2 Operation

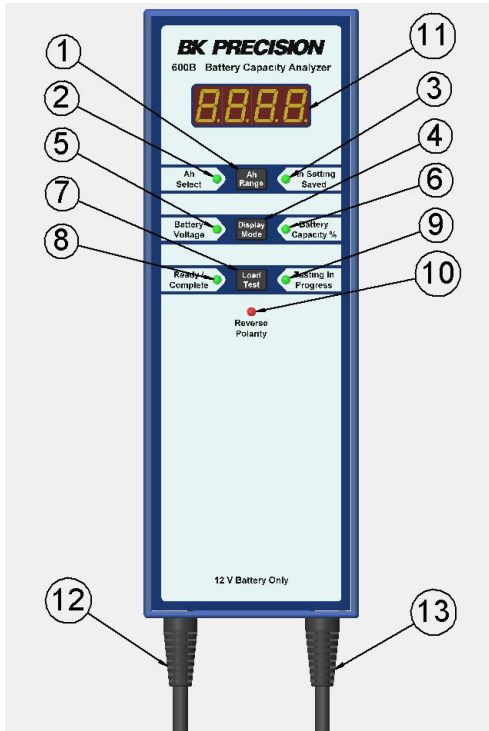


FRONT PANEL CONTROLS

Refer to the Front view of the unit.


- 1) **Ah Range :** With this key the user can select the correct Ah range according to the battery under test.
- 2) **Ah Select LED:** This LED is ON to indicate that the user can select the Ah range.
- 3) **Ah Setting Saved LED:** This LED is ON when the unit locks to a particular Ah range set by the user.
- 4) **Display Mode:** This key selects the display either as No load voltage or % balance capacity.
- 5) **Battery Voltage:** Indicates that the Battery voltage is being displayed.
- 6) **Battery Capacity %:** This LED is ON when remaining capacity is being displayed.
- 7) **Load Test:** The test starts by pressing this key.
- 8) **Ready/Complete:** When this LED is ON and steady, indicates that the unit is ready to conduct a test.
- 9) **Test In Progress:** This LED is ON for approx. 3 sec. when the battery test is carried out.
- 10) **Reverse Polarity:** If the unit is connected to a battery in reverse polarity this LED will be ON.
- 11) **LED Display** Displays either battery voltage or battery capacity percent.
- 12) **+ve Cable** Positive connecting cable with strain relief.
- 13) **-ve Cable** Negative connecting cable with strain relief.

2.2 OPERATING PROCEDURE


Follow the steps as outlined below:

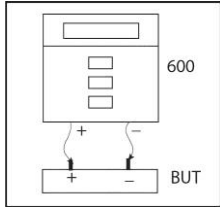

2.2.1 Connection Procedure Connect Battery Capacity Analyzer (600B) to Battery Under Test (BUT). Connect the +ve terminal of 600B to +ve terminal of Battery. Connect -ve terminal of 600B to -ve terminal of Battery. The 600B will be powered by the BUT. On Power up, 600B performs a self test by turning on the 7 segments, LEDs one after another & finally flashing the version number.

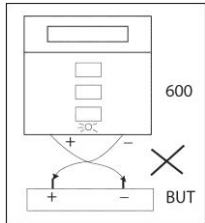

Caution: Do not connect the +ve terminal of 600B to -ve terminal of BUT and -ve terminal of 600B to +ve terminal of BUT. By doing so, the 'Reverse Polarity' LED glows as shown.

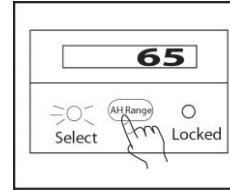


2.2.2 Selecting Ah Capacity

Press the 'Ah Range' key. The select LED glows as shown.

The display will show the last selected/stored Ah value. (Power ON default value is 7 Ah)

To change the value, press the key again. Display shows new value. Keep on pressing till the desired Ah is obtained.

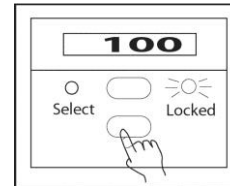

To Lock the Ah capacity, either press any key OTHER than the Ah Range key OR wait for about 10 seconds. Your selected Ah value will automatically get locked and is indicated by the glowing of 'Locked' LED.



2.2.3 Conducting a Test


Test can be conducted any time Ready/Complete LED is ON by pressing the “Load Test” key.

By doing so the ‘Test On’ LED starts glowing.

Typically, it glows for about 2 seconds. Thereafter the ‘Ready’ test starts blinking.

(The blinking time depends on the Ah range selected).


Thereafter it becomes steady.

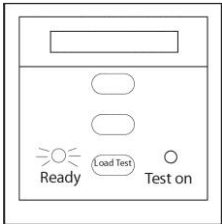


Note: User cannot conduct a test while the ‘Ready’ LED is blinking.

2.2.4 Observing Result After a Test

By default the Battery Voltage is displayed on the display. To observe the Balance Capacity left, press the ‘Display Mode’ switch.

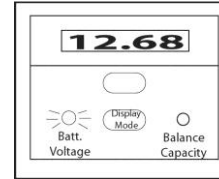

The display will show the capacity in percentage.

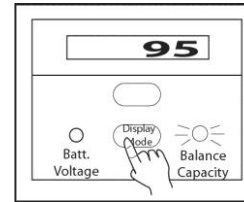

Note: Balance Capacity can have a meaningful value only after conduction of a test. At power on, a value of 0 is shown. Hence Balance Capacity should be seen only after conduction of a test. To observe No Load Battery Voltage, press the ‘Display Mode Key’. The display will show the No Load Battery Voltage.



- 1) Do not connect Model 600B to a voltage source more than 20V.
- 2) Do not connect the unit to a battery connected in circuit.

Service Information

Warranty Service: Please go to the support and service section on our website at www.bkprecision.com to obtain a RMA #. Return the product in the original packaging with proof of purchase to the address below. Clearly state on the RMA the performance problem and return any leads, probes, connectors and accessories that you are using with the device.

Non-Warranty Service: Please go to the support and service section on our website at www.bkprecision.com to obtain a RMA #. Return the product in the original packaging to the address below. Clearly state on the RMA the performance problem and return any leads, probes, connectors and accessories that you are using with the device. Customers not on an open account must include payment in the form of a money order or credit card. For the most current repair charges please refer to the service and support section on our website.

Return all merchandise to B&K Precision Corp. with prepaid shipping. The flat-rate repair charge for Non-Warranty Service does not include return shipping. Return shipping to locations in North America is included for Warranty Service. For overnight shipments and non-North American shipping fees please contact B&K Precision Corp.

B&K Precision Corp.
22820 Savi Ranch Parkway
Yorba Linda, CA 92887
www.bkprecision.com
714-921-9095

Include with the returned instrument your complete return shipping address, contact name, phone number and description of problem.

Limited One-Year Warranty

B&K Precision Corp. warrants to the original purchaser that its products and the component parts thereof, will be free from defects in workmanship and materials for a period of **one year** from date of purchase.

B&K Precision Corp. will, without charge, repair or replace, at its option, defective product or component parts. Returned product must be accompanied by proof of the purchase date in the form of a sales receipt.

To help us better serve you, please complete the warranty registration for your new instrument via our website www.bkprecision.com

Exclusions: This warranty does not apply in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs. The warranty is void if the serial number is altered, defaced or removed.

B&K Precision Corp. shall not be liable for any consequential damages, including without limitation damages resulting from loss of use. Some states do not allow limitations of incidental or consequential damages. So the above limitation or exclusion may not apply to you.

This warranty gives you specific rights and you may have other rights, which vary from state-to-state.

B&K Precision Corp.
22820 Savi Ranch Parkway
Yorba Linda, CA 92887
www.bkprecision.com
714-921-9095

CE Declaration of Conformity

This instrument meets the requirements of 2006/95/EC Low Voltage Directive and 2004/108/EC Electromagnetic Compatibility Directive with the following standards.

Low Voltage Directive

- EN61010-1 : 2001

EMC Directive

- EN61326-1 : 2013
- CISPR11
- EN61000-4-2 : 2009
- EN61000-4-3 : 2006 + A2 : 2010
- EN61000-4-8 : 2010

BK PRECISION[®]

B&K Precision Corporation
22820 Savi Ranch Parkway
Yorba Linda, California 92887
www.bkprecision.com

©2015 B&K Precision Corporation

Printed in Taiwan
120815

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [b&k precision manufacturer](#):

Other Similar products are found below :

[2125C](#) [2160C](#) [890C](#) [575A](#) [815](#) [8612](#) [875B](#) [878](#) [9115-AT](#) [9121A](#) [9206](#) [1513](#) [1514](#) [1693](#) [1737](#) [1761](#) [1786B](#) [HV44A](#) [2512](#) [9116](#) [9122A](#)
[1604A](#) [1627A](#) [1672](#) [1673](#) [1686A](#) [1823A](#) [194-043-9-001](#) [2511](#) [2516](#) [2556](#) [2557](#) [PR100A](#) [PR250B](#) [PR-37AR](#) [262](#) [PVS10005](#) [307A](#) [308](#)
[CR-43](#) [340A](#) [4012A](#) [TL08C](#) [TL 9120](#) [MDL400](#) [BE 12](#) [HV-44A](#) [367A](#) [391](#) [4017A](#)