



S6SAP111A28SA1001

2ch DC/DC Converter
Evaluation Board Operation Guide

Doc. No. 002-08726 Rev. *B

Cypress Semiconductor
198 Champion Court
San Jose, CA 95134-1709
www.cypress.com

© Cypress Semiconductor Corporation, 2015-2018. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC (“Cypress”). This document, including any software or firmware included or referenced in this document (“Software”), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress’s patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. No computing device can be absolutely secure. Therefore, despite security measures implemented in Cypress hardware or software products, Cypress does not assume any liability arising out of any security breach, such as unauthorized access to or use of a Cypress product. In addition, the products described in these materials may contain design defects or errors known as errata which may cause the product to deviate from published specifications. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage (“Unintended Uses”). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.

Arm and Cortex are registered trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere.

Preface



This manual explains how to use the evaluation board. Be sure to read this manual before using the product. For this product, please consult with sales representatives or support representatives.

Handling and use

Handling and use of this product and notes regarding its safe use are described in the manuals.

Follow the instructions in the manuals to use this product.

Keep this manual at hand so that you can refer to it anytime during use of this product.

Notice on this document

All information included in this document is current as of the date it is issued. Such information is subject to change without any prior notice.


Please confirm the latest relevant information with the sales representatives.

Cautions




Caution of the products described in this document

The following precautions apply to the product described in this manual.

 WARNING	Indicates a potentially hazardous situation which could result in death or serious injury and/or a fault in the user's system if the product is not used correctly.
--	---

Electric shock, Damage	Before performing any operation described in this manual, turn off all the power supplies to the system. Performing such an operation with the power on may cause an electric shock or device fault.
Electric shock, Damage	Once the product has been turned on, do not touch any metal part of it. Doing so may cause an electric shock or device fault.

 CAUTION	Indicates the presence of a hazard that may cause a minor or moderate injury, damages to this product or devices connected to it, or may cause to lose software resources and other properties such as data, if the device is not used appropriately.
--	---

Cuts, Damage	Before moving the product, be sure to turn off all the power supplies and unplug the cables. Watch your step when carrying the product. Do not use the product in an unstable location such as a place exposed to strong vibration or a sloping surface. Doing so may cause the product to fall, resulting in an injury or fault.
Cuts	The product contains sharp edges that are left unavoidably exposed, such as jumper plugs. Handle the product with due care not to get injured with such pointed parts.
Damage	Do not place anything on the product or expose the product to physical shocks. Do not carry the product after the power has been turned on. Doing so may cause a malfunction due to overloading or shock.
Damage	Since the product contains many electronic components, keep it away from direct sunlight, high temperature, and high humidity to prevent condensation. Do not use or store the product where it is exposed to much dust or a strong magnetic or electric field for an extended period of time. Inappropriate operating or storage environments may cause a fault.
Damage	Use the product within the ranges given in the specifications. Operation over the specified ranges may cause a fault.
Damage	To prevent electrostatic breakdown, do not let your finger or other object come into contact with the metal parts of any of the connectors. Before handling the product, touch a metal object (such as a door knob) to discharge any static electricity from your body.

Damage	When turning the power on or off, follow the relevant procedure as described in this document. Before turning the power on, in particular, be sure to finish making all the required connections. Furthermore, be sure to configure and use the product by following the instructions given in this document. Using the product incorrectly or inappropriately may cause a fault.
Damage	Always turn the power off before connecting or disconnecting any cables from the product. When unplugging a cable, unplug the cable by holding the connector part without pulling on the cable itself. Pulling the cable itself or bending it may expose or disconnect the cable core, resulting in a fault.
Damage	Because the product has no casing, it is recommended that it be stored in the original packaging. Transporting the product may cause a damage or fault. Therefore, keep the packaging materials and use them when re-shipping the product.

Contents



1. Evaluation Board Specification	7
1.1 Description	7
1.2 Evaluation Board Specification	7
2. Pin Description	8
2.1 Jumper, Switch Descriptions	8
3. Setup and Verification	9
4. Component Layout	10
5. Wiring Layout	11
6. Circuit Diagram	12
7. Parts List	13
8. Evaluation Board Picture	15
9. Ordering Information	17
Revision History	18
Document Revision History	18

1. Evaluation Board Specification



1.1 Description

The S6SAP111A28SA1001 is the evaluation board for 2ch DC/DC converter, S6AP111A28. This board implements S6AP111A28 and switching parts

1.2 Evaluation Board Specification

Table 1-1. Evaluation Board Specification

Item	Symbol	Min	Typ	Max	Unit
Input voltage	VIN	21.6	24	26.4	V
Output voltage (DAC0=DAC1=VB)	VOUT1	-	3.3	-	V
	VOUT2	-	5	-	V
Output current	IOUT1	-	-	6	A
	IOUT2	-	-	6	A
Over current limitation	ILIM1	-	12	-	A
	ILIM2	-	12	-	A

Board size: 55.88mm x 27.94mm

2. Pin Description



Table 2-1. Pin Description

Pin Symbol	I/O	Function Description
VIN	I	24Vdc power supply terminal
VOUT1	O	CH1 DC/DC converter output pin
VOUT1s	I	CH1 Output sense pin(Usually unused)
VOUT2	O	CH2 DC/DC converter output pin
VOUT2s	I	CH2 Output sense pin(Usually unused)
CTL1	I	CH1 control pin
CTL2	I	CH2 control pin
DAC0,DAC1	I	CH1 reference voltage setting pin for Error comp
PGND	G	Ground

2.1 Jumper, Switch Descriptions

Table 2-2. Jumper, Switch Descriptions


Jumper, Switch	Description	Initial Setting
JP1	CH1 feedback line	short
JP2	CH2 feedback line	short
JP7	DAC0 – VB short jumper	short
JP8	DAC1 – VB short jumper	short

3. Setup and Verification



1. Connect VIN pin to +24V power supply when CTL1 and CTL2 are connected to GND.
2. Turn on +24V power supply.
3. Connect CTL1 and CTL2 to VIN.
4. If VOUT1 supply +3.3V and VOUT2 supply +5V, It is in correct operation


Figure 3-1. Image of Connection

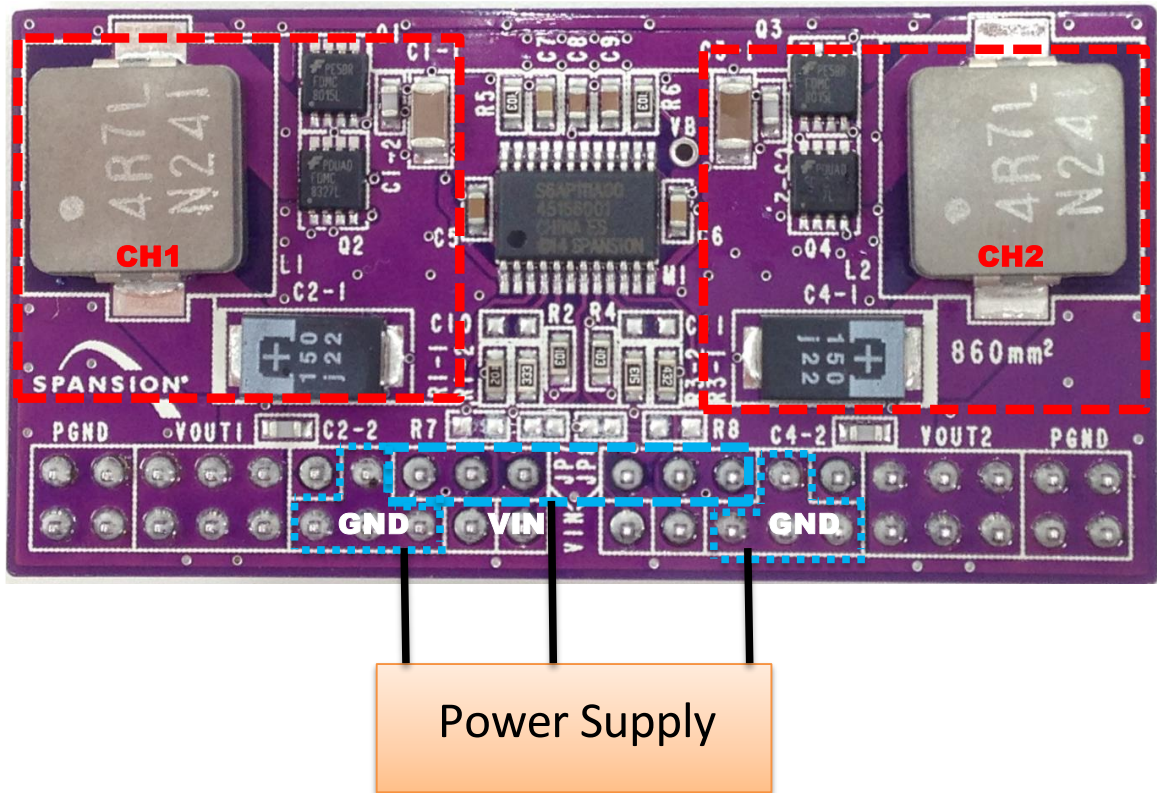

4. Component Layout




Figure 4-1. Component Layout

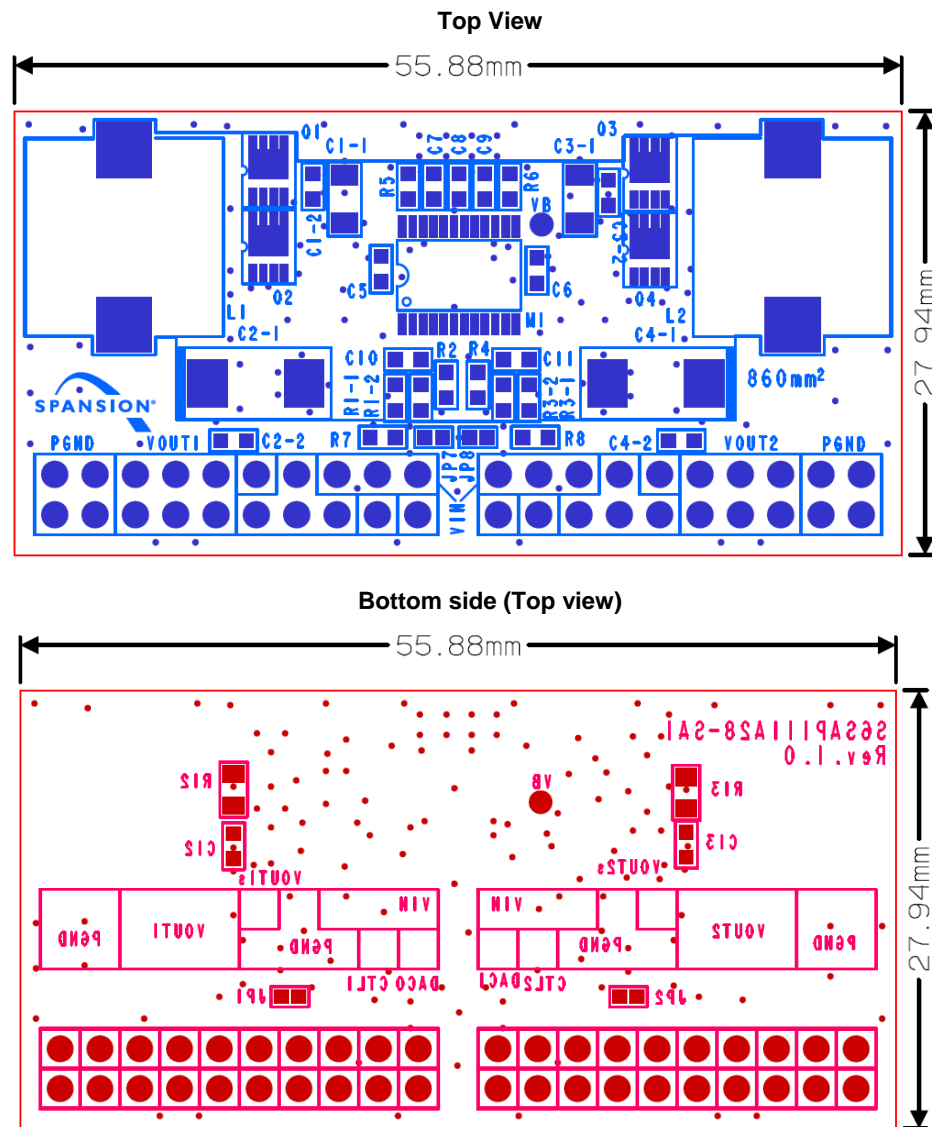

5. Wiring Layout




Figure 5-1. Wiring Layout

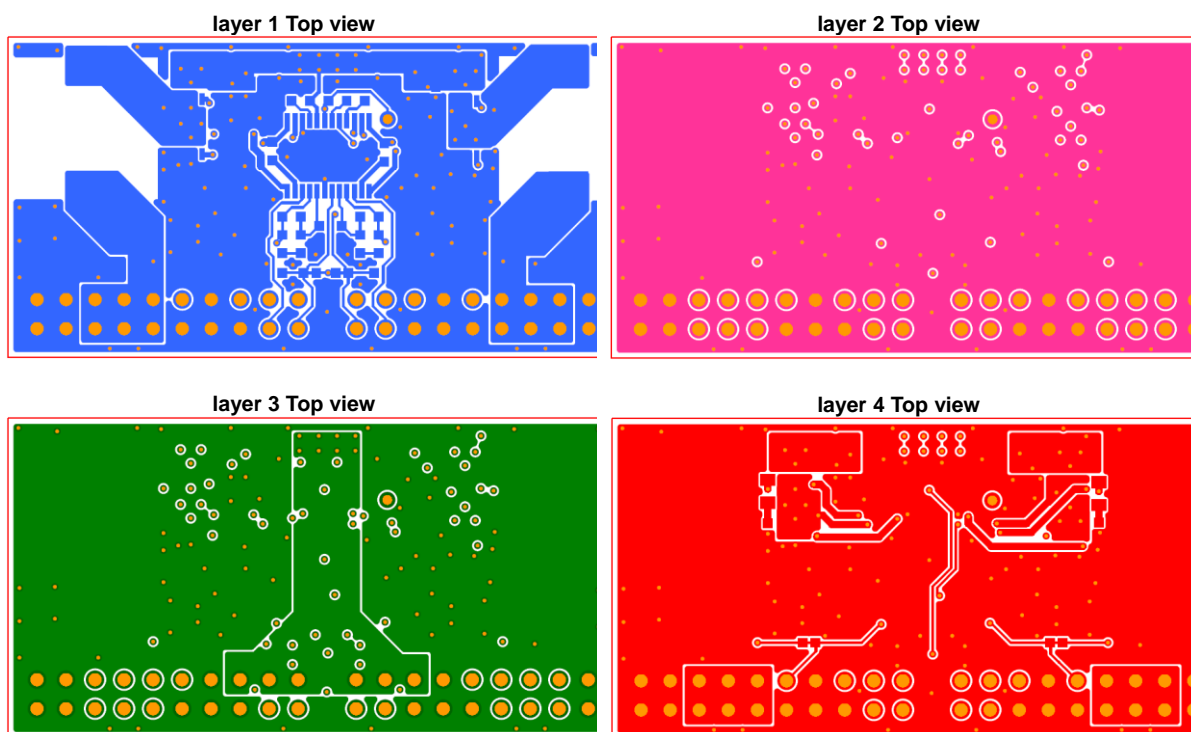

6. Circuit Diagram



Figure 6-1. Circuit Diagram

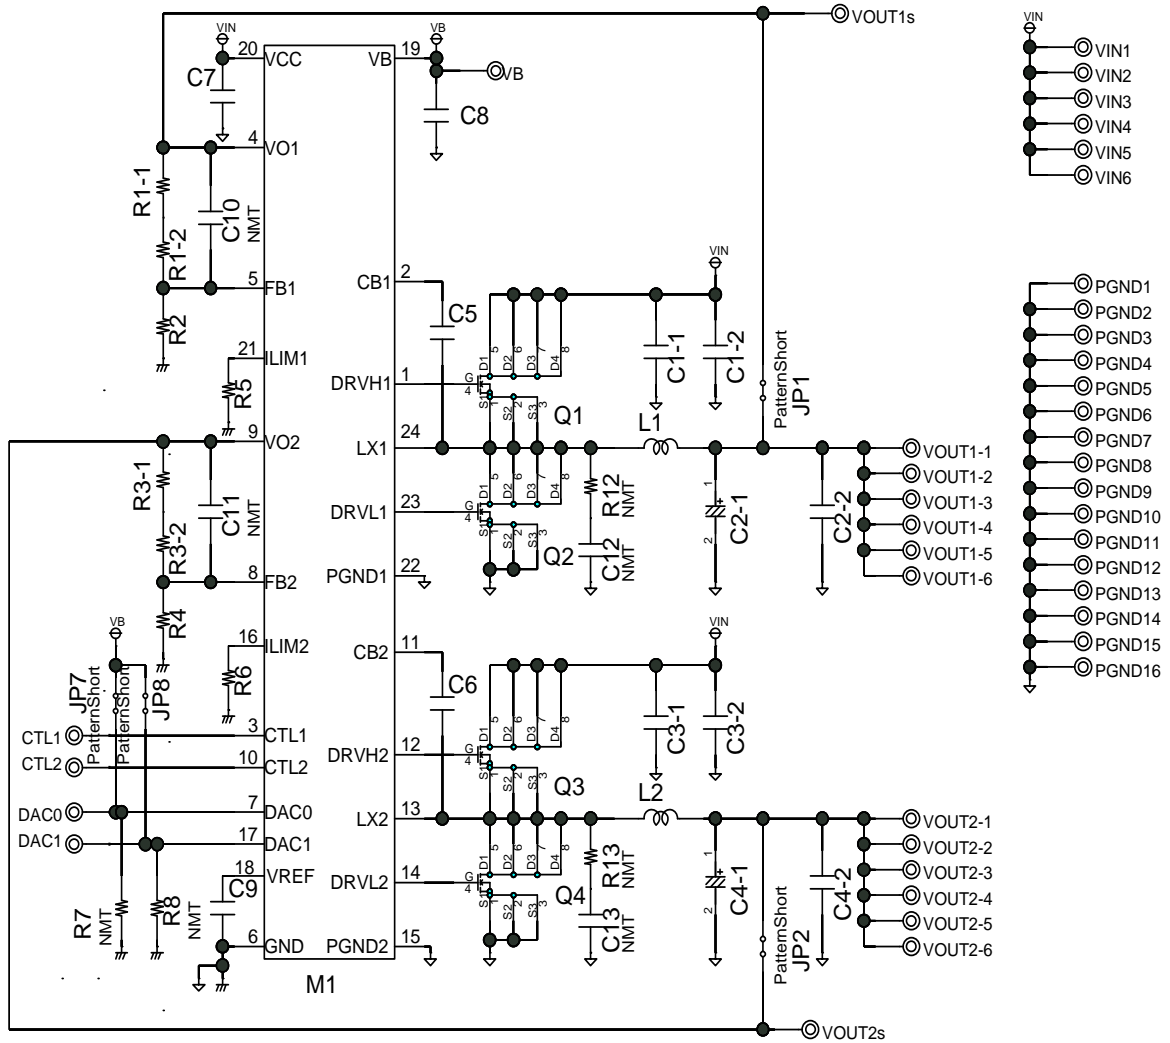

7. Parts List



Table 7-1. Parts List

No.	Component	Item	Parts Number	Vendor	Value	Remarks
1	M1	PMIC	S6AP111A28GT1B000	CYPRESS	-	-
2	L1	Inductor	MPLC1040L4R7	KEMET	4.7 μ H	8A
3	L2	Inductor	MPLC1040L4R7	KEMET	4.7 μ H	8A
4	Q1	FET	FDMC8015L	FAIRCHILD	-	40V, 7A
5	Q2	FET	FDMC8327L	FAIRCHILD	-	40V, 12A
6	Q3	FET	FDMC8015L	FAIRCHILD	-	40V, 7A
7	Q4	FET	FDMC8327L	FAIRCHILD	-	40V, 12A
8	C1-1	Ceramic Capacitor	C3216X5R1V226M16 0AC	TDK	22 μ F	35V
9	C1-2	Ceramic Capacitor	C1608CH1H102J	TDK	0.001 μ F	50V
10	C2-1	Ceramic Capacitor	6TPE150MF	PANASONIC	150 μ F	6.3V
11	C2-2	Ceramic Capacitor	C1608CH1H102J	TDK	0.001 μ F	50V
12	C3-1	Ceramic Capacitor	C3216X5R1V226M16 0AC	TDK	22 μ F	35V
13	C3-2	Ceramic Capacitor	C1608CH1H102J	TDK	0.001 μ F	50V
14	C4-1	Ceramic Capacitor	6TPE150MF	PANASONIC	150 μ F	6.3V
15	C4-2	Ceramic Capacitor	C1608CH1H102J	TDK	0.001 μ F	50V
16	C5	Ceramic Capacitor	C1608X5R1H104K080 AA	TDK	0.1 μ F	50V
17	C6	Ceramic Capacitor	C1608X5R1H104K080 AA	TDK	0.1 μ F	50V
18	C7	Ceramic Capacitor	C1608X5R1H104K080 AA	TDK	0.1 μ F	50V
19	C8	Ceramic Capacitor	C1608X5R1C225K	TDK	2.2 μ F	16V
20	C9	Ceramic Capacitor	C1608X5R1H105K080 AB	TDK	1 μ F	50V

No.	Component	Item	Parts Number	Vendor	Value	Remarks
21	C10,C11,C12,C13	Ceramic Capacitor	C1608CH1H102J	TDK	0.001 μ F	NMT
22	R1-1	Chip Resistor	RR0816P-201-D	SUSUMU	0.2k Ω	-
23	R1-2	Chip Resistor	RR0816P-333-D	SUSUMU	33 k Ω	-
24	R2	Chip Resistor	RR0816P-103-D	SUSUMU	10 k Ω	-
25	R3-1	Chip Resistor	RR0816P-432-D	SUSUMU	4.3 k Ω	-
26	R3-2	Chip Resistor	RR0816P-513-D	SUSUMU	51 k Ω	-
27	R4	Chip Resistor	RR0816P-103-D	SUSUMU	10 k Ω	-
28	R5	Chip Resistor	RR0816P-103-D	SUSUMU	10 k Ω	-
29	R6	Chip Resistor	RR0816P-103-D	SUSUMU	10 k Ω	-
30	R7,R8	Chip Resistor	RR0816P-103-D	SUSUMU	10 k Ω	NMT
31	R12,R13	Chip Resistor	RK73H2ATTD10R0F	SUSUMU	10 Ω	NMT
32	JP1,JP2,JP7,JP8	Jumper	-	-	-	Pattern short
33	PGND, VOUT1, VOUT1a, VIN, CTL1, DAC0	Terminal	90131-0770	molex	-	2 x 10pin header
34	PGND, VOUT2, VOUT2a, VIN, CTL2, DAC1	Terminal	90131-0770	molex	-	2 x 10pin header

NMT: No mount.

These components are compliant with RoHS, and please ask each vendor for details if necessary.

KEMET : KEMET Electronics Corporation

FAIRCHILD : Fairchild Semiconductor Corp.

TDK : TDK Corporation

PANASONIC : Panasonic Corporation

SUSUMU : SUSUMU Co., Ltd.

molex : Molex Japan Co., Ltd.

8. Evaluation Board Picture



Figure 8-1. Evaluation Board Picture (Top)


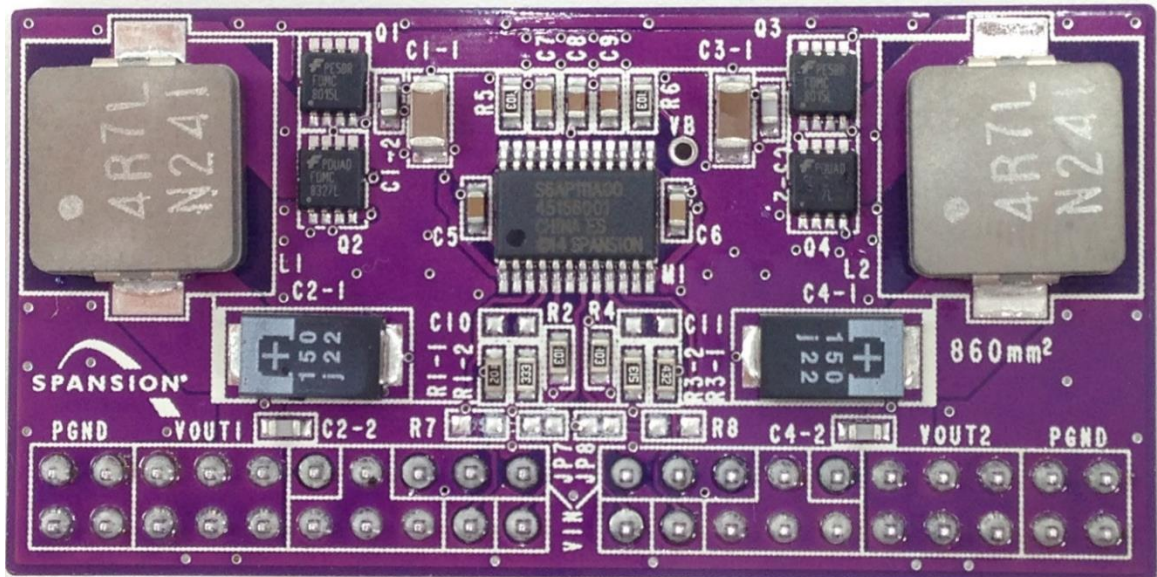


Figure 8-2. Evaluation Board Picture (Back)

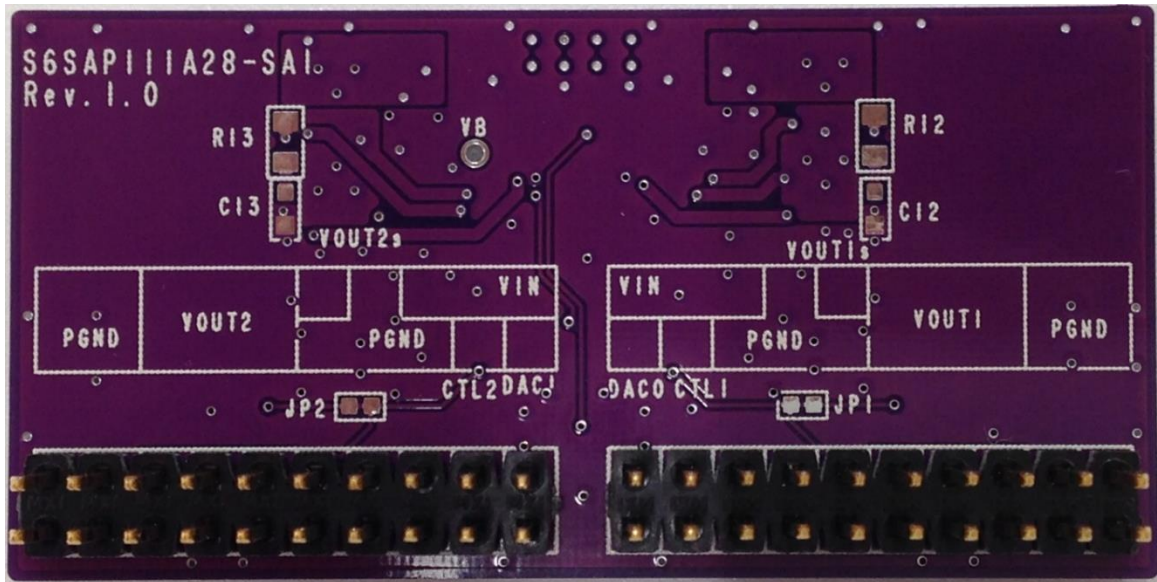

9. Ordering Information



Table 9-1. Ordering Information

Part Number	EV B Revision	Note
S6SAP111A28SA1001	Rev 1.0	---

Revision History



Document Revision History

Document Title: S6SAP111A28SA1001 2ch DC/DC Converter Evaluation Board Operation Guide

Document Number: 002-08726

Revision	ECN	Origin of Change	Submission Date	Description of Change
**	-	ATTS	02/27/2015	Initial release
*A	5122208	ATTS	02/04/2016	Migrated Spansion Guide from S6SAP111A28SA1001_SS901-00037-1v0-E to Cypress format
*B	6065458	YOST	02/16/2018	Adapted Cypress new logo. Updated the Sales information and legal. Completing Sunset Review.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Gate Drivers](#) category:

Click to view products by [Cypress](#) manufacturer:

Other Similar products are found below :

[00028](#) [00053P0231](#) [8967380000](#) [56956](#) [CR7E-30DB-3.96E\(72\)](#) [57.404.7355.5](#) [LT4936](#) [57.904.0755.0](#) [5801-0903](#) [5803-0901](#) [5811-0902](#)
[5813-0901](#) [58410](#) [00576P0030](#) [00581P0070](#) [5882900001](#) [00103P0020](#) [00600P0005](#) [00-9050-LRPP](#) [00-9090-RDPP](#) [5951900000](#) [01-](#)
[1003W-10/32-15](#) [LTI LA6E-1S-WH-RC-FN12VXCR1](#) [0131700000](#) [00-2240](#) [LTP70N06](#) [LVP640](#) [0158-624-00](#) [5J0-1000LG-SIL](#) [020017-13](#)
[LY1D-2-5S-AC120](#) [LY2-0-US-AC120](#) [LY2-US-AC240](#) [LY3-UA-DC24](#) [00-5150](#) [00576P0020](#) [00600P0010](#) [LZNQ2M-US-DC5](#) [LZNQ2-](#)
[US-DC12](#) [LZP40N10](#) [00-8196-RDPP](#) [00-8274-RDPP](#) [00-8275-RDNP](#) [00-8609-RDPP](#) [00-8722-RDPP](#) [00-8728-WHPP](#) [00-8869-RDPP](#) [00-](#)
[9051-RDPP](#) [00-9091-LRPP](#) [00-9291-RDPP](#)