

# User Manual

## SLG47105V

### Evaluation Board

### Quick Start

### UM-GP-001

#### **Abstract**

*This user manual provides basic guidelines for developers to get familiar with the Evaluation Board for SLG47105V. It consists of the functional descriptions of the board.*

---

---

## Contents

<b>Abstract</b> .....	<b>1</b>
<b>Contents</b> .....	<b>2</b>
<b>Figures</b> .....	<b>2</b>
<b>Tables</b> .....	<b>2</b>
<b>1 Terms and Definitions</b> .....	<b>3</b>
<b>2 References</b> .....	<b>3</b>
<b>3 Introduction</b> .....	<b>4</b>
<b>4 Functional Description</b> .....	<b>5</b>
4.1 Expansion Connectors and Test Points .....	5
4.1.1 Expansion Connectors SV1 and SV2 .....	5
4.1.2 Power Supply and Power Selection Connectors (P1 and P7) .....	6
4.1.3 High-voltage Output Connector (P2) .....	7
4.1.4 Current Measurement Shunts P3 and P4 .....	7
4.1.5 I <sup>2</sup> C Pull-Up Resistors .....	8
4.1.6 Protection Digital GND from Power GND .....	8
<b>5 Conclusions</b> .....	<b>8</b>
<b>Appendix A Board Dimensions</b> .....	<b>9</b>
<b>Appendix B Top View</b> .....	<b>10</b>
<b>Appendix C Board Schematic</b> .....	<b>11</b>
<b>Appendix D BOM</b> .....	<b>12</b>
<b>Revision History</b> .....	<b>13</b>

## Figures

Figure 1: SLG47105V EVB General View .....	4
Figure 2: SLG47105V EVB Connected into PDB .....	4
Figure 3: SLG47105V Evaluation Board Dimensions .....	9
Figure 4: SLG47105V Evaluation Board, Top View .....	10
Figure 5: SLG47105V Evaluation Board Schematic .....	11

## Tables

Table 1: Male Headers SV1 and SV2 Functions .....	5
Table 2: P1 Connector Functions .....	6
Table 3: Jumper P7 Functions .....	6
Table 4: P2 Connector Functions .....	7
Table 5: Jumpers P3 and P4 Functions .....	7

---

## SLG47105V Evaluation Board

### 1 Terms and Definitions

ADB	Advanced Development Board
EVB	Evaluation Board
PDB	Pro Development Board
TP	Test Point

### 2 References

- [1] SLG47105V, Datasheet - <https://www.dialog-semiconductor.com/documents>.
- [2] NXP «I2C-bus specification and user manual». User manual. UM10204–Rev.6, 4 April 2014. <https://www.nxp.com/docs/en/user-guide/UM10204.pdf>

### 3 Introduction

SLG47105V Evaluation Board (see [Figure 1](#)) let's get acquainted with SLG47105's functionality, especially the H-Bridge/Half-Bridge functions, and allows the User to test the power part of the chip.

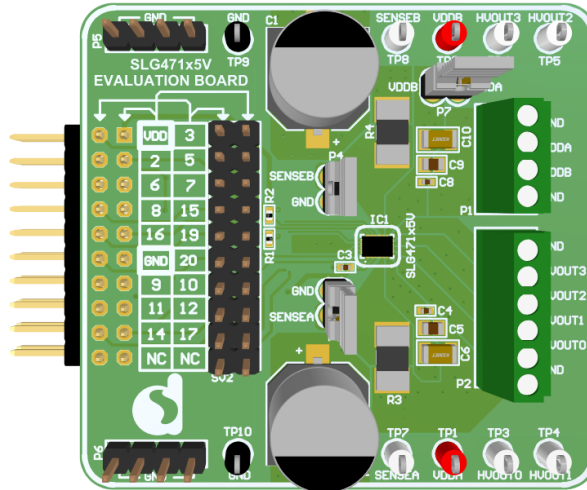


Figure 1: SLG47105V EVB General View

You can emulate/program the SLG47105V chip with the Advanced Development Board (ADB) or Pro Development Board (PDB). Insert EVB expansion connector SV1 into the ADB or PDB socket. In the case with PDB connect EVB expansion connector SV1 into the socket connector. The first pin locates at the right connector side. See [Figure 2](#).

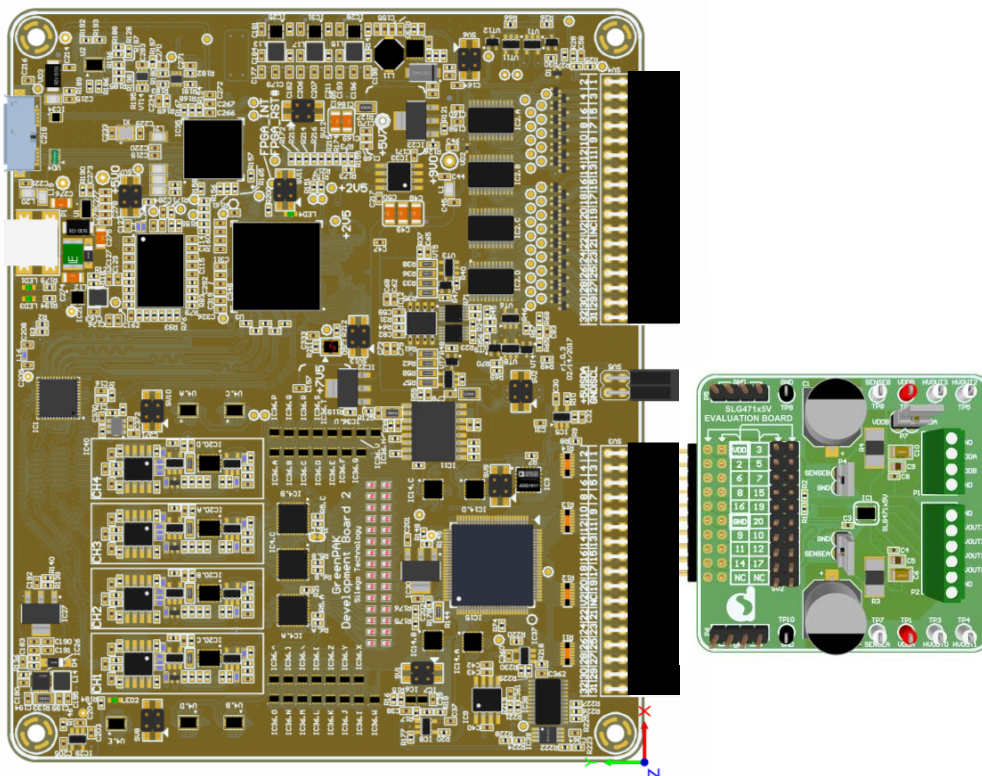


Figure 2: SLG47105V EVB Connected into PDB

## SLG47105V Evaluation Board

### 4 Functional Description

#### 4.1 Expansion Connectors and Test Points

##### 4.1.1 Expansion Connectors SV1 and SV2

There are two male headers SV1 and SV2 placed on the board.

The SV1 male header is used only to connect SLG47105V Evaluation Board to the GreenPAK Advanced Development Platform or the GreenPAK Pro Development Platform. Therefore, SV1 has a connection with Chip Low Voltage IO Pins only. High Voltage Pins 6, 7, 8, 9, 10, and 11 are not connected to SV1 by default.

**Only in case  $V_{DD} = V_{DD2}$ , it is possible to connect High Voltage Pins 6, 7, 8, 9, 10, and 11 to SV1 by installing resistors R6-R11 on the board.**

The SV2 male header has a connection with all the chip pins and can be used in the debugging process. This allows monitoring the chip functionality by connecting measuring devices (oscilloscope, voltmeter, logic analyzer) to SV2.

Male headers SV1 and SV2 functions can be found in [Table 1](#).

**Table 1: Male Headers SV1 and SV2 Functions**

Header	Marked on board	IC Pin	Function	Notes
SV1.1 SV2.1	$V_{DD}$	Pin 1	$V_{DD}$	
SV1.2 SV2.2	3	Pin 3	GPI	
SV1.3 SV2.3	2	Pin 2	GPIO 0	
SV1.4 SV2.4	5	Pin 5	Sense_A	Pin 5 is connected to SV1.4 through R6 resistor by default
SV1.5 SV2.5	6	Pin 6	$V_{DD2\_A}$	Pin 6 isn't connected to SV1.5. R6 should be mounted on board
SV1.6 SV2.6	7	Pin 7	HV_GPO 0	Pin 7 isn't connected to SV1.6. R7 should be mounted on board
SV1.7 SV2.7	8	Pin 8	HV_GPO 1	Pin 8 isn't connected to SV1.7. R8 should be mounted on board
SV1.8 SV2.8	15	Pin 15	I <sup>2</sup> C SCL/GPIO 2	
SV1.9 SV2.9	16	Pin 16	I <sup>2</sup> C SDA/GPIO 3	
SV1.10 SV2.10	NC			
SV1.11 SV2.11	GND	Pin 4, 13, 18		
SV1.12 SV2.12	NC			
SV1.13 SV2.13	9	Pin 9	HV_GPO 2	Pin 9 isn't connected to SV1.13. R9 should be mounted on board

## SLG47105V Evaluation Board

Header	Marked on board	IC Pin	Function	Notes
SV1.14 SV2.14	10	Pin 10	HV_GPO 3	Pin10 isn't connected to SV1.14. R10 should be mounted on board
SV1.15 SV2.15	11	Pin 11	VDD2_B	Pin11 isn't connected to SV1.15 R11 should be mounted on board
SV1.16 SV2.16	12	Pin 12	SENSE_B	Pin 12 is connected to SV1.16 through R12 resistor by default
SV1.17 SV2.17	14	Pin 14	GPIO 1	
SV1.18 SV2.18	17	Pin 17	GPIO 4	
SV1.19 SV2.19	19	Pin 19	GPIO 5	
SV1.20 SV2.20	20	Pin 20	GPIO 6	

#### 4.1.2 Power Supply and Power Selection Connectors (P1 and P7)

V<sub>DD2</sub> is supplied from an external power supply through the connector P1. It is possible to apply two separate Power Supplies, V<sub>DD2\_A</sub> and V<sub>DD2\_B</sub>, for each H-Bridge separately.

For P1 connector pin functions refer to [Table 2](#).

**Table 2: P1 Connector Functions**


Header	Marked on board	IC Pin	Function	Notes
P1.1	GND			
P1.2	VDDB	Pin 11	V <sub>DD2_B</sub>	
P1.3	VDDA	Pin 6	V <sub>DD2_A</sub>	
P1.4	GND			

In case only one Power Supply is used to power both H-Bridges, it is possible to install Jumper P7 to connect V<sub>DD2\_A</sub> and V<sub>DD2\_B</sub> power lines. This allows applying an external voltage to only one (any) terminal, V<sub>DD2\_A</sub>, or V<sub>DD2\_B</sub>.

**Warning: if the values of V<sub>DD2\_A</sub> and V<sub>DD2\_B</sub> are different, Jumper P7 must be removed.**

Jumper P7 functions can be found in [Table 3](#).

**Table 3: Jumper P7 Functions**

Jumper	Marked on board	IC Pin	Function	Notes
P7		Pin 6	V <sub>DD2_A</sub>	OPEN – for powering H-Bridges/Half-Bridges both V <sub>DD2_A</sub> and V <sub>DD2_B</sub> are used.  CLOSED – for powering H-Bridges/Half-Bridges one of two, V <sub>DD2_A</sub> or V <sub>DD2_B</sub> , is used.
		Pin 11	V <sub>DD2_B</sub>	

**SLG47105V Evaluation Board**

Using test points TP1 ( $V_{DD\_A}$ ) and TP2 ( $V_{DD\_B}$ ) the User can control the voltage on  $V_{DD2\_A}$  and  $V_{DD2\_B}$  rails.

Capacitors C1 and C2 are used to decouple noise on the  $V_{DD\_A}$  and  $V_{DD\_B}$  power lines. They are optional and are not board mounted by default. It is possible to install them by the user independently, for example, when testing a high-power motor close to the chip maximum capabilities.

**4.1.3 High-voltage Output Connector (P2)**

The connector P2 is used for connecting the electric motor or another high-power load powered by  $V_{DD2}$ . For P2 connector pin functions see [Table 4](#).

**Table 4: P2 Connector Functions**

Header	Marked on board	IC Pin	Function	Notes
P2.1	GND	Pin 1		
P2.2	HVOUT0	Pin 7	HV_GPO 0	Test point TP3 (HVOUT0) mounted on board
P2.3	HVOUT1	Pin 8	HV_GPO 1	Test point TP4 (HVOUT1) mounted on board
P2.4	HVOUT2	Pin 9	HV_GPO 2	Test point TP5 (HVOUT2) mounted on board
P2.5	HVOUT3	Pin 10	HV_GPO 3	Test point TP6 (HVOUT3) mounted on board
P2.6	GND	Pin 1		



Test points TP3 (HVOUT0), TP4 (HVOUT1), TP5 (HVOUT2), and TP6 (HVOUT3) make possible controlling the output signals.

**4.1.4 Current Measurement Shunts P3 and P4**

Resistors R3 and R4 are connected to the inputs SENSE\_A (Pin 5) and SENSE\_B (Pin 12) of the Current Sense Comparator macrocells, which allow controlling the load current of each H-Bridge. This function can be switch on/off with the help of two Jumpers, P3 and P4.

Jumpers P3 and P4 functions can be found in [Table 5](#).

**Table 5: Jumpers P3 and P4 Functions**

Jumper	Marked on board	IC Pin	Function	Notes
P3		Pin 5	Connect SENSE_A to GND	OPEN – Current Sense Comparator0 current control function is turned on. CLOSED – Current Sense Comparator0 current control function is turned off.
P4		Pin 12	Connect SENSE_B to GND	OPEN – Current Sense Comparator1 current control function is turned on. CLOSED – Current Sense Comparator1 current control function is turned off.

It is possible to control voltage on resistors R3 and R4 by connecting measuring devices (voltmeter, oscilloscope) to test points TP7 (SENSE\_A) and TP8 (SENSE\_B), installed on the board.

Also, there are two test points TP9 and TP10 (GND) installed on the board. They are connected to Pin 4 (GND\_A) and Pin 13 (GND\_B) and can be used for measurements **only**.

---

## SLG47105V Evaluation Board

### 4.1.5 I<sup>2</sup>C Pull-Up Resistors

If the board is not connected to the GreenPAK Advanced Development Platform or the GreenPAK Pro Development Platform and used separately, for example, with a programmed chip for debugging in the final production, two Pull-up resistors, R1 and R2 for SDA and SCL, should be installed on the board. Their resistance should be calculated according to the procedure described in Reference [2] (Section 2).

### 4.1.6 Protection Digital GND from Power GND

PTC1 is used for protecting digital GND from power GND (HV\_GND). The maximum current that can flow from power GND through PTC1 to digital GND pin is limited to 50 mA.

## 5 Conclusions

Evaluation Board has been designed as a high power debugging platform for SLG47105V. It is a convenient tool that allows the customer to get acquainted with SLG47105's functionality, especially the H-Bridge functions.



SLG47105V Evaluation Board

Appendix A Board Dimensions

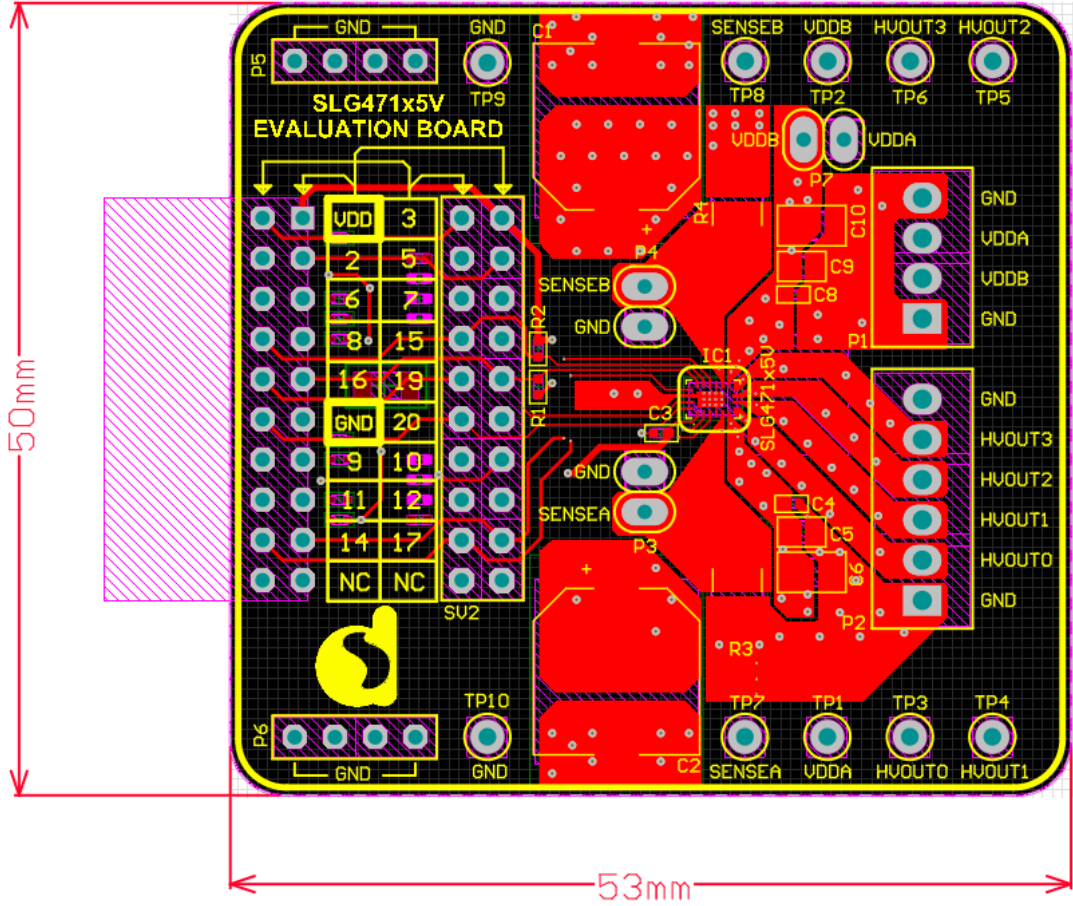


Figure 3: SLG47105V Evaluation Board Dimensions



# UM-GP-001

## SLG47105V Evaluation Board

### Appendix C Board Schematic

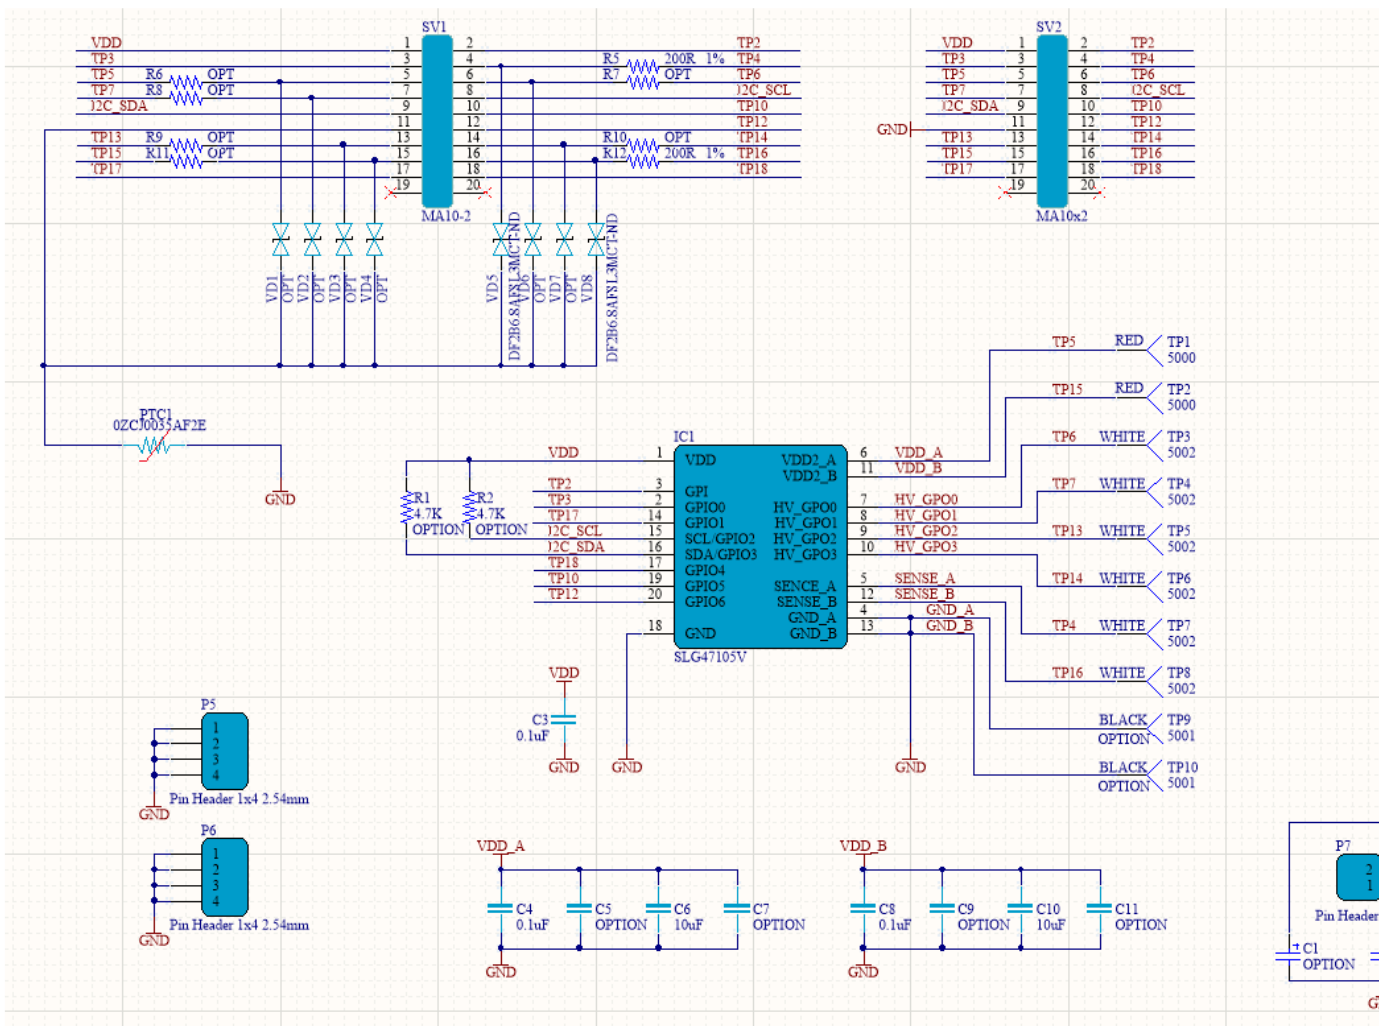


Figure 5: SLG47105V Evaluation Board Schematic

## UM-GP-001

### SLG47105V Evaluation Board

#### Appendix D BOM

#	Designator	Description	Footprint
1	C1, C2	OPTION	Size code: G
2	C3, C4, C8	CAP CER 0.1UF 50V X7R 0402	0402 (1005 Metric)
3	C5, C9	OPTION	0805 (2012 Metric)
4	C6, C10	CAP CER 10UF 50V X5R 1206	1206 (3216 Metric)
5	C7, C11	OPTION	1207 (3216 Metric)
6	IC1	PROGRAMMABLE MIXED-SIGNAL MATRIX WITH H-BRIDGE FUNCTIONS	STQFN-20L
7	J1, J2, J3	CONN JUMPER SHORTING .100" GOLD	
8	P1	TERM BLK 4P SIDE ENT 2.54MM PCB	4 POSITION TERM
9	P2	TERM BLK 6P SIDE ENT 2.54MM PCB	6 POSITION TERM
10	P3, P4, P7	CONN HEADER VERT 2POS	2 POSITION PIN HE
11	P5, P6	CONN HEADER VERT 4POS	4 POSITION PIN HE
12	PTC1	PTC RESET FUSE 60V 50MA 1206	1206 (3216 Metric)
13	R3, R4	RES 0.11 OHM 1% 1/2W 2010	2010 (5025 Metric)
14	R5, R6, R7, R8, R9, R10, R11, R12	RES SMD 200 OHM 5% 1/16W 0402	0402 (1005 Metric)
15	SV1	CONN HEADER R/A 20POS 2.54MM	20 POSITION RIGH
16	SV2	CONN HEADER VERT 20POS 2.54MM	20 POSITION VERT
17	TP1, TP2	TEST POINT MINIATURE RED	Hole Diameter(1.02
18	TP3, TP4, TP5, TP6, TP7, TP8	TEST POINT MINIATURE WHITE	Hole Diameter(1.02
19	TP9, TP10	OPTION	Hole Diameter(1.02
20	VD1, VD2, VD3, VD4, VD5, VD6, VD7, VD8	TVS DIODE 5V 7V FSC	SOD-923

## Revision History

Revision	Date	Description
1.2	13-May-2020	Updated Figures
1.1	24-Apr-2020	Fixed typos
1.0	4-Feb-2020	Initial version

## SLG47105V Evaluation Board

### Status Definitions

Status	Definition
DRAFT	The content of this document is under review and subject to formal approval, which may result in modifications or additions.
APPROVED or unmarked	The content of this document has been approved for publication.

### Disclaimer

Unless otherwise agreed in writing, the Dialog Semiconductor products (and any associated software) referred to in this document are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of a Dialog Semiconductor product (or associated software) can reasonably be expected to result in personal injury, death or severe property or environmental damage. Dialog Semiconductor and its suppliers accept no liability for inclusion and/or use of Dialog Semiconductor products (and any associated software) in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Information in this document is believed to be accurate and reliable. However, Dialog Semiconductor does not give any representations or warranties, express or implied, as to the accuracy or completeness of such information. Dialog Semiconductor furthermore takes no responsibility whatsoever for the content in this document if provided by any information source outside of Dialog Semiconductor.

Dialog Semiconductor reserves the right to change without notice the information published in this document, including, without limitation, the specification and the design of the related semiconductor products, software and applications. Notwithstanding the foregoing, for any automotive grade version of the device, Dialog Semiconductor reserves the right to change the information published in this document, including, without limitation, the specification and the design of the related semiconductor products, software and applications, in accordance with its standard automotive change notification process.

Applications, software, and semiconductor products described in this document are for illustrative purposes only. Dialog Semiconductor makes no representation or warranty that such applications, software and semiconductor products will be suitable for the specified use without further testing or modification. Unless otherwise agreed in writing, such testing or modification is the sole responsibility of the customer and Dialog Semiconductor excludes all liability in this respect.

Nothing in this document may be construed as a license for customer to use the Dialog Semiconductor products, software and applications referred to in this document. Such license must be separately sought by customer with Dialog Semiconductor.

All use of Dialog Semiconductor products, software and applications referred to in this document is subject to Dialog Semiconductor's [Standard Terms and Conditions of Sale](http://www.dialog-semiconductor.com), available on the company website ([www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)) unless otherwise stated.

Dialog, Dialog Semiconductor and the Dialog logo are trademarks of Dialog Semiconductor Plc or its subsidiaries. All other product or service names and marks are the property of their respective owners.

© 2020 Dialog Semiconductor. All rights reserved.

### RoHS Compliance

Dialog Semiconductor's suppliers certify that its products are in compliance with the requirements of Directive 2011/65/EU of the European Parliament on the restriction of the use of certain hazardous substances in electrical and electronic equipment. RoHS certificates from our suppliers are available on request.

## Contacting Dialog Semiconductor

#### United Kingdom (Headquarters)

*Dialog Semiconductor (UK) LTD*  
Phone: +44 1793 757700

#### Germany

*Dialog Semiconductor GmbH*  
Phone: +49 7021 805-0

#### The Netherlands

*Dialog Semiconductor B.V.*  
Phone: +31 73 640 8822

#### Email:

[enquiry@diasemi.com](mailto:enquiry@diasemi.com)

#### North America

*Dialog Semiconductor Inc.*  
Phone: +1 408 845 8500

#### Japan

*Dialog Semiconductor K. K.*  
Phone: +81 3 5769 5100

#### Taiwan

*Dialog Semiconductor Taiwan*  
Phone: +886 281 786 222

#### Web site:

[www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)

#### Hong Kong

*Dialog Semiconductor Hong Kong*  
Phone: +852 2607 4271

#### Korea

*Dialog Semiconductor Korea*  
Phone: +82 2 3469 8200

#### China (Shenzhen)

*Dialog Semiconductor China*  
Phone: +86 755 2981 3669

#### China (Shanghai)

*Dialog Semiconductor China*  
Phone: +86 21 5424 9058

## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for* [Programmable Logic IC Development Tools](#) *category:*

*Click to view products by* [Dialog Semiconductor](#) *manufacturer:*

Other Similar products are found below :

[DK-DEV-5SGXEA7N](#) [SLG4DVKADV](#) [88980182](#) [DEV-17526](#) [DEV-17514](#) [LCMXO3L-SMA-EVN](#) [471-014](#) [80-001005](#) [iCE40UP5K-MDP-EVN](#) [ALTHYDRAC5GX](#) [ALTNITROC5GX](#) [471-015](#) [Hinj](#) [SnoMakrR10](#) [DK-DEV-1SDX-P-A](#) [DK-DEV-1SDX-P-0ES](#) [DK-DEV-1SGX-L-A](#) [DK-DEV-1SMC-H-A](#) [DK-DEV-1SMX-H-0ES](#) [DK-DEV-1SMX-H-A](#) [DK-DEV-4CGX150N](#) [DK-DEV-5CGTD9N](#) [DK-DEV-5CSXC6N](#) [DK-DEV-5M570ZN](#) [DK-MAXII-1270N](#) [DK-SI-1SGX-H-A](#) [DK-SI-1STX-E-0ES](#) [DK-SI-1STX-E-A](#) [DK-SI-5SGXEA7N](#) [ATF15XX-DK3-U](#) [SLG46824V-DIP](#) [SLG46826V-DIP](#) [240-114-1](#) [6003-410-017](#) [ICE40UP5K-B-EVN](#) [DK-SOC-1SSX-L-D](#) [ICE5LP4K-WDEV-EVN](#) [L-ASC-BRIDGE-EVN](#) [LC4256ZE-B-EVN](#) [LCMXO2-7000HE-B-EVN](#) [LCMXO3D-9400HC-B-EVN](#) [LCMXO3L-6900C-S-EVN](#) [LF-81AGG-EVN](#) [LFE3-MEZZ-EVN](#) [LIF-MD6000-ML-EVN](#) [LPTM-ASC-B-EVN](#) [M2S-HELLO-FPGA-KIT](#) [VIDEO-DC-USXGMII](#) [12GSDIFMCCD](#) [SFP+X4FMCCD](#)