

## STM32 Nucleo pack for USB Type-C™ and Power Delivery

Data brief

### Features

- Two DRP USB Type-C™ receptacles
- USB 2.0 FS data communication interface as peripheral
- $V_{BUS}$  load and discharge switches
- $V_{CONN}$  switches
- Voltage and current sensing for  $V_{BUS}$  monitoring
- EMI filters
- A power connector to interface with external power supply (not supplied)

### Description


The STM32 Nucleo pack for USB Type-C™ and Power Delivery (P-NUCLEO-USB001) is a development tool for learning and developing solutions based on USB Type-C™ and USB Power Delivery technologies.

This tool, in association with the certified embedded software solution (X-CUBE-USB-PD), provides the means to control two USB Type-C™ ports using a single STM32F072 32-bit microcontroller, based on ARM® Cortex®-M0. The X-CUBE-USB-PD is compliant with the USB Type-C 1.2 and USB Power Delivery 2.0 specifications.

A simple analog front-end PHY is used to interface the STM32F072 MCU with the Configuration Channels (CC lines) of the Type-C receptacles and to allow the communication over these lines using the Power Delivery communication protocol.

The P-NUCLEO-USB001 is fully configurable and ready to support different configurations such as Provider, Consumer or DRP.

X-CUBE-USB-PD is compliant with the USB Type-C™ 1.2 and the Power Delivery 2.0 specifications.

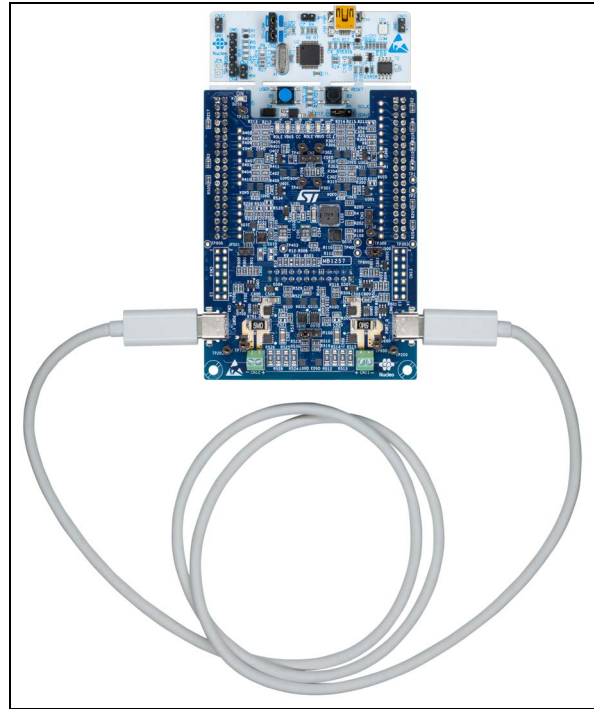

1. Picture is not contractual.


# 1 P-NUCLEO-USB001 system architecture

The STM32 Nucleo pack for USB Type-C™ and Power Delivery is composed of two main blocks (see [Figure 1: P-NUCLEO-USB001 system architecture](#)):

- A **control block**: the NUCLEO-F072RB MCU board where the stack is running
- A **USB Type-C™ interface**: the MB1257 expansion board

*Note:* A certified USB Type-C™ full-featured cable is provided inside the package.

Figure 1. P-NUCLEO-USB001 system architecture

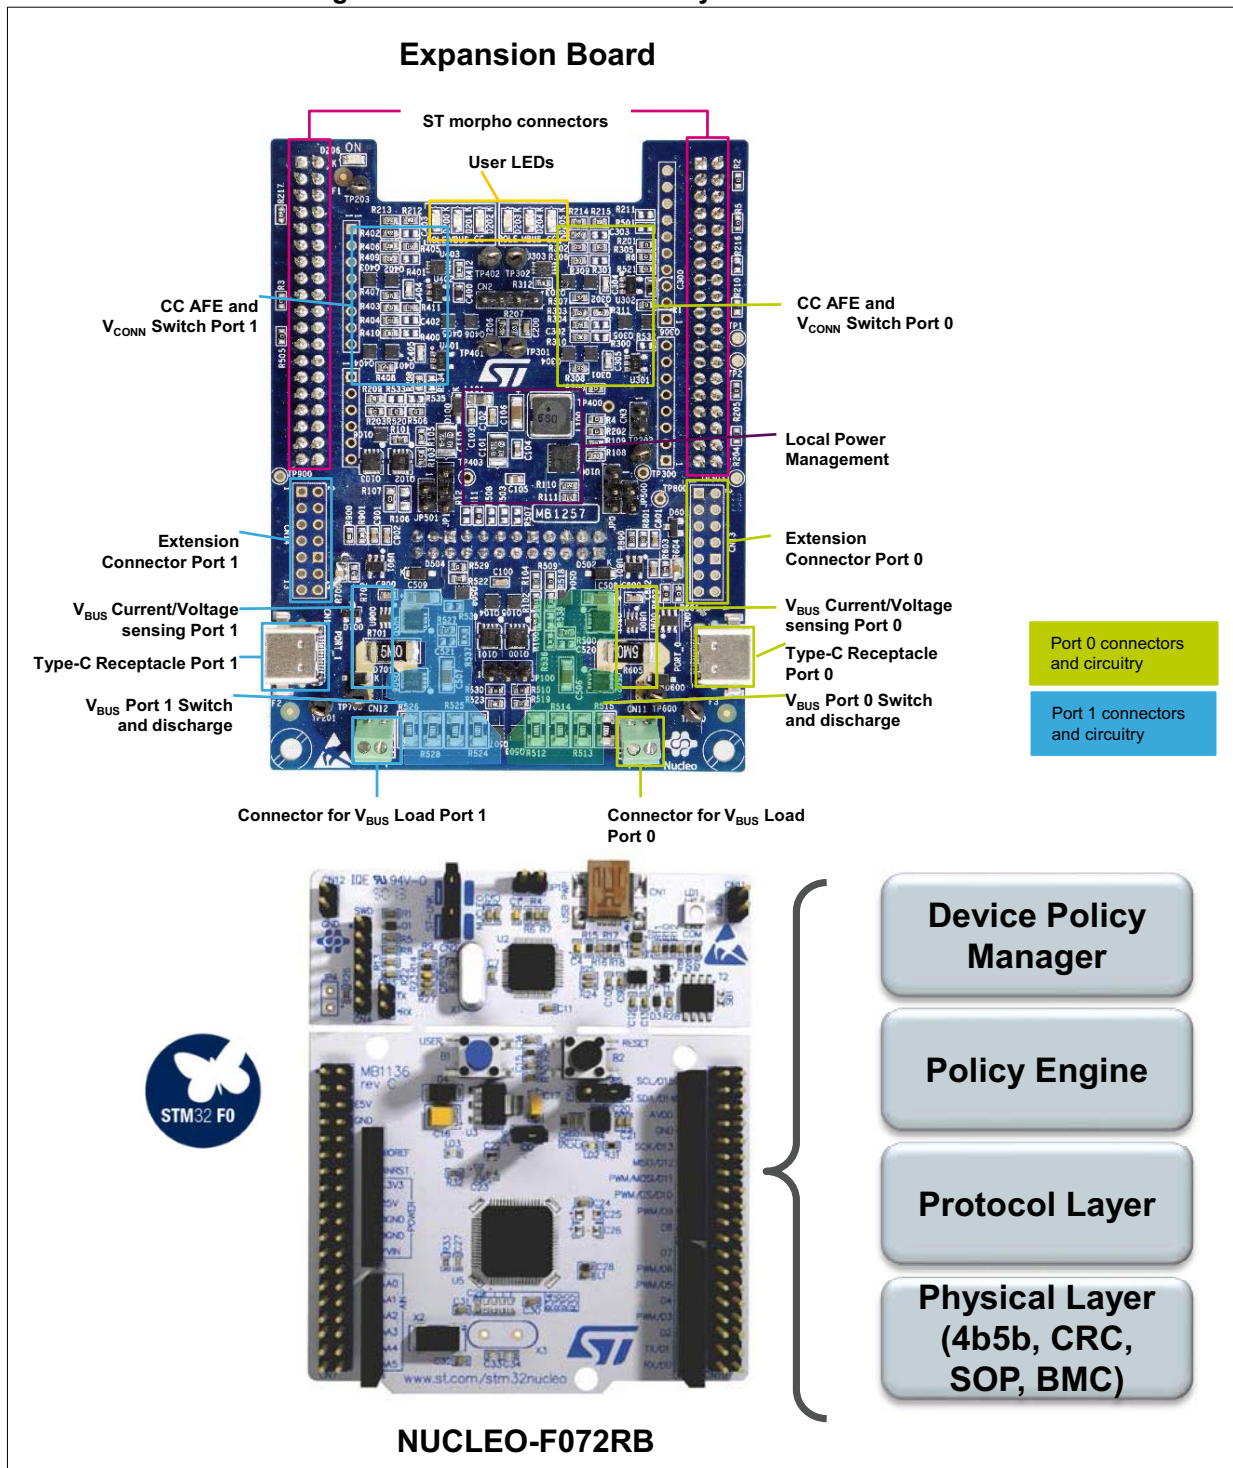

**The USB-C and Power Delivery expansion board includes:**

- Two DRP USB Type-C™ ports with:
  - Discrete analog front-end PHY for USB Type-C™ configuration and management (Rp, Rd, switches)
  - Voltage and current sensing
  - Dead Battery Management
  - EMI filters
- Dedicated power connector to interface with an external power supply (not included) to provide different profiles and  $V_{CONN}$  (5 V)
- On-board power management able to provide internal supply voltages
- Six-status control LEDs
- USB 2.0 interface capability available on Port 0 only acting as UFP
- RoHS compliant
- PCB type and size:
  - Material of PCB: FR4
  - Four-layer layout
- Copper thickness: 35  $\mu\text{m}$ 
  - Total dimensions of the expansion board: 74 mm x 98 mm

*Note:* The integrated Rp value is 4.7 Kohm at 3.3 V to advertise current capability of 3 A at 5 V. User has to change it according to power supply option capabilities.

**NUCLEO-F072RB board includes:**

- An STM32F072RBT6 32-bit microcontroller based on ARM® Cortex®-M0 with 128 Kbytes of Flash memory, 16 Kbytes of SRAM, USB 2.0 FS data interface in LQFP64 package
- Two types of extension resources:
  - Arduino™ Uno Revision 3 connectivity
  - STMicroelectronics ST morpho extension pin headers for full access to all STM32 I/Os
- On-board ST-LINK/V2-1 debugger/programmer with SWD connector
  - selection-mode switch to use the pack as a standalone ST-LINK/V2-1
- Flexible board power supply:
  - USB  $V_{BUS}$  on Type-B connector or external source
  - Power management access point
- Three LEDs:
  - USB communication (LD1), user LED (LD2), power LED (LD3)
- Two push-buttons: USER and RESET

- USB re-enumeration capability: three different interfaces are supported on USB
  - Virtual COM port<sup>(a)</sup>
  - Mass storage
  - Debug port
- Supported by wide choice of Integrated Development Environments (IDEs) including IAR™, Keil®, GCC-based IDEs

*Note:* The NUCLEO-F072RB board included in the pack has a different configuration respect to the default one. The differences are listed below:

- Solder bridges SB48, SB49, SB62, SB63 are closed
- Solder bridges SB13, SB14, SB15, SB21 are open
- 0 Ohm resistors R34, R36 are removed

---

a. For all the details refer to *STM32 Nucleo pack for USB Type-C™ and Power Delivery with the Nucleo-F072RB board* User manual (UM2050).

## 2 Revision history

Table 1. Document revision history

Date	Revision	Changes
31-May-2016	1	Initial version.
15-Feb-2017	2	Updated <i>Description</i> .

**IMPORTANT NOTICE – PLEASE READ CAREFULLY**

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2017 STMicroelectronics – All rights reserved



## X-ON Electronics

Largest Supplier of Electrical and Electronic Components

*Click to view similar products for* [Development Boards & Kits - ARM category:](#)

*Click to view products by* [STMicroelectronics manufacturer:](#)

Other Similar products are found below :

[SAFETI-HSK-RM48](#) [PICOHOBBITFL](#) [CC-ACC-MMK-2443](#) [TWR-MC-FRDMKE02Z](#) [EVALSPEAR320CPU](#) [EVB-SCMIMX6SX](#)  
[MAX32600-KIT#](#) [TMDX570LS04HDK](#) [TXSD-SV70](#) [OM13080UL](#) [EVAL-ADUC7120QSPZ](#) [OM13082UL](#) [TXSD-SV71](#)  
[YGRPEACHNORMAL](#) [OM13076UL](#) [PICODWARFFL](#) [YR8A77450HA02BG](#) [3580](#) [32F3348DISCOVERY](#) [ATTINY1607](#) [CURIOSITY](#)  
[NANO](#) [PIC16F15376](#) [CURIOSITY NANO BOARD](#) [PIC18F47Q10](#) [CURIOSITY NANO](#) [VISIONSTK-6ULL V.2.0](#) [80-001428](#) [DEV-17717](#)  
[EAK00360](#) [YR0K77210B000BE](#) [RTK7EKA2L1S00001BE](#) [MAX32651-EVKIT#](#) [SLN-VIZN-IOT](#) [LV18F V6 DEVELOPMENT SYSTEM](#)  
[READY FOR AVR BOARD](#) [READY FOR PIC BOARD](#) [READY FOR PIC \(DIP28\)](#) [EVB-VF522R3](#) [AVRPLC16 V6 PLC SYSTEM](#)  
[MIKROLAB FOR AVR XL](#) [MIKROLAB FOR PIC L](#) [MINI-AT BOARD - 5V](#) [MINI-M4 FOR STELLARIS](#) [MOD-09.Z](#) [BUGGY +](#)  
[CLICKER 2 FOR PIC32MX + BLUETOOT](#) [1410](#) [LETS MAKE PROJECT PROGRAM. RELAY PIC](#) [LETS MAKE - VOICE](#)  
[CONTROLLED LIGHTS](#) [LPC-H2294](#) [DSPIC-READY2 BOARD](#) [DSPIC-READY3 BOARD](#) [MIKROBOARD FOR ARM 64-PIN](#)  
[MIKROLAB FOR AVR](#)