


### AMP\*\*CHAMP\*\*INSERTION TOOL 229451-1



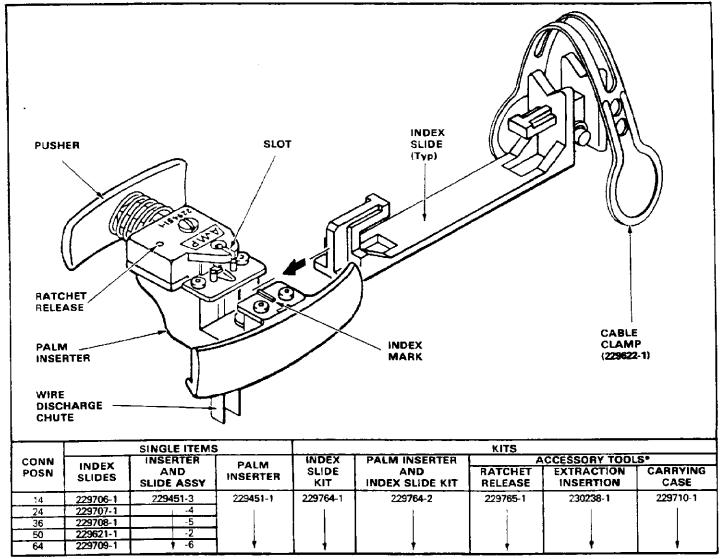

<sup>.</sup> INCLUDED WITH ALL KITS

Fig. 1

### INTRODUCTION

This instruction sheet (IS) covers the operating procedure for the CHAMP Palm Grip Insertion Tool 229451-1, and the accessory components that are available for the tool. Read this material thoroughly before using the tool.

### DESCRIPTION 2.

The palm grip insertion tool is designed for individual wire terminations in CHAMP 14-, 24-, 36-, 50-, and 64-position connectors. Accessories that are used in conjunction with the tool consist of an index slide and cable clamp which assist in contact to tool alignment. See Figure 1.

Figure 1.

Position the connector in the index slide as shown in Figure 2. If wire color coding is used, make sure the connector is oriented so the color codes will match properly with mating connector.

Determine number of connector positions.

Assemblies consisting of a tool and index slide are available for specific connector sizes. Kits consisting

of all sizes of index slides, repair tools, and carrying

case are available for all connector sizes. Index slides

can also be purchased separately. See chart in

- Using the chart in Figure 1 select the applicable index slide.

TERMINATING PROCEDURE 3.

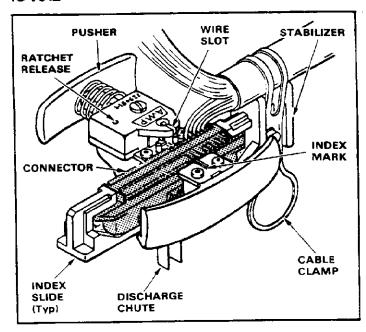


Fig. 2

- 4. Attach the index slide to the cable with the cable clamp as shown in Figure 2. The cable sheathing must extend approximately 1/2 in. beyond the stabilizer.
- 5. Orient the palm inserter with the connector . . . make sure the contacts that are to receive the wires are on the same side as the wire slot in the inserter.
- 6. Insert the index slide into the palm inserter.
- 7. Align the contact that is to be terminated with the index mark on the palm inserter.
- 8. Place the palm inserter in your hand with the pusher toward the heel of your hand and your fingers gripping the base (allow discharge chute to extend through your fingers).
- 9. Select the applicable wire. Insert it through the wire slot and discharge chute until all slack is out of the wire.
- 10. Make sure the contact and wire are centered on the index mark... then squeeze the palm inserter until the pusher is bottomed.
- 11. Release your grip and allow the pusher to retract.

NOTE

If the palm inserter jams during cycle, the ratchet can be released by applying slight pressure to the pusher to relieve tension on the ratchet release pawl, and rotating the ratchet release CLOCKWISE with a hex wrench (supplied with kit).

- 12. Remove scrap wire from discharge chute and discard it.
- 13. Repeat Steps 7 thru 12 until all contacts are terminated.

- 14. With pusher released, remove index slide and connector from palm inserter.
- 15. If contacts are to be inserted in the other side of the connector, repeat Steps 3 thru 14.
- 16. After all contacts are terminated, loosen cable clamp and remove the index slide.
- 17. Inspect all terminations in accordance with Paragraph 4.

## 4. INSPECTION OF TERMINATIONS (Figure 3)

- Make sure the wire is FULLY inserted into BOTH wire slots.
- Make sure all wires have been cut to the proper length and no exposed wire strands are visible.
- 3. Make sure the insulation is NOT cut in any area other than the slot insertion area.
- 4. Make sure contacts are NOT crushed or deformed.

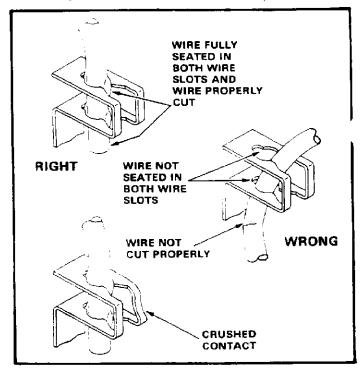


Fig. 3

### 5. FAULTY TERMINATION

In case of a faulty termination, remove the wire and contact from the connector with the AMP Extraction/Insertion Tool 230238-1. Instruction for use of the tool and contact selection are packaged with each tool. See AMP Instruction Sheet IS 7787.

NOTE

Before replacing wire, trim approximatel 1/8 in, from end of wire (previously terminated portion).

Replace the wire using Steps 3 thru 14 of Paragraph 3.

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Headers & Wire Housings category:

Click to view products by TE Connectivity manufacturer:

Other Similar products are found below:

892-18-020-10-001101 58102-G61-06LF 582553-1 0009485154 009176003701906 0050291907 LY20-4P-DT1-P1E-BR 02.125.8002.8
609-3404 61062-3 61082-181009 622-3653LF 63453-116 636-1030 636-1427 636-3427 636-4007 641938-9 641991-4 644827-2 65817010LF 65817-015LF 65863-015LF 66207-023LF 67095-007LF 67601157 68645-018 68648-049 70.362.1628.0 70-4210 70-4226B 704853B 707-5020 707-5028 71.350.2428.0 71918-208LF 71961-016LF 733-134 733-162 754199-000 760-3052 787-8014-00 79531-3000
FCN-360C032-B FCN-367T-T012/H FCN-723D010/2 80.063.4001.1 800-90-001-10-001000 800-90-010-10-002000 801-43-002-10-013000