



TA058

50 MHz ±700 V Differential Probe

User's Manual

This probe complies with IEC-1010.1, IEC-1010.2-031 CAT I or CAT II, Pollution Degree 2.

Safety terms and symbols 1.

Terms appearing in this manual:



Warning statements identify conditions or practices that could result in injury or death. WARNING



Caution statements identify conditions or practices that could result in damage to this product or other CAUTION property.

Symbols appearing on the product:





Danger High Voltage Protective



(Earth) Terminal

Refer to Manual

Issue history:

1 28.8.2008.

Pico Technology James House Colmworth Business Park St. Neots **PE19 8YP**

www.picotech.com

Lemo[®], Probus[®] and Pico Technology are registered trademarks.



Manufactured in Republic of China.



DO144-1



2. General safety summary

Please review the following safety precautions to avoid injury and prevent damage to this probe or any products that are connected to it.

Observe maximum working voltage

To avoid any injury, do not use the probe when the voltage between either input lead and earth is above 600 V RMS CAT I.

Must be grounded

This probe is grounded with the shell of the BNC connector and an auxiliary grounding terminal.



WARNING Before making connections to the input leads of this probe, ensure that its output lead is grounded. You may do this either by connecting the BNC shell to a grounded measurement instrument, or by connecting the auxiliary grounding terminal to a reliable ground point. Read the next paragraph for further advice.

You must verify that the probe is securely grounded before connecting the probe input leads. Some types of measuring instrument, such as a USB oscilloscope connected to a laptop, are unlikely to be grounded even if the laptop is powered from the mains. Bench-top oscilloscopes are usually grounded, but in some cases may have been isolated from ground. A USB oscilloscope connected to a desktop computer is usually grounded. In any case, do not assume that the measurement instrument is grounded. Always verify the ground connection for yourself before connecting the probe input leads.

Use fused test prods if necessary

If this probe is intended to use for measurements in circuits of INSTALLATION CATEGORY III, it should incorporate with fused test prods.

Do not operate without covers

To avoid electric shock or fire hazard, do not operate this probe with the covers removed.

Do not operate in wet or damp conditions

To avoid electric shock, do not operate this probe in wet or damp conditions.

Do not operate in explosive atmosphere

To avoid injury or fire hazard, do not operate this probe in an explosive atmosphere.


Avoid exposed circuitry

To avoid injury, remove jewelry such as rings, watches and other metallic objects. Do not touch exposed connections and components when power is present.



9. Derating curve

The derating curve for absolute maximum input voltage is as follows:

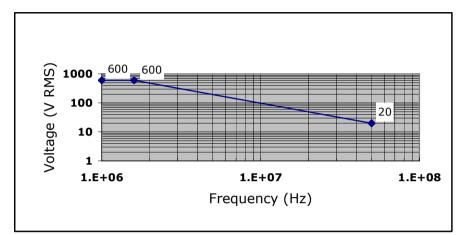

10. Test procedure

- a. Connect the BNC output connector to the vertical input of a general-purpose oscilloscope.
- b. Connect an appropriate power source to this probe and then turn it on.
- c. Set the oscilloscope input coupling to DC and 1 V/div. Center the trace on the display.
- d. Connect the inputs of the probe to power lines.
- e. A 50 Hz / 60 Hz sine-wave of proper amplitude will be displayed on the screen of the oscilloscope. This means the probe is working properly.

11. Cleaning

Use a soft cloth to clean the probe, taking care not to cause damage.

- a. Do not immerse the probe.
- b. Do not use abrasive cleaners.
- c. Do not use chemicals contains benzene or similar solvents.





| Bandwidth | DC to 50 MHz (-3 dB) |
|--|--|
| Attenuation ratio | 1:10 |
| Accuracy | ±1% |
| Rise time | < 7 ns |
| Input impedance | 1.6 MΩ 7 pF each side to ground |
| Input Voltage | |
| Differential Range* | ±70 V (DC + Peak AC) or 70 V RMS |
| Common Mode Range* | ±700V (DC + Peak AC) or 600 V RMS |
| Absolute Max. Voltage* (either input to ground) | ±700 V (DC + Peak AC) or 600 V RMS CAT I |
| Output | |
| Swing (into 5 k Ω load) | ±7 V |
| Offset (typical) | < ±2 mV |
| Noise (typical) | 0.7 mV RMS |
| Source impedance (typical) | 50 Ω |
| CMRR (typical) | -95 dB @ 60 Hz; -60 dB @ 1 MHz |
| Ambient operating temperature | -10 to +40 °C |
| Ambient storage temperature | -30 to +70 °C |
| Ambient operating humidity | 25 to 85% RH |
| Ambient storage humidity | 25 to 85% RH |
| Power requirements** | |
| Option 1 | Mains adaptor (6 V DC 90 mA or 9 V DC 70 mA) |
| Option 2 | Removable battery pack (4xAA cells) |
| Option 3 | Power leads |
| Optional extension plugs for mains adaptor | |
| - Input | One jack with 1 A current rating |
| - Output | Three plugs with 1 A current rating |
| Length of input leads | 50 cm |
| Length of BNC cable | 125 cm |
| Weight | 300 g |
| Dimension (LxWxH) | 111 mm x 22 mm x 14 mm |

* Voltage limit is the lesser of the DC+Peak AC and RMS values.

- a. The supplied voltage must be less than 16 V and greater than 3.3 V, otherwise the probe could be damaged or might not operate properly.
- b. Polarity is "+" inside and "-" outside. If the polarity is wrong, a built-in circuit protects the probe so that no danger or damage will occur.
- c. When the voltage of the cells becomes too low, the power indicator on the panel will flicker.



To ensure proper functioning of this probe, use four AA cells or a 6 V DC / 90 mA mains adaptor or 9 V DC / 70 mA mains adaptor or power leads.

Do not operate the probe if it is damaged

If you suspect there is damage to this probe, have it inspected by qualified service personnel.

3. Description

Use proper power source

By enabling conventional oscilloscopes to display and measure in-circuit waveforms that are referenced to high common-mode voltages, this differential probe extends the measurement capability of oscilloscopes to electronic power converters, inverters, motor speed controls, switch-mode power supplies and many other applications.

4. Installation

- a. Simply plug in the BNC output connector to the vertical input of a general-purpose oscilloscope or other measurement instrument, and connect the auxiliary grounding terminal to a proper ground. The measurement instrument must have a ground reference.
- b. Connect an appropriate power source (mains adaptor, battery pack or power lead) to this probe and then turn it on.



WARNING To protect against electric shock, use only the accessories designed for use with this differential probe.

c. Using the appropriate probe accessories, connect the input to the circuits under measurement.




CAUTION This probe is designed for carrying out differential measurements between two points on the circuit under test. It is not intended for electrically insulating the circuit under test and the measuring instrument.

Technology



5. Appearance

The differential probe looks like this:

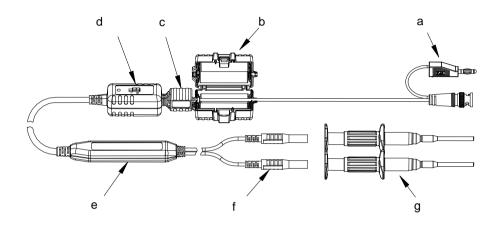


- a. Output Cable: The BNC output connector and an auxiliary grounding terminal are connected to the oscilloscope.
- b. Removable Battery Pack (optional): 4 x AA cells
- c. Power Source Connector. This can be connected to the following sources:
 - Mains adaptor (6 V DC / 90 mA or 9 V DC / 70 mA)
 - Removable battery pack (4 x AA cells)
 - Power leads
- d. Power Supply
- e. Probe Body
- f. The input leads of the differential probe
- g. Sprung Hooks. The sprung hooks are connected safely to test points in circuits.



6. Power leads


Two types of power leads are available for use with this instrument:

- a. Lemo[®] Lead: For oscilloscopes with Lemo[®] power connectors.
- b. Probus[®] Lead: For oscilloscopes with Probus[®] power connectors.

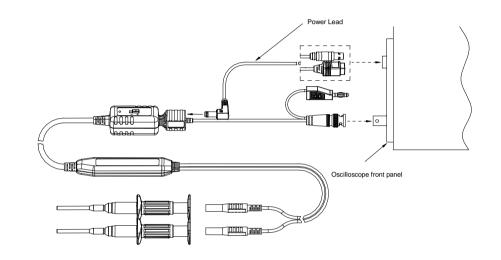

7. Removable Battery Pack

The following figure illustrates the operation of the removable battery pack;

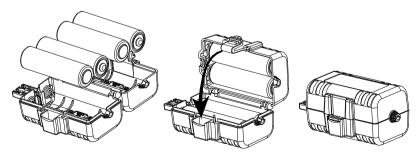

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for pico manufacturer:

Other Similar products are found below :

 TA041
 MI136
 PICO CONNECT 442
 PICOCONNECT 910 KIT
 TA328
 TA155
 81170
 MI106
 TA384
 TA385
 100501
 44740M2735659

 PICOLOG 1216
 TA139
 TA313
 TC-08
 BUNDLE
 PICOSCOPE 5442D
 TA050
 TA018
 42345M2735662
 TA089
 75005
 TA090
 PS010

 TA058
 SE028
 TC-08
 PICOSCOPE 2204A
 TA050
 TA018
 42345M2735662
 TA089
 75005
 TA090
 PS010