# Laird Tunnel Series AAT-027-12-22-00-00

Smart Technology. Delivered.™



Americas: +1.919.597.7300 Europe: +46.31.420530 Asia: +86.755.2714.1166 ets.sales@lairdtech.com www.lairdtech.com

### Air-to-Air Thermoelectric Assembly

The Tunnel Series Air-to-Air thermoelectric assembly is a thermoelectric based air conditioner designed to temperature control small chambers used in analytical and medical diagnostic instruments. The unique design offers premium fans pushing air across-high density heat sinks to minimize the number of air flow paths required to operate. The design utilizes custom thermoelectric modules to maximize cooling capacity with a high coefficient of performance. Moisture resistant insulation is used to keep condensation from penetrating the TEM cavity. The units operate on DC and are designed for an indoor lab use environment.

Laird Part Number: 387000919

#### **FEATURES**

- Compact form factor
- Improved sealing for moisture protection
- Reliable solid-state operation
- RoHS compliant

#### **APPLICATIONS**


- Analytical storage compartment temperature control
- Medical diagnostic chamber refrigeration

SPECIFICATIONS			
TEA Model	AAT,027,12,22,00,00		
Heat Transfer, Cold Side	Air		
Heat Transfer, Hot Side	Air		
Cooling Power	27 W @ ΔT=0°C and Ta=35°C, Tolerance ± 10%		
TEM Input Power			
Voltage, Nominal	12 VDC		
Current, Nominal	2.3 Amps @ Δ T=0°C		
Fan Input Power			
Hot side Fan Voltage, Nominal	12 VDC		
Hot side Fan Current, Nominal	0.25 Amps		
Cold side Fan Voltage, Nominal	12VDC		
Cold side Fan Current, Nominal	0.25Amps		
Dimension (L x W x H)	115 x 84 x 142 mm		
Weight	1.0kg		
Operating Temperature	-10°C to 50°C		
Packaging	Individual cardboard box		




### **PERFORMANCE CURVES**

TEA performance at Th = 35°C

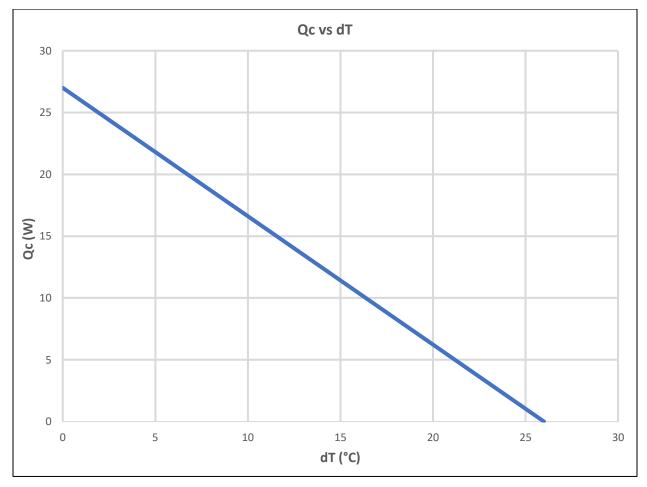



#### **ISOMETRIC DRAWINGS**

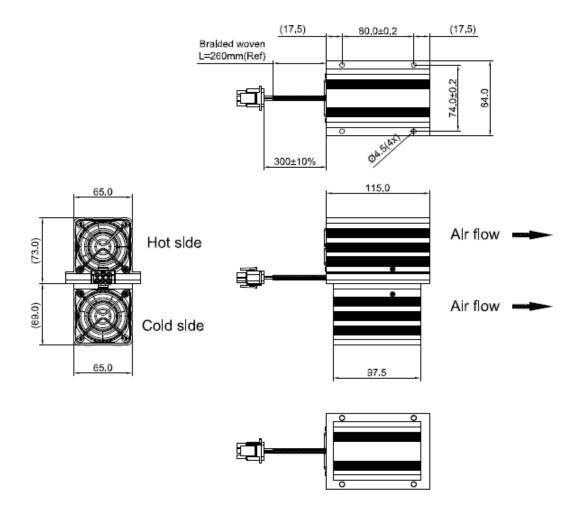


#### **ELECTRICAL CONNECTIONS**

OBJECT	WIRE TYPE	COLOR	TERMINAL	RECEPTICLE HOUSING	POLE	PLUG HOUSING
TEM +	AWG #20	Red		TE Connectivity 1-480704-0	1	TE Connectivity 1-480705-0
TEM -		Black	TE Connectivity 350547-1		2	
FAN COLD SIDE +		Purple			3	
FAN COLD SIDE -		Blue			4	
FAN HOT SIDE +		White			5	
FAN HOT SIDE -		Green			6	



#### **INSTALLATION INSTRUCTIONS**

- 1. Mount with "hot side" external to chamber wall.
- 2. Cutout should be approximately 100 x 67 mm.
- 3. Unit should be fastened as shown in diagram with gasket material sealing around cutout.
- 4. For operation below dew point, recommend to position unit in vertical direction with wires facing down to allow for condensation to run off of unit. Drip tray may be required to collect moisture from surfaces at temperatures below dew point.
- 5. TE should not be used as part of the structure and is recommended to be protected from external forces.
- 6. The input power to TEA should be protected with fuse. Fuse rating should withstand 150% of nominal current rating for 60 seconds. This is valid at Ta=35°C. Fuse ratings for other ambient temperatures (x°C) can be calculated with the formula I [x°C] = I [35°C]/(1+0.005\*(x-35). This is valid when regulating with an On/Off regulation. At rapid temperature cycling where this is applicable, there can be a need for even higher fuse ratings.
- 7. Max ripple current on supply power should be  $\leq$  5%.
- 8. Switching power to TEMs at frequencies between 0.01Hz to 5KHz may degrade reliability and

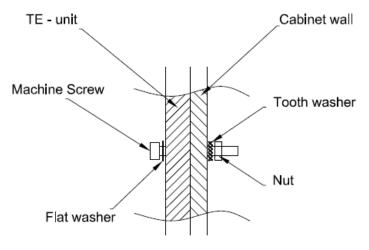

shorten life.

#### **SERVICE**

• Units are generally maintenance free, however occasionally it is recommended to clean the heat sinks and fans of debris. This is best done with compressed air.

#### LAIRD-TS-AAT-027-12-22-00-00-DATA-SHEET-102517

Any information furnished by Laird Technologies, Inc. and its agents is believed to be accurate and reliable. All specifications are subject to change without notice. Responsibility for the use and application of Laird Technologies materials rests with the end user. Laird Technologies makes no warranties as to the fitness, merchantability, suitability or non-infringement of any Laird Technologies materials or products for any specific or general uses. Laird Technologies shall not be liable for incidental or consequential damages of any kind. All Laird Technologies products are sold pursuant to the Laird Technologies' Terms and Conditions of sale in effect from time to time, a copy of which will be furnished upon request. © Copyright 2017 Laird Technologies, Inc. All Rights Reserved. Laird, Laird Technologies, the Laird Technologies Logo, and other marks are trademarks or registered trademarks of Laird Technologies, Inc. or an affiliate company thereof. Other product or service names may be the property of third parties. Nothing herein provides a license under any Laird Technologies or any third party intellectual property rights.

## **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Thermoelectric Assemblies category:

Click to view products by Laird Connectivity manufacturer:

Other Similar products are found below :

AA-150-48-44-LK-XX TEC1-07108 TEC1-04908 TEC1-06310 TEC1-06315 DA-044-12-02-00-00 387000840 DA-045-24-02-00-00 387000866 AA-040-12-22-00-00 387000177 387000913 387000919 TC-18-QC-50 DA-051-24-02-00-00 387000918 387000910 TC-WIRE3-PR-59 WL 2000 AA-150-24-44-00-XX DA-039-12-02-00-00 AA-060-24-22-00-00 DA-020-12-02-00-00 AAC050-24-22-00-00 TC-18-QE-50 LA-115-24-02-00-00 LA-045-12-02-00-00 DA-160-24-02-00-00 DA-108-24-02-00-00 DA-045-12-02-00-00 DA-024-12-02-00-00 AA-060-12-22-00-00 AA-033-12-22-00-00 AA-019-12-22-00-00 387000872 387000176 371061,01 387002414 AA-026-12-22-00-00 AA-150-24-44-LK-XX AA-150-48-44-00-XX DA-033-12-02-00-00 DA-075-12-02-00-00 DL-120-24-00-00 LAC-046-24-02-00-00 L-ADAP-8-1/8 LL-060-12-00-00 SAA-170-24-22-00-00 SDA-195-24-22-00-00 TC-NTC-1