

### Liquid-to-Liquid Thermoelectric Assembly



### Thermoelectric cooling unit for medical and industrial laser applications

The Liquid-to-Liquid Series thermoelectric assembly (TEA) offers dependable, compact performance by cooling objects via liquid to transfer heat. Heat is absorbed through one liquid heat exchanger and dissipated thru a second liquid heat exchanger. The thermoelectric modules are custom designed to achieve a high coefficient of performance (COP) to minimize power consumption. This product series is available in a wide range of cooling capacities and voltages. Custom configurations are available, however, MOQ applies.

Heat exchangers are designed to accommodate distilled water with glycol. Corrosion resistant turbulators are enclosed inside channels to increase heat transfer. Mating port adaptors are sold separately.

#### **FEATURES**

- Compact form factor
- Reliable solid-state operation
- Precise temperature control
- Bi-metal thermostat for overheat protection
- RoHS compliant

#### **APPLICATIONS**


- Medical Diagnostics
- Industrial Lasers
- Medical Lasers
- Analytical Instrumentation

Americas: +1.919.597.7300 Europe: +46.31.420530 Asia: +86.755.2714.1166 ets.sales@lairdtech.com www.lairdtech.com




# Liquid-to-Liquid Thermoelectric Assembly



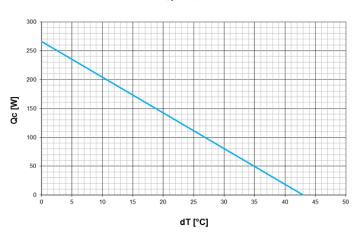

### Flow Rate vs Pressure Drop

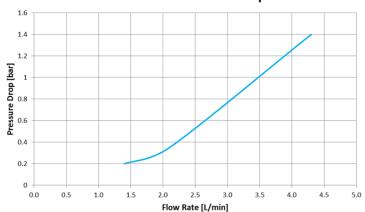


### **SPECIFICATIONS**


TECHNICAL	
Technology	Thermoelectric modules, liquid cooling, closed loop (non-mixing), filterless, non-refrigerant
Cooling at $\Delta T = 0$ °C	266W (907 Btu/h)
Voltage (nominal / maximum) 1	24/28 VDC
COP (Coefficient of Performance)	71%
Grounding (all voltages)	Positive or negative
Current draw, ±10% (nominal / startup)	7.9/8.5 A
Weight	1.4 kg (3.1 lbs)
Connector type (on unit / mating side)	TEM: Leads, 18 AWG, Red/Black
	OHT: Leads,
ENVIRONMENTAL	
Temperature range	-40°C to +62°C (-40°F to +143°F)
Hi-pot testing	750 VDC
Over temp Thermostat	75°C±5°C (167°F±41°F) on hot side heat sink
1) Max ripple 5%	



## Liquid-to-Liquid Thermoelectric Assembly

#### **MECHANICAL DRAWING**

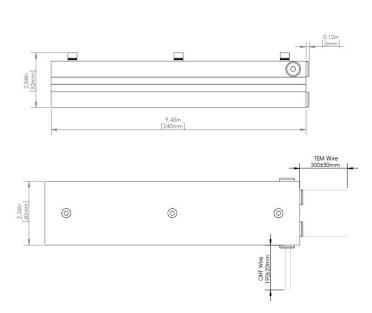

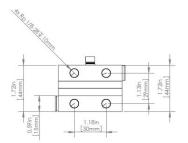

For overheating protection, the cooler is equipped with a bimetal thermostat. The maximum rating for the thermostat is 8 A. For systems with 8 A or less, the thermostat can be connected directly in series with the thermoelectric modules (TEMs). Otherwise, connect the TEMs to the power source through a relay of suitable rating which state is controlled with the bimetal thermostat.

Note: Cold side heat exchanger requires insulation to minimize moisture buildup under dew point conditions.



# Liquid-to-Liquid Thermoelectric Assembly

### **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Thermoelectric Assemblies category:

Click to view products by Laird Connectivity manufacturer:

Other Similar products are found below:

AA-150-48-44-LK-XX TEC1-07108 TEC1-04908 TEC1-06310 TEC1-06315 DA-044-12-02-00-00 387000840 DA-045-24-02-00-00 387000840 AA-040-12-22-00-00 387000817 387000913 387000919 TC-18-QC-50 DA-051-24-02-00-00 387000918 387000910 TC-WIRE3-PR-59 WL 2000 AA-150-24-44-00-XX DA-039-12-02-00-00 AA-060-24-22-00-00 DA-020-12-02-00-00 AA-050-24-22-00-00 TC-18-QE-50 LA-115-24-02-00-00 LA-045-12-02-00-00 DA-108-24-02-00-00 DA-045-12-02-00-00 DA-024-12-02-00-00 AA-060-12-22-00-00 AA-033-12-22-00-00 AA-019-12-22-00-00 387000872 387000176 371061,01 387002414 AA-026-12-22-00-00 AA-150-24-44-LK-XX AA-150-48-44-00-XX DA-033-12-02-00-00 DA-075-12-02-00-00 DL-120-24-00-00-00 LAC-046-24-02-00-00 L-ADAP-8-1/8 LL-060-12-00-00-00 SAA-170-24-22-00-00 SDA-195-24-22-00-00 TC-NTC-1 TC-NTC-2