

Circuits from the Lab[®] Reference Designs

Circuits from the Lab[®] reference designs are engineered and tested for quick and easy system integration to help solve today's analog, mixed-signal, and RF design challenges. For more information and/or support, visit www.analog.com/CN0411.

Devices Connected/Referenced	
AD7124-8	8-Channel, Low Noise, Low Power, 24-Bit, Sigma-Delta ADC with PGA and Reference
AD8628	Zero-Drift, Single-Supply, RRIO Op Amp
ADG836	0.5 Ω CMOS, 1.65 V to 3.6 V Dual SPDT/2:1 MUX
AD8220	JFET Input Instrumentation Amplifier with Rail-to-Rail Output
ADG884	0.5 Ω CMOS Dual 2:1 MUX/SPDT
ADG1608	4.5 Ω RON, 8-Channel ±5 V, +12 V, +5 V, and +3.3 V Multiplexer
AD5683R	Tiny 16-Bit SPI nanoDAC+, with ±2 (16-Bit) LSB INL and 2 ppm/°C External Reference

TDS Measurement System for Water Quality Monitoring

EVALUATION AND DESIGN SUPPORT

Circuit Evaluation Boards

[CN-0411 Circuit Evaluation Board \(EVAL-CN0411-ARDZ\)](#)
[ADICUP360 Development Board \(EVAL-ADICUP360\)](#)

Design and Integration Files

[Schematics, Layout Files, Bill of Materials, Software](#)

CIRCUIT FUNCTION AND BENEFITS

The total dissolved solids (TDS) present in a water system is composed of inorganic salts and small amounts of organic matter that are dissolved in water, and is an important measure of water quality. TDS can be derived from the electrical conductivity (or conductivity) of the solution by a factor dependent on the properties, temperature and, number of ions present. By measuring the conductivity of the solution, determining the TDS of the system is faster, economical, and less complicated in contrast to the more accurate gravimetric method. The latter method involves evaporating the water and weighing the residue, which is applicable in laboratory settings but impractical in the field.

The circuit shown in Figure 1 is a TDS measurement system based on the conductivity of the solution. This design uses a combination of components that allow for single-supply operation, which minimize circuit complexity, making this suitable for low-power and portable instrument applications.

The simplest method of measuring the conductivity of the solution uses a 2-wire conductivity cell. Conductivity measurements require temperature compensation for measurements taken at temperatures other than 25°C (or other reference temperature). This system can reference the conductivity measurement to room temperature using either a 100 Ω or 1000 Ω, 2-wire resistance temperature device (RTD) and can accommodate 2-wire conductivity cells of various cell constants and operating parameters.

The capacitance and polarization effects of the electrodes in the conductivity cell require that the excitation signal be a bipolar square wave with a sufficiently high frequency to reduce polarization effects but also with sufficiently long periods to reduce capacitance effects. To avoid damaging the conductivity electrodes, the signal must have a very low to zero dc offset and magnitude.

The circuit can measure the range of conductivity values from 1 μS to 0.1 S. A multiplexer switches between seven precision resistors of different values to set the gain when measuring the conductivity probe signal. The system can automatically determine the gain setting of the conductivity measurement through an auto-ranging procedure implemented in software. The system can also be calibrated in the high conductivity range to increase its accuracy.

Rev. 0

Circuits from the Lab reference designs from Analog Devices have been designed and built by Analog Devices engineers. Standard engineering practices have been employed in the design and construction of each circuit, and their function and performance have been tested and verified in a lab environment at room temperature. However, you are solely responsible for testing the circuit and determining its suitability and applicability for your use and application. Accordingly, in no event shall Analog Devices be liable for direct, indirect, special, incidental, consequential or punitive damages due to any cause whatsoever connected to the use of any Circuits from the Lab circuits. (Continued on last page)

100-98191

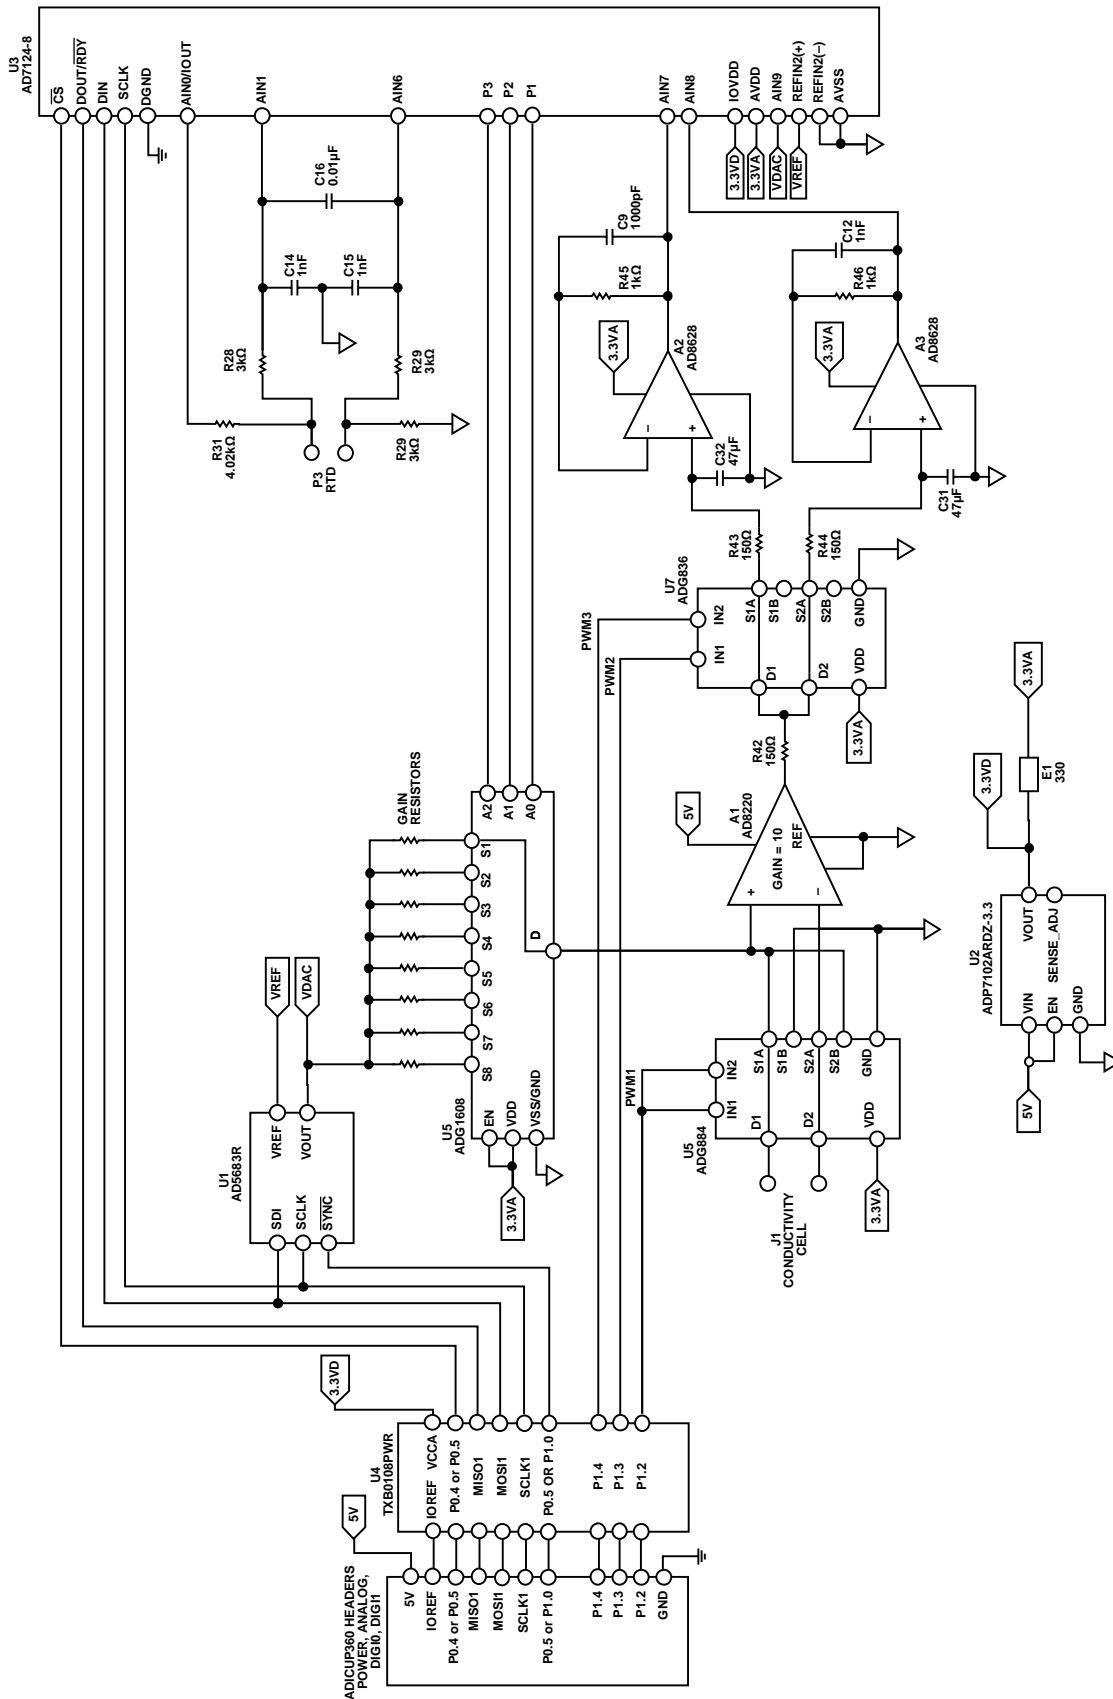


Figure 1. Total Dissolved Solids Measurement System Simplified Schematic

CIRCUIT DESCRIPTION

Conductivity and Total Dissolved Solids Theory

The TDS in a solution is largely composed of inorganic salts that separate into ions in the presence of a polar solvent like water. When a potential is applied to the solution via two electrodes, the movement of the ions constitutes a current that, when there is negligible electrolysis, obeys Ohm's law. The resistance, R , of the solution can then be calculated by Equation 1.

$$R = \frac{V}{I} = \frac{\rho L}{A} \quad (1)$$

where:

V is the potential difference applied to the two electrodes.

I is the measured current across the two electrodes.

ρ is the resistivity of the material in Ω cm.

L is the distance between the two electrodes.

A is the area of the electrodes.

The conductance, G , is the reciprocal of resistance and measured in Siemens (S), and conductivity, Y , is the reciprocal of resistivity and measured in S/cm, mS/cm, or μ S/cm.

Rearranging Equation 1, the conductance can be obtained from the potential across the two electrodes and the current through them. Conductivity is the conductance multiplied by a factor related to the geometry of the electrodes (see Equation 2).

$$Y = \frac{L}{A} \times G, G = \frac{I}{V} \quad (2)$$

Typically, conductivity is measured using a 2-electrode sensor called a conductivity probe or conductivity cell. An excitation voltage is applied to the conductivity cell while it is immersed in the solution as shown in Figure 2.

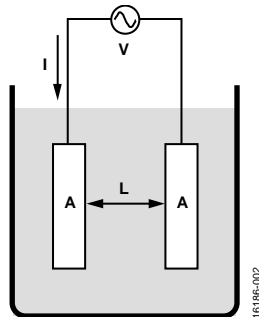


Figure 2. Conductivity Cell in Solution Setup

The conductivity cell constant or simply cell constant, K_{CELL} , is the ratio of the gap between its two electrodes and the area of each electrode, which shortens Equation 2 to Equation 3. The cell constant has a unit of cm^{-1} but the unit may be omitted by manufacturers of conductivity probes.

$$Y = K_{CELL} \times G \quad (3)$$

The typical measurement system computes conductance from the current and voltage readings. Since the conductivity range of values is very large, measuring conductance at the extremes (values less than 1 μ S and greater than 0.1 S) can be difficult for

ordinary instruments. By choosing a conductivity cell with an appropriate cell constant, the range of conductivity measurement can be extended. Conductivities less than 0.1 μ S/cm can be measured at a lower conductance by using a conductivity cell with a lower cell constant. Conversely, conductivities greater than 0.1 S/cm can be measured at a higher conductance by using a conductivity cell with a higher cell constant. Typical values of the cell constant used for a corresponding range of conductivity measurement is shown in Table 1.

Table 1. Conductivity Cell Constants and the Range of Conductivity

Cell Constant	Range of Measured Conductivity
0.01	< 0.1 μ S/cm
0.1	0.1 μ S/cm to 100 μ S/cm
1	100 μ S/cm to 10 mS/cm
10	10 mS/cm to 1 S/cm

Each conductivity cell has a rated excitation voltage, which must not be exceeded so as not to damage the electrodes. Do not apply a dc voltage to any of the electrodes.

Dielectric Properties

Polarization and the dielectric properties of the solution primarily affect the accuracy of the measured voltage signal across and the current through the conductivity cell. Polarization arises from the accumulation of ions and the chemical reactions that occur near the electrode surface. The dielectric properties of the solution contribute to a frequency-dependent impedance and interelectrode capacitance. A technique used to maximize the accuracy of the conductance measurement uses a bipolar pulse excitation. An excitation voltage $+V_{EXC}$ is applied for time t_1 then the opposite excitation voltage $-V_{EXC}$ is applied for time t_2 . Also, t_1 and t_2 , and $+V_{EXC}$ and $-V_{EXC}$ must be equal with no greater than 1% difference in duration and magnitude, respectively. The frequency of the signal $(t_1 + t_2)^{-1}$ must be adjusted to the range of conductance measurement. Typically, this is 94 Hz in the μ S range and 2.4 kHz in the mS range. These frequencies are compromises that minimize the effect of interelectrode capacitance, while preventing the accumulation of ions on the electrode surface.

Conductivity Measurement

The front-end of the conductivity measurement can be simplified to a voltage divider network as shown in Figure 3.

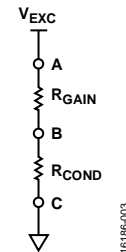


Figure 3. Simplified Conductivity Schematic as Two Series Resistors

R_{GAIN} sets the magnitude of the voltage across and current through the conductivity cell and solution simplified as R_{COND} .

Node B and Node C are constantly switched to impose a bipolar square wave across R_{COND} . A multiplexer switches between different gain resistors in Node A.

The applied excitation voltage at Node A to the voltage divider is generated using AD5683R, a 16-bit SPI voltage digital-to-analog converter (DAC). This allows the magnitude of the square wave signal applied to the voltage divider to be user-configurable. Choose the excitation voltage to maximize the signal while not exceeding the probe's ratings. By default, the software applies 0.4 V excitation. The AD5683R is also by default the source of the system's 2.5 V reference voltage, but can also be configured to accept an external reference voltage.

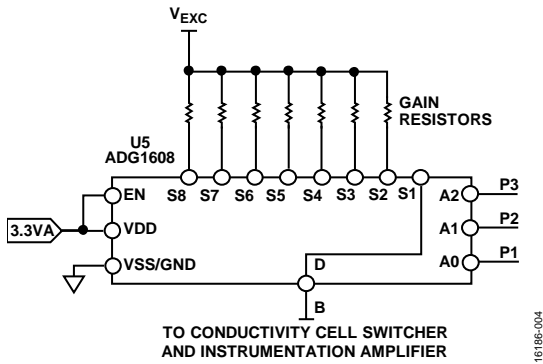


Figure 4. Multiplexing Gain Resistors

Figure 4 shows the gain setting resistors and switch, where $R1 = 20 \Omega$, $R2 = 200 \Omega$, $R3 = 2 \text{ k}\Omega$, $R4 = 20 \text{ k}\Omega$, $R5 = 200 \text{ k}\Omega$, $R6 = 2 \text{ M}\Omega$, $R7 = 20 \text{ M}\Omega$ and P1, P2, and P3 are GPIO outputs from the AD7124-8.

The circuit has a usable conductance range of $1 \mu\text{S}$ to 1 S . The voltage divider of the conductivity cell scales through these ranges by switching between seven gain resistors using ADG1608 as shown in Figure 4. The ADG1608 is an 8-channel multiplexer with a typical on-resistance of 12.5Ω when operating at a single 5 V supply. This on-resistance is significant when the conductivity measurement is in the 20 to 200Ω range. Pin S2 and Pin S3 of the ADG1608, which connect to the 20Ω and 200Ω gain resistors, respectively, are also connected to two input channels of the analog-to-digital converter (ADC). The system can also be configured to perform an initial calibration for measurement errors in the 20 and 200Ω range. Shown in Figure 5 is a 3-option (6-pin) jumper selection header (P5), which connects to 20Ω and 200Ω precision resistors. Shorting Pin 1 and Pin 2 configures the system to measure the signal across the conductivity cell while shorting Pin 3 and Pin 4 or Pin 5 and Pin 6 configures the system to measure the signal across the precision resistors.

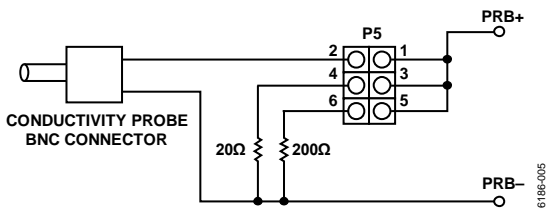


Figure 5. Conductivity Cell Connection

The conductivity cell is switched to impose a bipolar signal across it using an ADG884 as shown in Figure 6. The ADG884 has 0.5Ω typical on-resistance and is operating at a single 3.3 V supply. The switching is controlled by a PWM signal from the microcontroller board. The frequency of this signal is user-configurable to 94 Hz for low conductivity measurements and 2.4 kHz for high conductivity measurements.

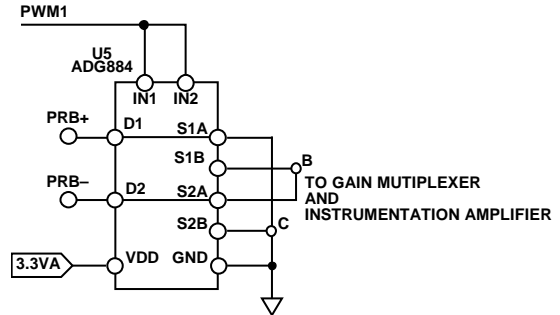


Figure 6. Conductivity Cell Switcher to Simulate Bipolar Pulses Across the Conductivity Cell Using ADG884

The signal across the conductivity cell is amplified by a gain of 10 using the AD8220 low input bias current instrumentation amplifier operating at a single 5 V supply with input signals up to 0.25 V as shown in Figure 7. There is also a user-configurable jumper selector P6, which provides for a system zero-scale calibration.

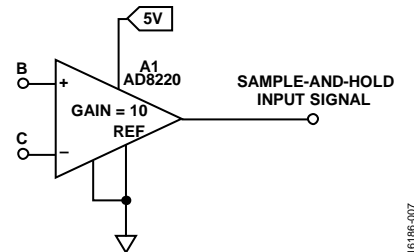


Figure 7. AD8220 Instrumentation Amplifier

The output of the instrumentation amplifier passes through two parallel sample-and-hold circuits. As shown in Figure 8, the sampling of the AD8220 output is controlled by the ADG836, a dual SPDT switch, which has low charge-injection and is operating at a single 3.3 V supply with input signals of up to 2.5 V .

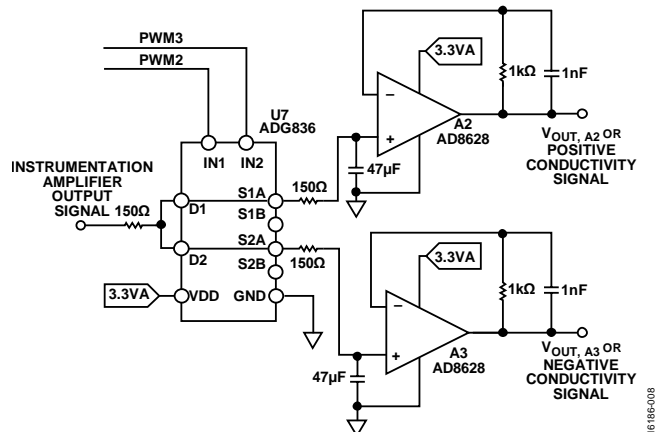


Figure 8. Sample-and-Hold Design Using ADG836 and AD8628

The switch connects the two parallel sample-and-hold circuits using PWM1 and PWM2 at the middle of the positive and negative cycles of the main PWM1 signal. The switching diagram for the three PWM signals and the voltage across the conductivity cell is shown in Figure 9.

This sampling method decreases the electrode capacitance effects at the beginning of the PWM1 signal state change as well as the electrode polarization effects occurring at the end of each state. This causes the output of the sample-and-hold circuit to be two dc levels corresponding to ten times the positive and negative voltage values across the conductivity cell, respectively.

The maximum charge injection due to the switching is 40 pC, which constitutes an error of $40 \text{ pC} \div 47 \text{ }\mu\text{F} \approx 851 \text{ nV}$. The worst case drop voltage is the product of half the period of the low frequency switching and the droop rate, which is the worst-case leakage current of the ADG836 and the worst-case bias currents of the AD8628 divided by the hold capacitance. As shown in Equation 4, this drop voltage is theoretically 23 nV.

$$V_{DROP} = \frac{(0.2 \text{ nA}) \times (5.32 \text{ ms})}{47 \text{ }\mu\text{F}} \approx 23 \text{ nV} \quad (4)$$

The outputs of A2 and A3 AD8628 buffer amplifier are applied to the single-ended ADC AD7124-8 input channels, AIN7 and AIN8, respectively. These input channels are referenced by default to the AD5683 reference voltage. AD7124-8 is user-configurable to perform either single or continuous sampling. It is also user-configurable to perform a system zero-scale calibration using the selectable precision resistors in P5 or read the multiplexer on-resistance using the input channels from the 20 Ω and 200 Ω gain resistors.

The positive and negative output voltages is computed from the 24-bit unipolar ADC code using Equation 5.

$$V_{OUT,A2 \text{ or } A3} = \frac{ADC_{CODE} \times V_{REF}}{10 \times (2^{24} - 1)} \quad (5)$$

where:

ADC_{CODE} is the 24-bit unipolar code of the signal sample.

V_{REF} is by default 2.5 V.

Equation 6 shows the calculation of the peak-to-peak voltage across the conductivity cell from the AD8628 output voltages.

$$V_{COND,PP} = 0.1 \times V_{OUT,A2} + 0.1 \times V_{OUT,A3} \quad (6)$$

The current through the conductivity cell can be calculated from the peak-to-peak cell voltage, gain resistance, and excitation or DAC voltage using Equation 7.

$$I_{COND,PP} = \frac{2 \times V_{DAC} - V_{COND,PP}}{R_{GAIN}} \quad (7)$$

The conductivity Y_{SOL} of the solution is given by Equation 8.

$$Y_{SOL} = K_{CELL} \times \frac{I_{COND,PP}}{V_{COND,PP}} \quad (8)$$

where K_{CELL} is the conductivity cell constant.

Substituting Equation 7 and Equation 8 into Equation 9 yields the following equation:

$$Y_{SOL} = K_{CELL} \times \frac{1}{R_{GAIN}} \times \left(\frac{2 \times V_{DAC}}{0.1 \times (V_{OUT,A2} + V_{OUT,A3})} - 1 \right) \quad (9)$$

Equation 9 shows that the conductivity measurement depends on the conductivity cell constant, the excitation voltage, the gain resistance used and the sum of the two voltage outputs of each sample-and-hold channel.

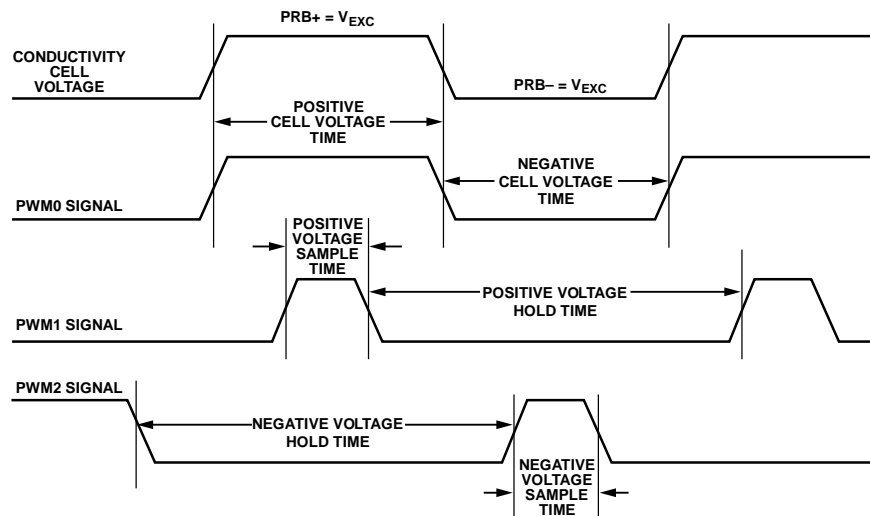


Figure 9. Conductivity Cell Voltage and PWM Signals Switching Diagram

Temperature Compensation

Conductivity measurements are also temperature dependent; conductance increases as temperature increases. Most commercial conductivity probes have an integrated RTD, facilitating temperature compensation.

The typical method to compensate the conductivity measurement to a standard reference temperature is through a linear function dependent on the temperature coefficient α , which is based on the type of ions present in the solution as shown in Equation 10. Usually, the reference temperature is set at 25 °C.

$$Y_{REF} = \frac{Y}{1 + \alpha(T - T_{REF})} \tag{10}$$

where:

Y_{REF} is the conductivity referenced to T_{REF} .

Y is the conductivity at temperature T .

T_{REF} is the reference temperature.

T is the solution temperature.

α is the temperature coefficient.

The typical values of α for common salt solutions are shown in Table 2.

Table 2. Temperature Coefficients for Common Salt Solutions

Salt Solution	Temperature Coefficient (α)
Potassium Chloride (KCl)	1.88
Sodium Chloride (NaCl)	2.14

The TDS of the solution in mg/L is calculated from the referenced conductivity measurement using Equation 11.

$$TDS = k_e \times Y_{REF} \tag{11}$$

where k_e is the TDS factor.

The TDS factor is calculated by measuring the referenced conductivity of a standard known TDS solution as shown in Equation 12.

$$k_e = \frac{TDS_{REF,STD}}{Y_{REF,STD}} \tag{12}$$

where:

$TDS_{REF,STD}$ is the known TDS value of the solution at T_{REF} .

$Y_{REF,STD}$ is the measured conductivity of the solution at T_{REF} .

The conductivity measurement cannot distinguish between constituents and individual types of ions. Thus, the TDS factor varies at a specific range, which is distinct for each type of solution. Table 3 shows the typical range of the TDS factors of common salt solutions.

Table 3. TDS Factors of Common Salt Solutions

Salt Solution	Range of TDS Factor (k_e)
Potassium Chloride (KCl)	0.50 to 0.57
Sodium Chloride (NaCl)	0.47 to 0.50

Temperature Measurement

Conductivity varies significantly with the temperature of the solution and the temperature coefficients are also significantly for each type of solution. A simple method of measuring the temperature of a solution uses a 2-wire RTD. The simplified front-end schematic is shown in Figure 10.

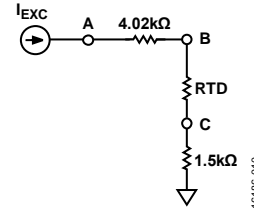


Figure 10. 2-Wire RTD Simplified Schematic

The AD7124-8 contains two matched software configurable constant current sources, which have eight selectable current output values and can be made available to any of the analog input channels. The excitation current to the RTD resistor network is set to 250 μ A from the AIN0 channel. Node A and Node B are connected to the AD7124-8 external reference input. Node B and Node C, which constitute the differential RTD signal, are connected to the AD7124-8 analog input channels. Both differential inputs are passed through two identical and typical RC low-pass filter as shown in Figure 11.

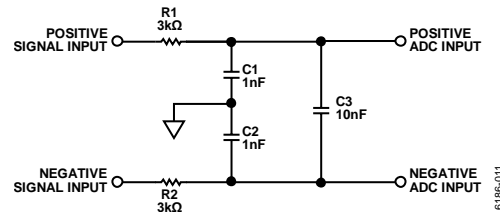


Figure 11. Typical RC Low-Pass Filter for Differential Inputs

This low-pass filter topology provides attenuation of both differential and common-mode noise signals. The large value of R1 and R2 in Figure 11 also help to protect against 30 V miswiring. C1 and C2 are the common-mode capacitors and are set to a tenth of the differential-mode capacitor C3. This attenuates the effects of noise due to mismatch between the common-mode capacitors. The common mode cut-off frequency (f_{CM}) is approximately 20 times the differential mode cut-off frequency (f_{DM}), which are 53 kHz and 2.5 kHz, respectively. The calculations are shown in Equation 13.

$$f_{CM} = \frac{1}{2\pi R_1 C_1} = \frac{1}{2\pi R_2 C_2}; \text{ for } R_1 = R_2 \text{ and } C_1 = C_2$$

$$f_{DM} = \frac{1}{2\pi(R_1 + R_2)\left(C_3 + \frac{C_1 \text{ or } C_2}{2}\right)}; \text{ for } C_1 = C_2 \tag{13}$$

where:

f_{CM} is the common mode cut-off frequency.

f_{DM} is the differential mode cut-off frequency.

All resistance values for the RTD are referenced or capped to 4.02 k Ω and the reference voltage is 250 μ A \times 4.02 k Ω = 1.005 V.

Also, the system can accommodate both Pt100 or Pt1000 RTDs. The resistance of the RTD (R_{RTD}) is computed from the 24-bit unipolar ADC code using Equation 14.

$$R_{RTD} = \frac{ADC_{CODE} \times R_{REF}}{2^{24} - 1} \quad (14)$$

where:

ADC_{CODE} is the 24-bit unipolar code of the signal sample.
 R_{REF} is the reference resistor. $R_{REF} = 4.02 \text{ k}\Omega$.

The Callender-Van Dusen equation is used to define the relation of the RTD resistance and temperature. For temperatures greater than or equal to 0°C or for resistances greater than or equal to R_0 , the temperature in degrees Celsius can be computed using Equation 15, which can be obtained directly from the Callender-Van Dusen equation.

$$T_{RTD} = \frac{-A + \sqrt{A^2 - 4B \left(1 - \frac{R_{RTD}}{R_0}\right)}}{2B} \quad (15)$$

where:

$$A = 3.9083 \times 10^{-3}$$

$$B = -5.775 \times 10^{-7}$$

$$C = -4.183 \times 10^{-12}$$

R_0 is the RTD resistance at 0°C .

R_{RTD} is the RTD resistance at T_{RTD} .

T_{RTD} is the temperature in degrees Celsius.

For temperatures below 0°C or for resistances below R_0 , a best fit polynomial expression is used as shown in Equation 16.

$$T_{RTD} = C_1 + C_2 R_{RTD} + C_3 R_{RTD}^2 + C_4 R_{RTD}^3 + C_5 R_{RTD}^4 + C_6 R_{RTD}^5 \quad (16)$$

where:

$$C_1 = -242.02$$

$$C_2 = 2.2228$$

$$C_3 = 2.589 \times 10^{-3}$$

$$C_4 = 48.26 \times 10^{-3}$$

$$C_5 = 1.5243 \times 10^{-10}$$

R_{RTD} is the RTD Resistance at T_{RTD} .

T_{RTD} is the temperature in degrees Celsius.

Software Operation Settings

The provided software configures six parameters for TDS measurement:

- Conductivity cell excitation voltage
- Gain resistance selected by the multiplexer
- Value of RTD used
- Conductivity cell switching frequency
- Conductivity probe cell constant
- Type of solution being measured.

The DAC voltage can be set to any value from 0 to 2.5 V. At startup, the DAC voltage is set to 400 mV.

The selected gain resistance can be set to open or any of the seven resistor values: 20 Ω , 200 Ω , 2 k Ω , 20 k Ω , 200 k Ω , 2 M Ω , and 20 M Ω . Initially, the gain resistance is set to open.

The type of RTD used can be set to either Pt100 or Pt1000. Initially, the type of RTD used in temperature measurements is set to Pt100.

The frequency of the PWM signal sets the frequency of the bipolar pulse across the conductivity cell. The software can only switch between two options for PWM frequency: 94 Hz and 2.4 kHz. Initially, the PWM frequency is set to 94 Hz.

There are three fixed options for conductivity probe cell constants: 0.1, 1.0, and 10. A fourth option allows the user to enter a custom value for probes with cell constants other than 0.1, 1.0, and 10. By default, the cell constant is set to 1.0.

The type of solution sets the TDS factor and temperature coefficient used in computing for TDS and temperature compensation, respectively. The software has built-in settings for only sodium chloride (NaCl) and potassium chloride (KCl) solutions. However, the user can set custom values for the TDS factor and temperature coefficient separately for other types of solutions. Initially, the type of solution is set to NaCl.

Apart from these parameters, the software can also switch between taking measurements with the ADC in single conversion mode and with the ADC in continuous conversion mode. In single conversion mode, the ADC goes to idle mode whenever a read conductivity command is not being issued. This decreases the power consumption of the board when it is not active. Additionally, the DAC voltage value can be set to zero in these times to further decrease the board's consumption. In continuous conversion mode, the ADC continuously samples the conductivity cell signal. This decreases the measurement time for each sample, which makes this effective when continuously monitoring the conductivity of a solution.

Auto-Ranging Conductivity Measurement

For a given type of solution and conductivity probe used, the range of conductivity measurement range encompasses multiple gain resistance settings. Furthermore, to prevent the excitation voltage from exceeding the rated voltage of the conductivity cell, the excitation voltage value must change along with the gain resistance. The software is capable of automatically setting the gain resistance and the excitation voltage to the range of the conductivity of the solution. This ensures that the conductivity reading is always being measured at the most reliable setting. The method of auto-ranging the conductivity measurement is described in Figure 12.

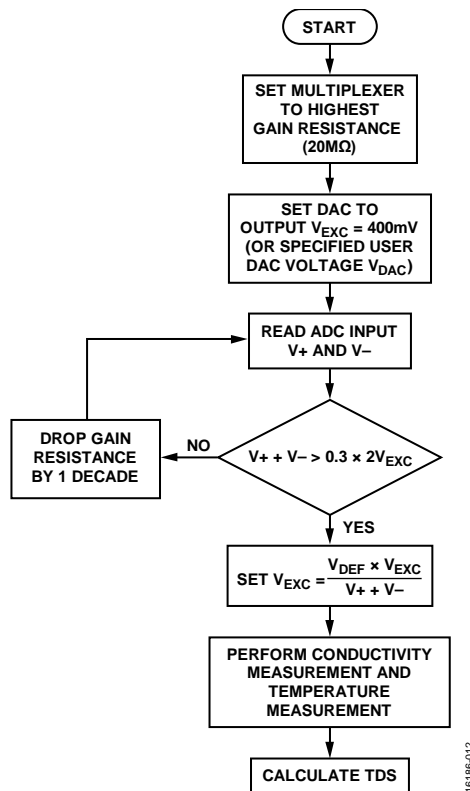


Figure 12. Auto-Ranging Conductivity Measurement Flowchart

Calibration Procedure

The system is capable of two calibration methods, a zero-scale calibration and through a reference precision resistance. The calibration method used to obtain the measurements discussed in Figure 15 uses a reference precision resistance, which can either be a 20 Ω or 200 Ω resistor as shown in Figure 5. It is in these resistance ranges that the on-resistance of the multiplexer has a significant effect on the conductivity measurement. The output of this calibration is an offset resistance value, which is added to the gain resistance used in the computation of conductivity. Figure 13 shows the procedure to perform this calibration.

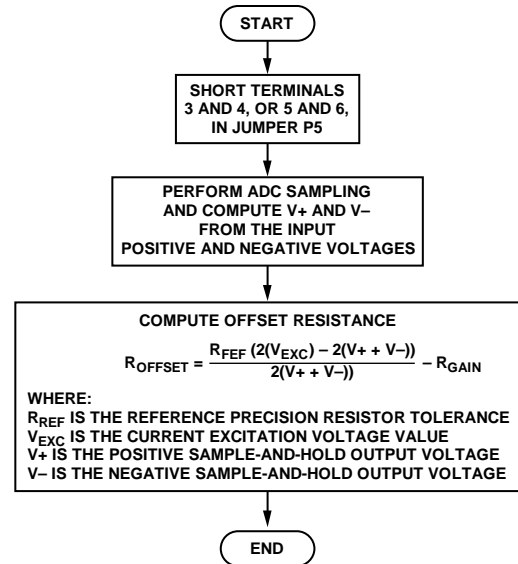


Figure 13. Flowchart of Calibration Procedure through a Reference Resistance

The zero-scale calibration performs the zero-scale calibration of the AD7124-8, which eliminates the output bias voltages of the sample-and-hold topology. This ensures that a zero-input to the conductivity cell corresponds to the ADCs zero code. Place a shunt in Pin 2 and Pin 3 of Jumper Header P6 of the CN-0411 board. The AD7124-8 is commanded to perform system zero-scale calibration on both the positive and negative voltages of the conductivity signal. This stores the zero-input voltage level in the ADCs offset registers and is automatically considered in every sample reading.

Both these two calibration methods need to be done only once for each board since the software stores the output of the calibration procedures.

System Accuracy

From Equation 9, the computation of conductivity depends on the two output voltages of the sample-and-hold topology, R_{GAIN} , and the DAC output voltage. R_{GAIN} resistors below the MΩ range have 0.1% tolerance while the 2 MΩ and 20 MΩ resistors have 1% tolerance. Added to the resistances in the simple voltage divider network shown in Figure 3 are the on-resistances of the multiplexer ADG1608 and the conductivity cell switch ADG884, which are maximum at 17.4 Ω and 0.96 Ω, respectively. The input bias currents and input offset current from the instrumentation amplifier introduces a voltage, which scales with the gain resistance and the resistance of the solution. The B-grade AD8220 has a max input bias current of 10 pA for each input and a max input offset current of 0.6 pA, which makes a total input bias current of 20.6 pA. At 20 MΩ, this constitutes a 20.6 pA × 20 MΩ = 412 μV input bias voltage. Moreover, at a gain of 10, the AD8220 has a 0.2% max gain error. Computing conductivity directly from a known precision resistance measures the system accuracy and accounts for all these factors, including the ones introduced by the sample-and-hold topology, such as the drop voltage in Equation 4.

Figure 14 shows the measured accuracy of the conductivity measurements taken using precision resistors from 1 MΩ to 10 Ω, corresponding to conductivities of 1 μS to 0.1 S. An increase in the system errors is visible in the 10 mS to 100 mS range. For these ranges, a calibration method to on-board precision resistances (shown in Figure 5) is required.

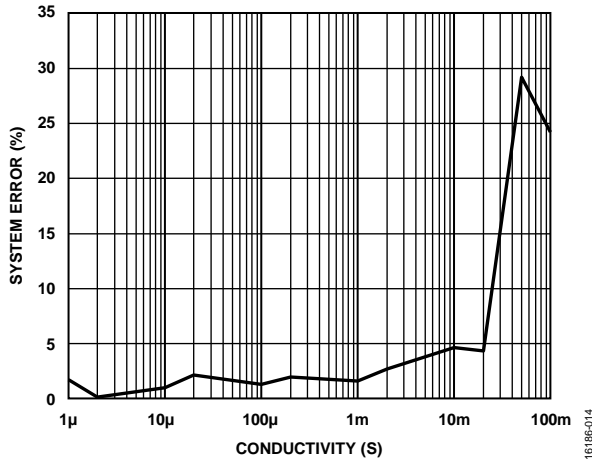


Figure 14. System Error (%) vs Conductivity from 1 μS to 0.1 S

Calibration is performed only once for each board and an offset resistance is obtained, which accounts for the on-resistance of the multiplexer. The software system stores the offset resistance value and uses it for all succeeding conductivity measurements until the calibration method is performed again. Figure 15 shows the error for high conductivities when calibrated to the 20 Ω precision resistance shown in Figure 5.

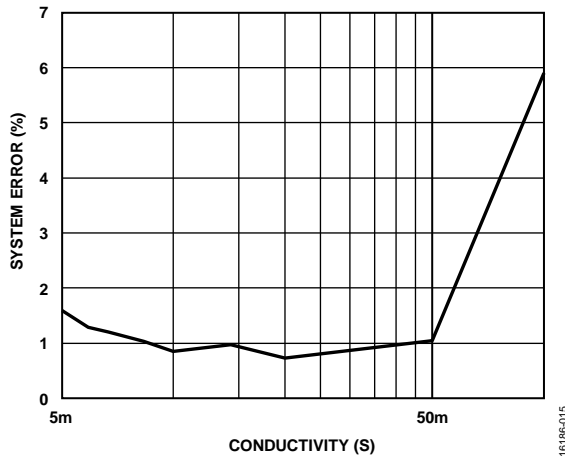


Figure 15. Calibrated System Accuracy (%) vs Conductivity from 1 mS to 100 mS

System Noise Performance

As shown in Figure 16, the noise level of the system is only 15.99 nS for a 10 kΩ precision resistance corresponding to a 100 μS conductance.

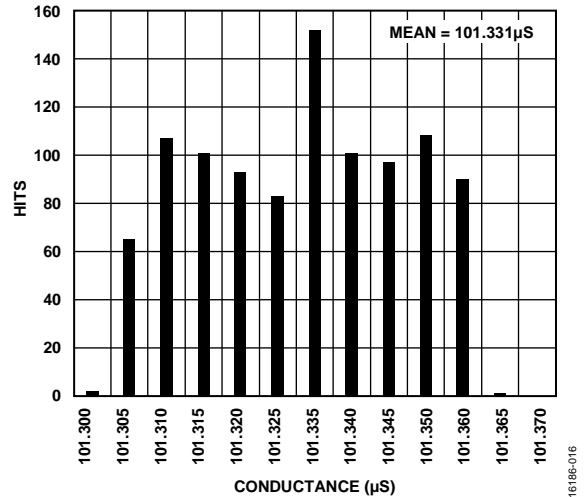


Figure 16. CN-0411 Noise Levels for a 100 μS Conductance

COMMON VARIATIONS

An ADG884 analog switch is used to impose a bipolar excitation across the conductivity cell, with both terminals of the cell being driven. Alternative designs hold one terminal of the cell at ground potential, which reduces the impact of leakage at the grounded terminal; such designs require more elaborate excitation circuits. The CN-0411 is further simplified by only measuring the voltage signal across the conductivity cell. Using a trans-impedance amplifier, to measure the current through the cell eliminates the need to compute for the current value from the gain resistance. Furthermore, using a variable gain amplifier replaces the need for a multiplexer selecting the gain resistors for the voltage divider network. The CN-0359 is an example of a higher-performance conductivity measurement solution.

CIRCUIT EVALUATION AND TEST

The circuit setup for the [CN-0411](#) consists of the [EVAL-CN0411-ARDZ](#) evaluation board and the [EVAL-ADICUP360](#) board. The [EVAL-CN0411-ARDZ](#) comes in an Arduino shield form factor, making it possible to use additional pin compatible developments boards for evaluation and prototyping.

The [CN-0411](#) demo software (see the [CN-0411 Software User Guide](#) for complete details) allows the [EVAL-ADICUP360](#) board to configure and read data from the [EVAL-CN0411-ARDZ](#) evaluation board. This data can be displayed using a serial port terminal program on a PC.

Equipment Needed

The following equipment is needed:

- PC with a USB port and Windows® 7 (32-bit) or higher
- [EVAL-CN0411-ARDZ](#) circuit evaluation board
- [EVAL-ADICUP360](#) development board
- CrossCore Embedded Studio
- Micro-USB to USB connector
- 2-wire conductivity cell with RTD

Getting Started

A detailed user guide for the [EVAL-CN0411-ARDZ](#) is available at www.analog.com/CN0411-UserGuide. Consult this user guide for all details and aspects of hardware and software operation.

A detailed user guide for the [EVAL-ADICUP360](#) platform board is also available at www.analog.com/EVAL-ADICUP360.

Set the jumpers on the [EVAL-ADICUP360](#) board and the [EVAL-CN0411-ARDZ](#) board to the positions indicated in the [CN-0411 User Guide](#).

Download the [CN-0411](#) demo code to the [EVAL-ADICUP360](#) board using the CrossCore Embedded Studio and DEBUG USB connection.

Connect the [EVAL-CN0411-ARDZ](#) board to the [EVAL-ADICUP360](#) using the mating headers. Connect your conductivity cell and RTD to the BNC connector and/or terminal blocks provided on the [EVAL-CN0411-ARDZ](#) board.

Connect the USER USB port of the [EVAL-ADICUP360](#) to the PC. On the PC, start the preferred serial terminal software and connect to the [EVAL-ADICUP360](#) serial port to begin reading the data.

Other Arduino form-factor platforms can also be used to test and evaluate the [EVAL-CN0411-ARDZ](#) board. However, the software needs to be ported to the new processor/platform.

Test Setup Functional Block Diagram

A photograph of the sample test setup of TDS and conductivity measurement using the [EVAL-CN0411-ARDZ](#) circuit board and the [EVAL-ADICUP360](#) board is shown in Figure 17.

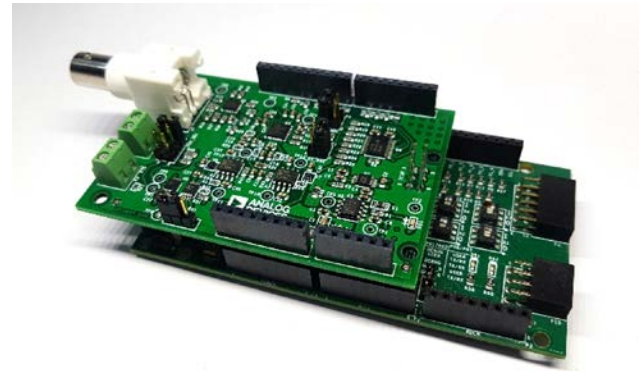


Figure 17. [EVAL-CN0411-ARDZ](#) and [EVAL-ADICUP360](#) TDS and Conductivity Measurement Setup

A functional block diagram of the test setup is shown in Figure 18. A complete schematic of the evaluation board is contained in the [CN-0411 Design Support Package](#), including layout, Gerber files, and a bill of materials.

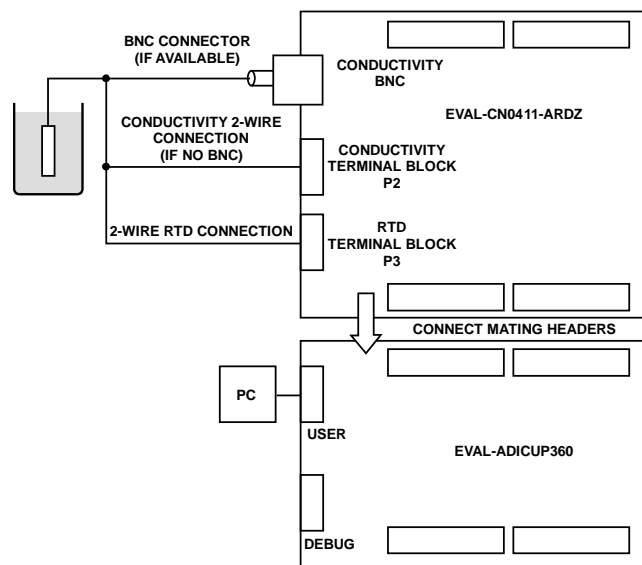


Figure 18. [CN-0411](#) Test Setup

Test Setup

To measure electrical conductivity and TDS of a solution sample, take the following steps:

1. Connect the sensor probe to the [CN-0411](#) system either through the BNC connector if it is available or wired through the terminal block P2. Connect the conductivity probe's RTD wires to terminal block P3.
2. Dip the probe into the solution sample preferably at the center of the container to maximize the accuracy of the conductivity cell.
3. Set the cell excitation voltage and operating frequency through serial commands from the terminal software
4. Set the conductivity probe cell constant and select the type of solution and the conversion mode of the ADC. For a detailed description of these settings, see the [CN-0411 User Guide](#).
5. Follow the prompts on the serial terminal to perform conductivity or TDS measurements. Additionally, calibration routines may be performed before any measurement. See the [CN-0411 User Guide](#) for the detailed procedure for calibration.

The performance of the circuit can also be tested without the conductivity cell and sample solutions by using a precision resistor of known value.

Hardware and software operation details are available in the [CN-0411 User Guide](#) at www.analog.com/CN0411-UserGuide.

LEARN MORE

CN-0411 Design Support Package:

www.analog.com/CN0411-DesignSupport

[EVAL-ADICUP360 User Guide.](#)

[APM Article. ADI Water Analysis Solution for pH Meters and Conductivity Meters.](#) Analog Devices.

[Coury, Lou Ph.D. Conductance Measurements.](#) Bioanalytical Systems, Inc.

[Conductivity Theory and Practice.](#) Radiometer Analytical SAS.

[Circuit Note CN-0381. Completely Integrated 4-Wire RTD Measurement System Using a Low Power, Precision, 24-Bit, Sigma-Delta ADC.](#) Analog Devices.

[Circuit Note CN-0359. Fully Automatic High Performance Conductivity Measurement System.](#) Analog Devices.

[Circuit Note CN-0349. Fully Isolated Conductivity Measurement Data Acquisition System.](#) Analog Devices.

Data Sheets and Evaluation Boards

[CN-0411 Circuit Evaluation Board \(EVAL-CN0411-ARDZ\)](#)

[EVAL-ADICUP360 Evaluation Board](#)

[ADuCM360 Data Sheet](#)

[AD7124-8 Data Sheet](#)

[AD8628 Data Sheet](#)

[ADG836 Data Sheet](#)

[AD8220 Data Sheet](#)

[ADG884 Data Sheet](#)

[ADG1608 Data Sheet](#)

[AD5683R Data Sheet](#)

REVISION HISTORY

12/2018—Revision 0: Initial Version

(Continued from first page) Circuits from the Lab reference designs are intended only for use with Analog Devices products and are the intellectual property of Analog Devices or its licensors. While you may use the Circuits from the Lab reference designs in the design of your product, no other license is granted by implication or otherwise under any patents or other intellectual property by application or use of the Circuits from the Lab reference designs. Information furnished by Analog Devices is believed to be accurate and reliable. However, Circuits from the Lab reference designs are supplied "as is" and without warranties of any kind, express, implied, or statutory including, but not limited to, any implied warranty of merchantability, noninfringement or fitness for a particular purpose and no responsibility is assumed by Analog Devices for their use, nor for any infringements of patents or other rights of third parties that may result from their use. Analog Devices reserves the right to change any Circuits from the Lab reference designs at any time without notice but is under no obligation to do so.

©2018 Analog Devices, Inc. All rights reserved. Trademarks and registered trademarks are the property of their respective owners.
CN16186-0-12/18(0)



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Multiple Function Sensor Development Tools](#) category:

Click to view products by [Analog Devices](#) manufacturer:

Other Similar products are found below :

[MAXWSNENV#](#) [STEVAL-MKIT01V1](#) [KT-O2-25%-TB200A-E](#) [KT-TVOC-200-TB200A](#) [KT-NmHc-200-TB200A](#) [SEN0344](#) [PIM520](#)
[PIM518](#) [PIM519](#) [PIM502](#) [AS7022-EVALKIT](#) [ALTEHTG2SMIP](#) [MAX30101WING#](#) [OB1203SD-U-EVK](#) [MIKROE-4265](#) [A000070](#)
[EV_ICG-20660L](#) [GX-F12A-P](#) [GX-F15A](#) [GX-F8AI-P](#) [GX-H15AI-P](#) [GX-H6A-P](#) [GX-HL15B-P](#) [1093](#) [MIKROE-2455](#) [MIKROE-2458](#)
[MIKROE-2507](#) [MIKROE-2508](#) [MIKROE-2516](#) [MIKROE-2529](#) [1458](#) [MIKROE-1628](#) [176](#) [189](#) [1893](#) [2106](#) [ATQT4-XPRO](#) [GP30-DEMO](#)
[MODULE](#) [GX-F12AI-P](#) [GX-F15A-P](#) [GX-FL15B-P](#) [GX-H12AI-P](#) [GX-H15A-P](#) [GX-H6AI-P](#) [GX-H8A-P](#) [GX-F15AI-P](#) [GX-FL15A-P](#) [AAS-](#)
[AQS-UNO](#) [DFR0018](#) [DFR0131](#)