
CUI DEVICES

SERIES: AMT12 | DESCRIPTION: MODULAR INCREMENTAL ENCODER

FEATURES

- 16 prgrammable resolutions up to 4096 PPR
- single ended quadrature A/B
- resilient to dust, dirt, and oil
- low power consumption
- -40 to +125°C temperature range
- radial and axial cable connections
- configuration and firmware updates via AMT Viewpoint[™] software
- \bullet fits motor shafts from 1 mm to $\rlap{14^{\prime\prime}}$

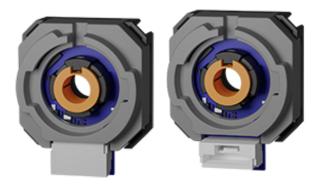

.....



ELECTRICAL

parameter	conditions/description	min	typ	max	units
power supply	VDD	4.5	5	5.5	V
start-up time ¹			200		ms
current consumption	with unloaded output		16		mA
output high level		VDD-0.8			V
output low level				0.4	V
output current	CMOS sink/source per channel			2	mA
rise/fall time			30		ns

Note: 1. Encoder must be stationary during start-up.

INCREMENTAL CHARACTERISTICS

.....

parameter	conditions/description	min	typ	max	units
channels	quadrature A & B				
waveform	CMOS voltage square wave				
phase difference	A leads B for CCW rotation (viewed from front)		90		degrees
quadrature resolutions ²	96, 192, 200, 250, 384, 400, 500, 512, 768, 800, 1000, 1024, 1600, 2000, 2048, 4096				PPR
accuracy			0.25		degrees
quadrature duty cycle (at each resolution)	512, 1024, 2048, 4096 96, 192, 200, 250, 384, 400, 500, 768, 800, 1000 1600, 2000	49 47 43	50 50 50	51 53 56	% % %

Notes: 2. Resolutions programmed with AMT ViewpointTM PC software. Default resolution set to 2048 PPR. Listed as pre-quadrature, meaning final number of counts is PPR x 4.

MECHANICAL

parameter	conditions/description	min	typ	max	units
motor shaft length		12.3			mm
motor shaft tolerance			NOM +0/-0.01	.5	mm
axial play				±0.3	mm
hub set screw to shaft torque 3			3		in-lb
rotational speed (at each	384, 768, 800, 1000, 1600, 2000, 2048, 4096			4000	RPM
resolution)	96, 192, 200, 250, 400, 500, 512, 1024			8000	RPM


ENVIRONMENTAL

parameter	conditions/description	min	typ	max	units
operating temperature		-40		125	°C
humidity	non-condensing			85	%
vibration	10~500 Hz, 5 minute sweep, 2 hours on each XYZ			5	G
shock	3 pulses, 6 ms, 3 on each XYZ			200	G
RoHS	yes				

WAVEFORMS

.....





The following parameters are defined by the resolution selected for each encoder. The encoders resolution is listed as Pulses Per Revolution (PPR), which is the number of periods (or high pulses) over the encoders revolution.


Parameter	Description	Expression	Units	Notes
PPR	resolution		Pulses Per Revolution	This is the user selected value and the format all resolutions are listed in
CPR	counts	PPR x 4	Counts Per Revolution	This is the number of quadrature counts the encoder has
Т	period	360/R	mechanical degrees	
Р	pulse width	T/2	mechanical degrees	
S	A/B state width	T/4	mechanical degrees	This is the width of a quadrature state

Note: For more information regarding PPR, CPR, or LPR (Lines Per Revolution) view https://www.cuidevices.com/blog/what-is-encoder-ppr-cpr-and-lpr

.....

PART NUMBER KEY

For customers that prefer a specific AMT12 configuration, please reference the custom configuration key below.

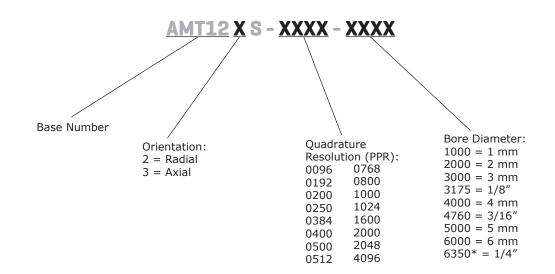


*1/4 inch bore diameter option only available as custom configuration.


AMT12-V KITS

In order to provide maximum flexibility for our customers, the AMT12 series is provided in kit form standard. This allows the user to implement the encoder into a range of applications using one sku#, reducing engineering and inventory costs. AMT12 kit includes all items shown below.

ORDERING GUIDE



	SHAFT ADAPTERS					
1 mm	2 mm	3 mm	1/8 in	4 mm	3/16 in	5 mm
White	Light Blue	Orange	Purple	Gray	Yellow	Green

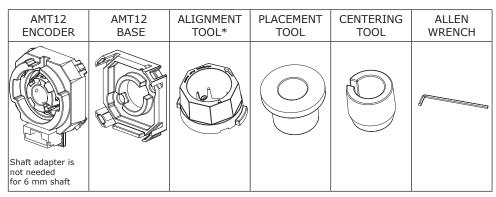


*Alignment Tool comes pre-installed on all AMT12 Encoders.

ENCODER INTERFACE

CONNECTOR PINOUT					
Function					
#	AMT122	AMT123			
1	+5 V	+5 V			
2	GND	GND			
3	A	A			
4	В	В			
5	ENC_TX+	ENC_TX+			
6	ENC_RX+	ENC_RX+			
7	MCLR	MCLR			
8	N/A	N/A			

.....




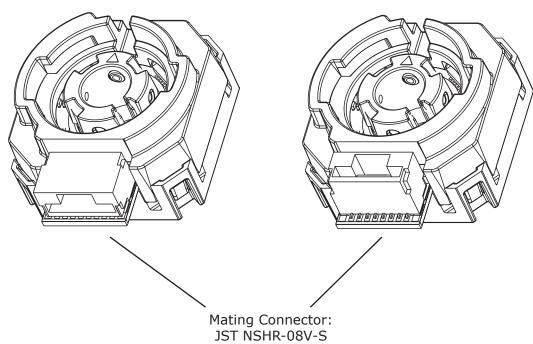

AMT123

.....


MECHANICAL DRAWING

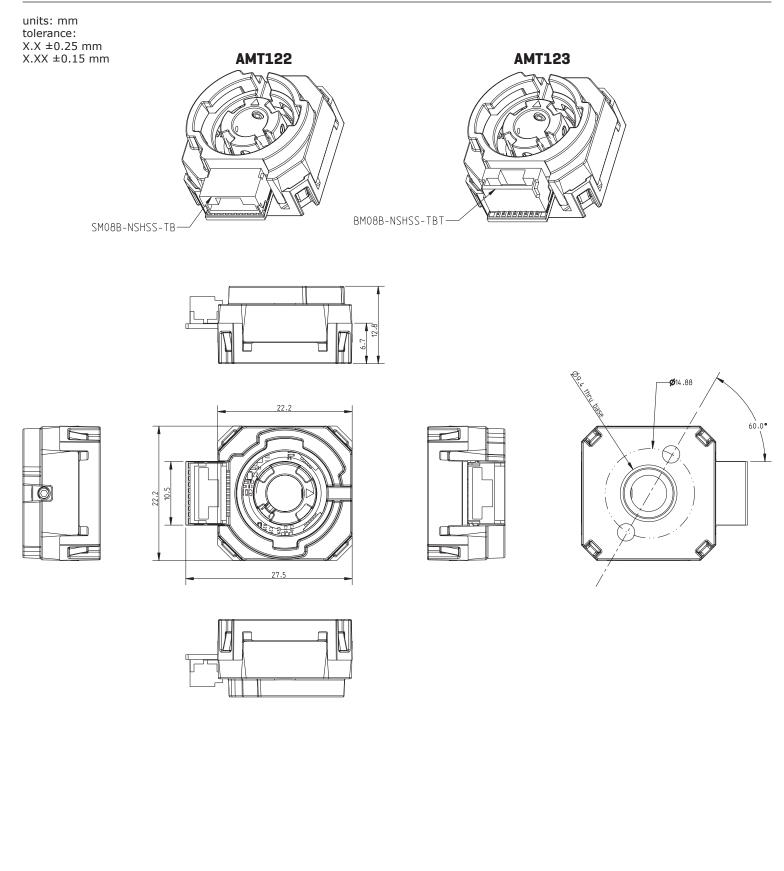


.....

.....


ASSEMBLY PROCEDURE

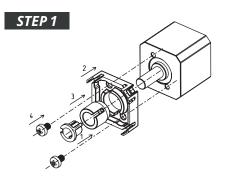

- Begin by selecting the appropriately sized shaft adapter and insert it into the centering tool. No adapter is needed for a 6 mm motor shaft.
- 2. Place the plastic base over the motor shaft.
- 3. Slide the centering tool and shaft adapter over the motor shaft. The centering tool will hold the base in the proper position.
- 4. While holding the centering tool down in place, install screws to secure the base to the motor body.

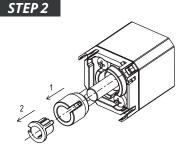

- 1. Remove the centering tool.
- 2. Take the shaft adapter out of the centering tool.

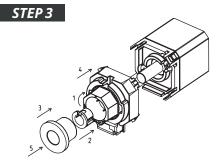


- Rotate the pre-installed alignment tool clockwise and completely to the right so that the pre-installed shaft set screw is visible.
- 2. Insert the shaft adapter into the encoder making sure the adapter is properly aligned with the keyway in the metal hub. No adapter is needed for a 6 mm motor shaft.
- Insert the placement tool into the assembly. This placement tool holds the encoder's hub and shaft adapter in the proper position for installation onto the motor shaft.
- 4. Position the encoder so it can snap onto the plastic base. The encoder will only snap into place in one orientation.
- Slide the encoder onto the motor shaft applying force only to the placement tool to maintain proper alignment of the encoder's hub and shaft adapter.
- 6. Ensure all 4 locking tabs are secured in place over the encoder hub.



- 1. Insert the Allen Wrench into the notch on the top.
- 2. Tighten the shaft set screw. Torque to the specification listed on the applicable AMT encoder datasheet.

.....

STEP 5

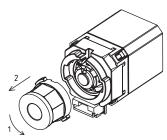

- Rotate the placement tool and alignment tool counterclockwise until the tabs align with the openings.
- 2. Remove both tools from the encoder.
- **3.** When installation is finished, the motor shaft should be rotating freely.

REVISION HISTORY

rev.	description	date
1.0	initial release	09/03/2020
1.01	added motor shaft tolerance details, updated start-up details	09/10/2021

The revision history provided is for informational purposes only and is believed to be accurate.

CUI DEVICES

CUI Devices offers a one (1) year limited warranty. Complete warranty information is listed on our website.

CUI Devices reserves the right to make changes to the product at any time without notice. Information provided by CUI Devices is believed to be accurate and reliable. However, no responsibility is assumed by CUI Devices for its use, nor for any infringements of patents or other rights of third parties which may result from its use.

CUI Devices products are not authorized or warranted for use as critical components in equipment that requires an extremely high level of reliability. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Encoders category:

Click to view products by CUI Devices manufacturer:

Other Similar products are found below :

6-1393048-0 6-1393048-5 62AG22-H5-P 700-09-36 1393047-3 ECW1J-C36-SE0/077L 2-1393047-2 25LB22-G-Z T101-5C3-111-M1 385001M0439 385001M0216 V23401H1409B101 V23401T8002B802 V23401U6019B609 62B11-LPP-040C 62HS22-H0-040S 700-16-16 700-24-24 V23401D1001B102 3-1393048-1 288T220R161A2 1-1879391-5 GH65C11-N-SO 1393047-1 702-01-24 703-20-00 62V22-02-P 62D15-02-140S 61K128-075 EC21C1520402 62AG18-L5-020C E6F-AG5C 720 2M 62B22-SPP-030C 60016-005 31215-003 01039-2677 ACZ11BR2E-20FD1-20CZ-0546 DXM510-2000S002 01002-2133 01002-9375 01002-9572 01026-476 01039-1102 01039-1981 01070-1315 01072-513 01080-056 01084-089 01094-017 01102-031