



Data Sheet

Solenoid valve Type **EV250B**

Assisted lift operated 2/2-way valve program is use in closed circuits with low differential pressure



EV250B with assisted lift can operate from zero and up to 10 bar differential pressure.

This 2/2-way valve program is especially to use in closed circuits with low differential pressure, but demanding moderate flow rates.

Valve body in dezincification resistant brass for ensuring a long life even in connection with aggressive steam media.

EV250B is compatible with the broad Danfoss coil program with enclosures from IP00 up to IP67. Medium temperatures up to 140 °C (low pressure steam).

Features and versions:

- For water, oil, compressed air and similar neutral media
- Clip on coil
- Ambient temperature: Up to 80 °C
- Coil enclosure: Up to IP67
- The valve can be used for rough vacuum
- Water hammer damped



1 Portfolio overview

Table 1: Portfolio overview

Features	EV250B
Body material	DZR Brass
DN [mm]	10 - 22
Connection	G3⁄8" - G1"
Sealing material	EPDM, FKM
Function	NC, NO
Kv [m³/h]	2.5 - 7
Differential pressure range [bar]	0 - 10
Temperature range [°C]	-30 - 140



2 Functions

2.1 Function NC


Coil voltage disconnected (closed):

When the supply voltage to the coil (1) is disconnected, the valve plate (4) is pressed down against the pilot orifice (5) by the closing spring (3). The pressure across the diaphragm (6) is built up via the equalizing orifice (8). The diaphragm closes the main orifice (7) as soon as the pressure across the diaphragm is equivalent to the inlet pressure below, due to the larger diameter of the upper side and/or the tension of the closing spring (3). The valve will be closed as long as the voltage to the coil is disconnected.

Coil voltage connected (open):

When voltage is applied to the coil, the armature (2) and the valve plate (4) are lifted clear of the pilot orifice (5).

If there is a differential pressure across the valve, the pressure above the diaphragm (6) drops as the pilot orifice is larger than the equalizing orifice. Therefore the diaphragm is lifted clear of the main orifice (7). If there is no differential pressure across the valve, the armature (2) draws the diaphragm (6) clear of the main orifice (7) using the assisted lift (9). The valve will be open for as long as there is voltage to the coil.

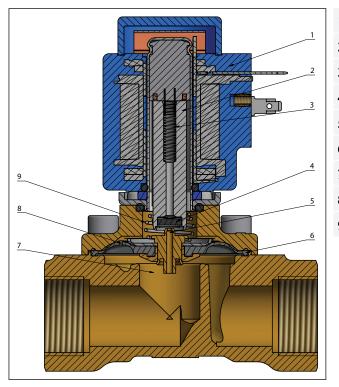

1	Coil
2	Armature
3	Closing spring
4	Valve plate
5	Pilot orifice
6	Diaphragm
7	Main orifice
B	Equalizing orifice
9	Assisted lift

2.2 Function NO

Coil voltage disconnected (valve is open):


When the supply voltage to the coil (1) is disconnected, the valve plate (7) are lifted clear of the pilot orifice (9) if there is a differential pressure across the valve. The pressure above the diaphragm (10) drops as the pilot orifice is larger than the equalizing orifice. Therefor the diaphragm is lifted clear of the main orifice (12). If there is no differential pressure across the valve, the opening spring (5) draws the diaphragm (10) clear of the main orifice (12) using the assisted lift (8). The valve will be open for as long as there is no voltage to the coil.

Coil voltage connected (valve is closed):

When the supply voltage to the coil (1) is connected, the armature (3) will compress the opening spring (5) and the closing spring will push the spindle (4)/ valve plate down against the pilot orifice (9). The pressure across the diaphragm (10) is built up via the equalising orifice (11). The diaphragm closes the main orifice (12) as soon as the pressure across the diaphragm is equivalent to the inlet pressure below, due to the larger diameter of the upper side and / or the tension of the closing spring (2). The valve will be closed as long as coil voltage is connected.

Solenoid valve, type EV250B



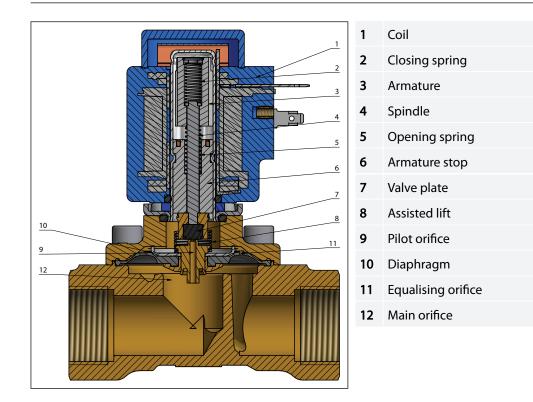




3 Applications


It is recommended to use a filter in front of the valve. Recommended filter 50 mesh (297 microns).

Figure 1: Filter

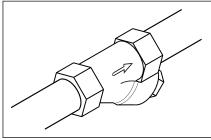

In water applications, exercise the valves at least once every 24 hours, meaning change the state of the valve. The valve exercise will minimize the risk of the valve sticking due to calcium carbonate, zinc or iron oxide build-up.

Figure 2: Exercise: Valve on/off

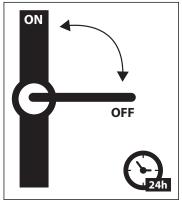

To minimize scaling, and corrosion attack it is recommended that the water passing the valve have the following values:

- Hardness 6 18 °dH to avoid scaling (chalk / lime stone build up)
- Conductivity 50 800 $\mu\text{S/cm}$ to avoid brass dezincification and corrosion
- Above 25 °C media temperature avoid stagnant water inside the valve to avoid dezincification and corrosion attack



4 Product specification

4.1 Technical data


Table 2: Technical data

Media	EPDM	Water		
media	FKM	Oil, air and water		
	EPDM	-30 °C - 120 °C at 0 - 10 bar		
Media temperature [°C]		120 °C - 140 °C at 0 - 4 bar		
	FKM	0 - 100 °C, for water max 60 °C		
Ambient temperature [°C]	Up to 80 °C			
	DN10	2.5 m ³ /h		
Kv value [m³/h]	DN12	4 m³/h		
	DN18	6 m³/h NC / 4.9 m³/h NO		
	DN22	7 m³/h NC / 5.2 m³/h NO		
Min. Opening differential pressure [bar]	0 bar			
Max. Opening differential pressure [bar]	10 bar			
Max. working pressure [bar]	10 bar			
Max. test pressure [bar]	15 bar			
Pressure	Pressure range can be extended to use in rough vacuum, typically up to 99% vacuum (10 mbar), depending on the application.			
Tightness	Internally: Better than 0.4 mbar l/sec (25 ccm air per min.) Externally: Better than 1* 10-3 mbar l/sec (100% He)			
Viscosity [cSt]	Max. 50 cSt			

Capacity diagram

Example, water: EV250B 12 at differential pressure of 3 bar: Approx. 7 m³/h

Figure 3: Capacity diagram

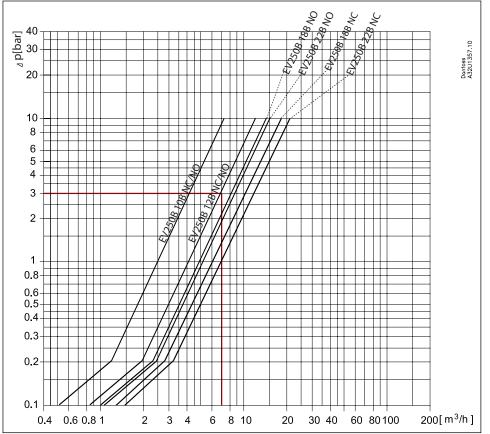



Differential pressure range

Table 3: Differential pressure range

Connection ISO228/1	Function	Coil type BB, BE, BR, BY 10W AC BG 12W AC BG 20W DC BN 20W AC	Coil type BB/BE/BR/BY 18W DC ⁽¹⁾
		[Bar]	[Bar]
G⅔ - G1	NC	0-10	0-6
	NO	0-10	0-10

⁽¹⁾ 6 bar max. opening differential pressure is measured at 6% undervoltage (22.6 V DC hot coil), 50 °C ambient and 90 °C media temperature.

Time to open/close

Table 4: Time to open/close

Main type	EV250B 10BD	EV250B 12BD	EV250B 18BD	EV250B 22BD
Time to open [ms] ⁽¹⁾	100	100	150	150
Time to close [ms] ⁽¹⁾	100	100	100	100

⁽¹⁾ The times are indicative and apply to water. The exact times will depend on the pressure conditions.

Material

Table 5: Materials

Components	Materials	Specifications
Valve body	DZR Brass	CuZn36Pb2As/CZ 132
Cover	Brass	W.no. 2.0402
Armature/armature stop	Stainless steel	W. no. 1.4105 / AISI 430FR
Armature tube	Stainless steel	W. no. 1.4306 / AISI 304L
Springs	Stainless steel	W. no. 1.4310 / AISI 301
O-ring	EPDM or FKM	
Valve plate	EPDM or FKM	
Diaphragm	EPDM or FKM	




4.2 Dimensions and Weights

Table 6: Dimensions and weight: DZR brass, NC and NO


	Weight gross,			B ₁ [mm] / Coil type			
Туре	valve body without coil [kg]	L [mm]	B [mm]	BB/BE/BR/BY	BG/BN	H [mm]	H ₁ [mm]
EV250B 10	0.6	58	52.3	46	68	91	12.5
EV250B 12	0.6	58	52.3	46	68	91	12.5
EV250B 18	0.8	90.5	58	46	68	92	18
EV250B 22	1.1	90	58	46	68	96.3	22.3

Figure 4: Dimensions

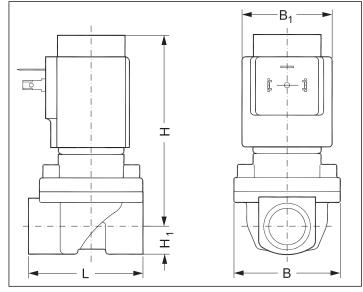

4.3 Mounting

Figure 5: Mounting angle

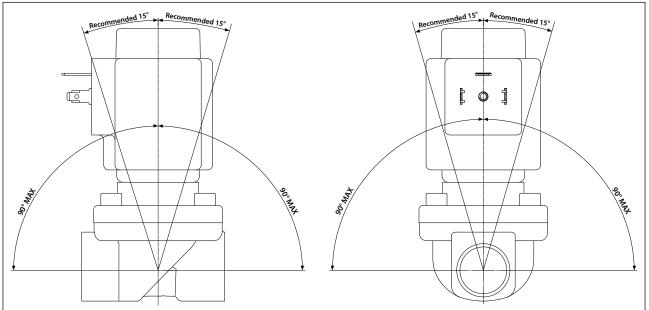



5 Ordering

5.1 Parts program

Table 7: DZR brass, valve body NC and NO

Connection ISO228/1	Seal Material	Orifice	Kv value	Fund	tion
	Seal Material	[mm]	[m³/h]	NC	NO
G 3/8	EPDM	10	2.5	032U5250	032U5350
G /8	FKM	10	2.5	032U5251	032U5351
G ½	EPDM	12	4	032U5252	032U5352
G /2	FKM		4	032U5253	032U5353
	EPDM	18	6 18 4.9	032U5254	
G ¾	FKM			032U5255	
G 74	EPDM				032U5354
	FKM				032U5355
	EPDM		7	032U5256	
G 1	FKM	22	,	032U5257	
	EPDM	22	5.2		032U5356
	FKM		5.2		032U5357

5.2 Accessories

Coils

Table 8: Below coils can be used with EV250B:

Coil	Туре	Power consumption	Enclosure	Features
HERE'S	BB / BY, clip on	11 - 16W AC 14 - 16W DC	IP00 with spade connector	IP20 with protective cap, IP65 with cable plug
A little is	BR, clip on	12 - 14 W AC 16 W DC	IP00 with spade connector	IP20 with protective cap, IP65 with cable plug Design for marine application
- THEFT	BE, clip on	11 - 17 W AC 15 - 16 W DC	IP67	With terminal box
Aller	BF, clip on	11 - 16 W AC 14 - 16 W DC	IP67	With 1 m cable
	BG, clip on	11 - 16 W AC 16 - 20 W DC	IP67	With terminal box
	BN, clip on	22 W AC 20 W DC	IP67	Hum free With terminal box and 1 m cable



Cable plug

Figure 6: Cable plug



Application	Code number
GDM 2011 (grey) cable plug according to DIN 43650-A PG11	042N0156

Universal electronic multi-timer, type ET20M

Figure 7: ET20M



Application	Voltage [V AC]	To use with coil	Ambient tempera- ture [°C]	Code number
External adjustable timing from 1 to 45 minutes with 1 to 15 seconds drain open. With manual override (test button). Electrical connection DIN 43650 A / EN 175 301-803-A	24 - 240	BB	-10 – 50	042N0185



Spare parts

Table 9: Actuator units NC/NO DZR

Actuator		r unit NC	Actuator unit NO	
Туре	EPDM	FKM	EPDM	FKM
EV250B 10-12BD	032U5315	032U5271	032U5319	032U5320
EV250B 18-22BD	032U5317	032U5273	032U5321	032U5322
	<u>ا</u>) 1	 @	1
	9 9 9 2 9 9 2			[®] 2
	3			3
	4			4
	5			5
) ⁶
	 O-ring for coil 4 x screws Armature tube O-ring Cover Actuator unit with: Armature + spring Assist spring Diaphragm 	 1. O-ring NC actuator unit with: 2. Armature + spring 3. Assist spring 4. Diaphragm 	1. O-ring for coil 2. 4 x screws Complete NO actuator unit with 3. Armature tube 4. O-ring 5. Cover 6. Assist spring 7. Diaphragm	

6 Online support

Danfoss offers a wide range of support along with our products, including digital product information, software, mobile apps, and expert guidance. See the possibilities below.

The Danfoss Product Store



The Danfoss Product Store is your one-stop shop for everything product related—no matter where you are in the world or what area of the cooling industry you work in. Get quick access to essential information like product specs, code numbers, technical documentation, certifications, accessories, and more.

Start browsing at store.danfoss.com.

Find technical documentation



Find the technical documentation you need to get your project up and running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more.

Start searching now at www.danfoss.com/en/service-and-support/documentation.

Danfoss Learning



Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications, industry topics, and trends that will help you do your job better.

Create your Danfoss Learning account for free at www.danfoss.com/en/service-and-support/learning.

Get local information and support



Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert—all in your own language.

Find your local Danfoss website here: www.danfoss.com/en/choose-region.

Spare Parts



Get access to the Danfoss spare parts and service kit catalog right from your smartphone. The app contains a wide range of components for air conditioning and refrigeration applications, such as valves, strainers, pressure switches, and sensors.

Download the Spare Parts app for free at www.danfoss.com/en/service-and-support/downloads.

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

Danfoss

ENGINEERING TOMORROW

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Danfoss manufacturer:

Other Similar products are found below :

037N0081 CBA 02 CBA S 20 CBT S-1M-1T MAG 1NO+TH 1NC 060-121766 MBS 3000-3811-A1AB04-0 MBS 3000-1211-A1AB04-0 MBS 3000-2015-A1AB04-0 MBS 1750-3211-A1GB04-2 060L115566 FC-051PK75S2E20H3XXCXXXSXXX FC-280P2K2T4E20H1BXCXXXSXXAX FC-051PK75T4E20H3XXCXXXSXX FC-051P5K5T4E20H3BXCXXXSXXX MCD 201-007-T4-CV1 032U5825 032U5252 BN024DS 060L310266 BB115AS BB024BS MBS 3000-2215-A1AB04-0 061B008066 032U5709 032U5253 132U2411 BB110CS 132U2405 132U2407 AC012D BCP4H BCP2L 031E020266 031E022566 031E024066 CBN 22 060-113366 060-216466 MBS 3000-3011-A1AB04-0 MBS 3000-1811-A1AB04-0 MBS 3000-2011-A1AB08-0 MBS 1700-1811-A1AB04-0 MBS 1700-2411-A1AB04-0 060L117166 060L118466 MBT 3270-20002-040-30C00-000 MBT 3560-0001-0100-10-120 180L0002 132B0102