9310 Overhead Air Ionizer Installation, Operation and Maintenance





Figure 1. SCS 9310 Overhead Air Ionizer

Description

The SCS 9310 Overhead Air Ionizer a self-contained, ionized air blower designed to neutralize electrostatic charges from non-conductive objects (insulators) and isolated conductors. The SCS 9310 meets ANSI/ESD S20.20 tested per ANSI/ESD STM3.1 and ESD TR53. The ionizer is designed with a built-in automatic emitter points cleaner to periodically clean the emitter points therefore saving some manual work and time. The 3-fan construction ensures ionization over a wide workstation area.

The SCS 9310 Overhead Air Ionizer is available in one model:

Item	Power Adapter Input
<u>9310-NO</u>	100-240 VAC

The SCS 9310 Overhead Air Ionizer does not include a power cord. It must be purchased separately.

Item	Description
<u>770000</u>	Power Cord, IEC C-13, North America
<u>770001</u>	Power Cord, IEC C-13, UK
770002	Power Cord, IEC C-13, Europe
<u>770003</u>	Power Cord, IEC C-13, China

Packaging

- 1 Overhead Air Ionizer Unit
- 1 Power Adapter, 100-240VAC Input, No Power Cord
- 1 Ground Wire
- 1 S-hook and Chain Set
- 1 Certificate of Calibration

Features and Components



Figure 2. Overhead Air Ionizer features and components overview

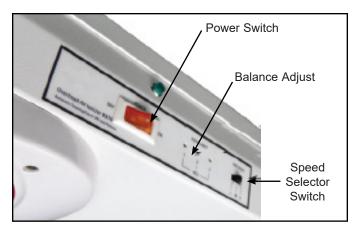


Figure 3. Overhead Air Ionizer controls



Figure 4. Overhead Air Ionizer features and components (left side view)



Figure 5. Power adapter (included) and SCS 770000 North America Power Cord (not included)

Installation

The Overhead Air Ionizer mounts easily in a suspended position above a workstation with the provided chain and hook. Place the unit above the worksurface and point it at the area or object to be neutralized.

WARNING: The Overhead Air Ionizer is not designed to be used in explosive areas or flammable atmospheres. Sparks from the fan motor or emitter points may cause ignition.

The Overhead Air Ionizer cannot be used on table tops or bench tops. It must be installed using the mounting hardware provided. The safety of any system incorporating this equipment is the responsibility of the assembler of the system. The ionizer's performance is affected by its distance from the worksurface and its fan speed. As the distance increases or fan speed decreases, the discharge time at the worksurface will increase.

Space Requirements

Restricted space may prevent electrostatic elimination due to insufficient airflow. The Overhead Air Ionizer should be located 23 to 35 inches (600 to 900 mm) above the worksurface with the center fan directly above the critical area. There should be no cross flow of air between the unit and the worksurface. Drafts from air conditioning or heating air outlets can affect the performance of this device.

Mounting

The Overhead Air Ionizer unit may be suspended using the S-hook and chain provided in the package. Chain and mounting hardware must have a minimum safe working load of 33 lbs (15 kg).

- 1. S-hooks, 6 pieces
- 2. Chain link, 12 inches

3. Mounting on Workbench - Mounting brackets are designed for use on a variety of workbench frames such as: perforated steel angle metal framing and wire shelving. Install the Overhead Air Ionizer unit using the mounting tabs. Place a lock washer and flat washer on the bolt before inserting it into the mounting tab. Insert the bolt into the mounting tab, and then place another lock washer and flat washer on the bolt before placing the nut onto the bolt. Tighten the nut onto the bolt; securing the unit to the frame.

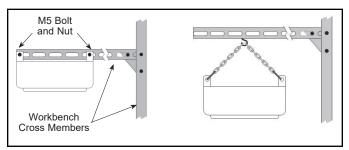


Figure 6. Mounting on a workbench

Electrical

Use the included AC/DC power adapter. The unit must be grounded for proper operation.

Grounding

The Overhead Air Ionizer must be connected to ground through the GROUND Terminal on the side of the unit. Connect the included ground wire to a known electrical ground point. Failure to connect the ground terminal may cause the unit to malfunction.

Operation

- Insert the AC/DC power adapter plug into an electrical outlet. Make certain that power line voltage is within the operating range of the AC/DC power adapter. The use of improper power line voltages may impair operation or damage the unit. This will void the warranty.
- 2. The switch on the front of the unit turns the power on or off. The LED Power Indicator will light up when the unit is on. Use the slide switch to set the fan speed to low, medium or high.

Maintenance

- When performing emitter needle maintenance, disconnect the Power Adapter AC plug from the outlet. Do not connect or disconnect the power plug with wet hands as doing so puts you at risk of electrical shock or injury.
- Occasional cleaning of the case is required.
 Although the emitter points have a built-in automatic cleaner, a check is still necessary for any abnormality within the emitter points. Verification and adjustment may be required to keep the balance within the specification range.

- 3. Cleaning the Case Wipe the case with a soft cloth and deionized water. Fully squeeze the wiping cloth or sponge to remove any excess liquid. If a stronger cleaning solution is required, dab a soft cloth with mixture of isopropyl alcohol and deionized water (70% IPA and 30% DI water). Do not use any other solvents that may damage the coating of the case.
- 4. Inspect the Emitter Points The emitter points and auto-cleaning brushes are accessible through the back grill. Access to the points is available by removing the two screws behind the grill, pressing the side tabs, and pulling off the grill (see Figure 7). To clean them, turn off the unit; clean the points and brushes with a cotton swab. Be careful not to bend the needle points during cleaning. The emitter points are fixed and therefore non-replaceable.
- 5. Re-attach the back grill after cleaning the emitters and fan blades. Re-install the two tab screws on each side of the grill.
- Service If you believe that a unit is not functioning properly, disconnect the unit from power. If the unit is covered by Warranty, contact your SCS sales representative or distributor.

CAUTION: There are no user replaceable parts. Unauthorized replacement of parts will void the warranty.



Figure 7. Remove the back grill by removing the screws, pressing the latch tabs on each side and pulling off.

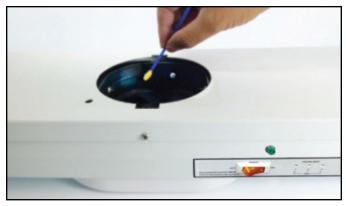


Figure 8. Wipe the emitter tips, brushes and fan blades with a cotton swab or brush. After cleaning, re-install the front grill and the screws.

Calibration

Offset Voltage Calibration

- The equipment needed to measure the offset voltage is a calibrated charged plate monitor or equivalent set to voltmeter mode. Refer to the User's Guide accompanying the CPM for proper operation and setup.
- Position the Overhead Air Ionizer and CPM as shown below.

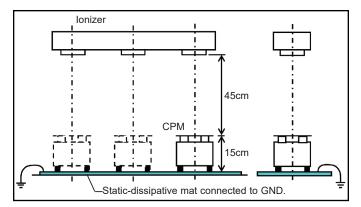


Figure 9. Position of Overhead Air Ionizer and CPM

- 3. Turn on the power for the ionizer and the CPM. Let it warm up for 5 minutes.
- 4. Set the ionizer fan speed to maximum.
- 5. Set the CPM to voltmeter mode and select a smaller scale, example: 25 Volts.
- Locate the Offset Voltage Adjust trimpot and slowly turn the small screw head using a mini screwdriver.
 Observe the CPM reading as you turn. Stop turning as soon as the CPM reads as close to zero volts as possible.
- 7. Proceed to do the Decay Time and Offset Voltage verification.

Decay Time and Offset Voltage Verification

- 1. Set the CPM to Decay/Offset mode. Refer to the User's Guide accompanying the CPM for proper operation and setup.
- Set the CPM to decay and offset voltage mode with a starting charge at either + or - 1 KV and a stopping charge at either + or -100 Volts.
- Start the decay/offset test sequence on the CPM. This will take a few seconds.
- 4. Record the decay time, and offset voltage as displayed on the CPM.

Troubleshooting

Problem	Action
The fan does not turn.	Turn off the unit. Disconnect the AC plug from the outlet. Be sure to contact a SCS sales representative or authorized dealer to request inspection and repair. Repairing the product yourself is dangerous and will void the warranty. Do not attempt to repair the product yourself.
Unbalanced ion levels. Ion balance cannot be adjusted to 0V.	Check that the environmental conditions at the installation site fall within the service environment conditions of the unit.
	Perform cleaning of the emitter points as described in the "Maintenance" section.
	Turn off the unit if the above step does not improve the situation. Disconnect the AC plug from the outlet. Be sure to contact a SCS sales representative or authorized dealer to request inspection and repair. Repairing the product yourself is dangerous and will void the warranty. Do not attempt to repair the product yourself.
Others Examples: Abnormally slow rotation of the fan, the unit being abnormally hot, a burning odor, abnormal noises, etc.	Turn off the unit. Disconnect the AC plug from the outlet. Be sure to contact a SCS sales representative or authorized dealer to request inspection and repair. Repairing the product yourself is dangerous and will void the warranty. Do not attempt to repair the product yourself.

Specifications

Input Voltage and Frequency (External Adapter) Operating Voltage Power Consumption Emitter Point Cleaning Cle	
Voltage Power	
Consumption operation) 60 Watts (auto cleaning operation) Emitter Point Two-way Automatic – Cleaning Interval: 1 time per hour (4 cycles each time)	
Cleaning Interval: 1 time per hour (4 cycles each time)	
Indicators LED: Green power ON -	
Fuse 5.0A, 250V, 5.2 x 20mm - Glass Tube	
Ion Emission Steady-state DC –	
Balance ± 15 Volt (25 ± 5°C, 45 ANSI/ES STM3.1 High fan speed, measure taken 45 below fa	ement 5 cm
Decay Time ≤ 3.5 sec. ANSI/ES STM3.1 High fan speed, measure taken 45 below fa	ement 5 cm
Air Speed 200 ft./min, 61 m/min Anemom high fan speed	
Audible High Fan Speed: 57 Audible of dB (sustained), 60 dB at normal run and sustained), 51 dB (auto cleaning) cleaning) Low Fan Speed: 46 dB (sustained), 51 dB (auto cleaning) Measure taken 10 from fan	al auto I n. ement 00 cm
Ozone Level <0.05 ppm IEC 6033 65 ED.2 CLAUSE	.1

SCS - 926 JR Industrial Drive, Sanford, NC 27332 • (919) 718-0000 • Website: StaticControl.com

© 2015 DESCO INDUSTRIES, INC. Employee Owned **TB-9045** Page 4 of 5

Dimensions	5" H x 42" W x 7" D (120 mm H x 1080 mm W x 172 mm D) Inclusive of knobs and mounting tabs	_
Weight	4.9 Kg (without an external adapter)	-
Certifications & Approvals	cULus, CE, RoHS, WEEE	_

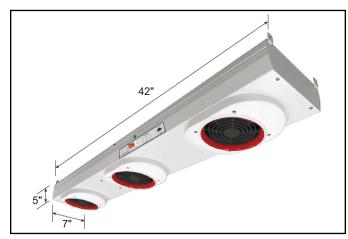


Figure 10. Overhead Air Ionizer dimensions

Environmental Conditions

This equipment has been tested and found to be safe to operate within these environmental conditions. This is not a warranty of equipment performance within these conditions.

- Indoor use only
- Altitude: Up to 2000 m
- Pollution degree 2
- Temperature: 41°F 104°F (5°C 40°C)
- Humidity: Maximum 80% relative humidity for temperatures up to 87°F (31°C) decreasing linearly to 50% relative humidity at 104°F (40°C)

Regulatory Information

This symbol, per "Marking for the Control of Pollution Caused by Electronic Information Products, SJ/T11364-2006," means that the product or part does not contain any substances in excess of



the maximum concentration values as per "Electronic Industry Standard of the People's Republic of China, SJ/T11363-2006, Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products." This information represents SCS's knowledge and belief, which may be based in whole or in part upon information provided by third party suppliers to SCS. In the event any product is proven not to conform with the material content-related information in this product literature, then SCS's entire liability and Buyer's exclusive remedy will be in accordance with the Warranty stated below.

RoHS 2011/65/EU Compliant means that the product or part does not contain any of the substances in excess of the maximum concentration values ("MCVs") in EU RoHS Directive 2011/65/EU. The MCVs are by weight in homogeneous materials. This information represents SCS's knowledge and belief, which may be based in whole or in part on information provided by third party suppliers to SCS.

WEEE Statement

The following information is only for EU-members States: The mark shown to the right is in compliance with Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). The mark indicates the requirement NOT to dispose the equipment as unsorted municipal waste, but use the return and collection systems according to local law.

cULus Statement

Meets cULus requirements.

CE Statement

Meets CE (European Confomity) requirements.

Made in China

Limited Warranty, Warranty Exclusions, Limit of Liability and RMA Request Instructions

See the SCS Warranty -

http://staticcontrol.descoindustries.com/warranty.aspx

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Antistatic Control Products category:

Click to view products by Desco manufacturer:

Other Similar products are found below:

13020 13490 13870 13879 13881 13883 13882 14404 2202SP 3039 37061 42470 09060 09857 42516 37059 04563 17252 19691 19695 09037 09826 09813 66070 100816 68101 68103 98132 73741 13868 13485 13457 13245 13468 13420 13332 13205 13135 91070 8031 8523 66085 40931 37081 13080 13215 13806 73749 010-0225 17260