Mini Air Ionizer Installation, Operation and Maintenance





Figure 1. SCS 960 Mini Air Ionizer

Description

The SCS Mini Air Ionizer is a self-contained ionizing air blower designed to neutralize static charges from non-conductive objects. The proprietary circuitry contained in the blower generates balanced levels of positive and negative ions, and maintains correct balance despite variations in line voltage, fan speed, and emitter point condition. Meets ANS/ESD S20.20 tested per ANSI/ESD STM3.1 and ESD TR53.

The Mini Air Ionizer reduces a static charge of $\pm 1000 \text{ V}$ to $\pm 100 \text{ V}$ in less than 4 seconds (the discharge time) at a distance of 1 foot.

The power supply for the Mini Air Ionizer is sold separately. The Mini Air Ionizer and its accessories are available as the following item numbers:

| Item | Description |
|---------------|---|
| 960 | Mini Air Ionizer |
| 960X/980X | Power Adapter, 120 VAC Input, 24 VAC Output, North America Plug |
| <u>770753</u> | Power Adapter, 230 VAC Input, 24 VAC Output, UK Plug |
| <u>770754</u> | Power Adapter, 230 VAC Input, 24 VAC Output, Europe Plug |

The Mini Air Ionizer requires 24 VAC power supplied through a RJ-11 power socket located on the back of the unit.

It is possible to connect four (4) Mini Air Ionizers together in series and power them off of one power supply. Use the included RJ-11 cable to daisy-chain the Mini Air Ionizer to another Mini Air Ionizer. A third or fourth Mini Air Ionizer can be daisy-chained using additional RJ-11 cables.

To reduce the risk of electric shock, the power supplies use a grounding plug that has a third (grounding) pin. This plug will only fit into a grounding-type power outlet. If the plug does not fit into the outlet, contact qualified personnel to install the proper outlet. Do not alter the plug in any way. If an alternate power source is used, please make sure that it conforms to the power input requirements as listed in the Specifications section. For further questions concerning the power-input requirements, please contact SCS Customer Service.

Packaging

- 1 Mini Air Ionizer
- 1 RJ-11 Cable, 3 ft.
- 1 Certificate of Calibration

NOTE: Power adapter is not included and must be purchased separately.

Installation

The Mini Air Ionizer mounts easily in a variety of positions using the provided tilting bracket/stand. Place the unit on the worksurface and point it at the area or object to be neutralized. Alternatively, the mounting bracket may be attached directly to or above the workstation, or on another supporting structure. Please note that placement of the Mini Air Ionizer is important in controlling its effectiveness. Its distance from the target object will affect the ionizer's performance. As distance increases, the discharge time will increase.

Connect the RJ-11 terminal from an SCS power adapter to the back of the Mini Air Ionizer, and connect the power adapter to an appropriate power outlet. Since the Mini Air Ionizer does not have a power switch, supplying power to the unit automatically turns it on.

Operation

Supplying power to the Mini Air Ionizer through the power socket in the back of the unit will turn it on. A green monitor light is also illuminated on the front of the unit, which indicates that the ionizer is on, and that power is being applied to the emitter points.

SCS - 926 JR Industrial Drive, Sanford, NC 27332
East: (919) 718-0000 | West: (909) 627-9634 • Website: StaticControl.com

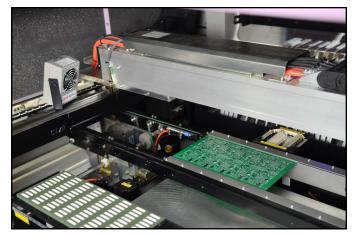


Figure 2. Using the Mini Air Ionizer inside a pick and place machine

Maintenance

Occasional cleaning of the case and of the ionizing electrodes are the only routine maintenance procedures required.

CLEANING THE CASE

Wipe the case with a soft cloth moistened with water. If a stronger cleaning solution is required, mild soap with water may be used. The use of any other cleaning solutions is not recommended.

CLEANING THE EMITTER POINTS

NOTE: Disconnect the power to the ionizer whenever cleaning the emitter points.

When the emitter pionts become dirty, the internal circuitry of the ionizer will be automatically adjusted to emit an equal amount of positive and negative ions. Particulates on the emitter point may, however, inhibit ionization to a limited degree. The emitter points are located between the fan blades and the rear grill. A jet of clean, compressed air can be used to remove dirt on emitter points. If a more rigorous cleaning method is needed to remove particulate, clean the points with a cotton swab dampened with isopropyl alcohol. Access to the points is available through the rear grill. Be careful not to damage the points during cleaning.

Specifications

| Input Voltage and Frequency (120 VAC External | AC Power Adapter Power Input: 120 VAC, 60 Hz |
|---|--|
| Adapter) | Power Output: 24 VAC, 500 mA |
| Input Voltage and Frequency (230 VAC External Adapter) | AC Power Adapter Power Input: 230 VAC, 50 Hz |

Power Output: 24 VAC, 500 mA

59 to 95 °F (15 to 35 °C) **Operating Temperature**

Power Consumption 5 W

Dimensions 4.5" x 3.3" x 2.0" (including bracket) (114 mm x 84 mm x 51 mm)

0.75 lbs (0.3 kg) Weight

Balance (Offset ±20 V Voltage) at 12"

Neutralization < 4 seconds

(Discharge) Time at 12"

Maximum Airflow 24 CFM Ozone <0.05 ppm

Certifications cULus Country of Origin China

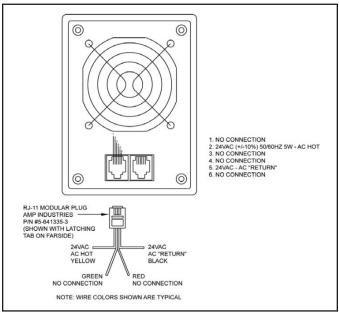


Figure 3. Pin-out of RJ11 power plug and inlet

Limited Warranty, Warranty Exclusions, Limit of Liability and RMA Request Instructions

See the SCS Warranty -StaticControl.com/Limited-Warranty.aspx

SCS - 926 JR Industrial Drive, Sanford, NC 27332 East: (919) 718-0000 | West: (909) 627-9634 • Website: StaticControl.com

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Antistatic Control Products category:

Click to view products by Desco manufacturer:

Other Similar products are found below:

13020 13490 13870 13879 13881 13883 13882 14404 2202SP 3039 37061 42470 09060 09857 42516 37059 04563 17252 19691 19695 09037 09826 09813 66070 100816 68101 68103 98132 73741 13868 13485 13457 13245 13468 13420 13332 13205 13135 91070 8031 8523 66085 40931 37081 13080 13215 13806 73749 010-0225 17260